

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum




 

 



Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening




## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Top Frame table		1X
B	Short frame		2X
C	Log frame		2X
D	Butter		4X
E	Leg		4X
F	Allen bolt L1	 8x60mm	4X
H1	Allen bolt L2	 6x60mm	12X
H2	Washer		4X
H3	Allen key		1X

Model# PAT7005

Product Dimensions: 19.68" W x 31.39" D x 15.75" H

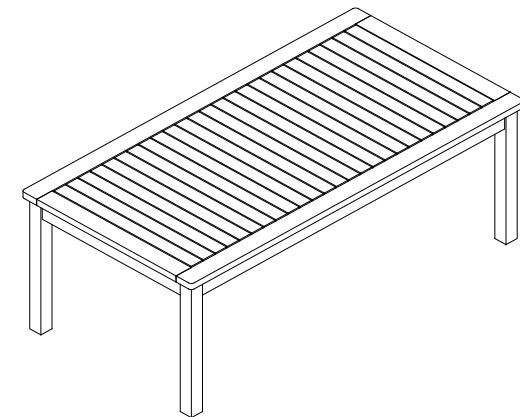


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

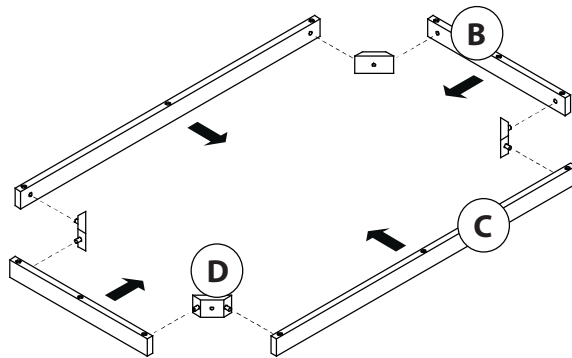

Step 1  
Attach B,C,D the arrow

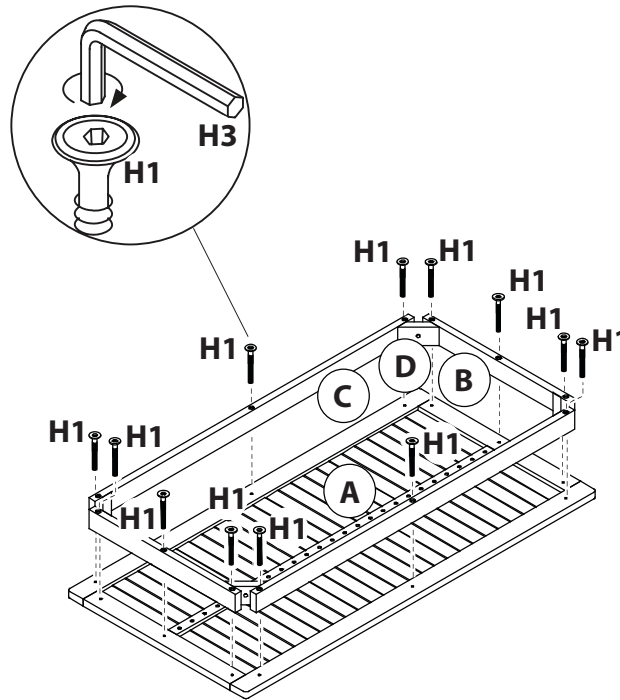

Step 2  
Attach B,C,D to A and using H1 tighten with allen key H3.

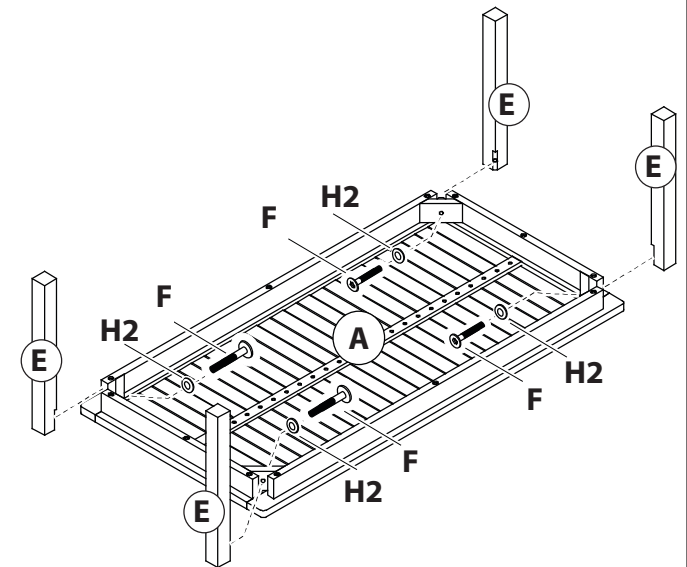

Step 3  
Attach E to A and using F tighten with allen key H3.