







 

 

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg		1 X
B	Seat		1 X
C	Back		1 X
D	Side		1 X
E1	Allen Bolt		3 X
E2	Allen screw		2 X
E3	Lock		2 X
E4	Extra bolt		1 X
E5	Allen Key		1 X
E6	Wrench		1 X

 **SAFAVIEH**
OUTDOOR LIVING


MODEL# PAT6713

Product Dimension: 27.09"W x 27.09"D x 26.77"H

Weight capacity : 300 lbs


Warning : Do not stand on the chair

Warning : Do not torque bolts / screws

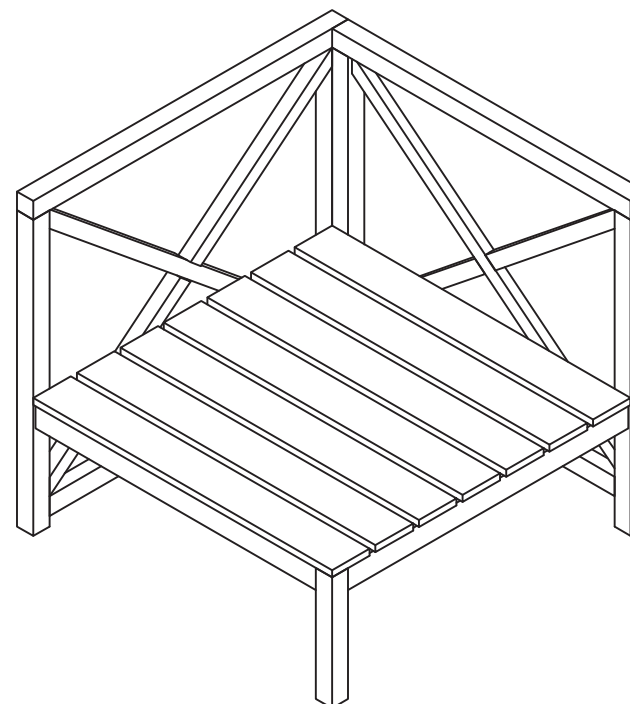


PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key and Wrench.

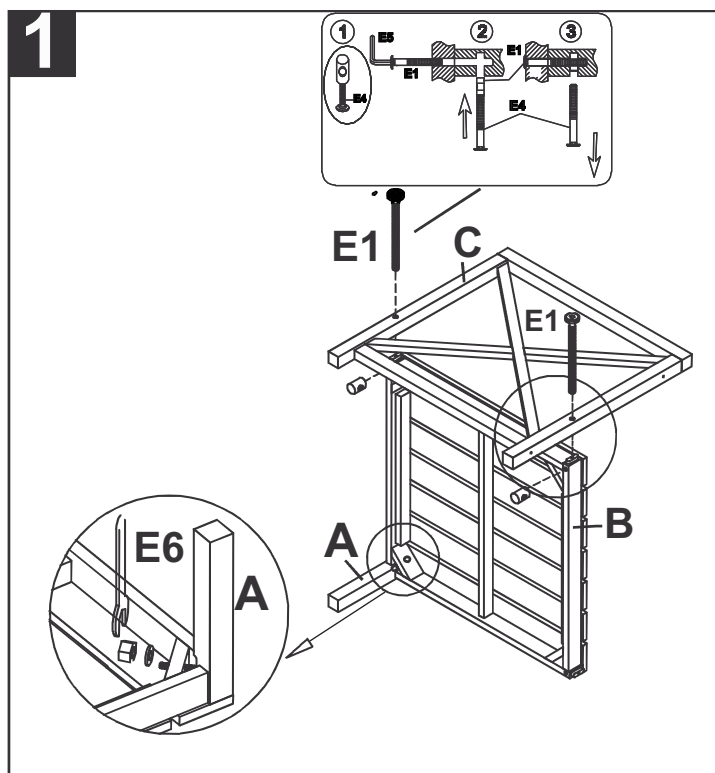

Step 1: attach the leg (A) and the back (C) to the seat (B) as shown on the picture. Then use the Allen Bolt (E1) and tighten it with the Allen Key (E5). Then tighten the leg (A) with the wrench (E6) as shown on the picture.

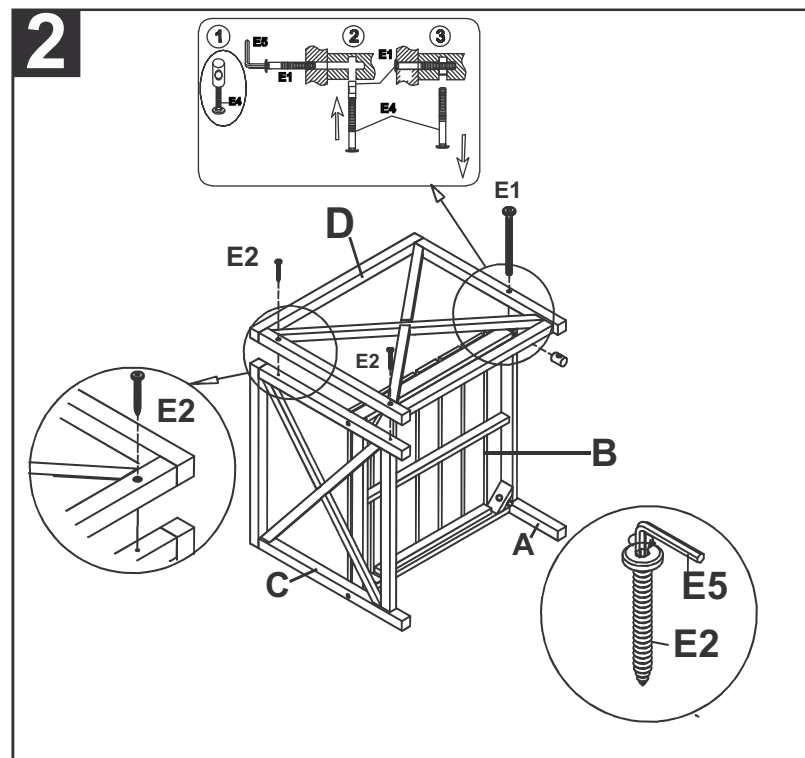

Step 2: attach the side (D) to the chair by using the the Allen screw (E2) and the Allen Bolt (E1) and tighten both sides with the Allen Key (E5) as shown on the pictures.