



# EC1171C/EC1173C

## ASSEMBLY & INSTALLATION INSTRUCTIONS

### Components List

Item	Description	Quantity	Item	Description	Quantity
A	Wire Connector	3	D	Glass	3
B	Mounting Bracket	1	E	Bulb (Not Included)	3
C	Fixture Body	1			

### Hardware List

Item	Description	Quantity	Item	Description	Quantity
a	Canopy Mounting Screws	2	c	Barrel Knobs	2
b	Long Screws(not included)	2			

### WARNING


TO AVOID THE RISK OF ELECTRICAL SHOCK, BE SURE TO TURN OFF MAIN POWER PRIOR TO INSTALLATION.

### CAUTION

Refer to the wattage caution label located near the socket for maximum wattage. Do not exceed maximum wattage rating.

### ASSEMBLY & INSTALLATION

1. Carefully unpack fixture from carton. Take the parts out of the package and lay all the fixture components in a clean and flat surface.
2. Attach Canopy Mounting Screws (a) to the Mounting Bracket (B) with screws facing outward. Attach Mounting Bracket to outlet box Long Screws (b) (not included). Note: The side of mounting plate marked "GND" must face out.
3. Connect the GROUND WIRE from the fixture and canopy to junction box, secure the electrical connections using the Wire Connector (A). Connect the NEUTRAL (OR WHITE) WIRE from the fixture to NEUTRAL WIRE from power supply with the Wire Connector (A). Connect the HOT (OR BLACK) WIRE from fixture to HOT WIRE from power supply with the Wire Connector (A). Tuck wires neatly back into the outlet box.
4. Mount Fixture Body (C) to the Mounting Bracket (B) by lifting Fixture Body up and onto the screws from the Mounting Bracket. Adjust the Fixture Body then tighten and secure in place with Barrel Knobs (c).
5. Install Glass (D) onto the Fixture Body (C).
6. Screw Bulb (not included) (E) into the lamp socket. Do not exceed the maximum wattage specified on the fixture's wattage rating label. **MAXIMUM 60 Watts.**

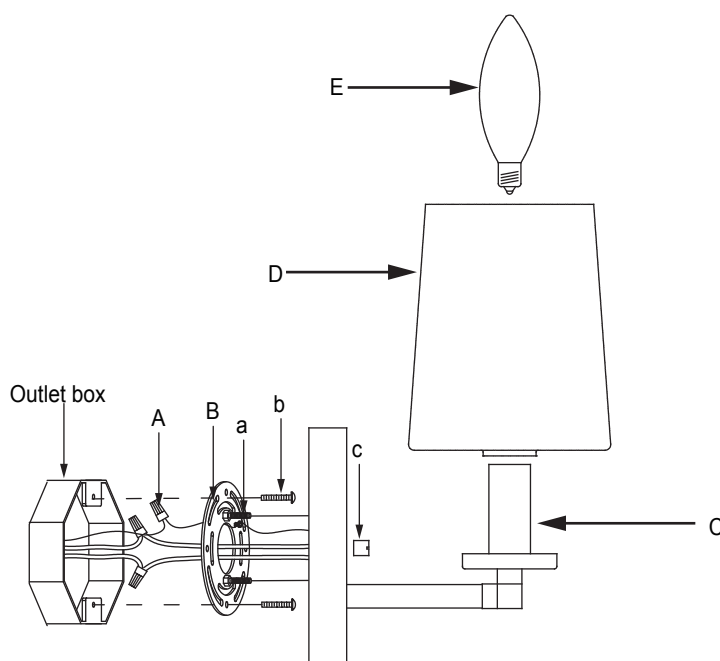

Note: (1). The above diagram illustrates the installation of your new light fixture. This is a representative drawing and may not match the style of your light fixture.