




# Installation manual of external microwave Sensor

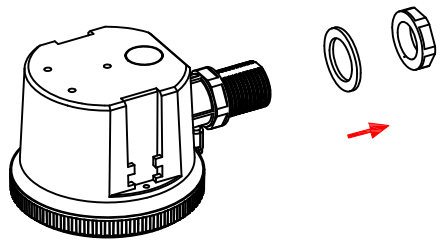


1. Screw out the nut and take out the gasket.

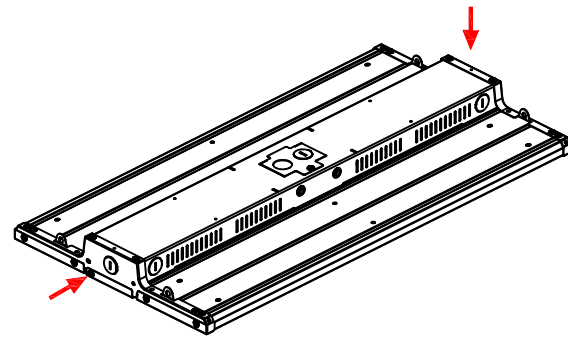


2. Screw out the nut in the junction box cover.

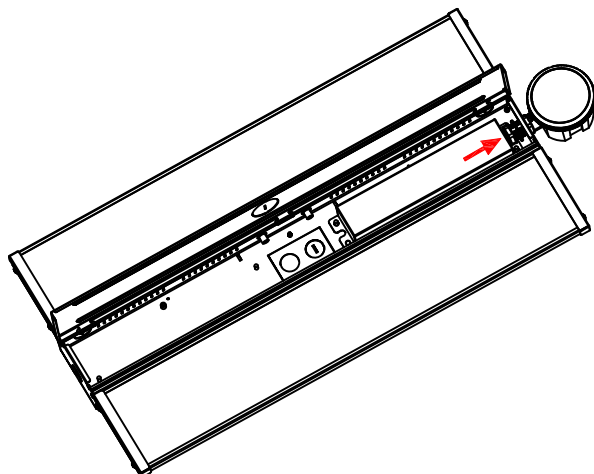


3. Open the junction box cover to the position shown in the figure (half open state), move away the knock-out, the microwave sensor go through the knock-out, fix the gasket, screw and tighten it.

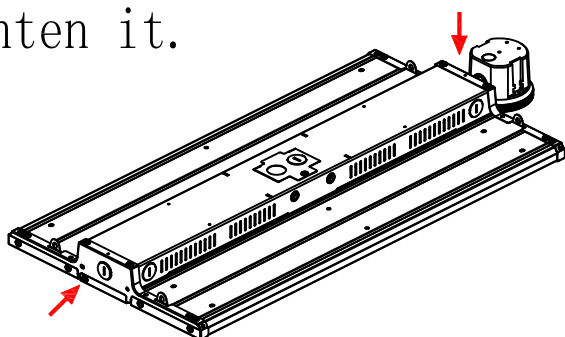

5. Close the junction box cover and lock it with screws.

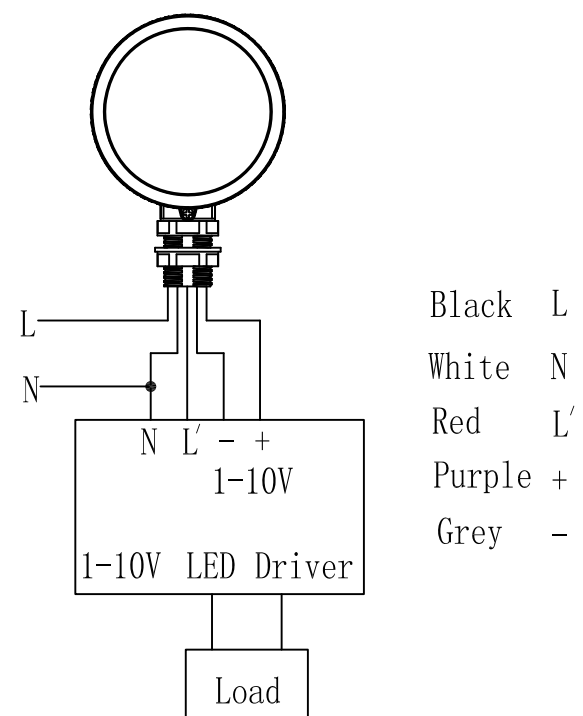

4. Wiring according to wiring diagram.

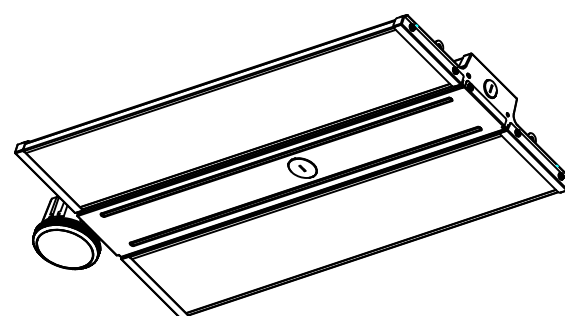

6. Microwave sensor installation completed.