

User's Manual



INSTALLATION INSTRUCTIONS

Installation Manual

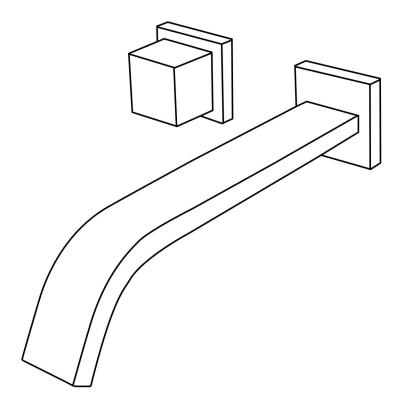

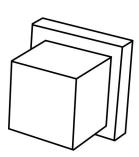

RB0996

IAPMO RESEARCH AND TESTING, INC.











IAPMO RESEARCH AND TESTING, INC.











IAPMO RESEARCH AND TESTING, INC.







 








INSTALLATION STEPS

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



 Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.



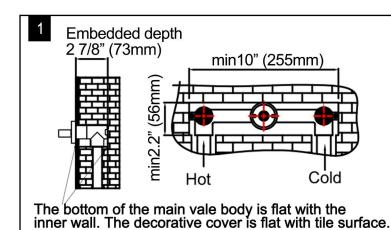


main valve body is 10"x2.2" and the depth is 2 7/8"(73mm).

Note: The depth dimension is the size


1. The wall opening Min size of the


Note: The depth dimension is the size of the tile after the wall is finished. If installing on the wall embryo, please reserve the appropriate tile thickness.

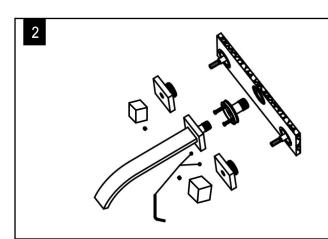

2. After installing the main valve body, the water to be tested is completed, and the pipeline and the main valve body can be covered after confirming that there is no leakage.

► Installation Dimension

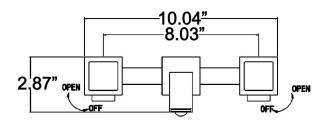


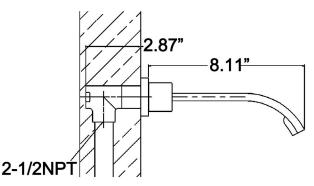

CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

 - 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect:



- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show,

The bubbler can be unscrewed, rinsed with water, and then installed back in place.





Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com



Manufacturer: Rbrohant

After-sale phone: +1(801) 800-9309

After-sale email: services@rbrohant.com