 












CROSLEY

FURNITURE

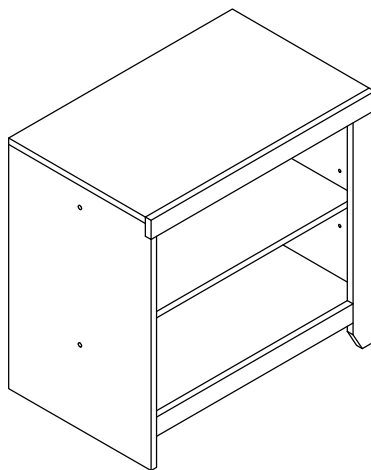

        
Low Profile TV Stand
(Right Cabinet)
CF101569-R

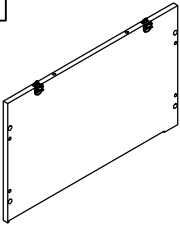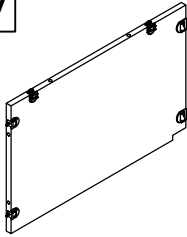

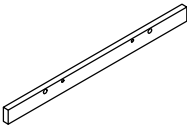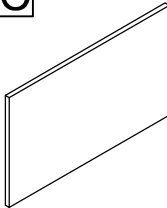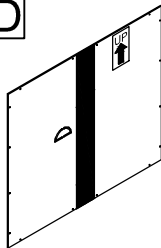PART LIST


U 	V 	W 	X 	Y 
Top Panel	Bottom Panel	Left Panel	Right Panel	Right Front Slat
1 PC	1 PC	1 PC	1 PC	1 PC
Z 	ZA 	ZB 	ZC 	ZD 
Right Back Slat	Upper Front Rail	Lower Front Rail	Adjustable Shelf	Back Panel
1 PC	1 PC	1 PC	1 PC	1 PC

 HARDWARE LIST

#1 	#2 	#3 
Ø3*15mm Screw	Ø8*30mm Wood Dowel	Shelf Holder
16 PCS (Extra 2)	16 PCS (Extra 2)	4 PCS

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Please do not use tools to assemble this unit unless specifically indicated.

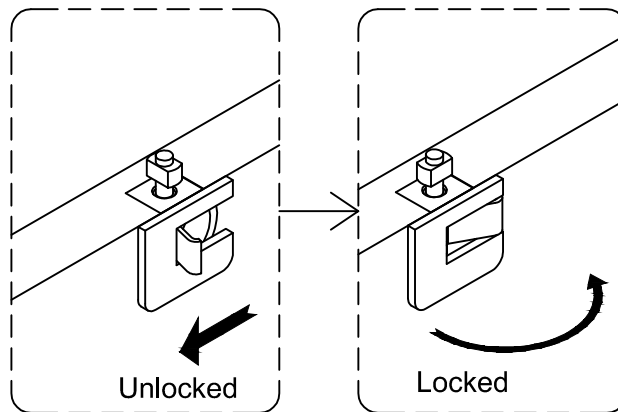


Reference the images above any time the instructions state "lock the hardware". Be sure to check all hardware is locked when complete.

 
Step 1. Attach upper front rail (part ZA) to top panel (part U) using wood dowels (part #2) and lock the hardware.

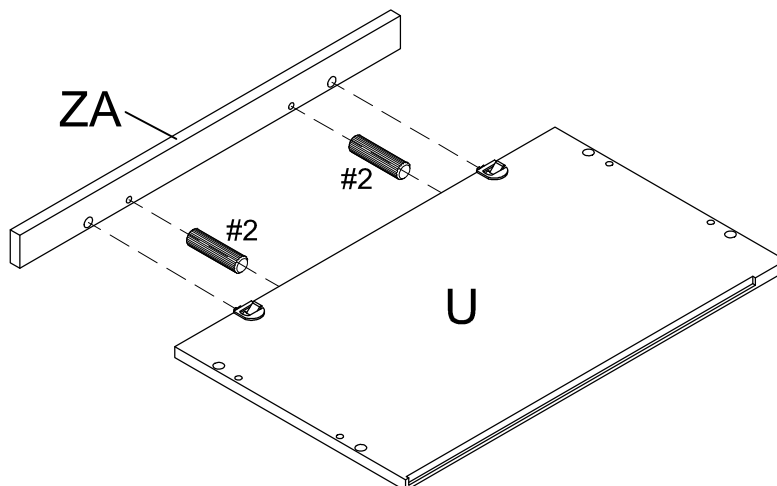


#2  x 2

 
Step 2. Attach lower front rail (part ZB) to bottom panel (part V) using wood dowels (part #2) and lock the hardware.

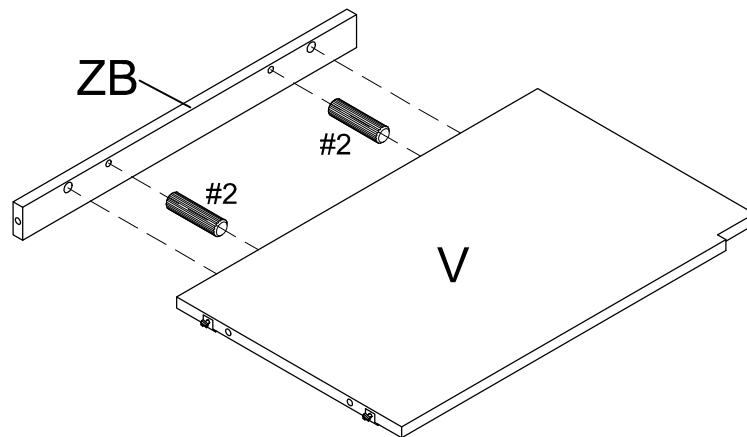


#2  x 2

 
Step 3. Attach slats (parts Y & Z) to right panel (part X) using wood dowels (part #2) and lock the hardware.

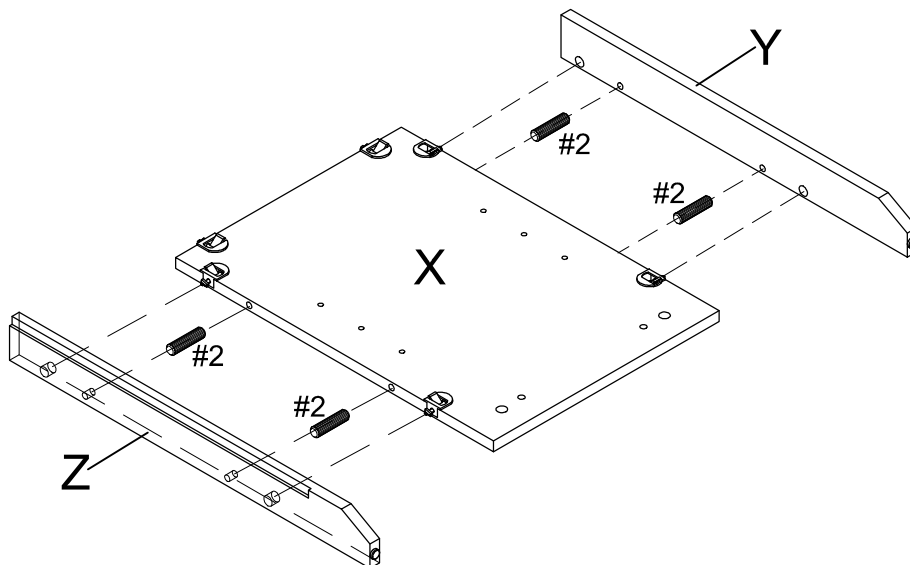


#2  x 4

 Step 4. Attach assembled unit (parts V & ZB) to assembled unit (parts X, Y & Z) using wood dowels (part #2) and lock the hardware.

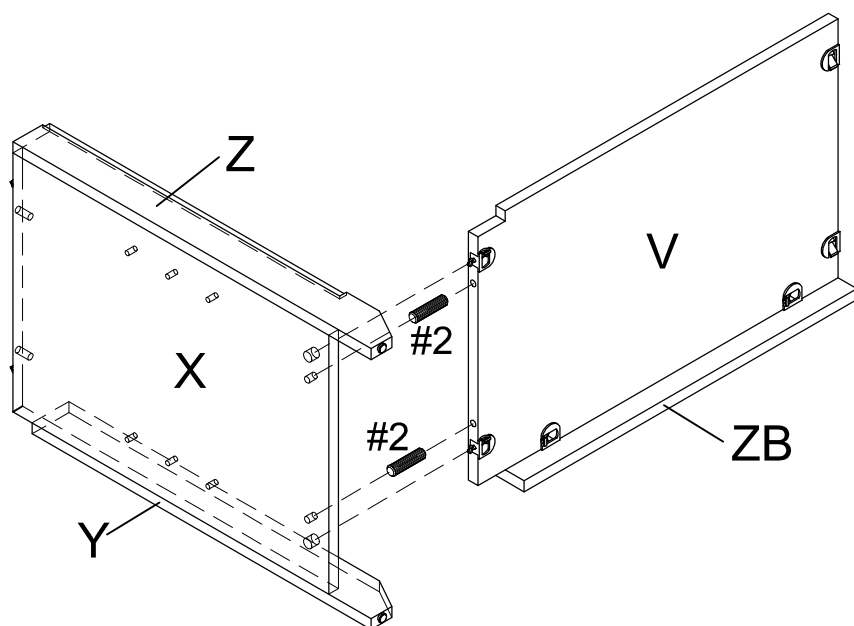


#2  x 2

 Step 5. Attach left panel (part W) to assembled unit (parts V & ZB) using wood dowels (part #2) and lock the hardware.

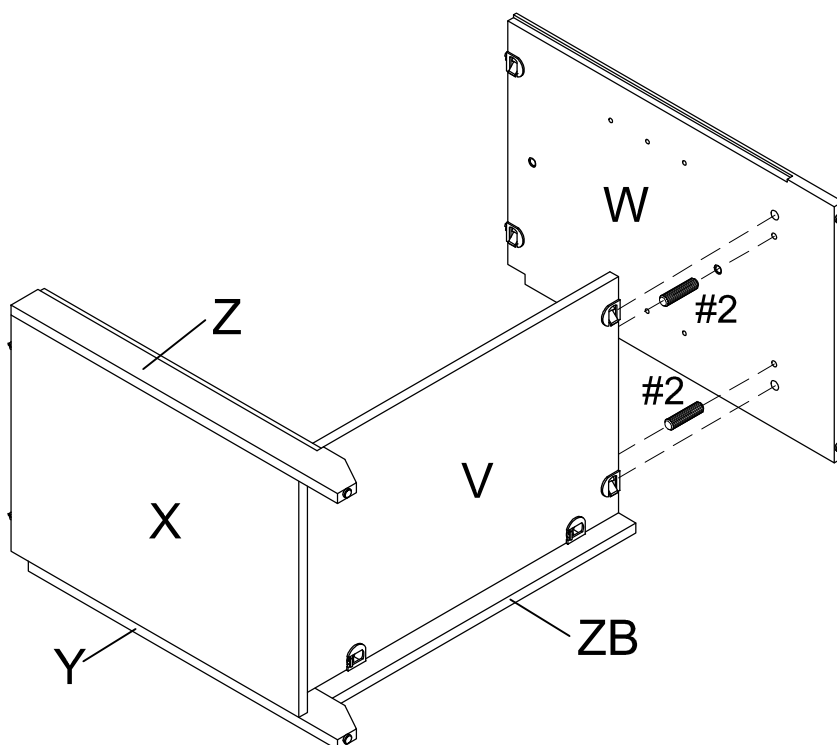


#2  x 2

 
Step 6. Attach top panel (part U) to assembled unit (parts W & X) using wood dowels (part #2) and lock the hardware.

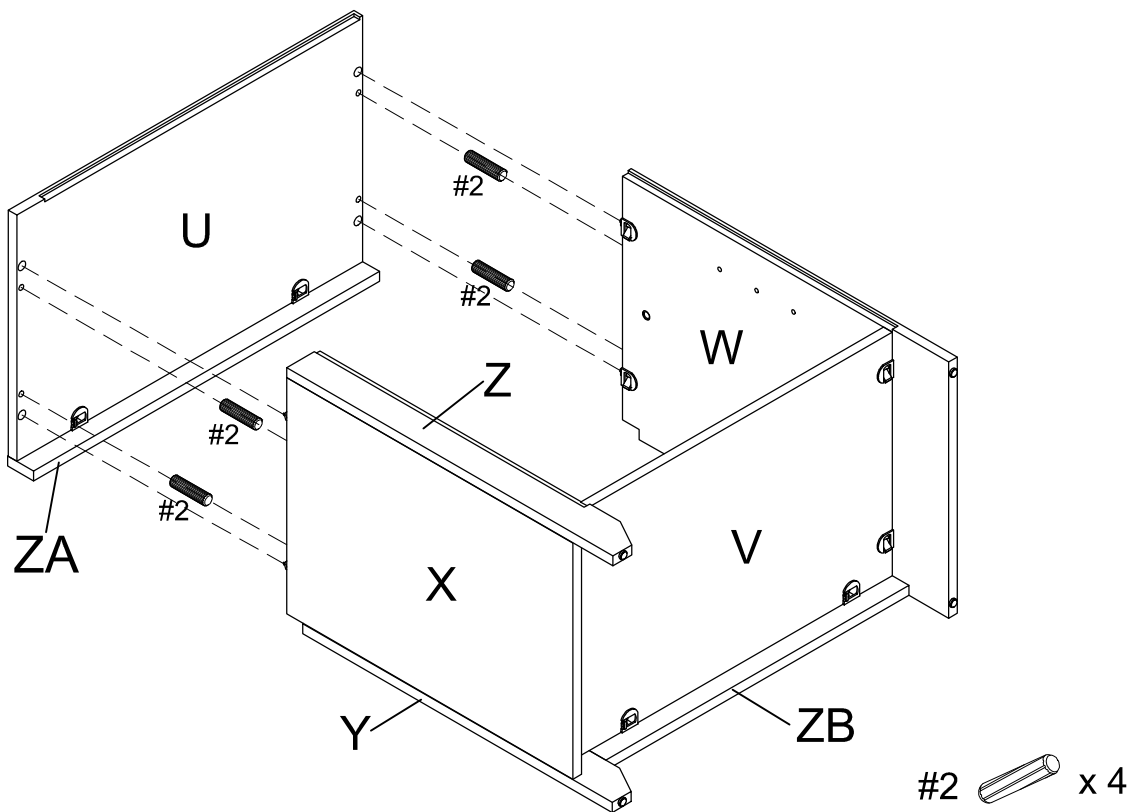

 Step 7. Attach back panel (part ZD) to assembled unit (parts U, V, W & Z) using screws (part #1) and phillips head screwdriver.

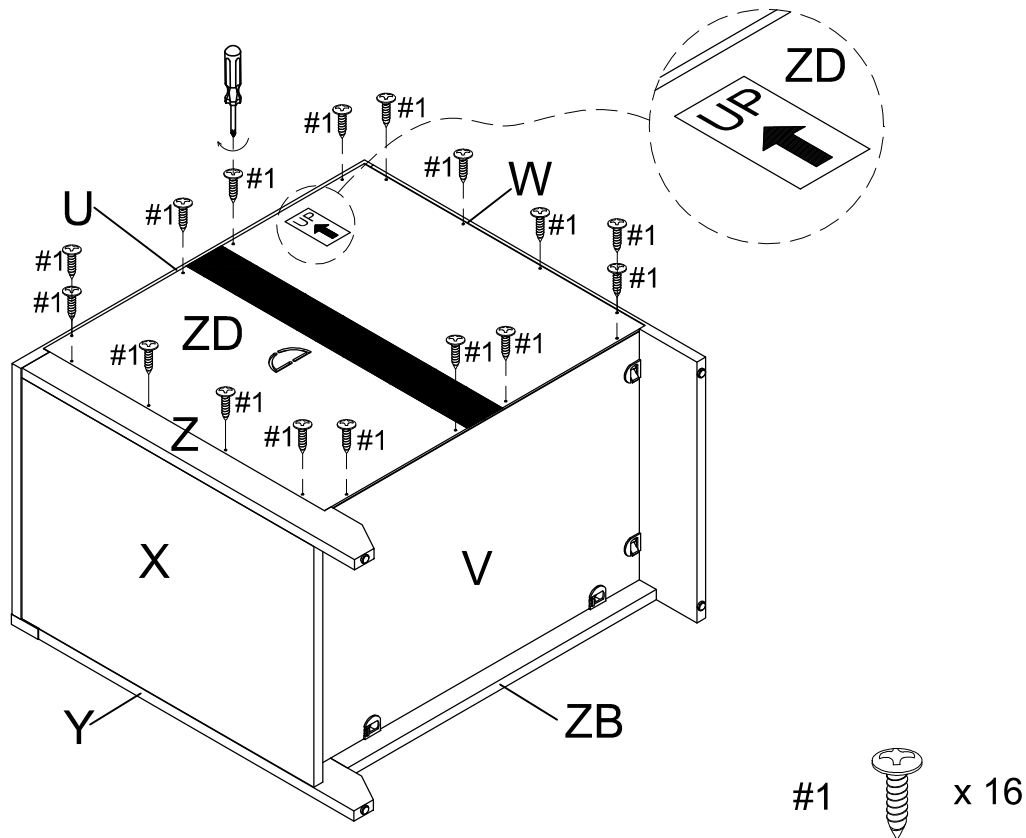

 Step 8. Carefully turn unit upright. Place shelf holders (part #3) into desired position and then slide adjustable shelf (part ZC) into place.

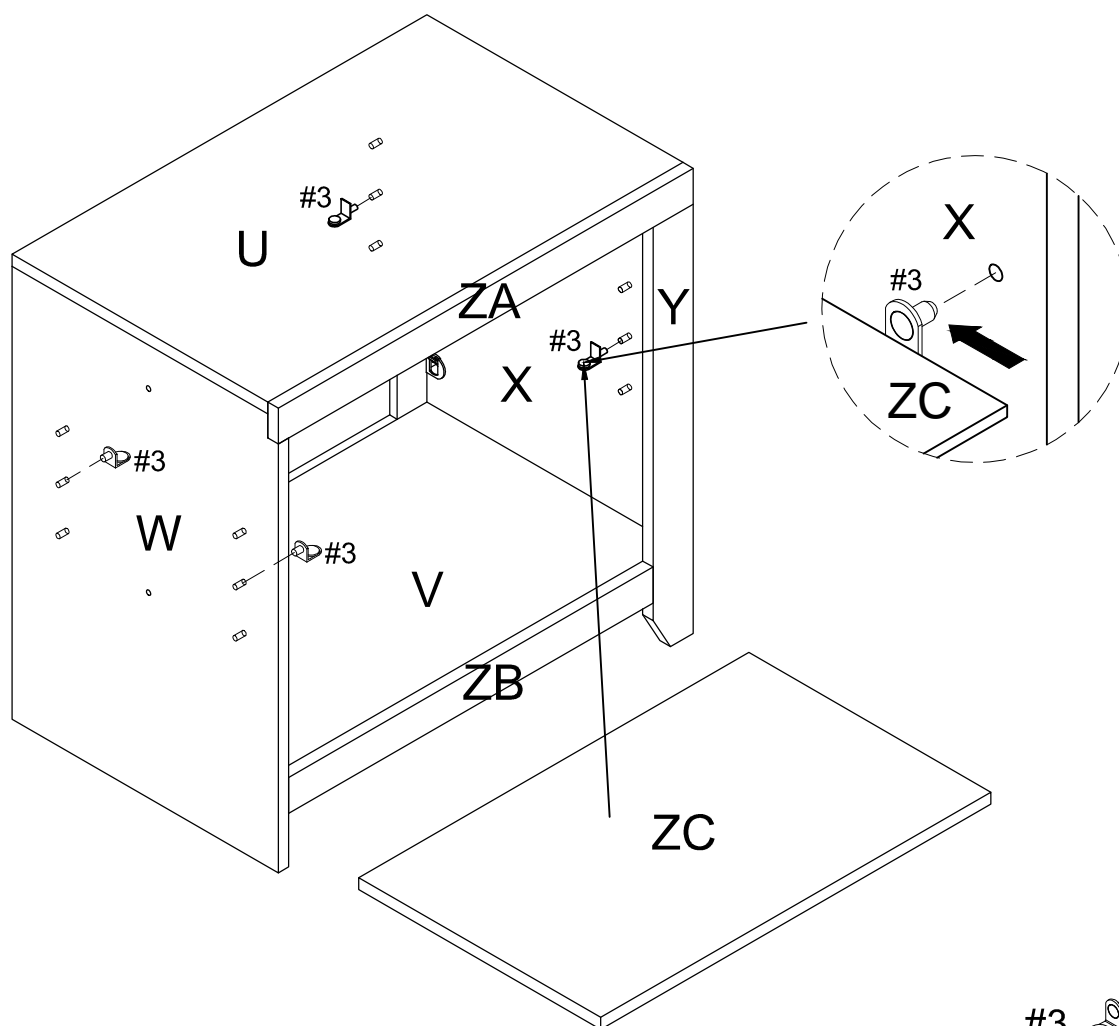

#3  x 4