 











CROSLEY

FURNITURE



Record Storage Stand CF1123

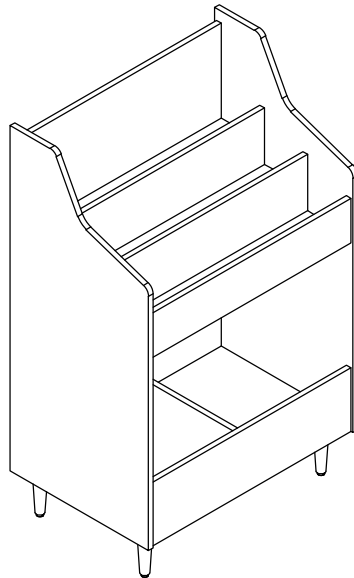

         PART LIST

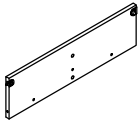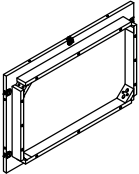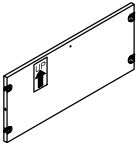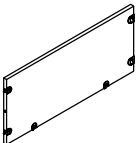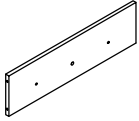A 	B 	C 	D 	E 
Front Top Panel 1 PC	Front Lower Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Fixed Shelf 3 PCS	Upper Back Panel 1 PC	Lower Back Panel 1 PC	Partition Panel 2 PCS	Lower Partition Panel 1 PC
K  Leg 4 PCS				

  HARDWARE LIST
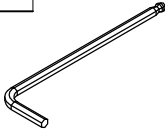
#1		#2		#3		#4		#5	
	Ø1/4"*1-1/2"		Ø1/4"		Ø1/4"		Ø8*30mm		4mm
	Bolt		Flat Washer		Spring Washer		Wood Dowel		Allen Wrench
	8 PCS (Extra 1)		8 PCS (Extra 1)		8 PCS (Extra 1)		36 PCS (Extra 4)		1 PC
#6									
	Safety Strap Kit								
	1 SET								

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

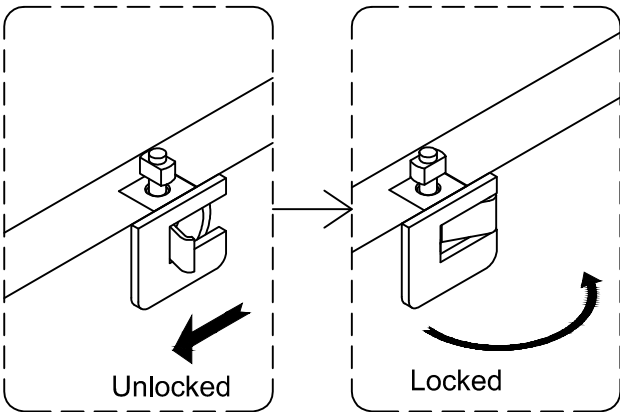


Reference the images above any time the instructions state "lock the hardware".
Be sure to check all hardware is locked when complete.

 Step 1. Attach legs (part K) to bottom panel (part E) using spring washers (part #3), flat washers (part #2), bolts (part #1) and allen wrench (part #5).

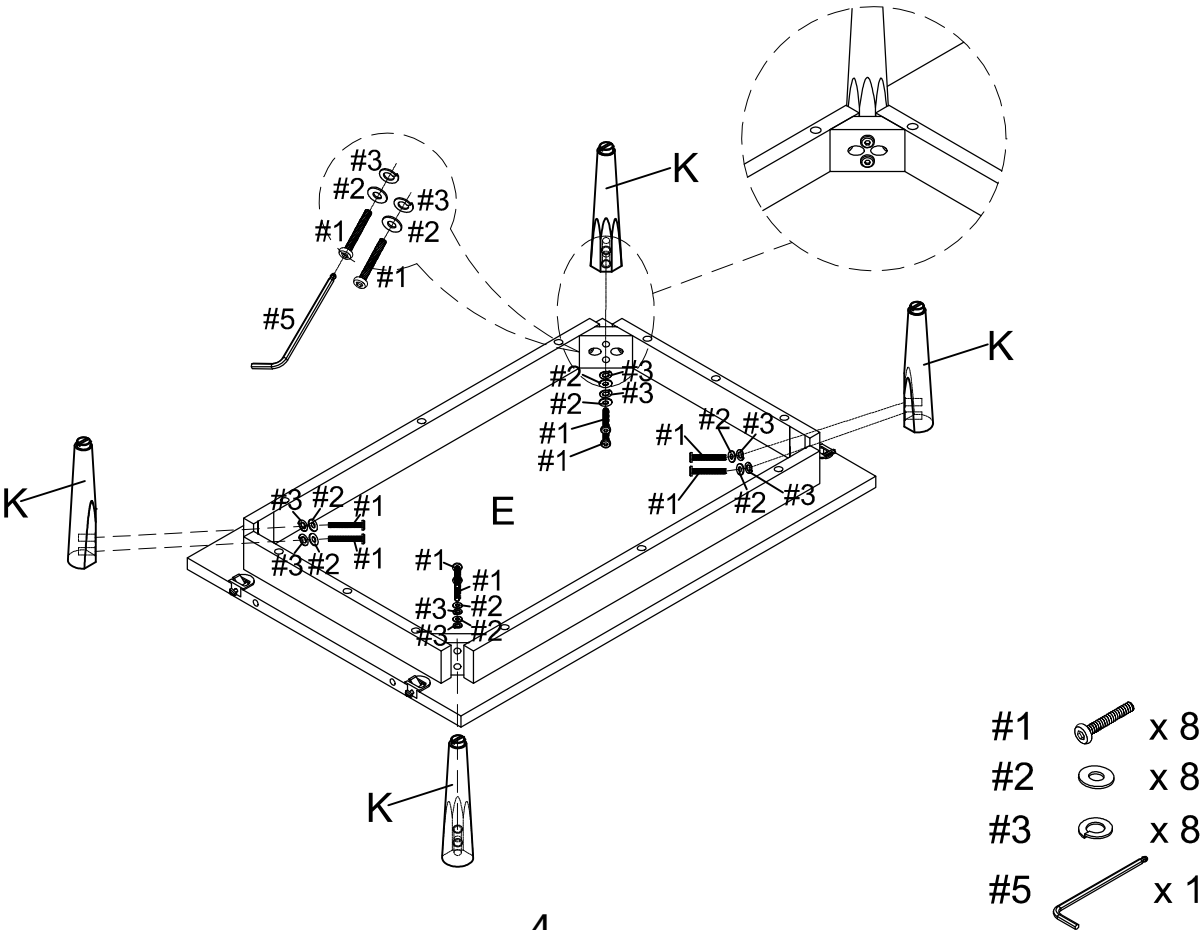


 Step 2. Attach upper back panel (part G) to right panel (part D) using wood dowel (part #4) and lock the hardware.

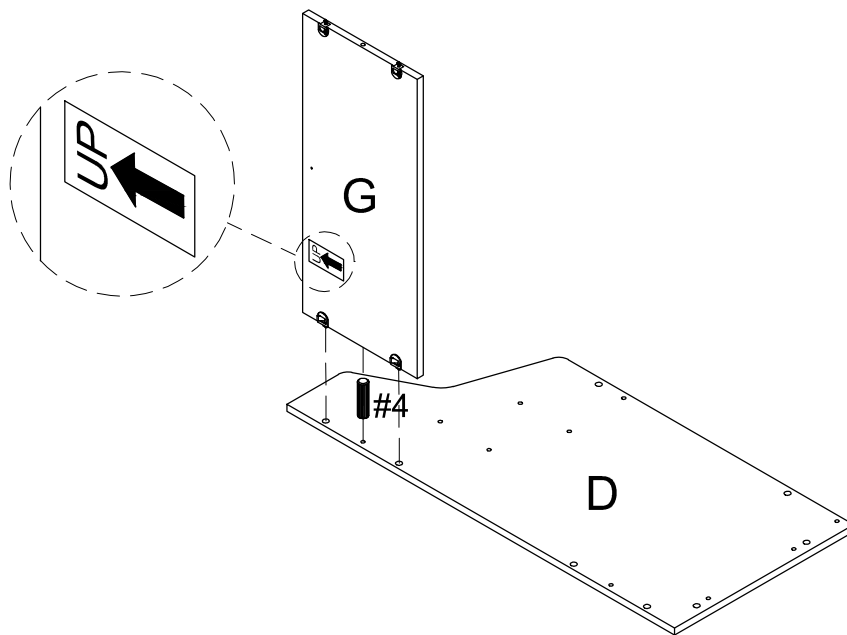


#4  x 1

 Step 3. Attach fixed shelf (part F) to upper back panel (part G) using wood dowels (part #4) and lock the hardware.

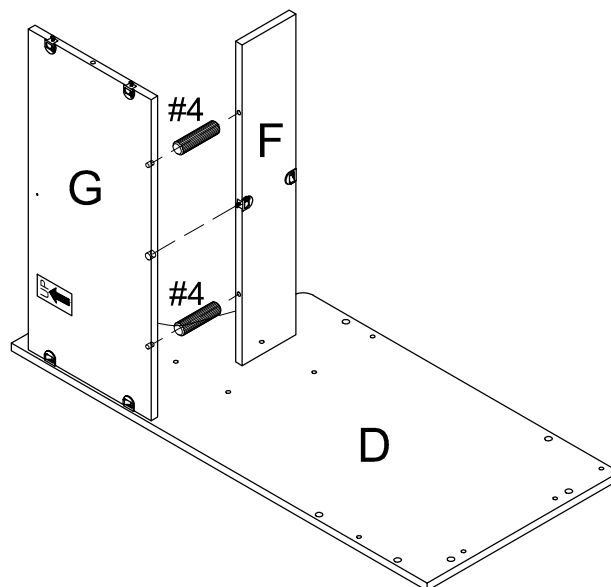


#4  x 2

 Step 4. Attach partition panel (part I) to assembled unit (parts D & F) using wood dowels (part #4) and lock the hardware.

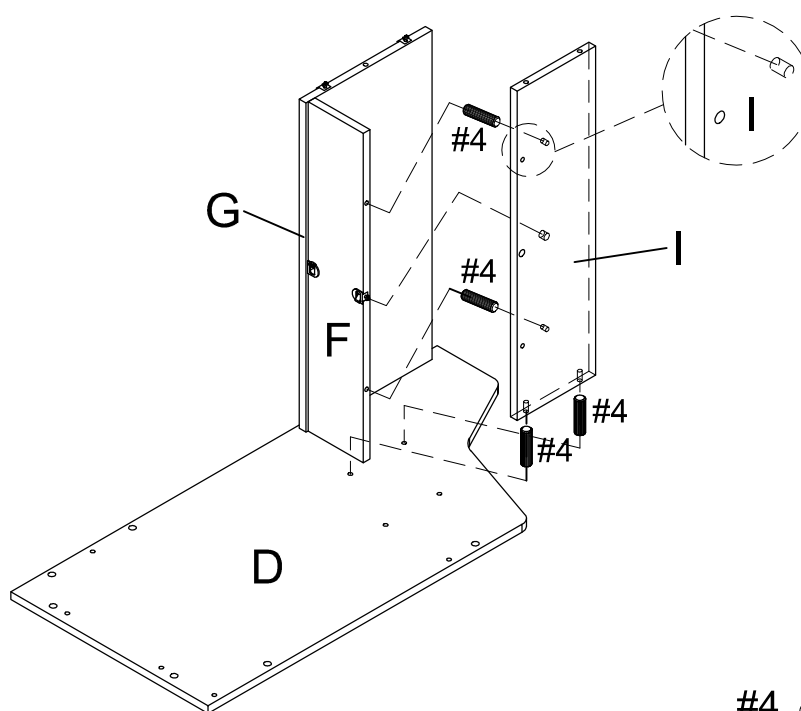


#4  x 4

 Step 5. Attach fixed shelf (part F) to partition panel (part I) using wood dowels (part #4) and lock the hardware.

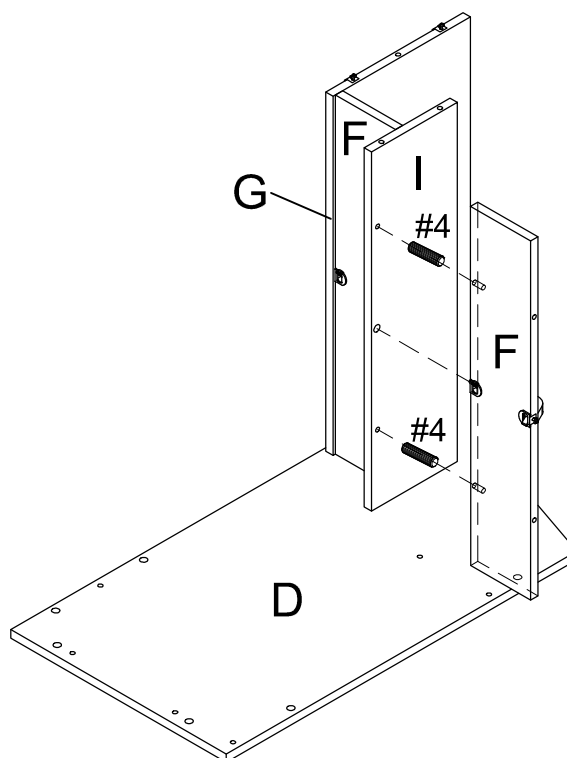


#4  x 2

 
Step 6. Attach partition panel (part I) to assembled unit (parts D & F) using wood dowels (part #4) and lock the hardware.

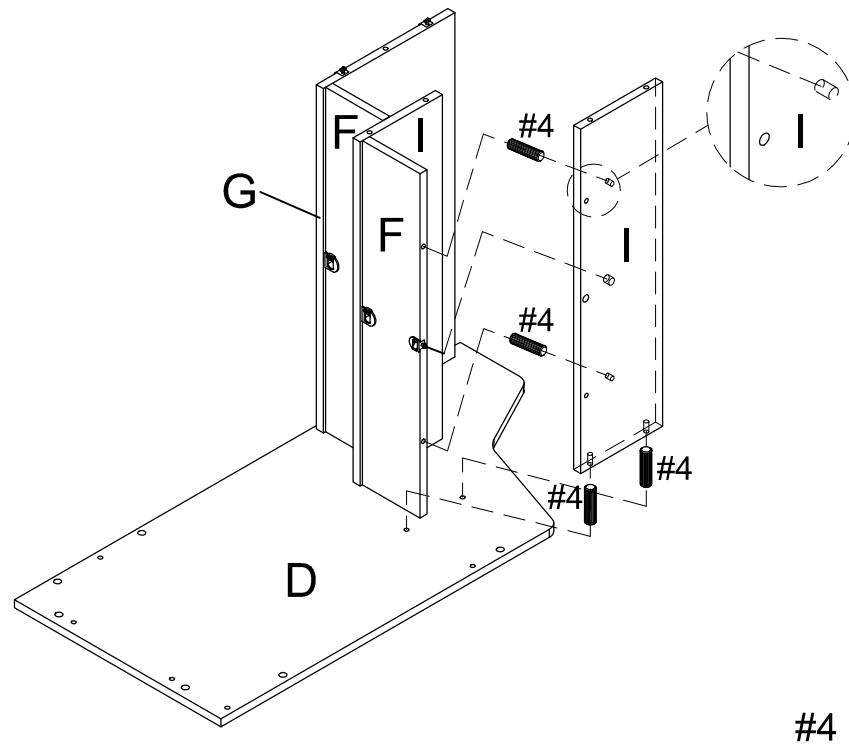

 
Step 7. Attach fixed shelf (part F) to partition panel (part I) using wood dowels (part #4) and lock the hardware.

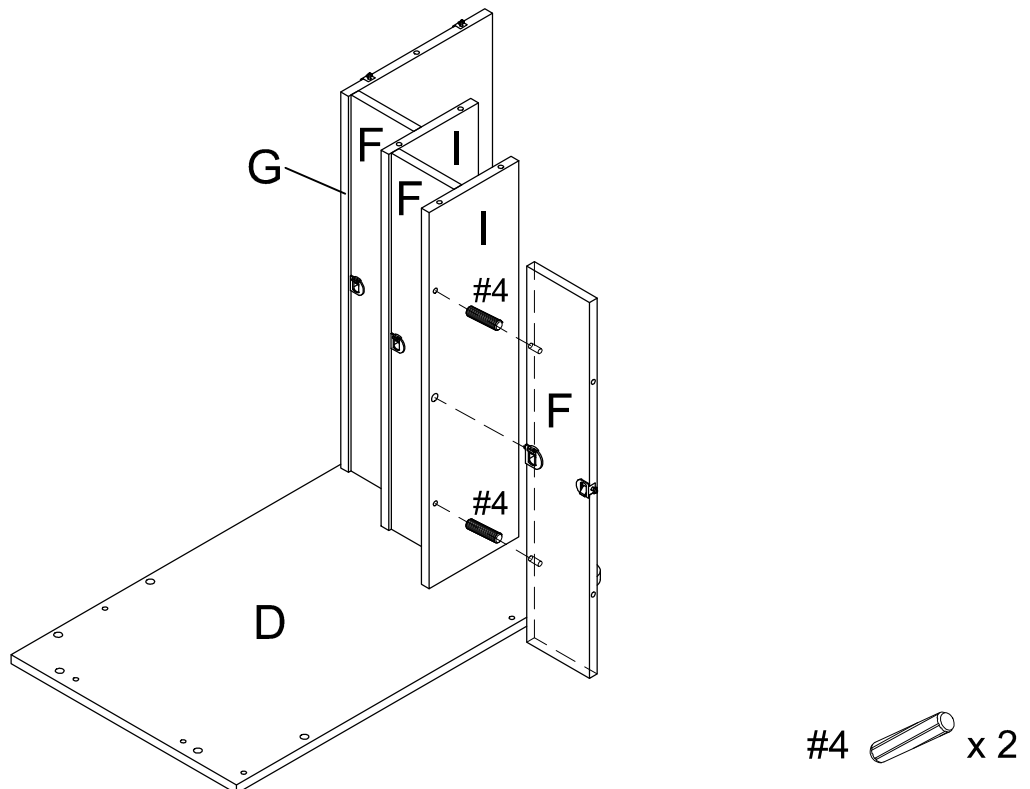

 
Step 8. Attach front top panel (part A) to fixed shelf (part F) and right panel (part D) using wood dowels (part #4) and lock the hardware.

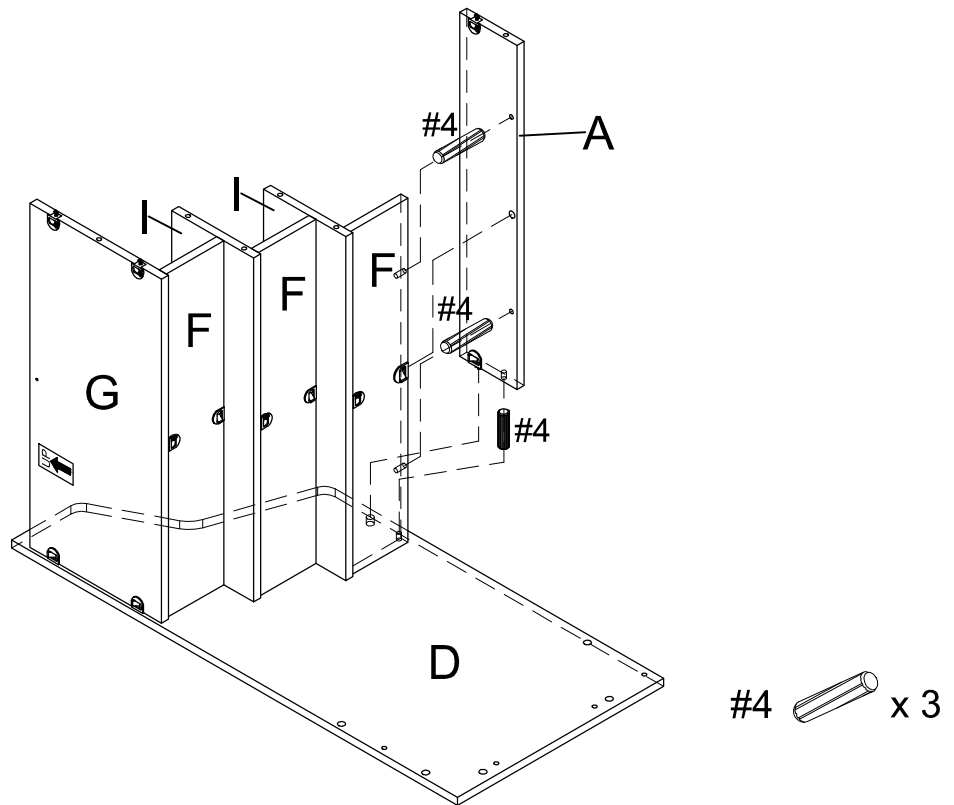

 
Step 9. Attach lower partition panel (part J) to lower back panel (part H) using wood dowel (part #4) and lock the hardware.

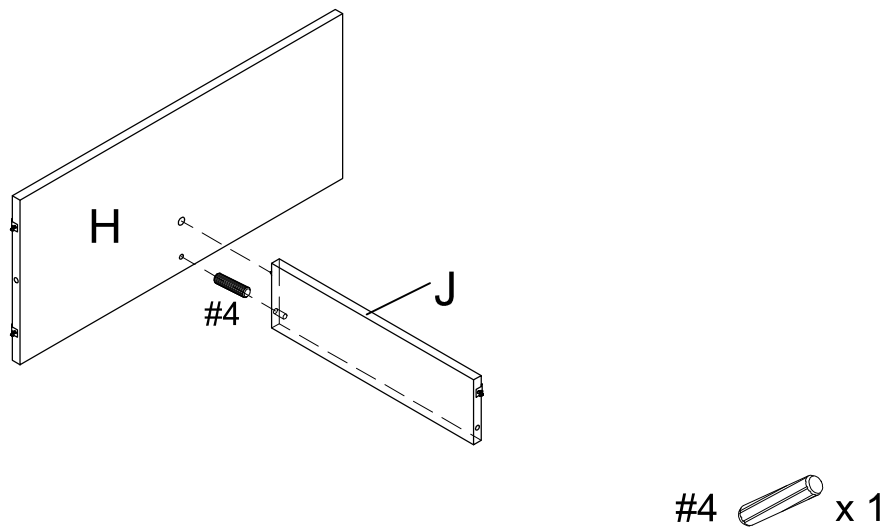

 Step 10. Attach assembled unit (parts H & J) to bottom panel (part E) and lock the hardware.

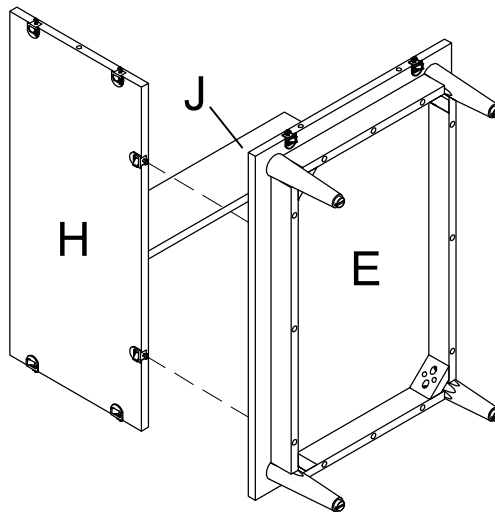


 Step 11. Attach front lower panel (part B) to assembled unit (parts E & J) using wood dowels (part #4) and lock the hardware.

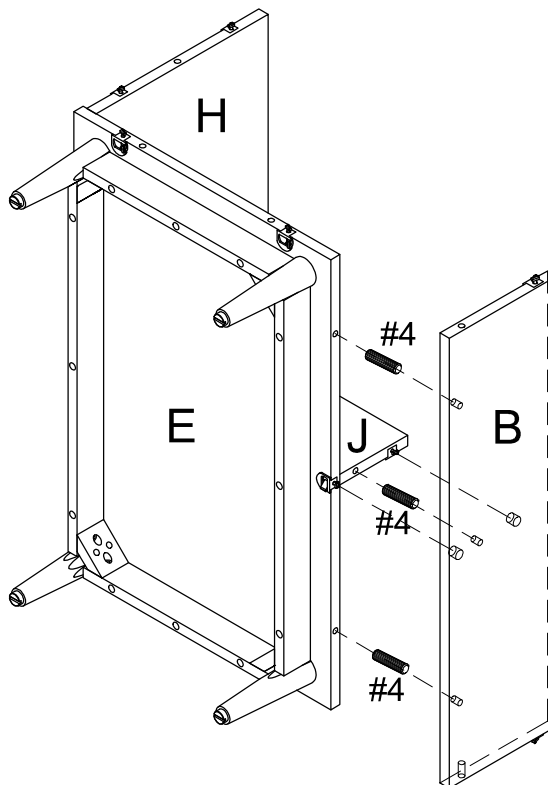


#4  x 3

 Step 12. Attach assembled unit (parts B, E & H) to right panel (part D) using wood dowels (part #4) and lock the hardware.

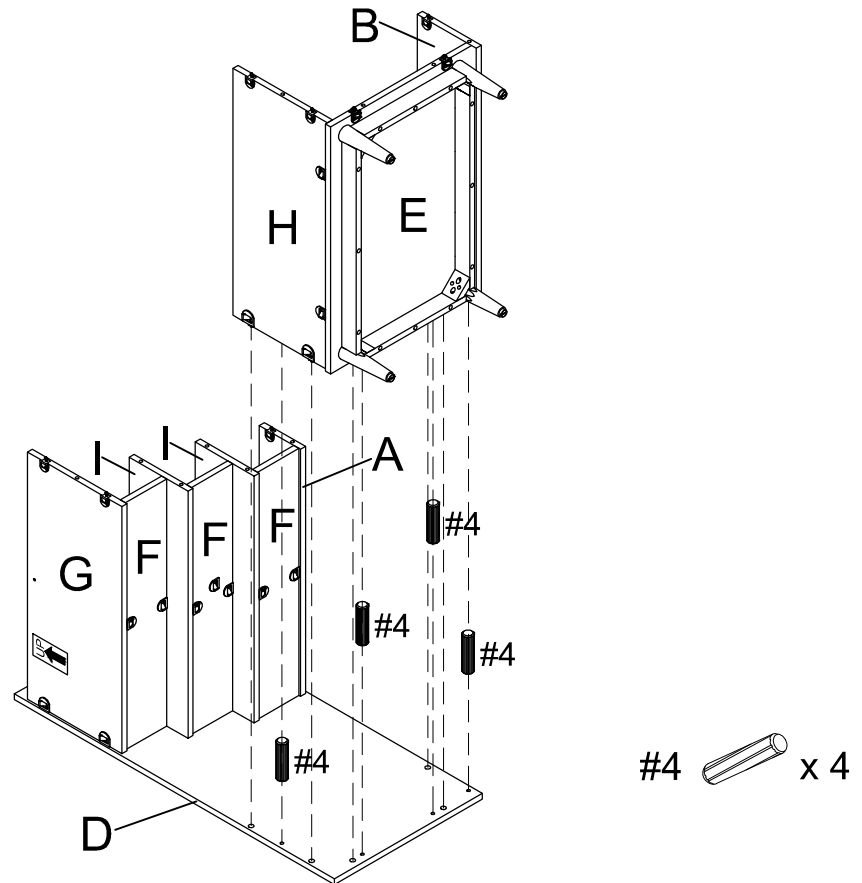

 
Step 13. Attach left panel (part C) to assembled unit (parts A, B, E, G, H & I) using wood dowels (part #4) and lock the hardware.


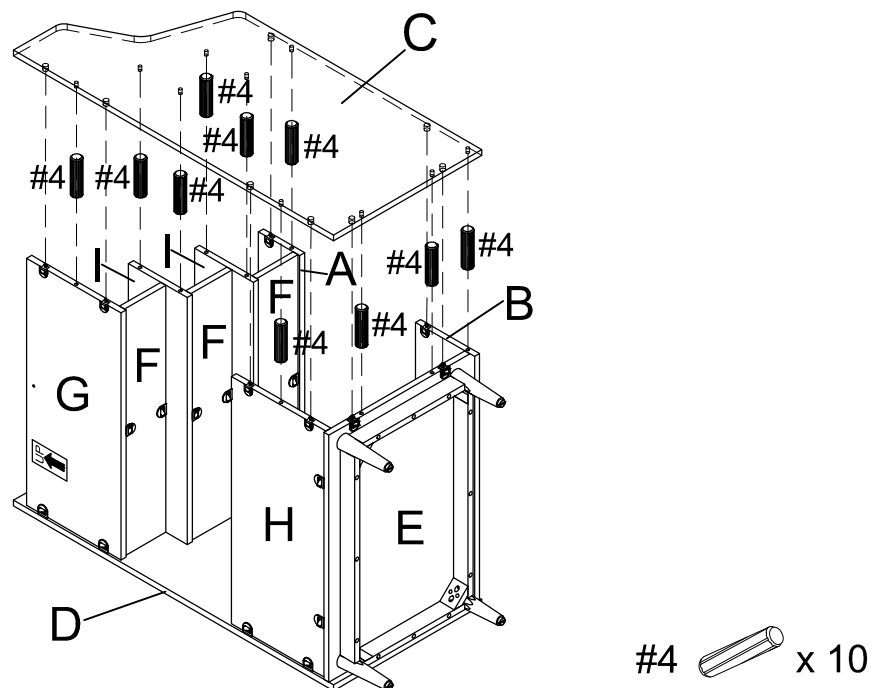


Step 14. Carefully turn unit upright.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

   Important: Safety strap kit (part #6) must be installed to prevent tipping, damage and /or injury.

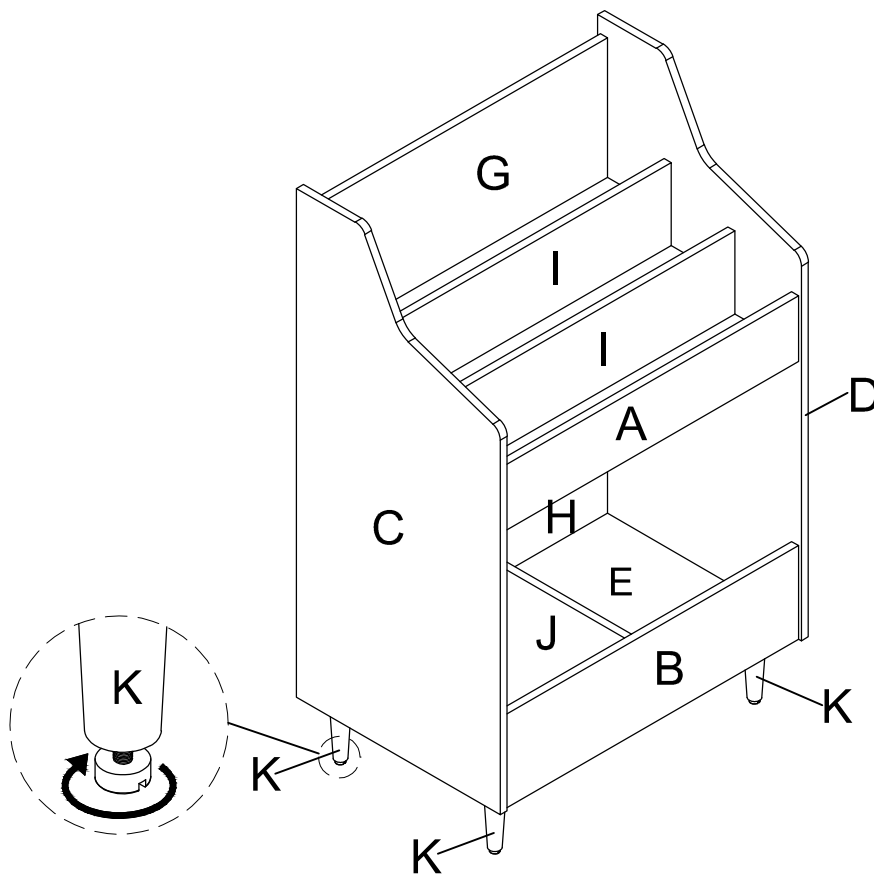

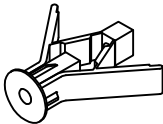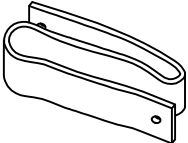
#6	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC


SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to upper back panel (part G) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in upper back panel (part G) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

  Note: This item is not intended for clothing storage use.

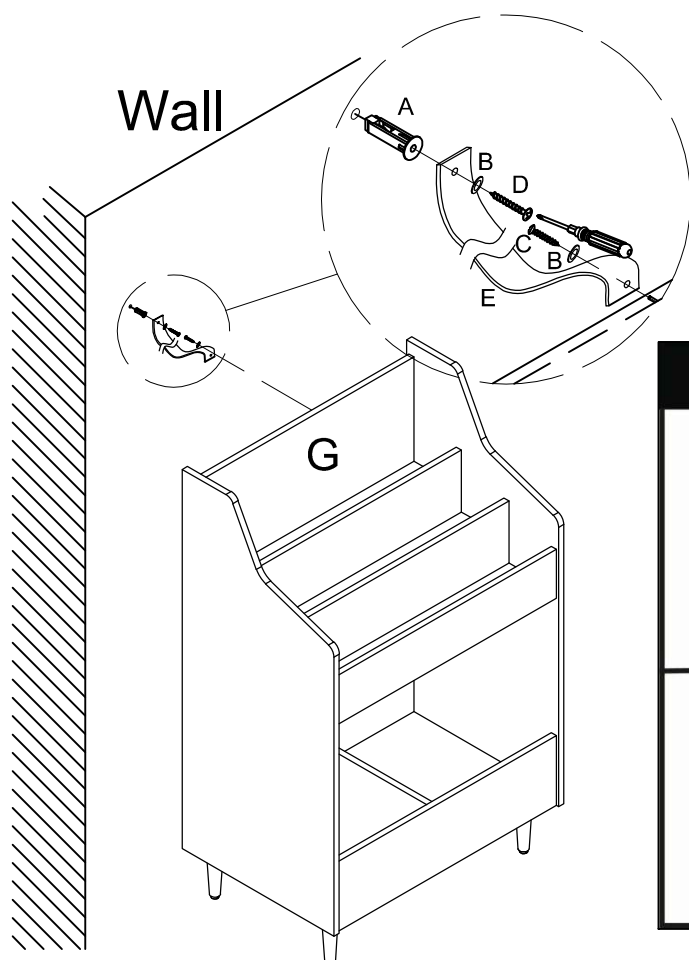

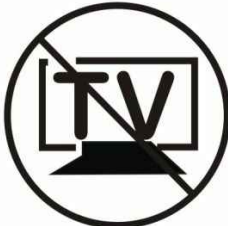⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>