 




KD-OS1304-3PK

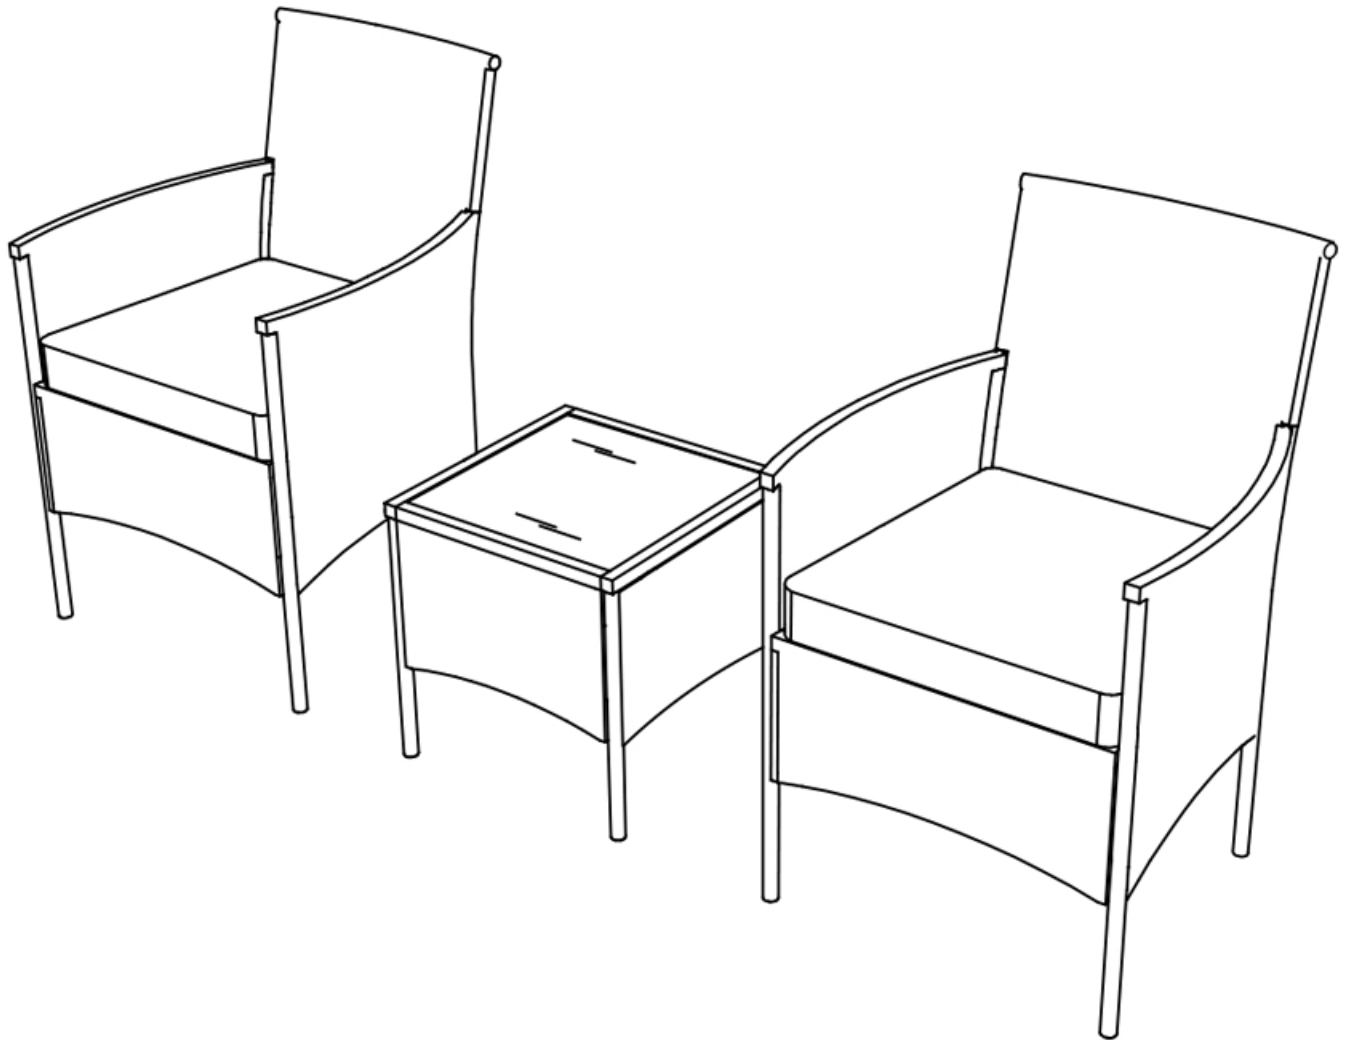

ASSEMBLY INSTRUCTIONS

3-PIECE OUTDOOR CONVERSATION SET

PARTS

Check that you've received
all parts listed below.

A1



(2 pcs)

A2



 
(2 pcs)

B




(2 pcs)

C

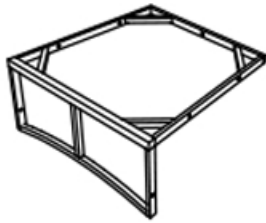

(2 pcs)

 D

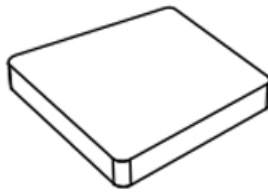

(2 pcs)

E



 
(2 pcs)

F



(2 pcs)

G

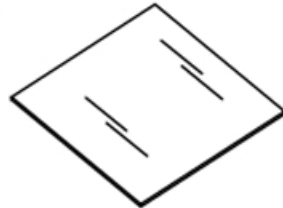

(1 pc)

HARDWARE

Check that you've received all hardware listed below.

① M6x30mm



(26pcs)

② Ø6x14x1



 
(26 pcs)

③ Allen key




(1 pc)

④ Torque wrench

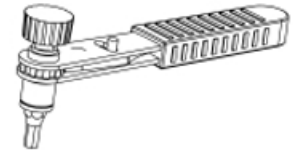

(1 pc)

 Missing something? Email us at hello@museandlounge.com


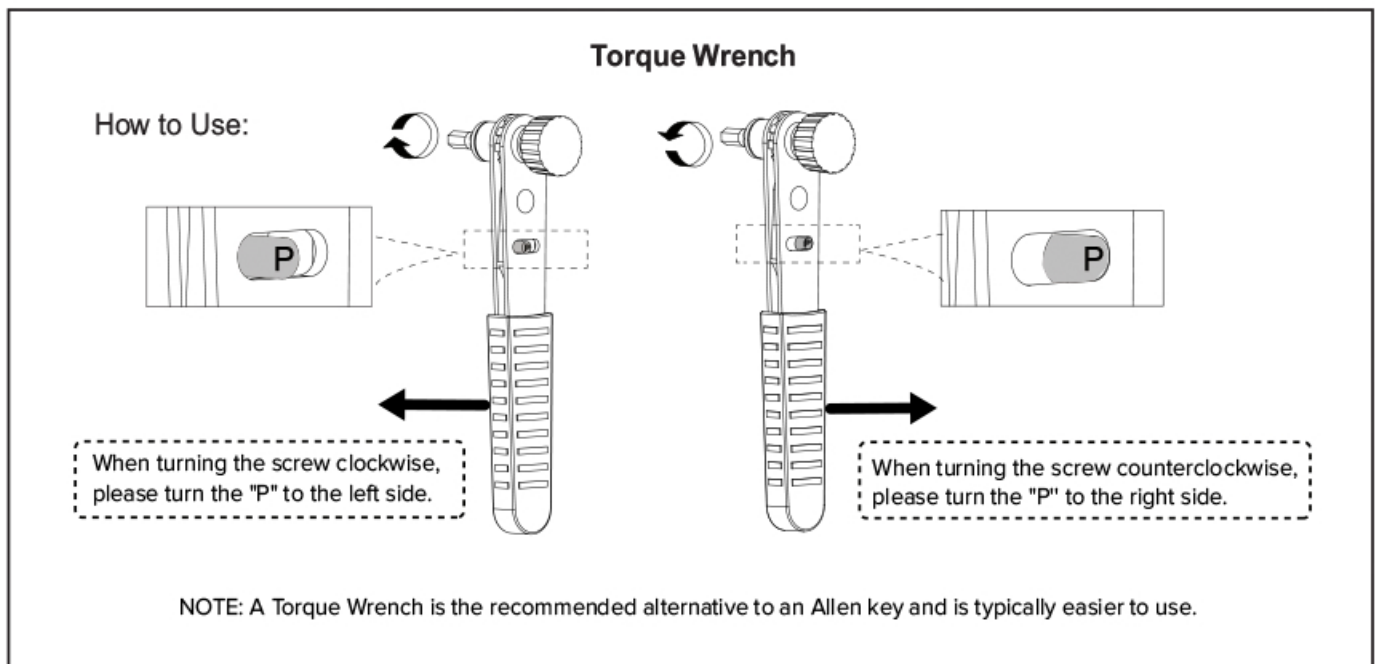


STEP 1

Repeat for
each chair.

Tighten bolts halfway

  
Connect Chair Back (B) to Arm (A1, A2)
with bolt (1) and washer (2).

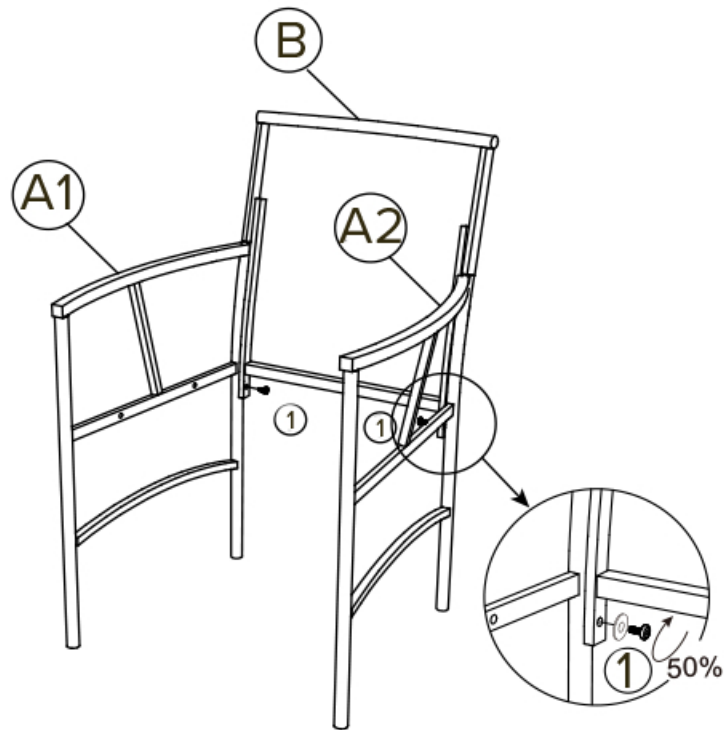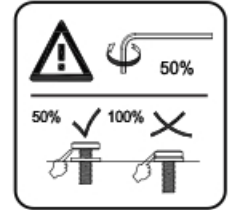


STEP 2

Repeat for
each chair.

 Connect from Step 1 to Seat Panel (C)
with bolt (1) and washer (2).

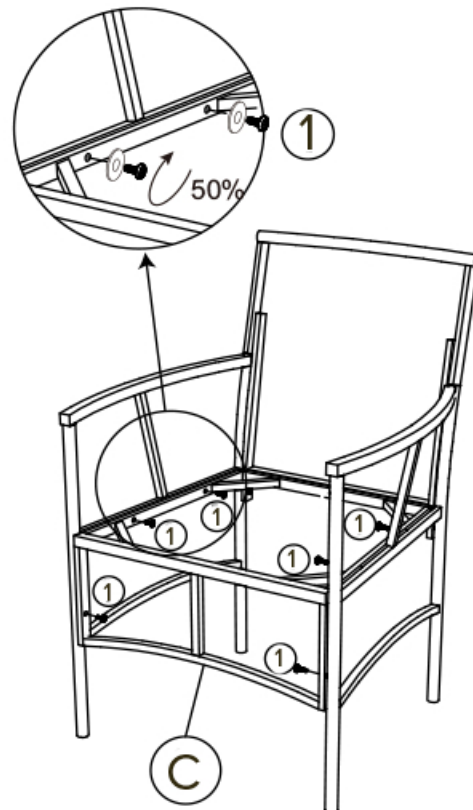


STEP 3 | Repeat for each chair.

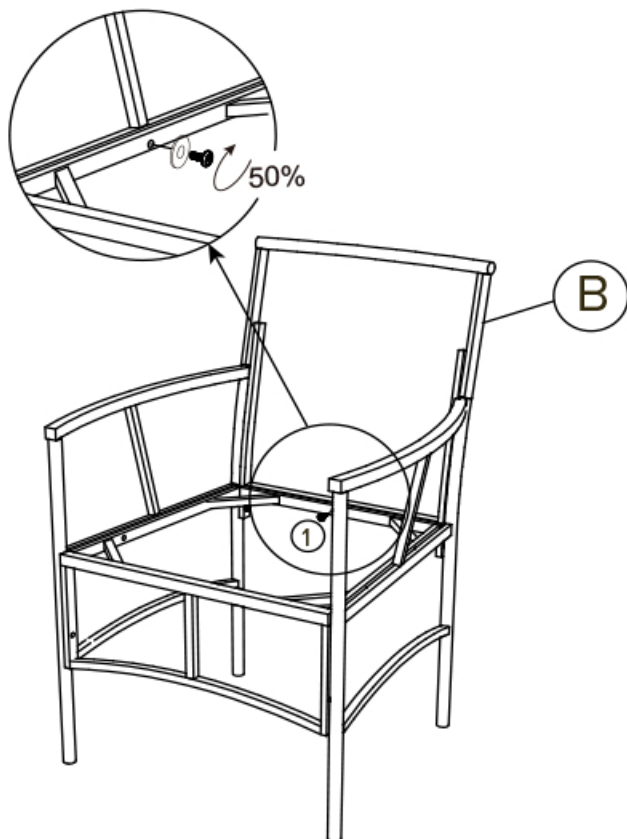 

Secure a spring washer (2) and a bolt (1).

STEP 4 | Repeat for each chair.

 
Fully tighten all bolts
Place Seat cushion (D) and move on.

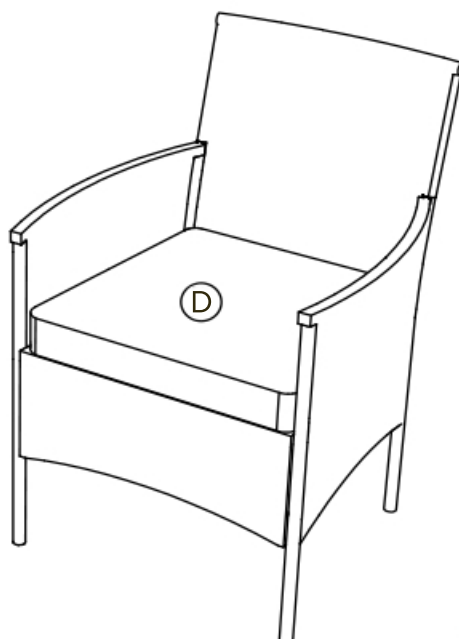

X2


STEP 5

 Connect Table Leg (E) and Table Side (F) with bolt (1) and washer (2).

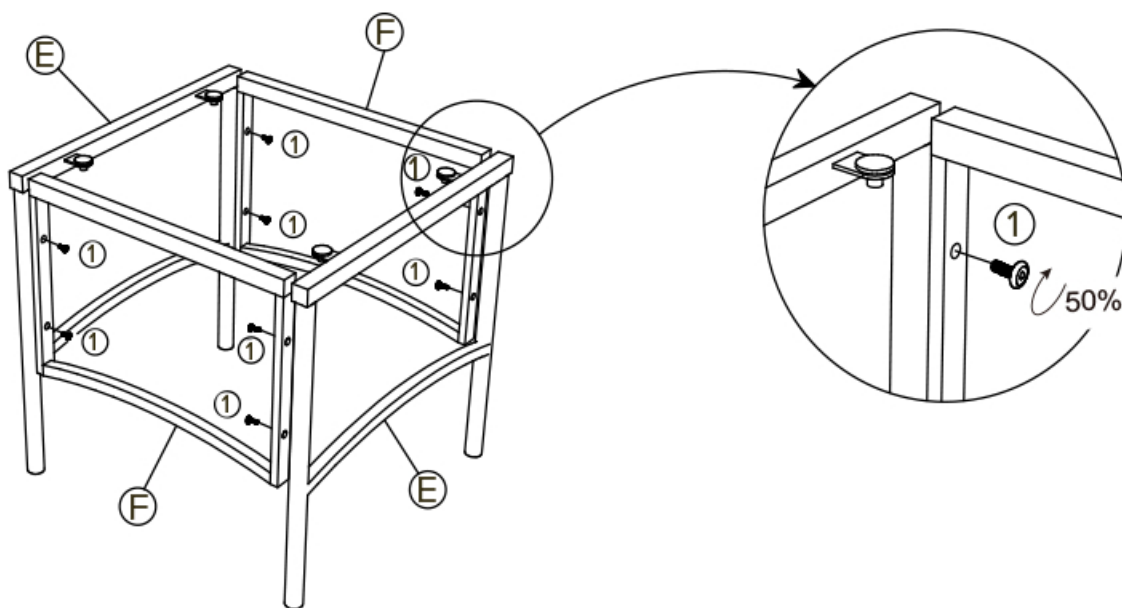


STEP 6

 Fully tighten all bolts.

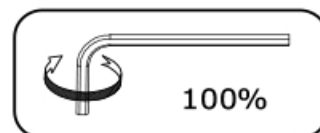

Place Table Top (G) to complete.

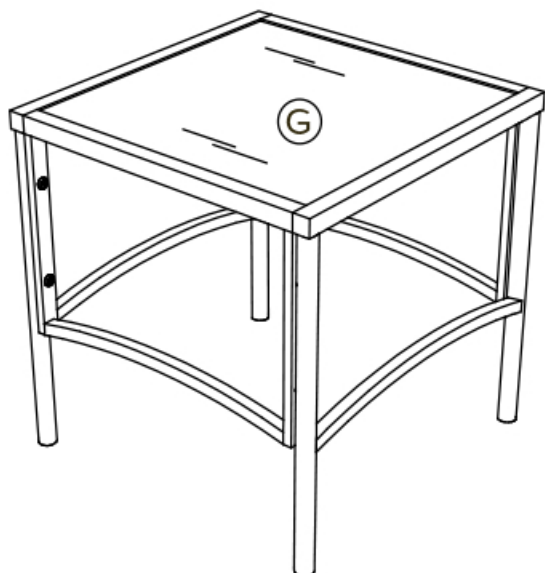 

Enjoy.

Need some help?



1-888-980-5122



@museandloungeco



hello@museandlounge.com



CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
- Wash with mild soap and water as needed; do not use abrasive cleaners.
- Cover furniture with an outdoor cover (not included) when not in use.
- Store in a dry, covered area during inclement weather or winter season.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.

V.220518