

 
## ASSEMBLY INSTRUCTIONS

OUTDOOR LOUNGER

# PARTS


Check that you've received  
all parts listed below.

(A)

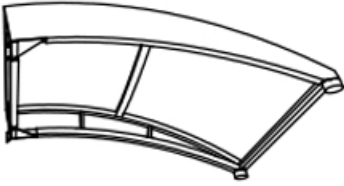

(1 pc)

 (B)

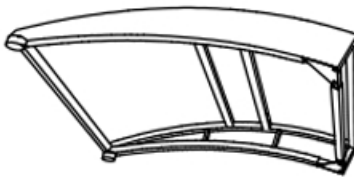


(1 pc)

(C)



(1 pc)

 (D)

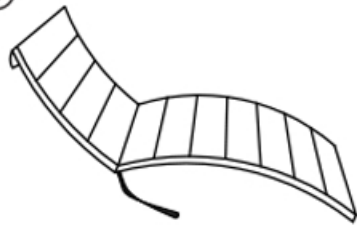


(1 pc)

# HARDWARE

 Check that you've received all hardware listed below.

① M6x20 mm




(8 pcs)

② Allen key 4x98 mm




(1 pc)

 ③ Torque wrench

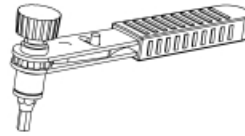



(1 pc)

 Missing something? Email us at [hello@museandlounge.com](mailto:hello@museandlounge.com)

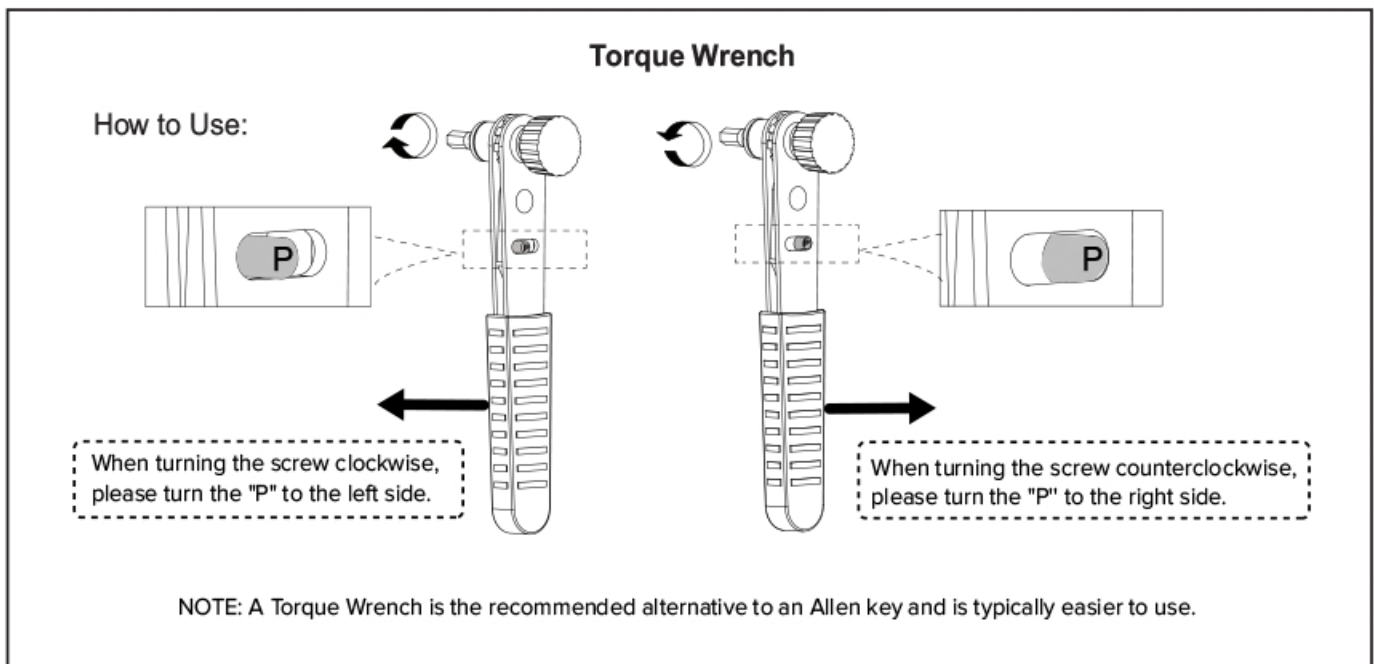

# STEP 1

  Tighten bolts halfway

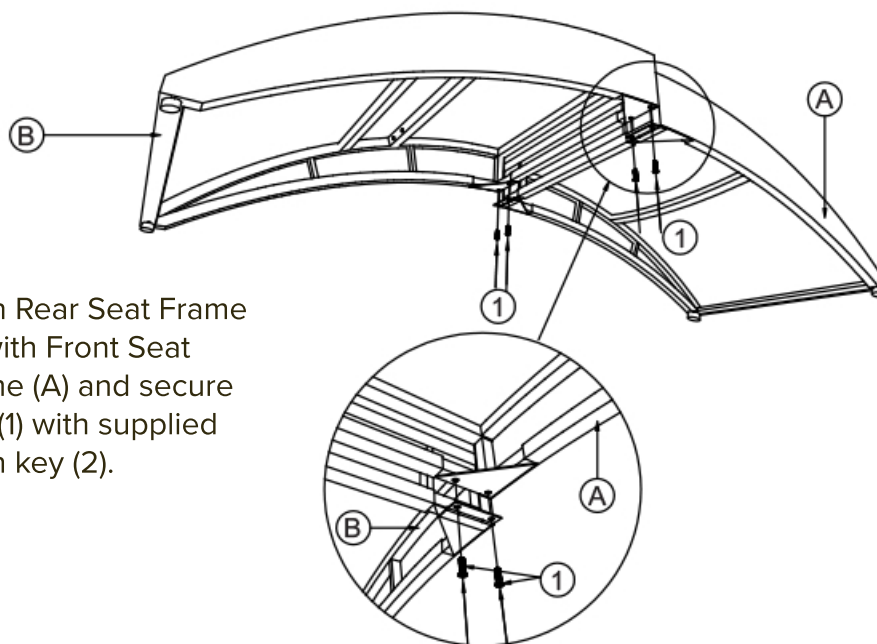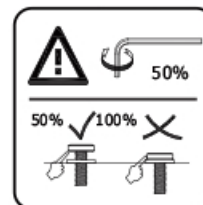


Align Rear Seat Frame (B) with Front Seat Frame (A) and secure bolt (1) with supplied Allen key (2).


# STEP 2

 Align Back (C) with Rear Seat Frame (B) and secure bolt (1) with supplied Allen key (2).


Back (C) should curve towards Front Seat Frame (A).

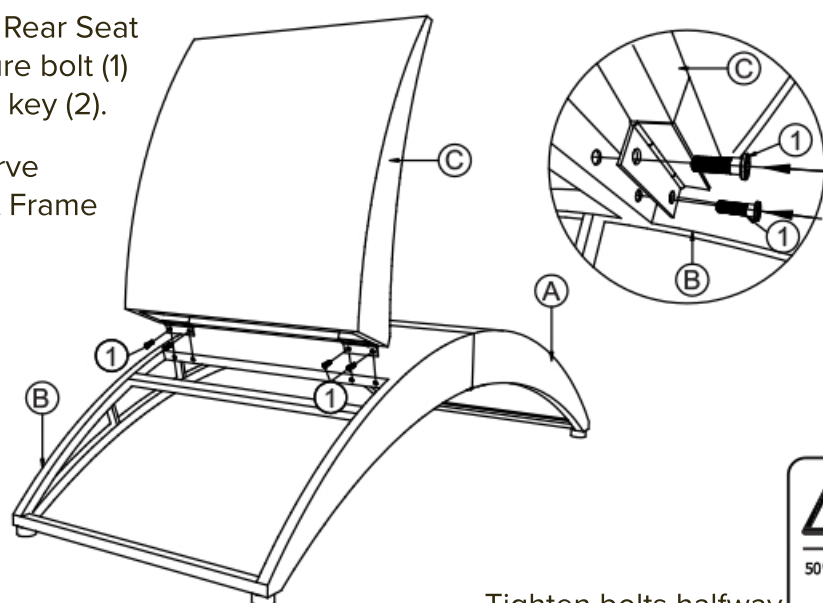


Tighten bolts halfway

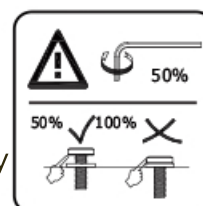 

# STEP 3

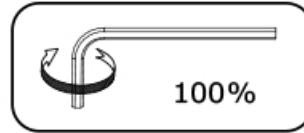 


Fully tighten  
all bolts.

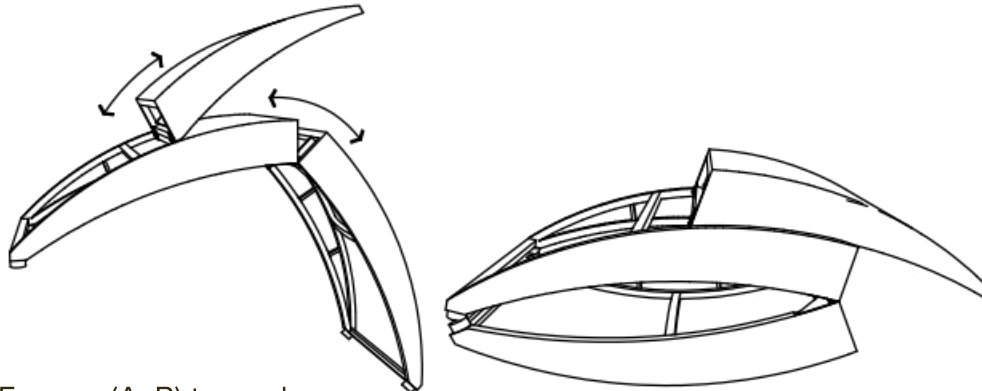 

Fold Seat Frames (A, B) towards  
each other, then fold Back (C)  
over top so all bolts are fully  
visible.

# STEP 4

 Place Cushion (D) atop frame  
and secure the strap to the  
underside of the frame

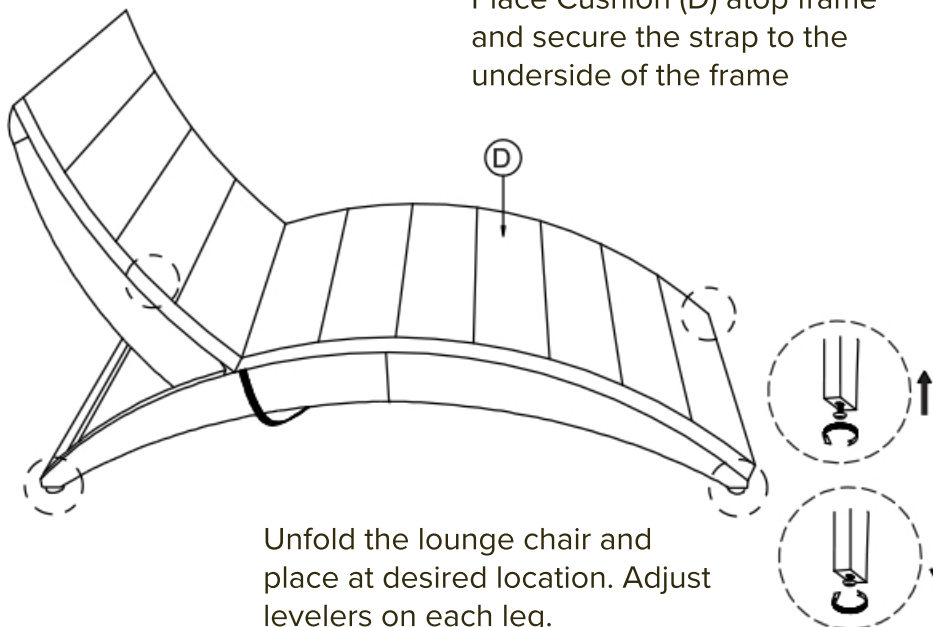

Unfold the lounge chair and  
place at desired location. Adjust  
levelers on each leg.

Enjoy.

# Need some help?



1-888-980-5122



@museandloungeco



hello@museandlounge.com



## CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
- Wash with mild soap and water as needed; do not use abrasive cleaners.
- Cover furniture with an outdoor cover (not included) when not in use.
- Store in a dry, covered area during inclement weather or winter season.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.

V.220518