 

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench

(Included)

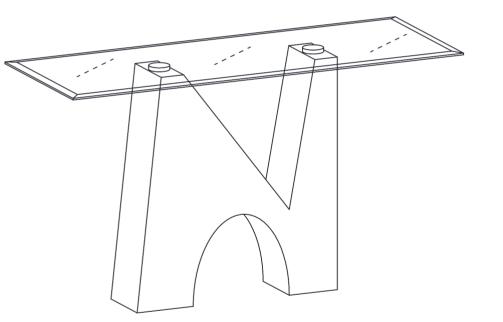



2 - People Recommended

ASSEMBLY RATING









EASY-

- DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 22-05-20



| Are you missing anything? Double-check all parts, hardware and accessories listed are all acccounted for. | Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then! |
|---|--|
| Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements! | Prep Time! Please review the assembly instructions and all diagrams prior to assembling. |

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

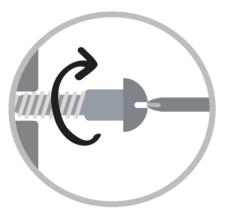

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

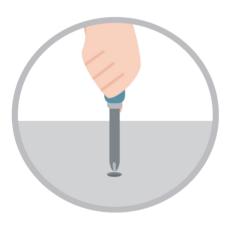


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

SOFA TABLE




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

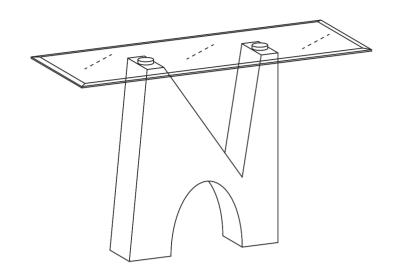


PARTS



 

Glass Top

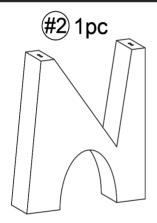

Support Leg

HARDWARE



Bolt M6x712mm



Adjuster Ø1"





Hammer Drive Anchors





Bolt M6





Allen wrench





Wood Screw Ø3/16"x1-1/2"





 
Flat washer Ø3/4"





Bolt Ø1/4"x1/2"





Chain


CM4218-S is packed in 2 cases

| Carton | Designation | Part | Hardware |
|------------|-------------|------|--|
| CM4218-S-1 | Glass | | |
| CM4218-S-2 | Leg | | Bolt M6x712mm #B4pcs Bolt M6 #C4pcs Flat washer Ø3/4" #D4pcs Adjust Ø1" #E 1pc Allen wrench #F) 1pc D Bolt Ø1/4"x1/2" #G4pcs Hammer Drive Anchors #H) 1pc Wood Screw Ø3/16"x1-1/2" #I) 1pc |

ASSEMBLY INSTRUCTIONS

1

Attach the Bolts (#A) to the Glass top (#1).

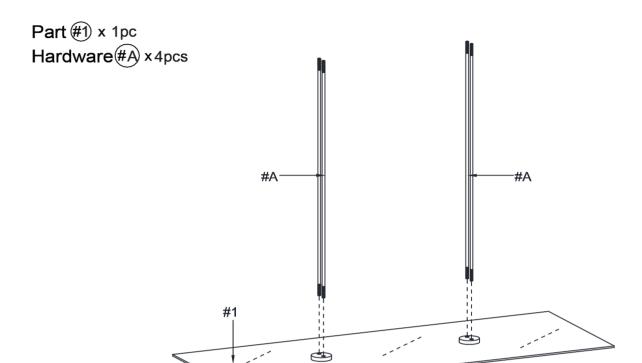

2

Part #1 x1pc

Part #2 ×1pc


Hardware#A x4pcs

Hardware#B x4pcs

Hardware #C x4pcs


Hardware #D ×4pcs

Hardware#Ex1pc

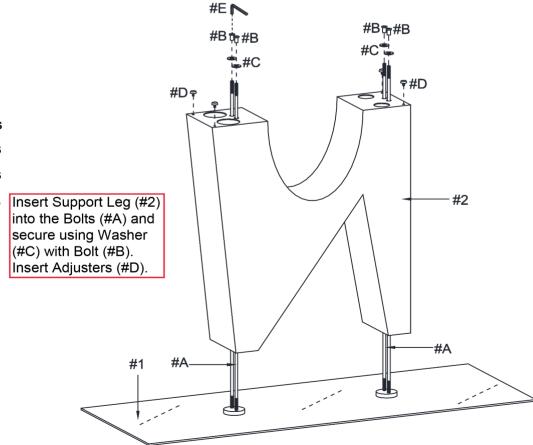


ASSEMBLY INSTRUCTIONS

3

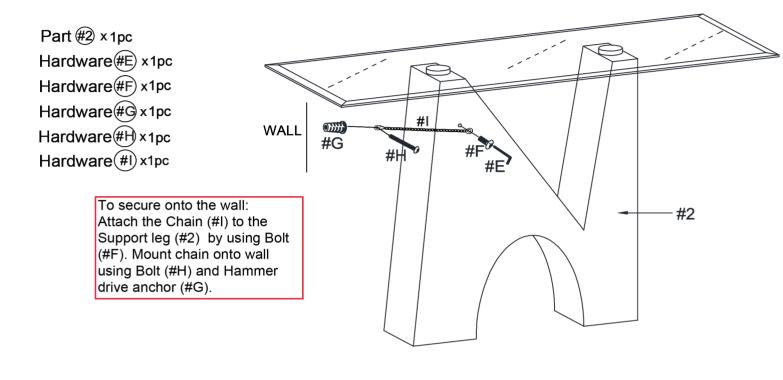

4

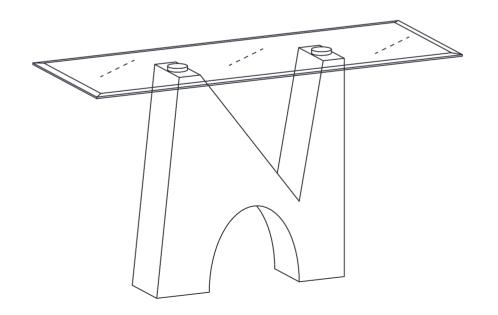

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

√ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

 
ASSEMBLY INSTRUCTIONS

Wall Mounting and Fixing



EXPANSION WALL ANCHOR

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. Liability for product damage or failure due to using the incorrect anchors will fall on the installer.





CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

QUICK TIPS


1.If unsure of the proper size, always choose a larger screw and wall anchor.

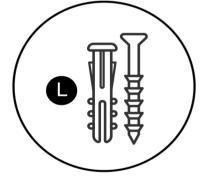


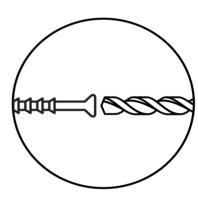

2. Match the drill bit to the wall anchor and hole size.

3. Only drill horizontally. Do not force the drill or enlarge the hole for the wall anchor.

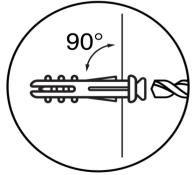

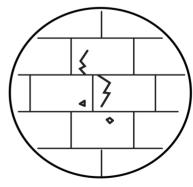

4. Take extra care when drilling into high walls or ceramic tiles. Wall anchors should be a tight fit for the hole. Never use wall anchors in ceilings.





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.