
ASSEMBLY INSTRUCTIONS

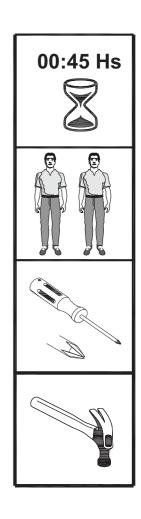



HARDWARE INCLUDED



A - 8,0x25 Wood Dowel Qty. 24



B - 4,0x30 Screw Qty. 28



C - 3,5x14 Screw Qty. 26



D - 10x10 Nail Qty. 12



E - Knob Qty. 02




F - Slide 300mm Qty. 02




G - M4x25 Screw Qty. 02





H - Sticker ribbon Qty. 04

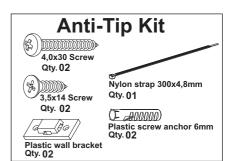



PARTS INCLUDED

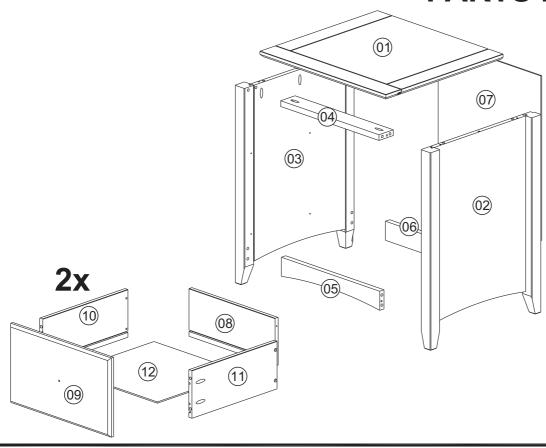

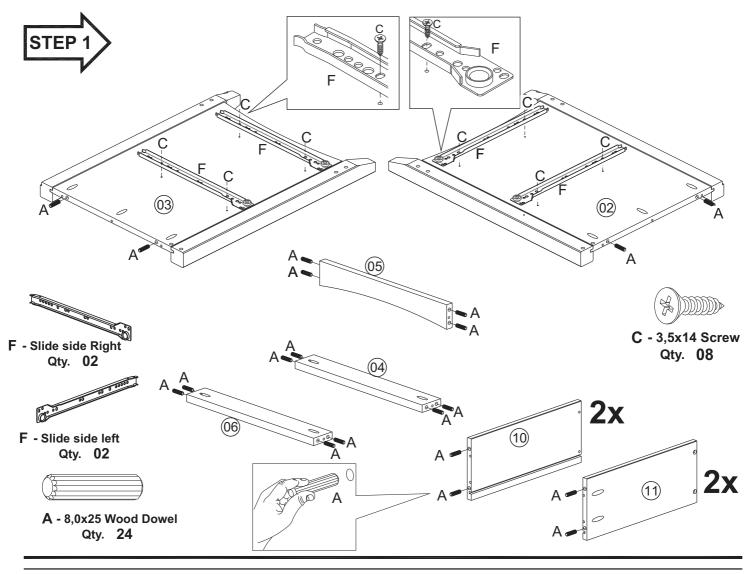

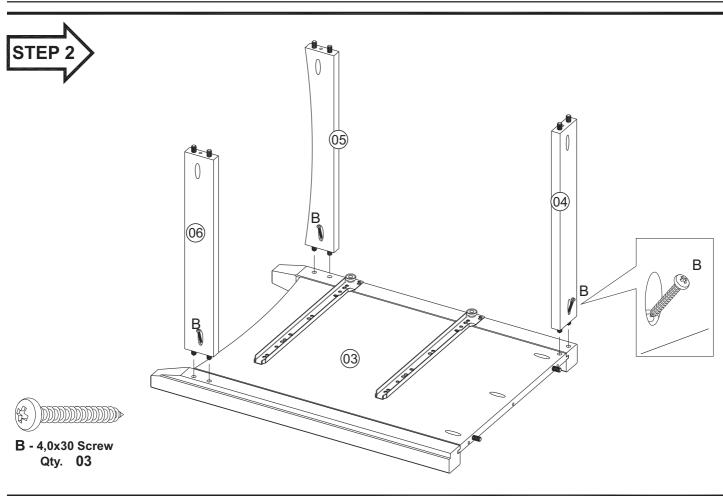

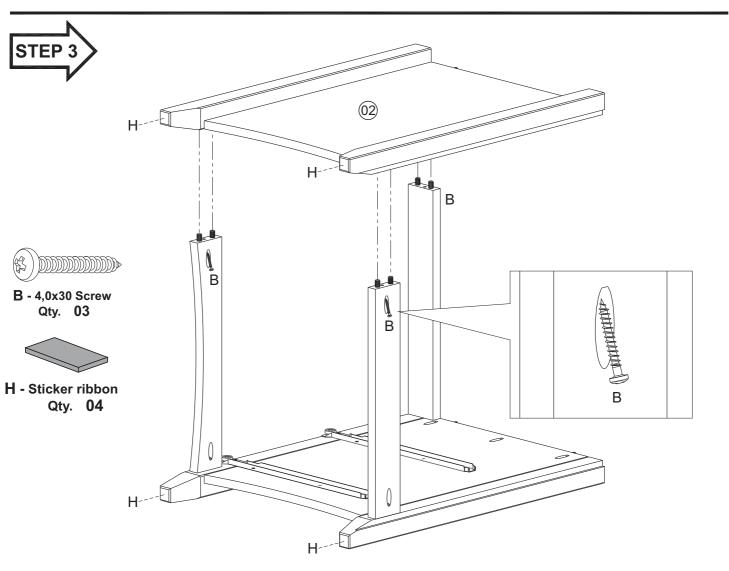

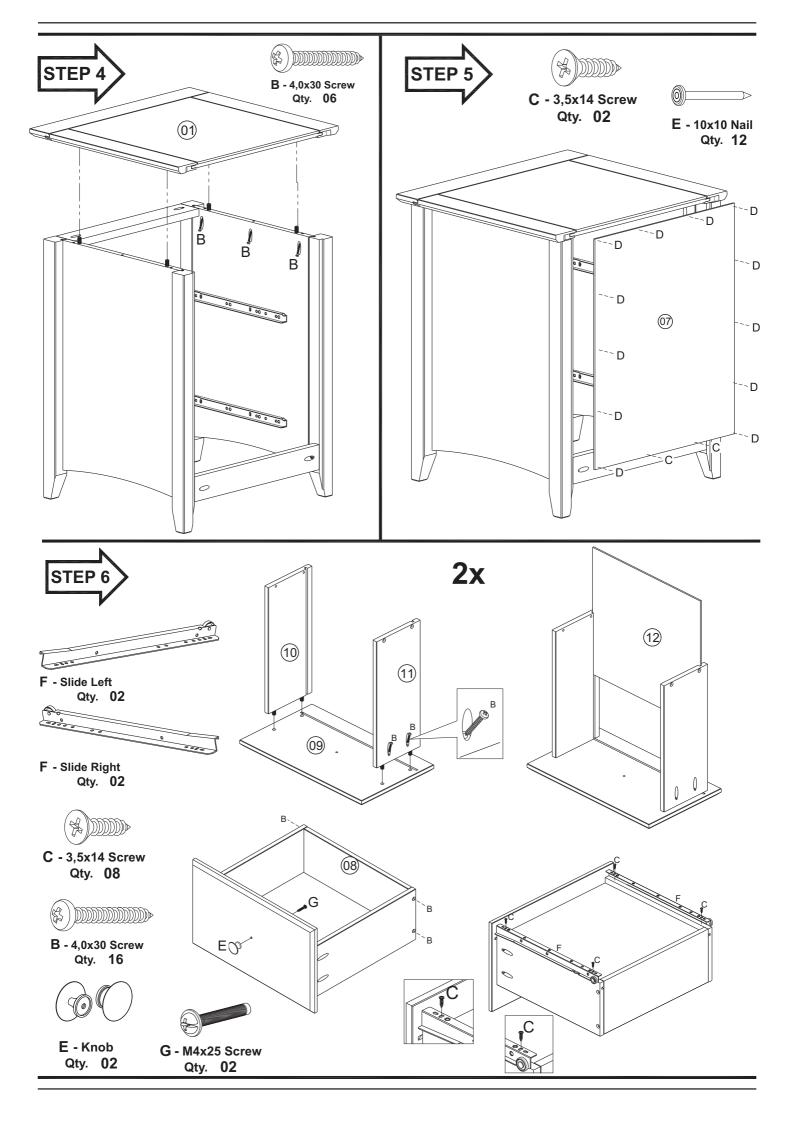



Place The Drawer With Warning Lable in Upper Most Position Of Chest As Shown.




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Place heaviest items in the lowest drawers,
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
 (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not attempt to remove!

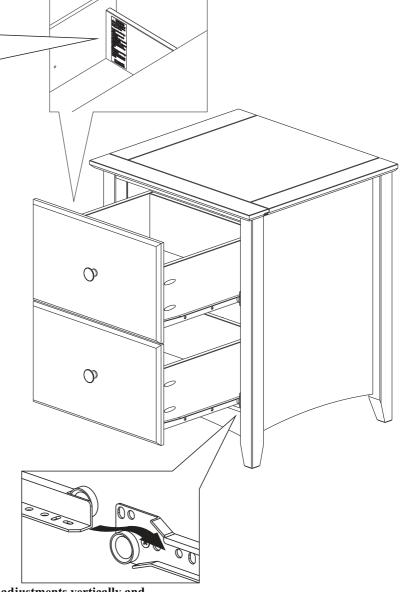

Drawer Glide Adjustments:

The metal drawer glides are designed to allow for slight adjustments vertically and horizontally, if necessary.

 
Horizontal Glide Adjustment:

Remove drawer from chest. Loosen screws indicated on side of metal track. Make needed space adjustment and re-tighten screws and add 2 additional screws in holes as indicted in diagram below:



Vertical Glide Adjustment:

Remove drawer from chest. Loosen Screws on underside of metal track. Make needed space adjustment and re-tighten screws as indicated in diagram below:



D - 3,5x14 Screw Qty. 08

