

Assembly Instruction Sheet #S-1701P47

For Style 1701P47

Tools Required: Phillips screwdriver, Phillips screwdriver, pliers, wire cutter, wire stripper, electrical tape, safety glasses.

Light Source: (1) 12W LED 24W DIMMABLE (3000K)

Installation: Assembly Time: 10-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulb(s). Make sure bulbs are given sufficient time to cool before removal.

Package Contents


STEP 1 - Release Crossbar from Ceiling Canopy

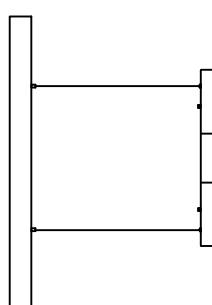

A Fixture Body x1

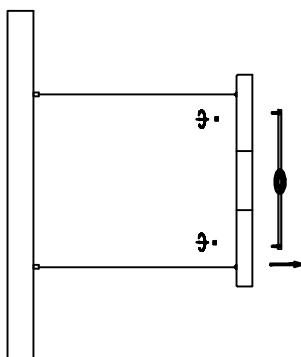

STEP 2 - Attach Crossbar to Outlet Box.

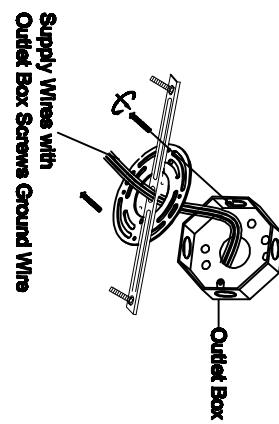

STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Tighten connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

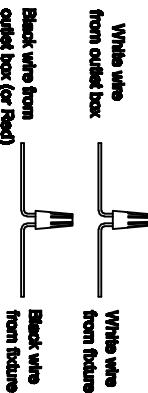


Figure 2

STEP 4 - Install Ceiling Canopy to Ceiling

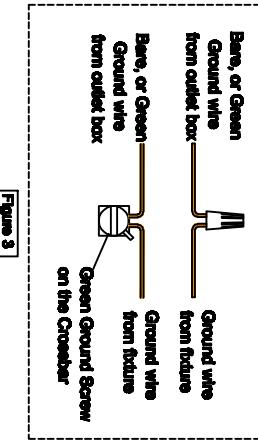
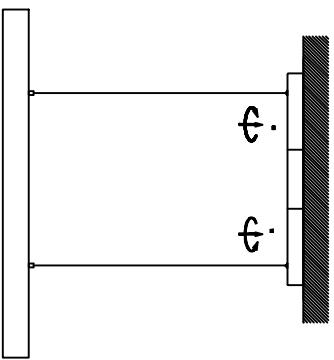


Figure 3

Figure 4