 
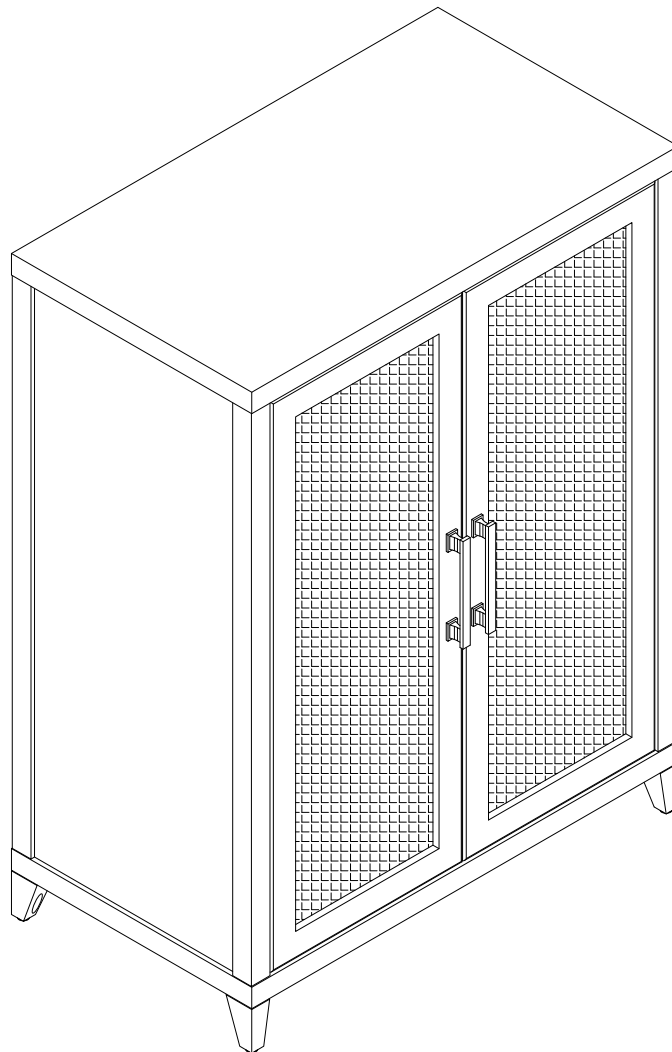 
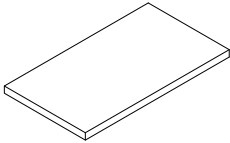 
 
 
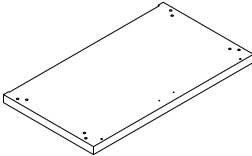 
 
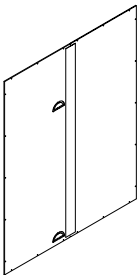 
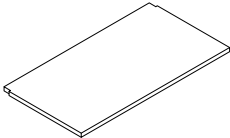 
 


CROSLEY
FURNITURE









Stackable Pantry
CF3127



PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Door 2 PCS
F 	G 	H 	I 	
Back Panel 1 PC	Adjustable Shelf 2 PCS	Right Leg 2 PCS	Left Leg 2 PCS	

        HARDWARE LIST
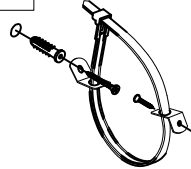
#1	 Ø1/4"*25mm	#2	 Ø1/4"*11mm	#3	 Ø1/4"*13mm	#4	 4mm*90	#5	 Ø8*30mm
	Bolt 12 PCS (Extra 1)		Spring Washer 12 PCS (Extra 1)		Flat Washer 12 PCS (Extra 1)		Allen Wrench 1 PC		Wood Dowel 12 PCS (Extra 1)
#6		#7	 6*3*15mm	#8		#9	 5/32"*25mm	#10	
	Magnet 2 PCS		Round Head Screw 12 PCS (Extra 1)		Handle 2 PCS		Round Head Bolt 4 PCS (Extra 1)		Shelf Holder 8 PCS (Extra 1)
#11	 8*3*12mm	#12		#13					
	Screw 22 PCS (Extra 1)		Connecting Bar 2 PCS		Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Step 1. Attach magnets (part #6) to top panel (part A) and bottom panel (part D) using round head screws (part #7) and phillips head screwdriver.

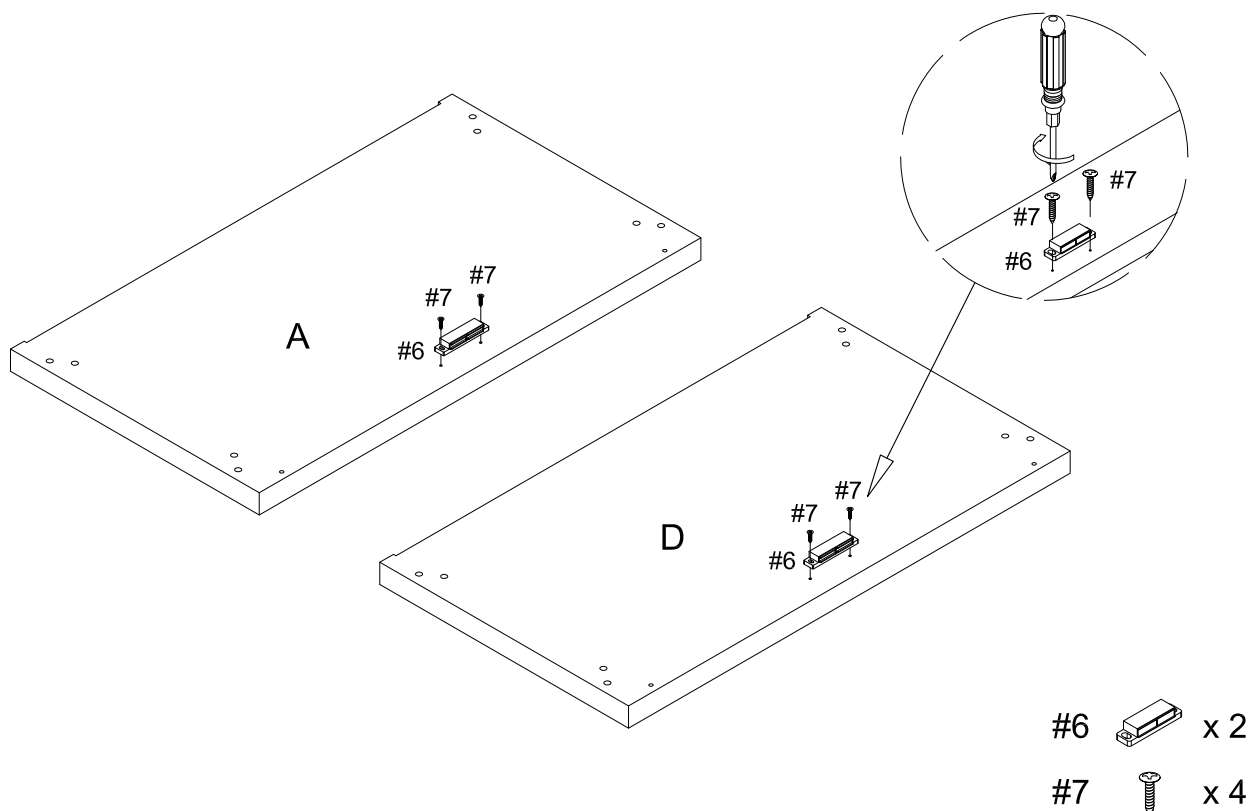

 Step 2. Attach handles (part #8) to doors (part E) using round head bolts (part #9) and phillips head screwdriver.

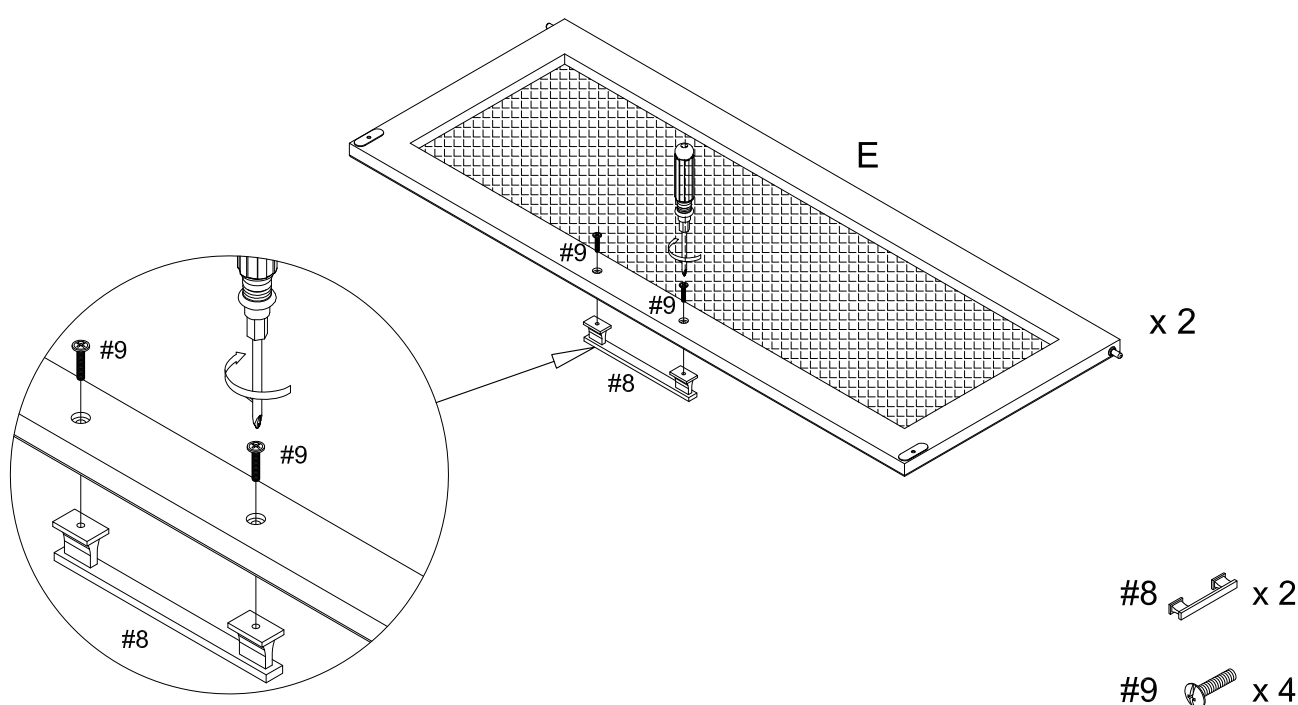


 Step 3. Attach panels (parts B & C) to top panel (part A) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

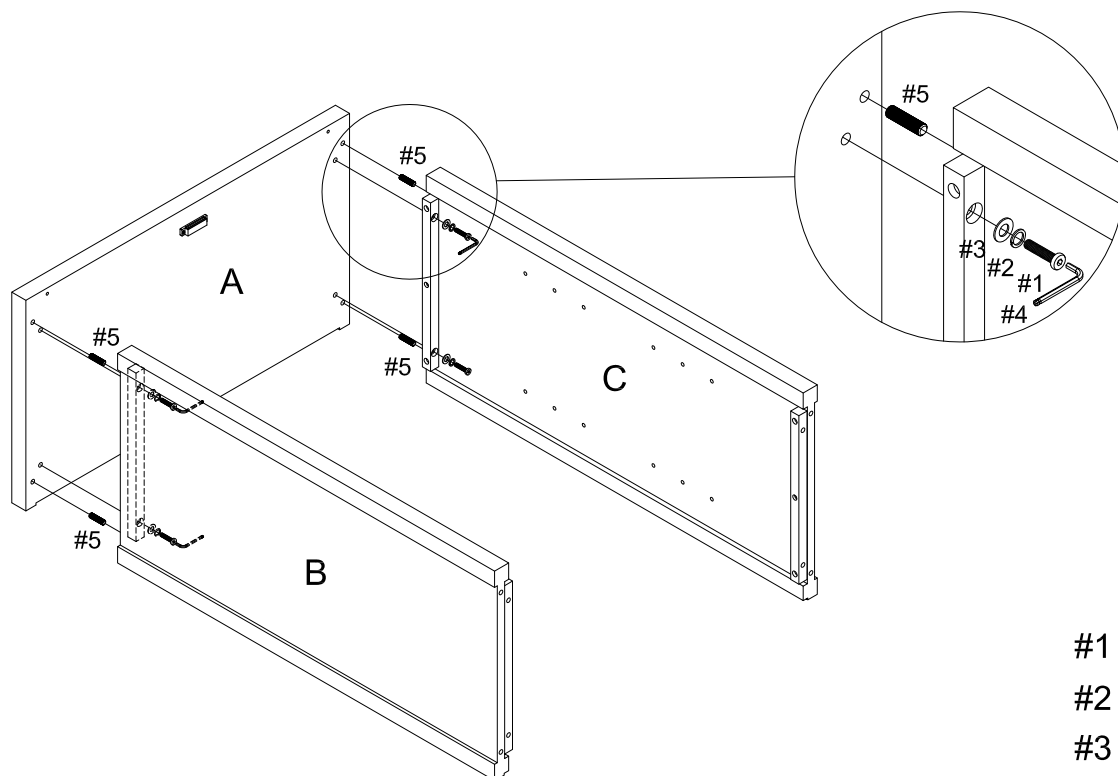


- #1  x 4
- #2  x 4
- #3  x 4
- #4  x 1
- #5  x 4

 Step 4. Attach bottom panel (part D) to panels (parts B & C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

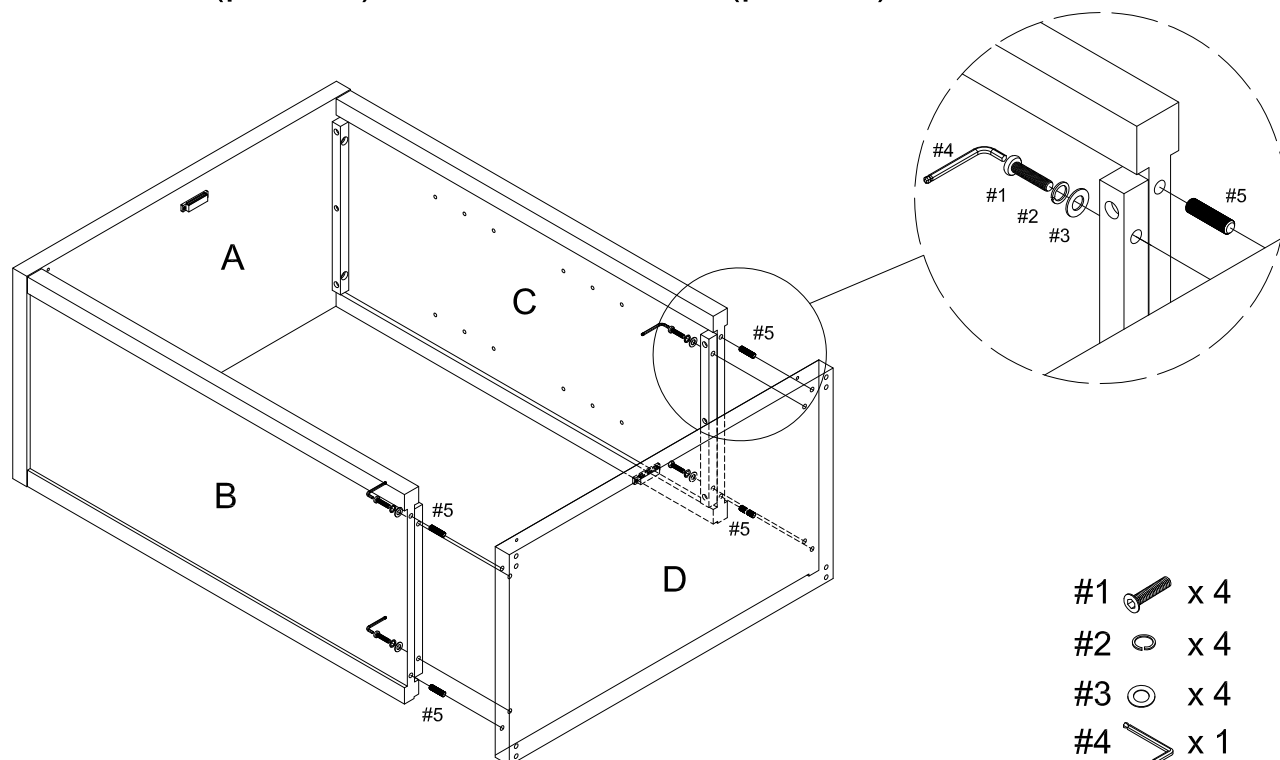


- #1  x 4
- #2  x 4
- #3  x 4
- #4  x 1
- #5  x 4

 Step 5. Attach legs (parts H & I) to bottom panel (part D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

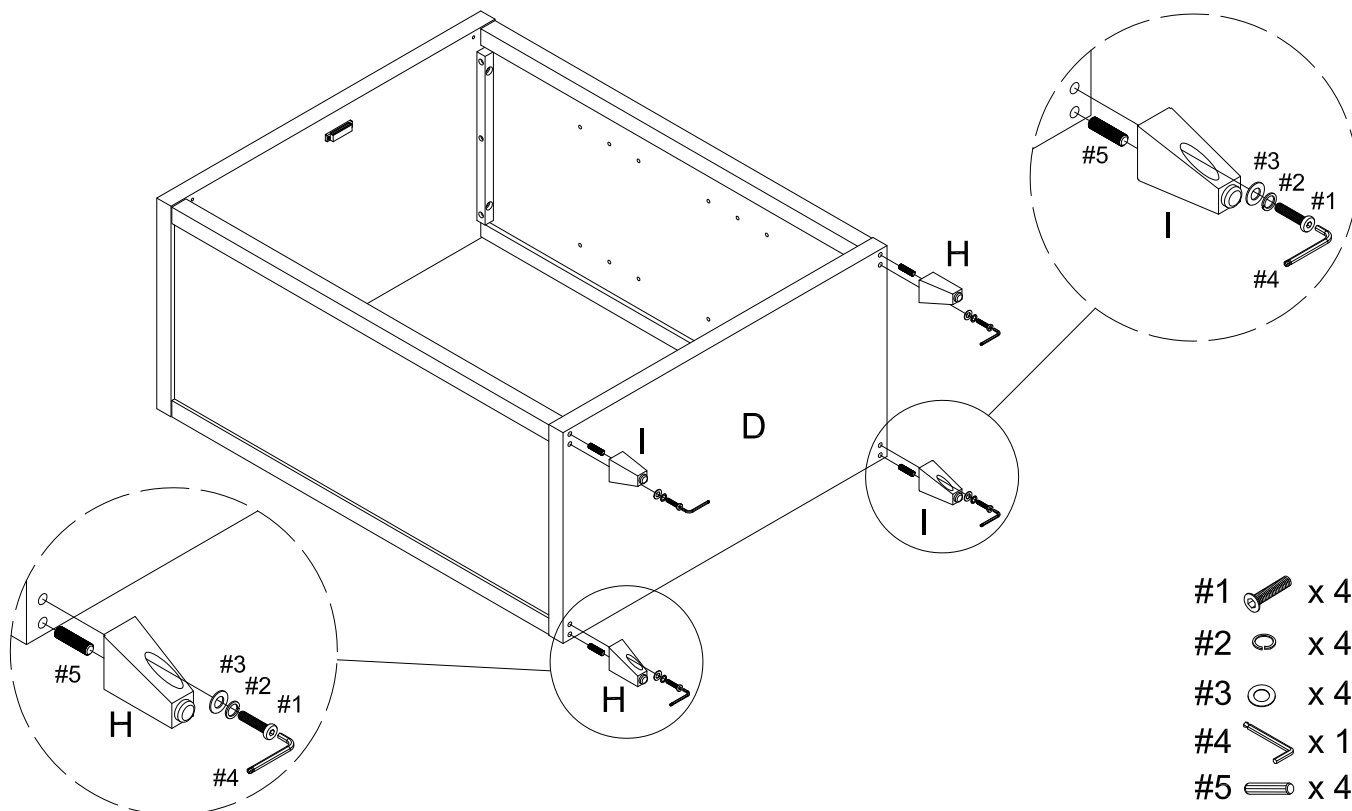

 
Step 6. Carefully turn unit upright. Attach back panel (part F) to assembled unit (parts A, B, C & D) using screws (part #11) and phillips head screwdriver.

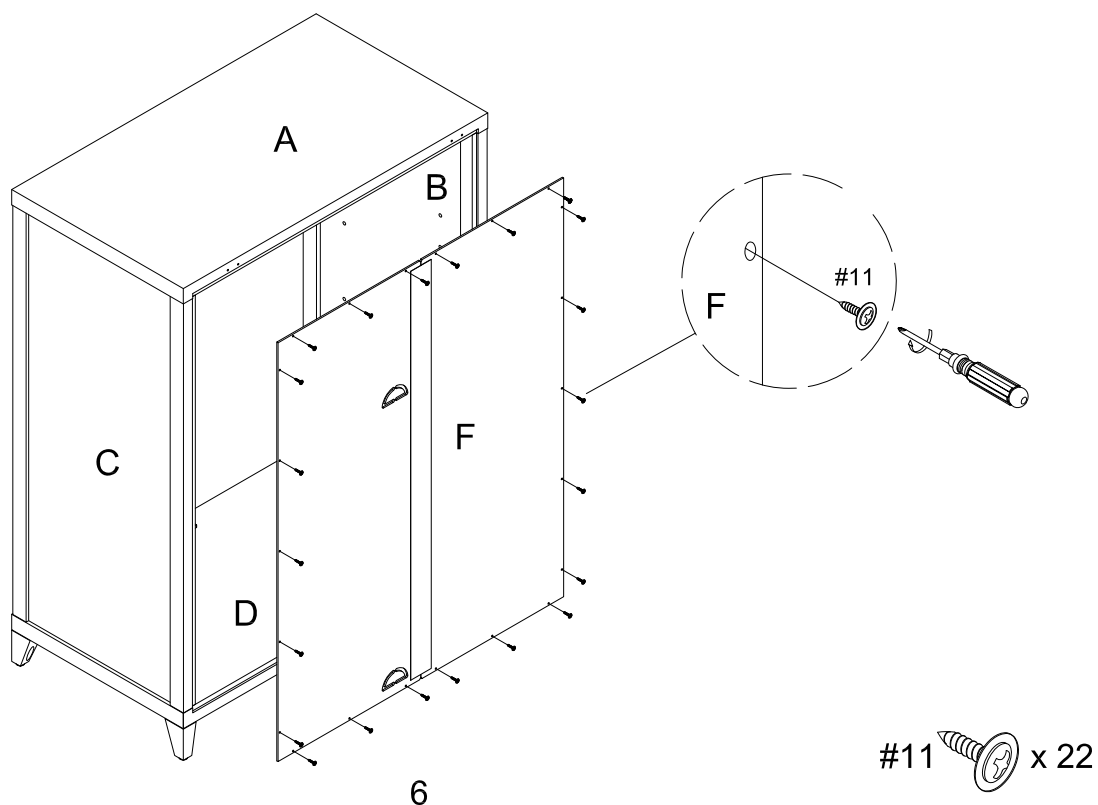

Step 7. Attach doors (part E) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).


NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

 NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. if relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

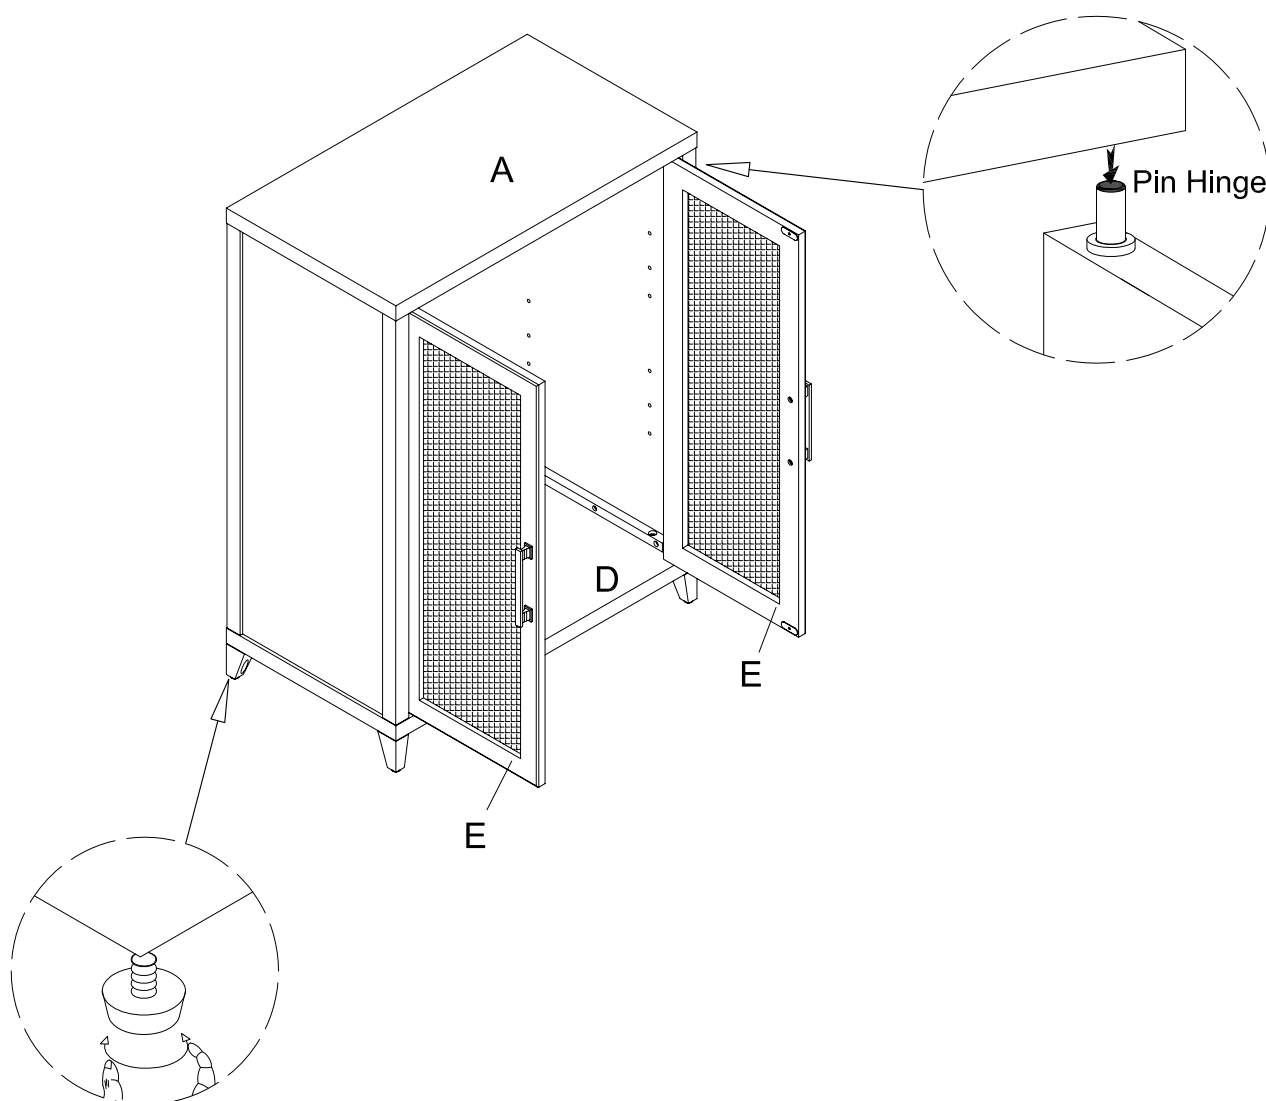


Step 8. Place shelf holders (part #10) into desired position and slide adjustable shelves (part G) into place.

 Important: Safety strap kit (part #13) must be installed to prevent tipping damage and/or injury.

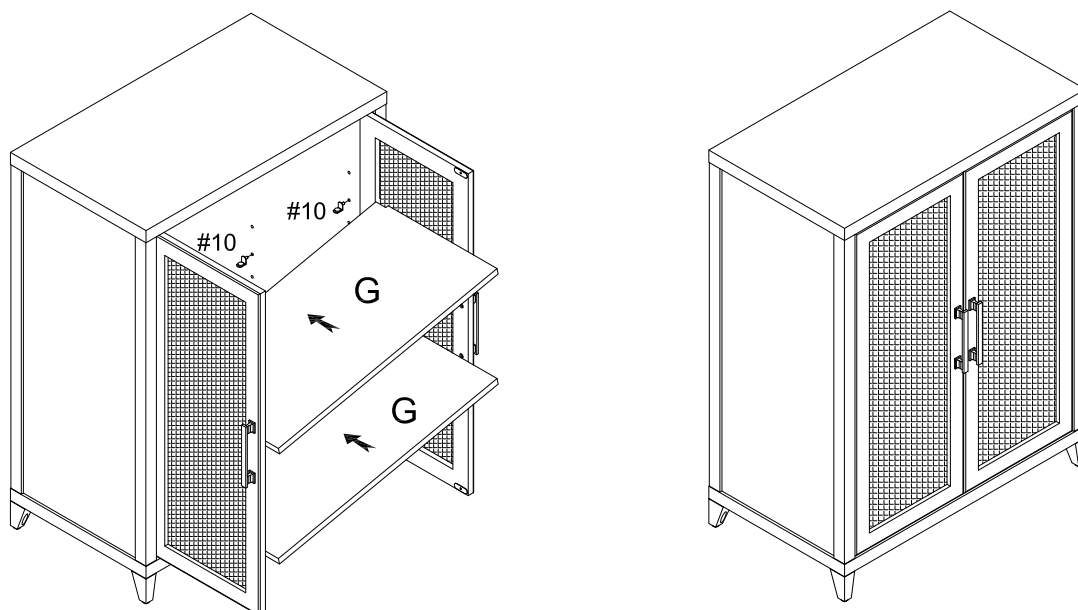



#10  x 8

 Step 9. Flip and place pantries together by lining up top panels (part A).
Note: Please remove the legs from hutch before stacking.

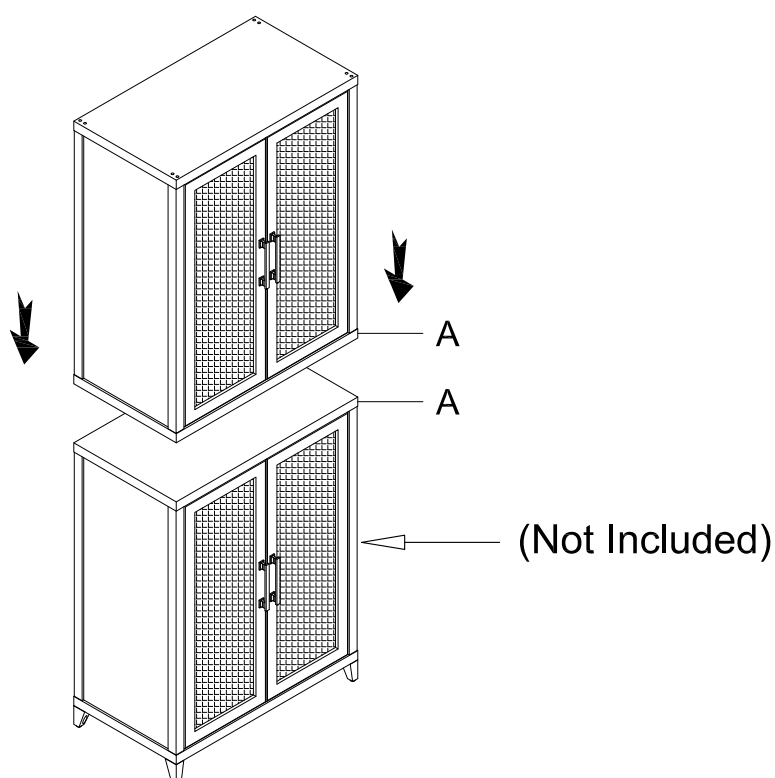

  Step 10. Attach connecting bars (part #12) to top panels (part A) using round head screws (part #7) and phillips head screwdriver.

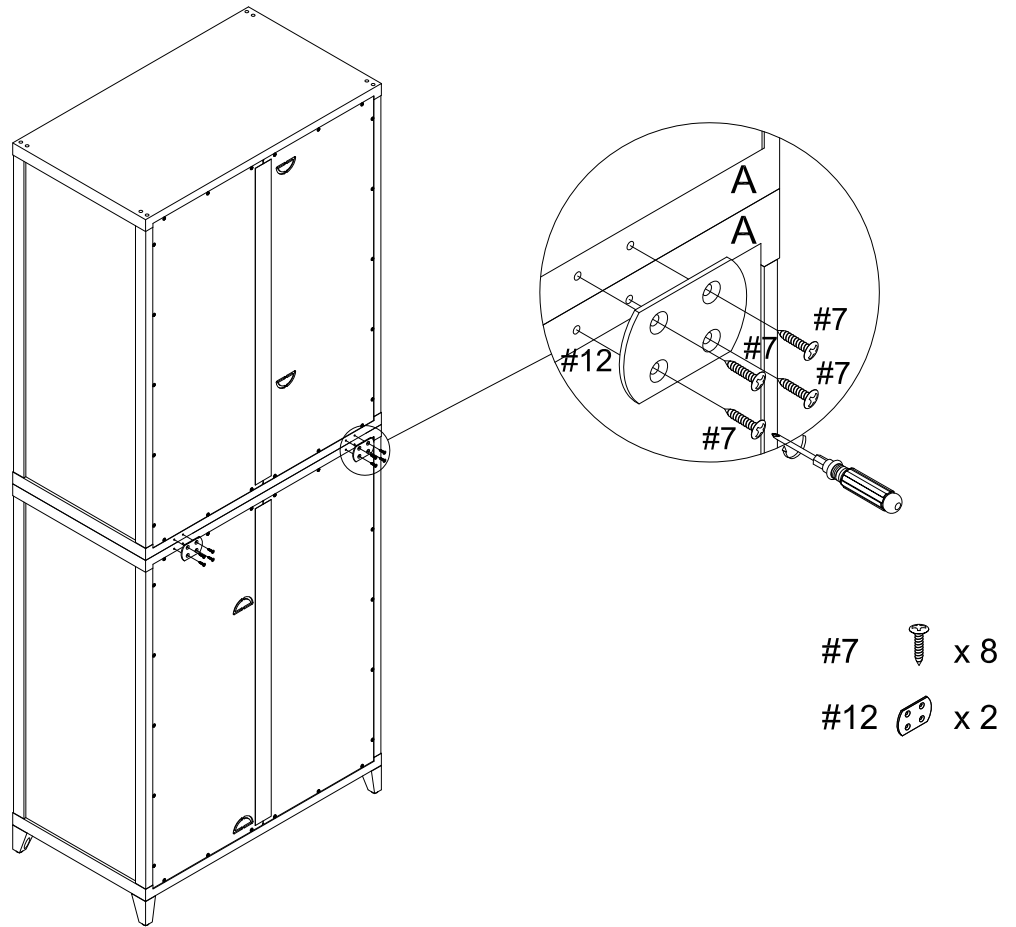

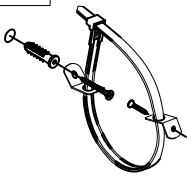
#13	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

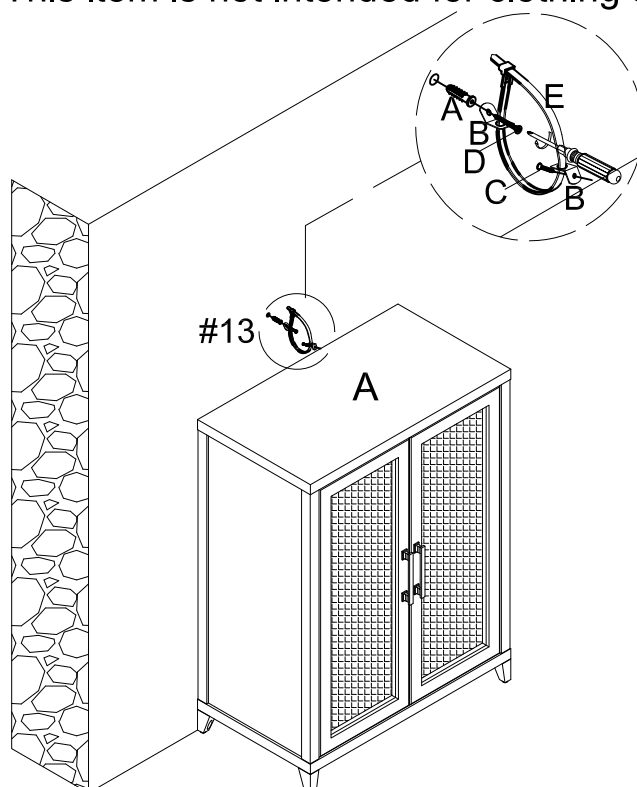

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>