 


 

 
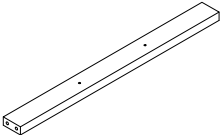 
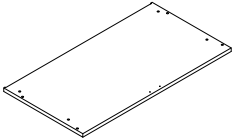 
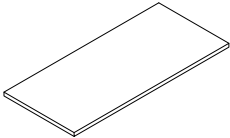 

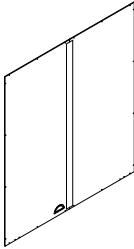 
CROSLEY

FURNITURE

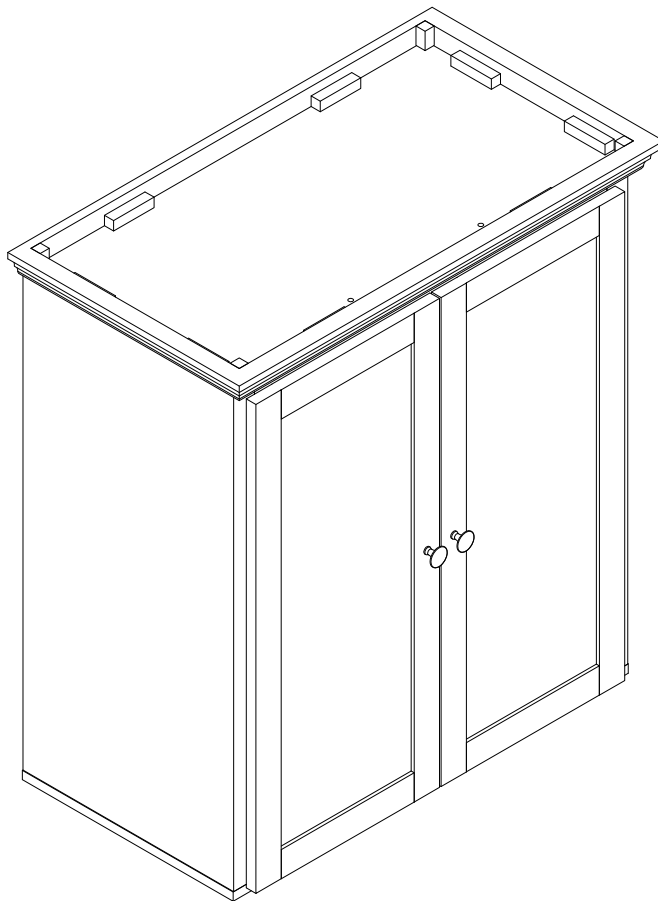 


 
 
 

 
 
 

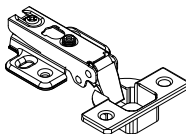 



Pantry Hutch CF3128

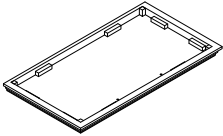

PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Cross Rail 1 PC	Bottom Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 		
Adjustable Shelf 2 PCS	Door 2 PCS	Back Panel 1 PC		

 HARDWARE LIST
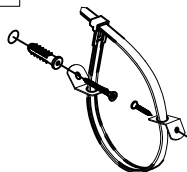
#1		#2		#3		#4		#5	
Ø1/4"*25mm		Ø1/4"*11mm		Ø1/4"*13mm		4mm*90		Ø8*30mm	
Bolt		Spring Washer		Flat Washer		Allen Wrench		Wood Dowel	
10 PCS (Extra 1)		10 PCS (Extra 1)		10 PCS (Extra 1)		1 PC		12 PCS (Extra 1)	
#6		#7		#8		#9		#10	
		6*3*15mm							
Magnet		Round Head Screw		Connecting Bar		Shelf Holder		Knob	
2 PCS		12 PCS (Extra 1)		2 PCS		8 PCS (Extra 1)		2 PCS	
#11		#12		#13		#14		#15	
5/32"*25mm				7*3.5*15mm		8*3*12mm			
Round Head Bolt		Hinge		Long Screw		Short Screw		Safety Strap Kit	
2 PCS (Extra 1)		4 PCS		24 PCS (Extra 1)		20 PCS (Extra 1)		1 SET	

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.





Phillips Head Screwdriver

  
Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.



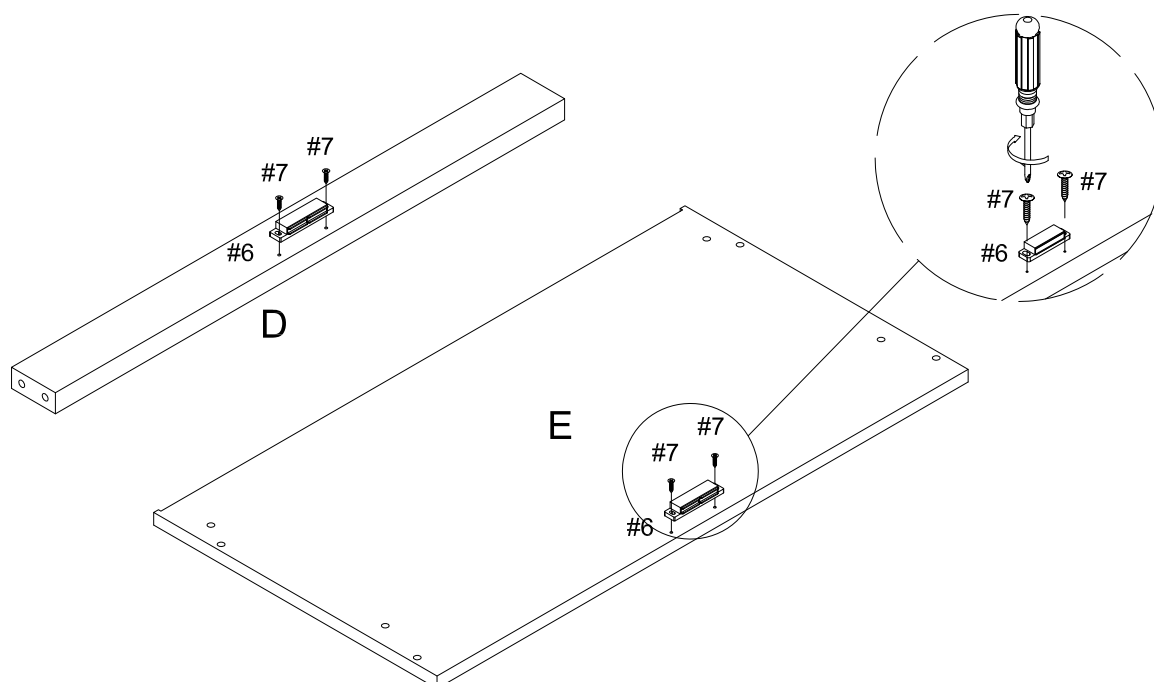

 Step 1. Attach magnets (part #6) to cross rail (part D) and bottom panel (part E) using round head screws (part #7) and phillips head screwdriver.

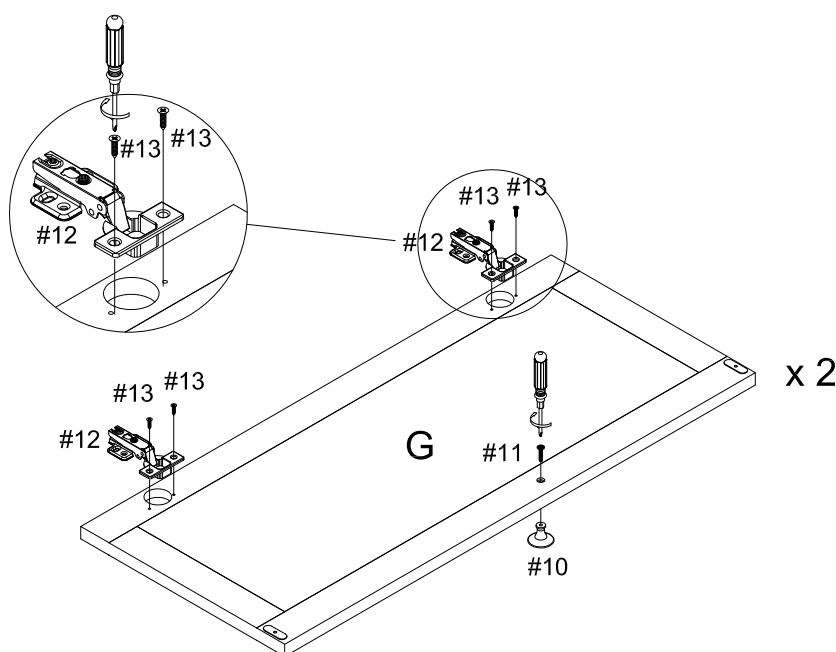


#6  x 2
#7  x 4

Step 2. Attach knobs (part #10) to doors (part G) using round head bolts (part #11) and phillips head screwdriver. Attach hinges (part #12) to doors (part G) using long screws (part #13) and phillips head screwdriver.




#10  x 2
#11  x 2
#12  x 4
#13  x 8

 
Step 3. Attach bottom panel (part E) to panels (parts B & C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

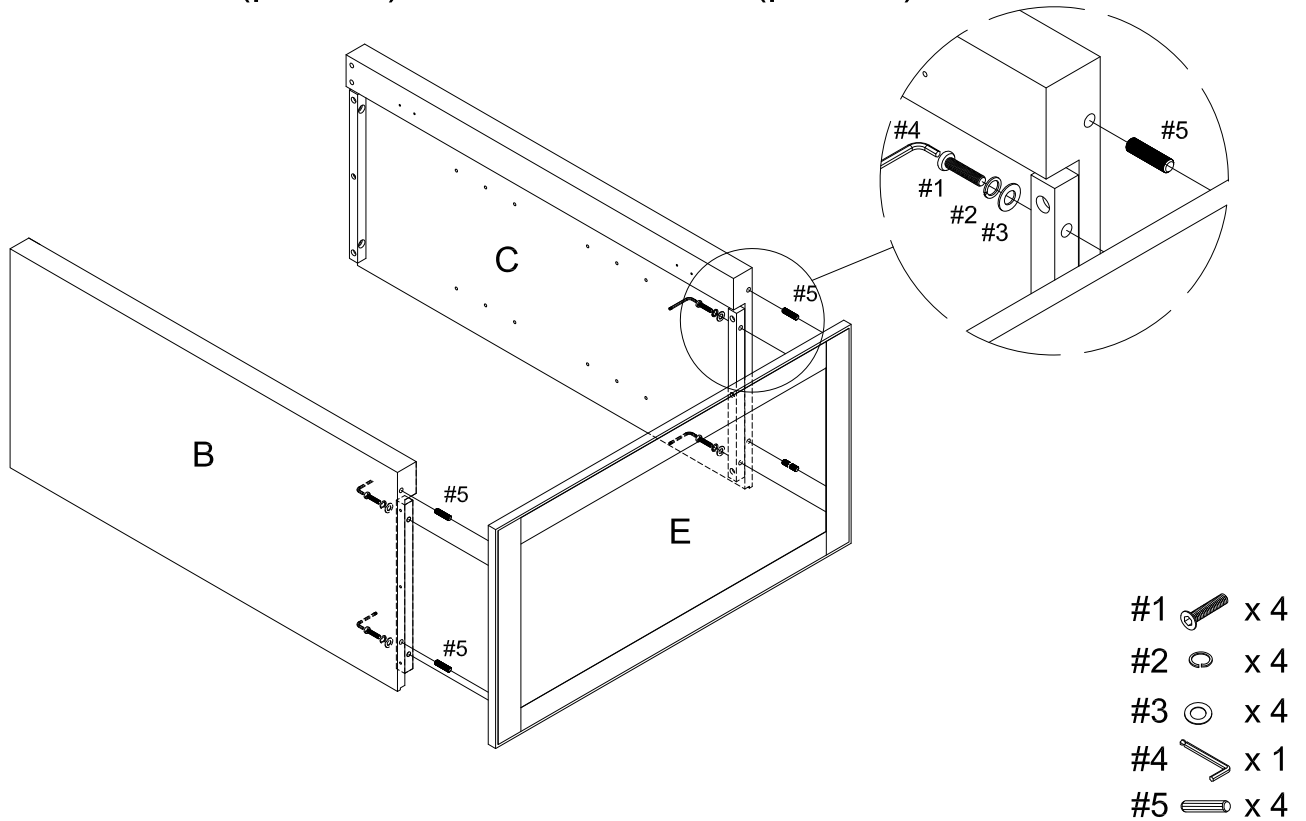

 
Step 4. Attach cross rail (part D) to panels (parts B & C) using wood dowels (part #5).

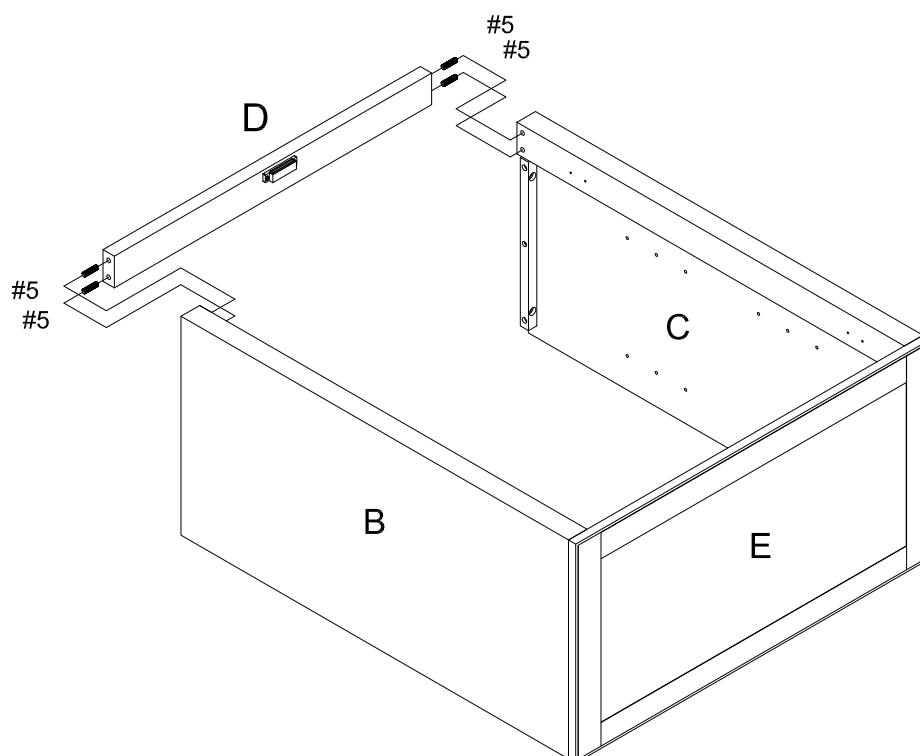

 
Step 5. Attach top panel (part A) to panels (parts B & C) and cross rail (part D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

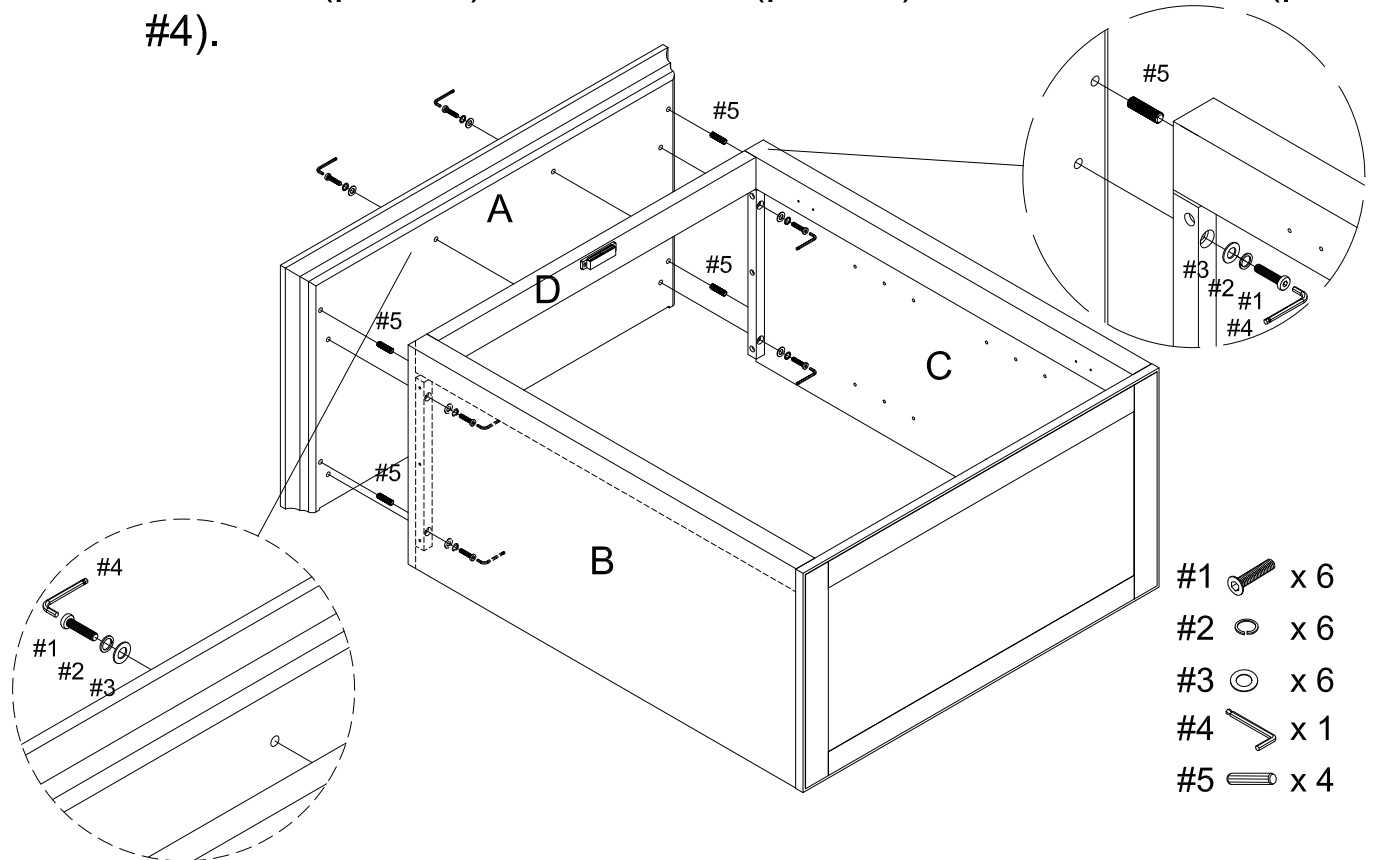

 
Step 6. Carefully turn unit upright. Attach back panel (part H) to assembled unit (parts A, B, C & E) using short screws (part #14) and phillips head screwdriver.

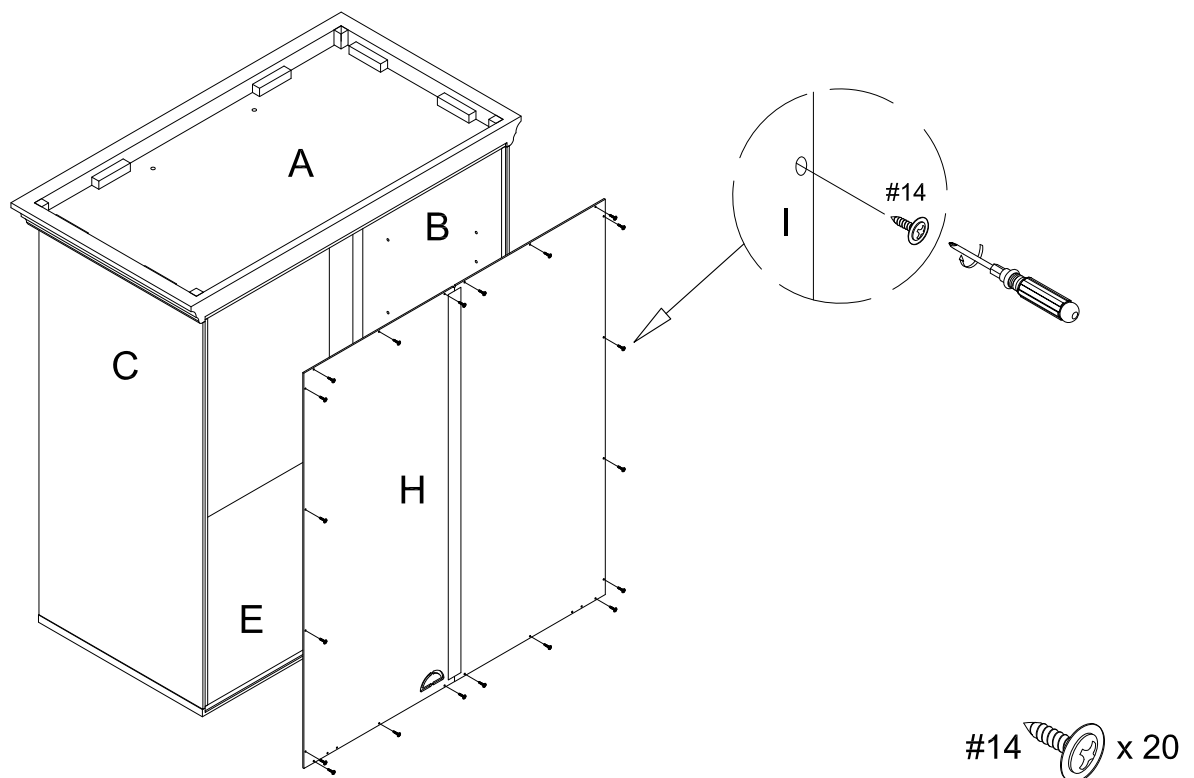

 Step 7. Attach doors (part G) to panels (parts B & C) using long screws (part #13) and phillips head screwdriver.

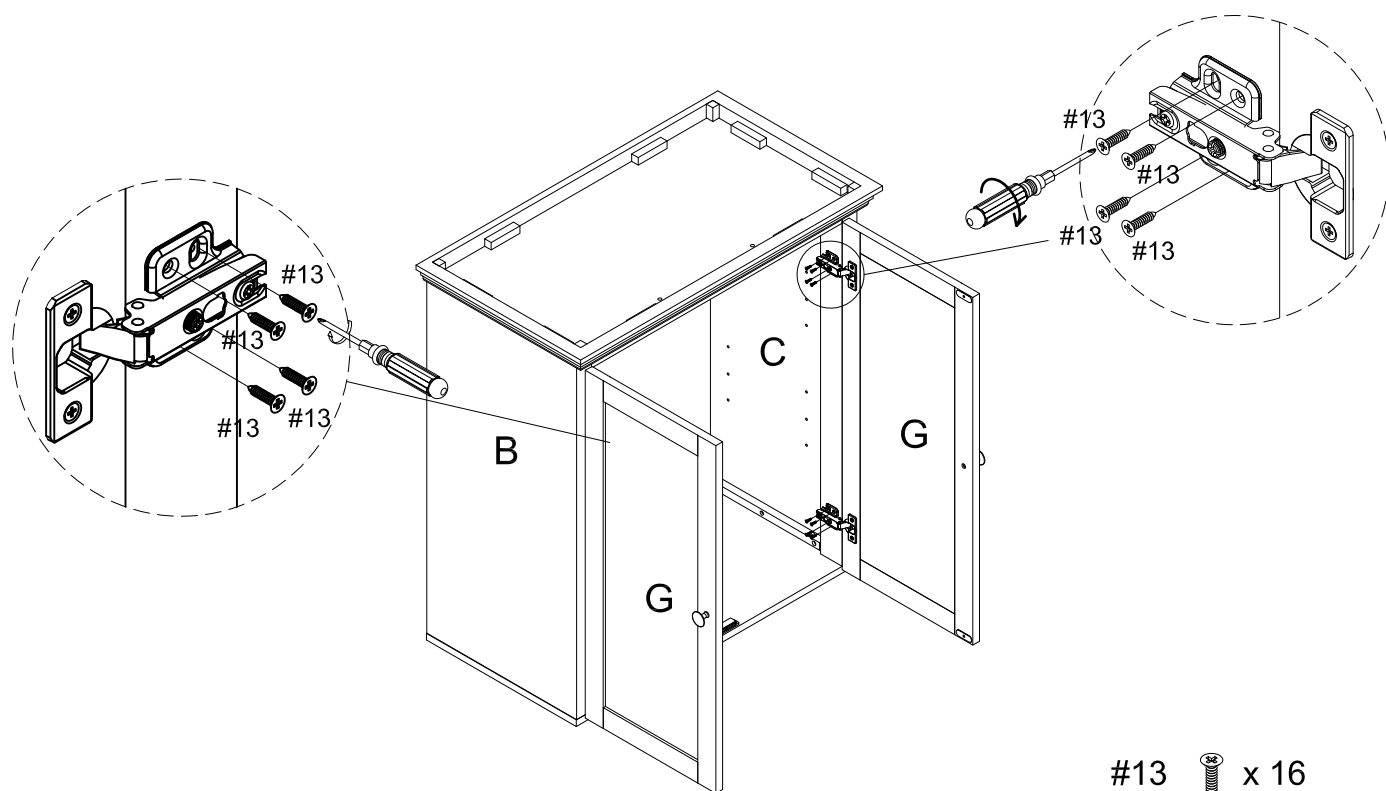


 Step 8. Place shelf holders (part #9) into desired position, slide adjustable shelves (part F) into place.

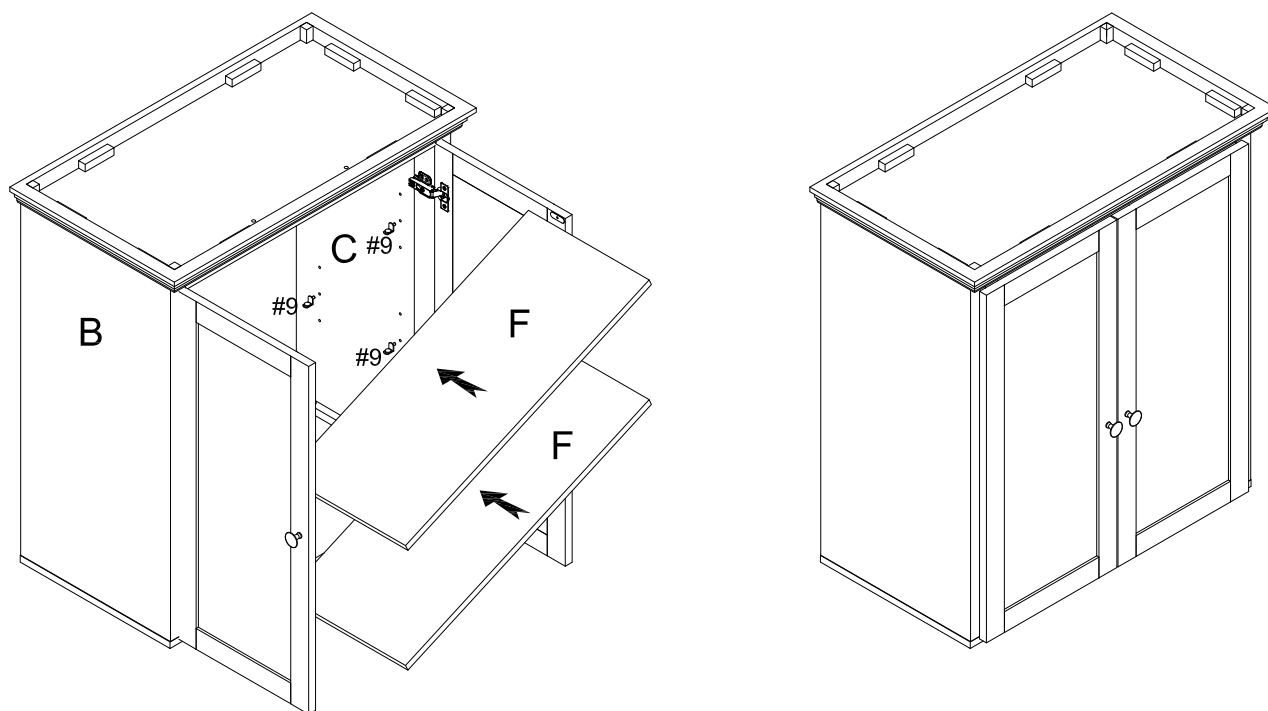


#9  x 8

  Step 9. Place pantries together by lining up hutch and base.

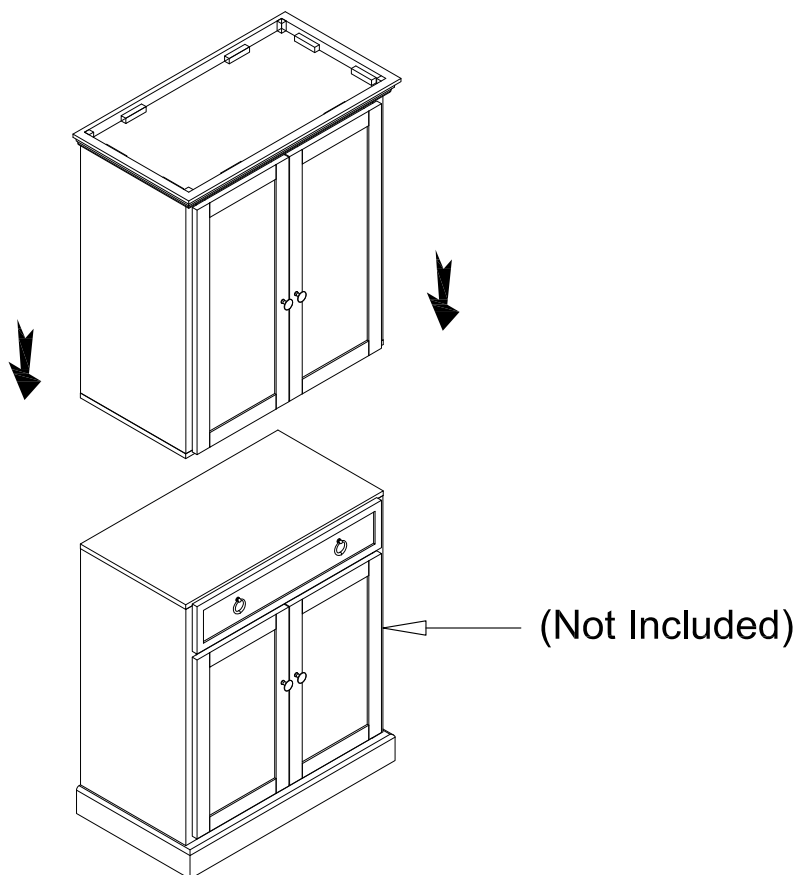

 

 



Step 10. Attach connecting bars (part #8) to top panel (part A) and bottom panel (part E) using round head screws (part #7) and phillips head screwdriver.

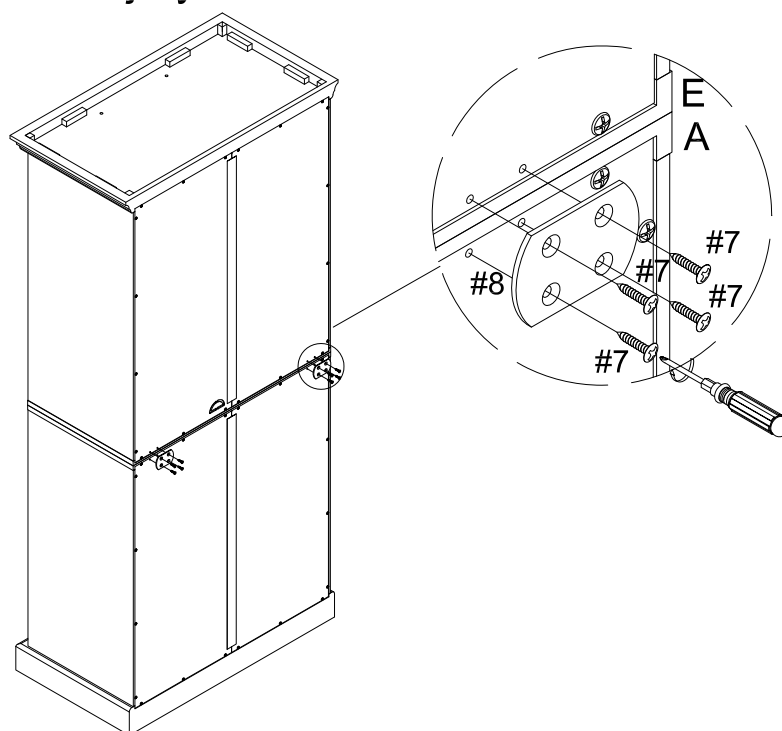Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.



#7  x 8
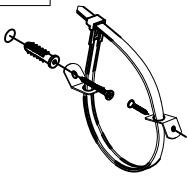
#8  x 2

 
#15	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

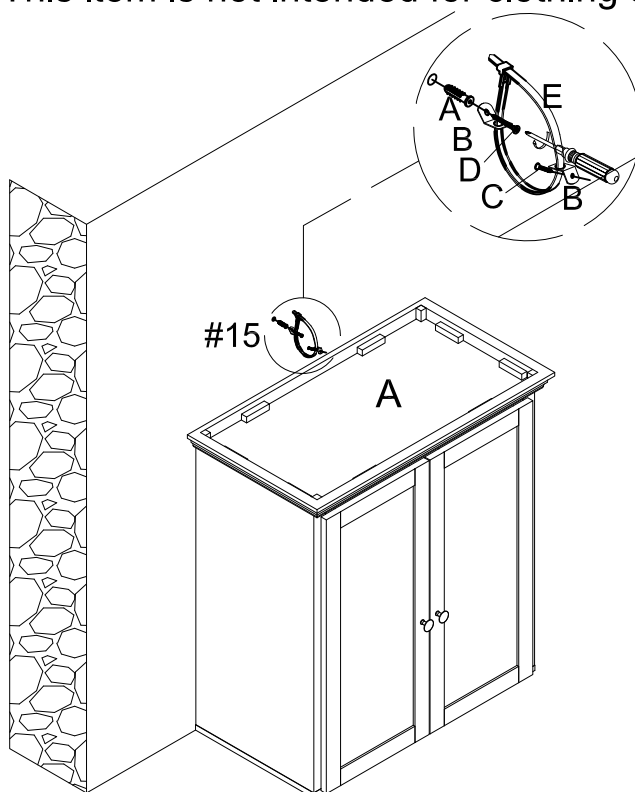


⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

 Open the door

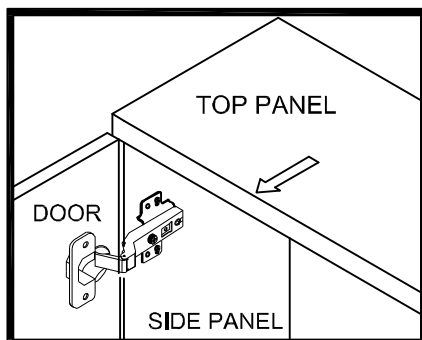


STEP 2

 Adjust the gap between door panel and side panel

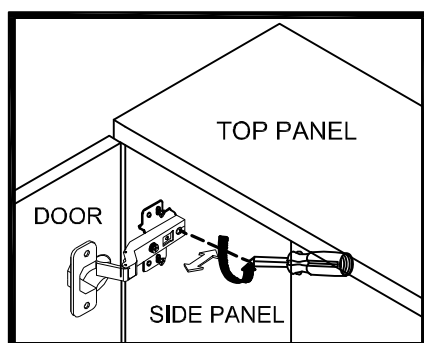


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

 STEP 2a MOVE DOOR IN

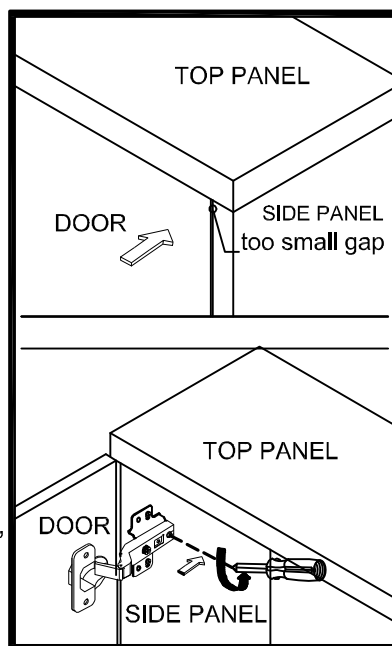

Push the hinge back a little.

 
STEP 2b MOVE DOOR OUT

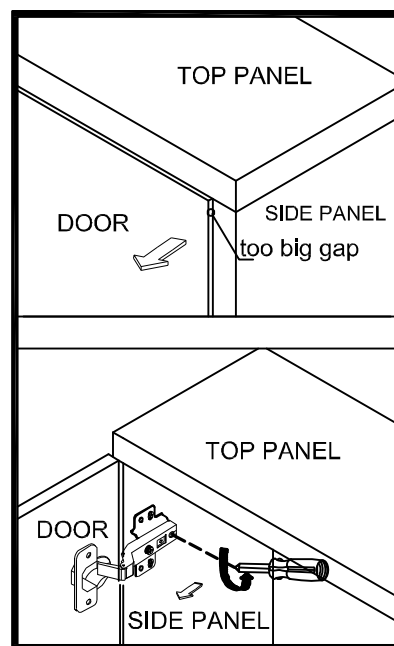

Pull the hinge forward a little.


STEP 3

 To adjust the gap between two door

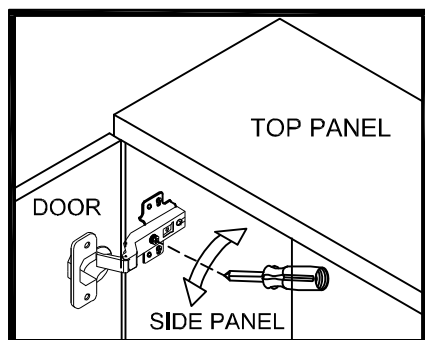


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

 STEP 3a MOVE DOOR RIGHT

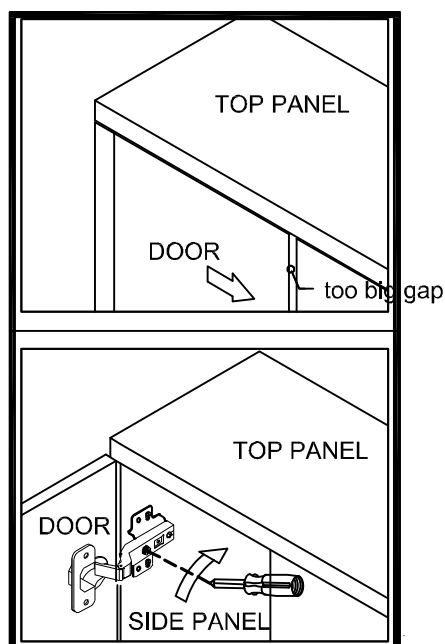

Turn the screw clockwise a little as shown to make the gap small.

 STEP 3b MOVE DOOR LEFT

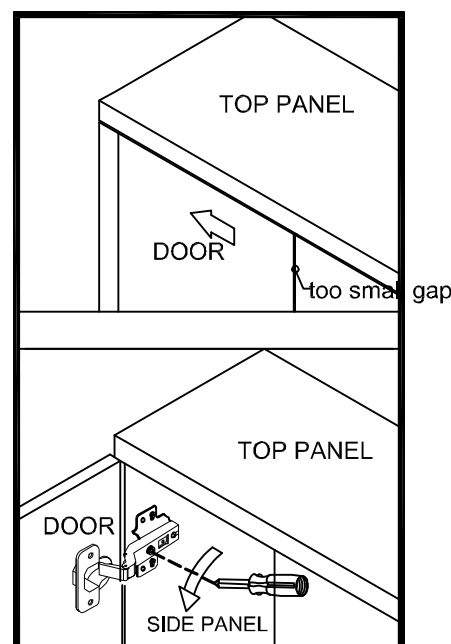

Turn the screw counterclockwise a little as shown to make the gap big.