

EC1274/ EC1276 ASSEMBLY INSTRUCTIONS

Intertek 5013633

Components List

Item	Description	Quantity	Item	Description	Quantity
Α	Wire Connector	3	F	Bulb (Not included)	3
В	Mounting Bracket	1	G	Glass	1
С	Ceiling Canopy	1	Н	Metal Trim Ring	1
D	Short Stem	1	I	Barrel Screws	3
E	Fixture Body	1			

Hardware List


Item	Description	Quantity	Item	Description	Quantity
а	Mounting Screw	2			
b	Canopy Screws	2			

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, BE SURE TO TURN OFF MAIN POWER PRIOR TO INSTALLATION.

ASSEMBLY STEPS

- 1. Remove the fixture from the packing.
- 2.Install desired Bulbs (F).
- 3.Put Metal Trim Ring (H) onto the Glass (G), and use Barrel Screws (I) to mount onto Fixture Body (E).
- 4.Install desired number of Short Stems (D) onto the Fixture Body (E). Attach Canopy (C) onto the top stem after threading wire through the Canopy (C). Rotate clockwise to tighten.
- 5. Install the Mounting Bracket (B) onto the ceiling junction box by using appropriately sized fixture Mounting Screws (a)(not included).
- 6.Connect the Ground wire from the fixture and canopy to junction box, secure the electrical connections using the Wire Connector (A). Connect the NEUTURAL (OR WHITE) WIRE from the fixture to NEUTRAL WIRE from power supply with the Wire Connector (A). Connect the HOT(OR BLACK) WIRE from fixture to BLACK SUPPLY WIRE from power supply with the Wire Connector (A).
- 7. Lift Canopy (C) and complete fixture assembly up and onto the Mounting Bracket (B) and secure with Canopy Screws (b).

CAUTION - Refer to the wattage caution label located near the socket for maximum wattage rating-do not exceed maximum wattage listed.

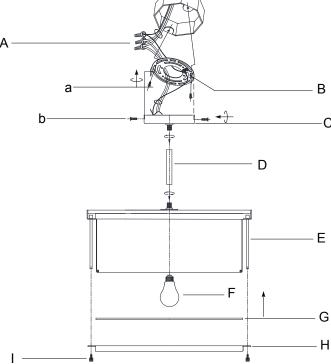

Note: (1). The above diagram illustrates the installation of your fixture. This is a representative drawing and is not intended to exactly match the style of your fixture.