



EC1319C/EC1320C/EC1321C

ASSEMBLY & INSTALLATION INSTRUCTIONS

Components List

Item	Description	Quantity	Item	Description	Quantity
A	Wire Connector	3	D	Bulb (Not Included)	3
B	Mounting Bracket	1			
C	Fixture Body	1			

Hardware List

Item	Description	Quantity	Item	Description	Quantity
a	Fixture Mounting Screws	2	c	Barrel Knobs	2
b	Long Screws	2			

WARNING


TO AVOID THE RISK OF ELECTRICAL SHOCK, BE SURE TO TURN OFF MAIN POWER PRIOR TO INSTALLATION.

CAUTION

Refer to the wattage caution label located near the socket for maximum rated wattage. Do not exceed maximum wattage listed.

ASSEMBLY & INSTALLATION

1. Carefully unpack fixture and take the parts out of the mounting package. Lay all the fixture components in a clean and flat surface.
 2. With Fixture Mounting Screws (a) facing outward on the Mounting Bracket (B), attach Bracket to the existing outlet box with long screws (b) (not included).
- Note: The side of mounting plate marked "GND" must face out.
3. Connect the GROUND WIRE from the fixture and canopy to junction box, secure the electrical connections using the Wire Connector (A). Connect the NEUTRAL (OR WHITE) WIRE from the fixture to NEUTRAL WIRE from power supply with the Wire Connector (A). Connect the HOT (OR BLACK) WIRE from fixture to HOT WIRE from power supply with the Wire Connector (A). Tuck wires neatly back into the outlet box.
 4. Lift Fixture Body onto the Mounting Bracket (B) then adjust and lock in place with Barrel Knobs (c).
 5. Screw Bulb (D) (not included) into the socket and make sure not exceed the maximum wattage specified on the fixture's wattage label. **MAXIMUM 60 Watts.**

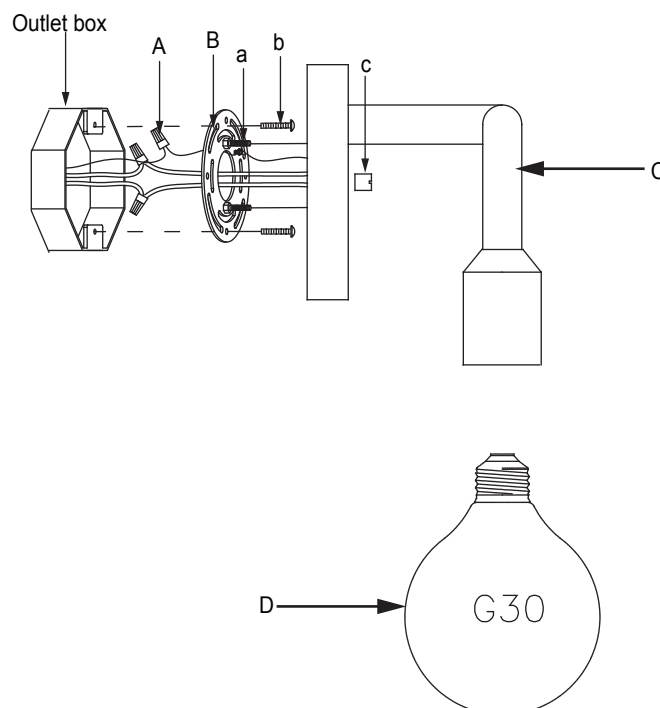

Note: (1). The above diagram illustrates the installation of your light fixture. This is a representative drawing and may not exactly match the style of your light fixture.