

 



 
 



 






CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	FRONT RAIL		1X
C	SIDE PANEL		2X
D	DOOR		2X
E	ADJUSTABLE SHELF		1X
F	BACK PANEL		2X
G	BASE ASSEMBLY		1X
H	LEG		4X
1	40 MM BOLT	M6x40mm 	8X
2	1/2" ROUND HEAD SCREW	M3x13mm 	16X
3	CAMBOLT		27X
4	CAMLOCK		27X
5	HANDLE BOLT		2X
6	HANDLE		2X
7	HINGE		4X
8	SHELF PIN		4X





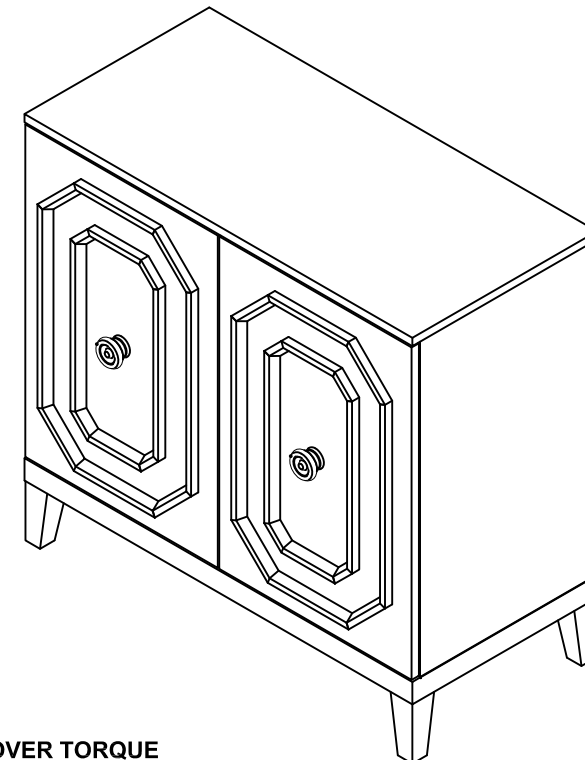

Model# CHS5003

Product Dimensions: 31 1/2"W x 15"D x 30"H




WEIGHT CAPACITY:
TOP: 50 LBS
SHELF: 30 LBS

**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**


PIECE	DESCRIPTION	PICTURE	QUANTITY
9	DOWEL		8X
10	SPRING WASHER		8X
11	FLAT WASHER		8X
12	ALLEN KEY		1X

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 30 minutes.
Tools Required for Assembly : Phillips Screwdriver

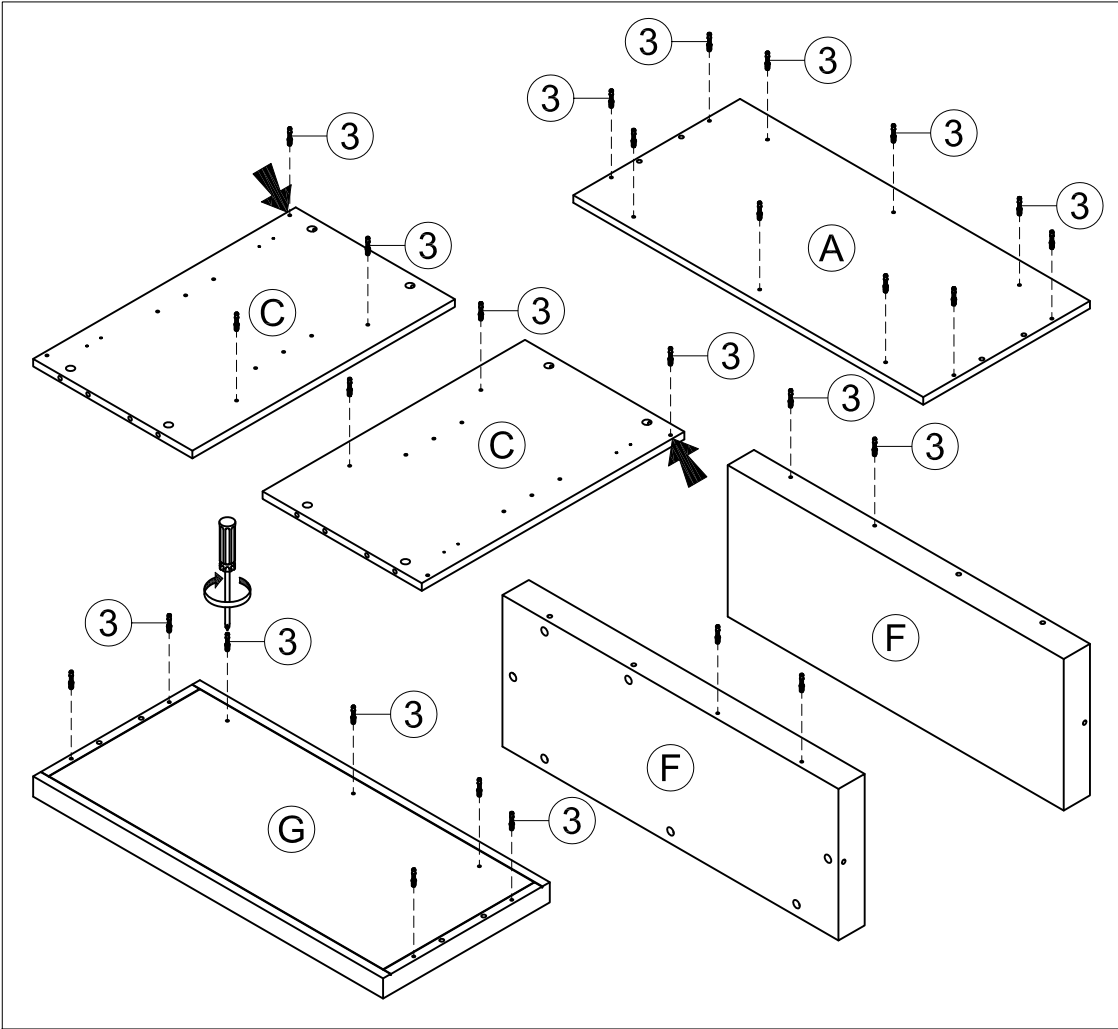


STEP 1 ATTACH CAMBOLT TO TOP, SIDE AND BACK PANELS AND BASE ASSEMBLY.

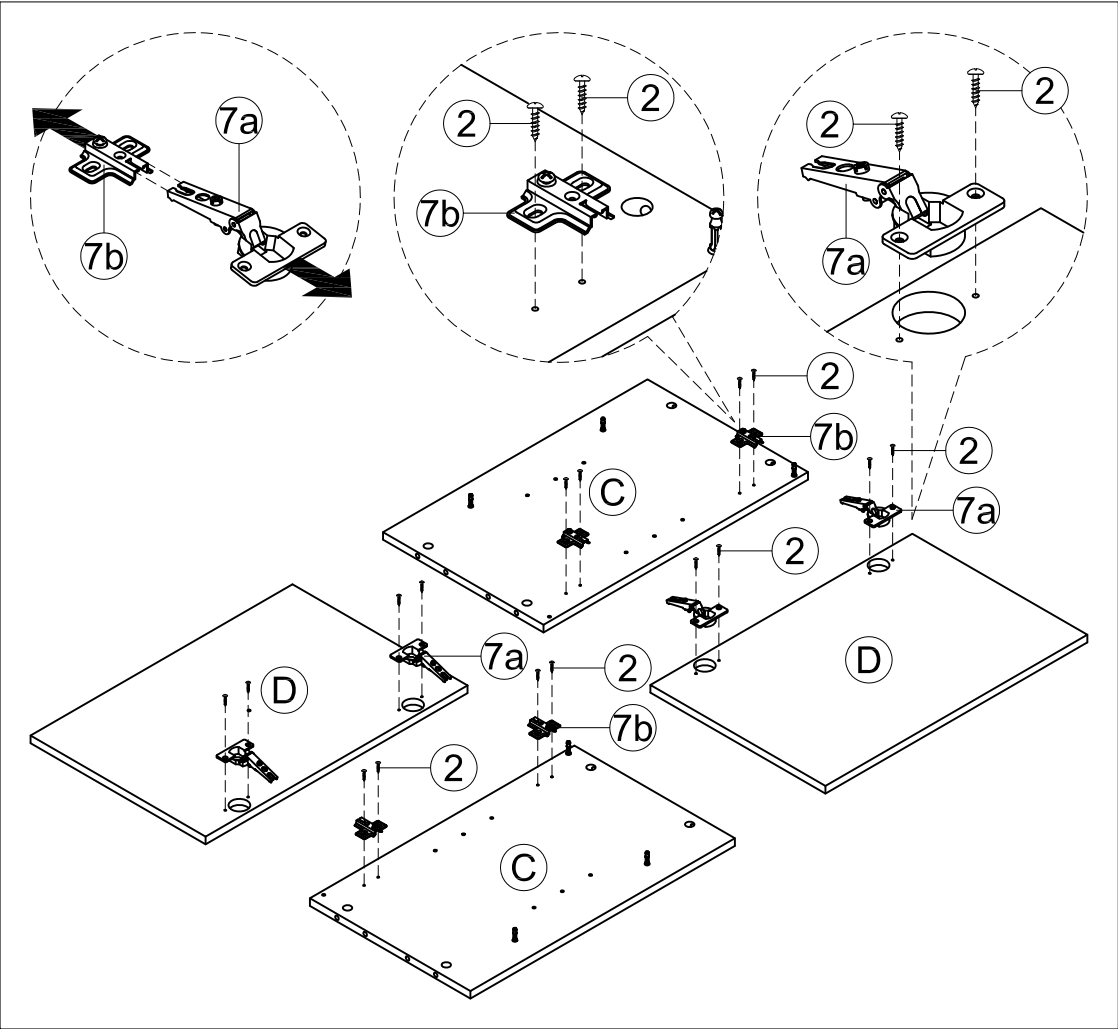


STEP 2 DETACH THE HINGES. ATTACH HINGES TO DOORS, AND HINGE BASES TO SIDE PANELS USING 1/2" ROUND HEAD SCREW.

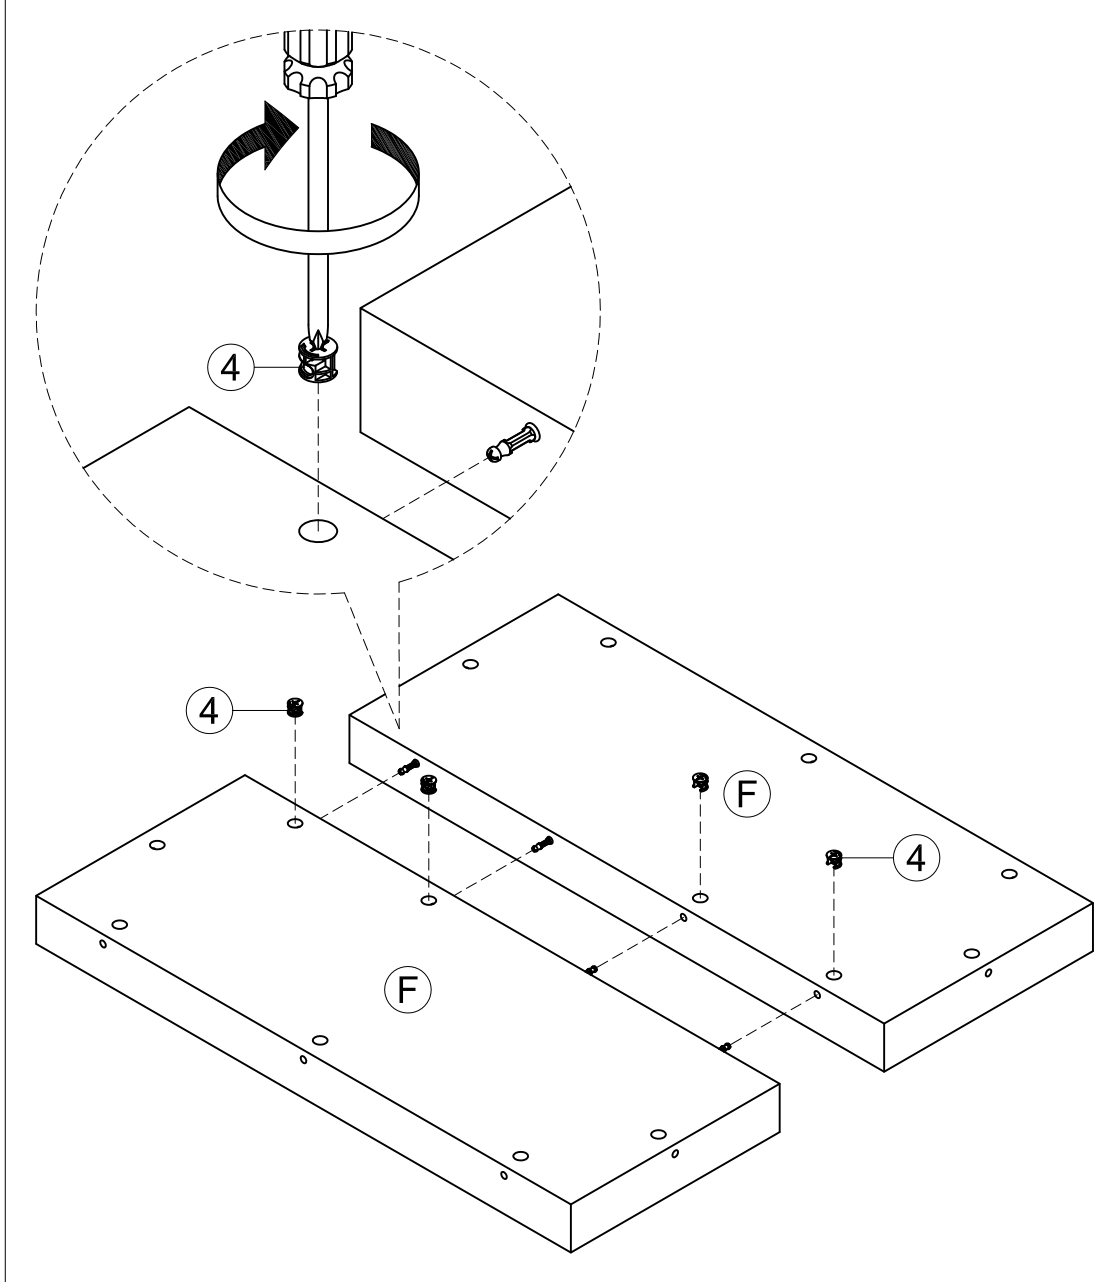


STEP 3 JOIN BACK PANELS USING CAM LOCKS.

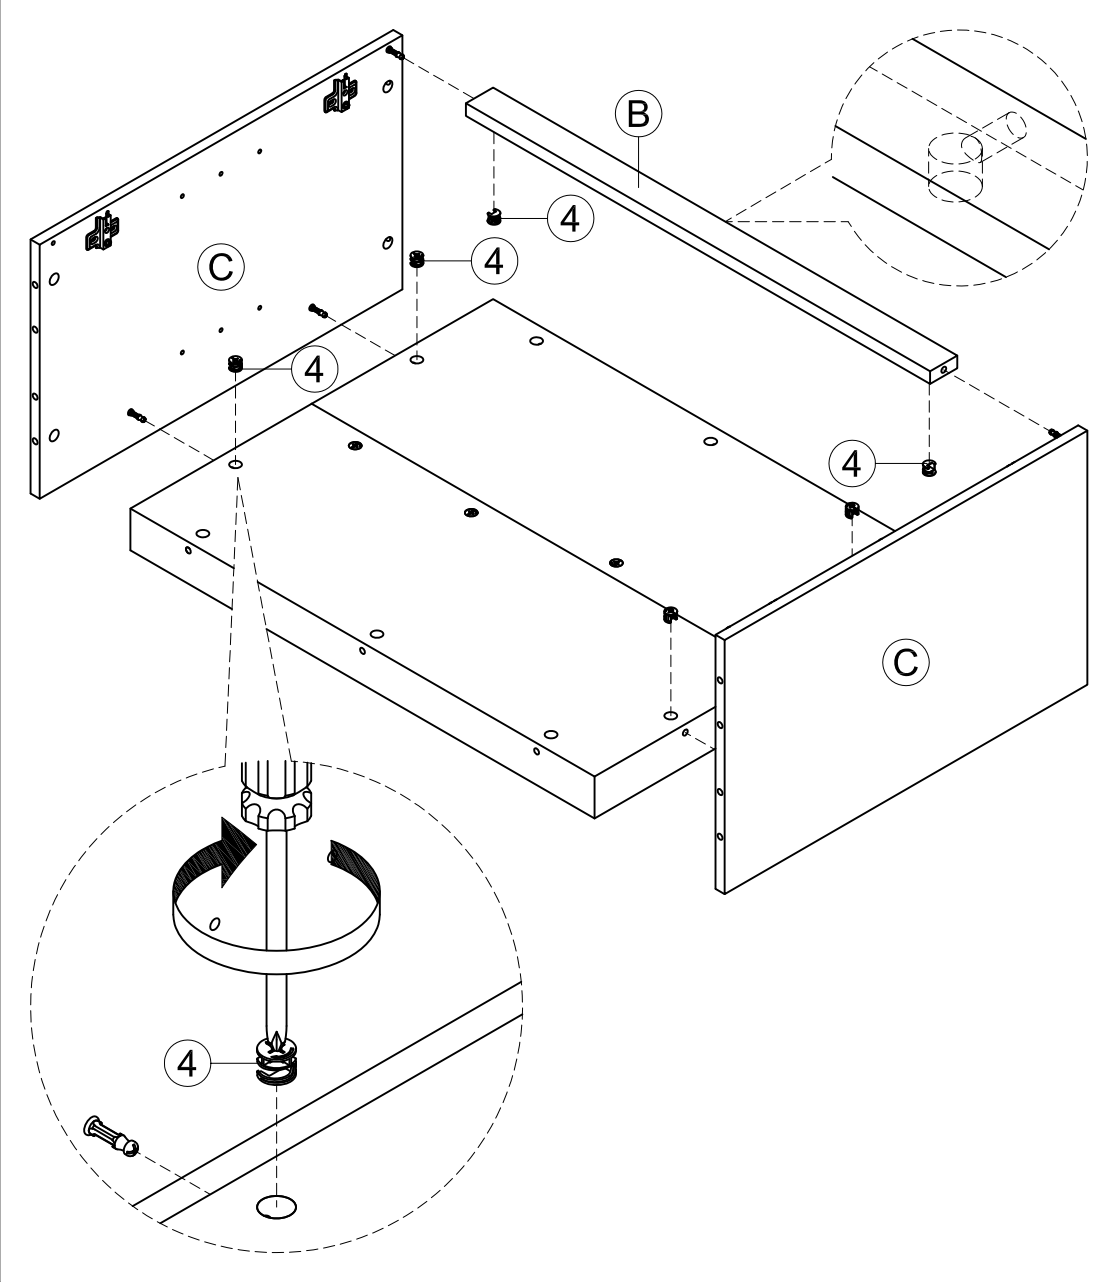


STEP 4 ATTACH SIDE PANELS TO UNIT AND FRONT RAIL USING CAM LOCKS.

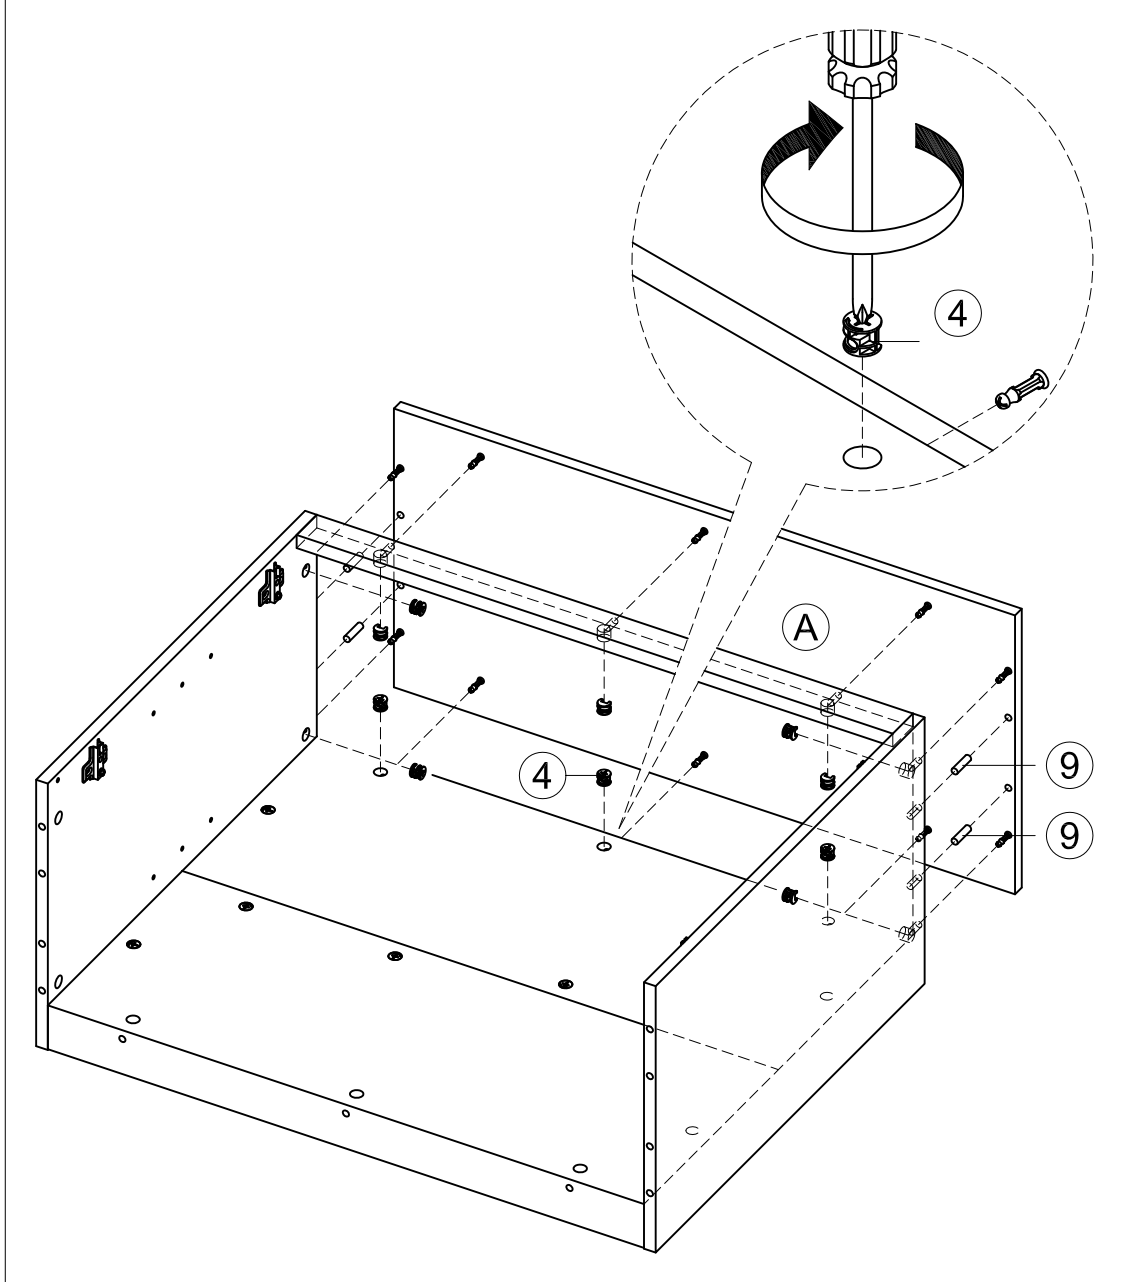


STEP 5 ATTACH TOP PANEL TO UNIT USING CAM LOCKS AND DOWELS.

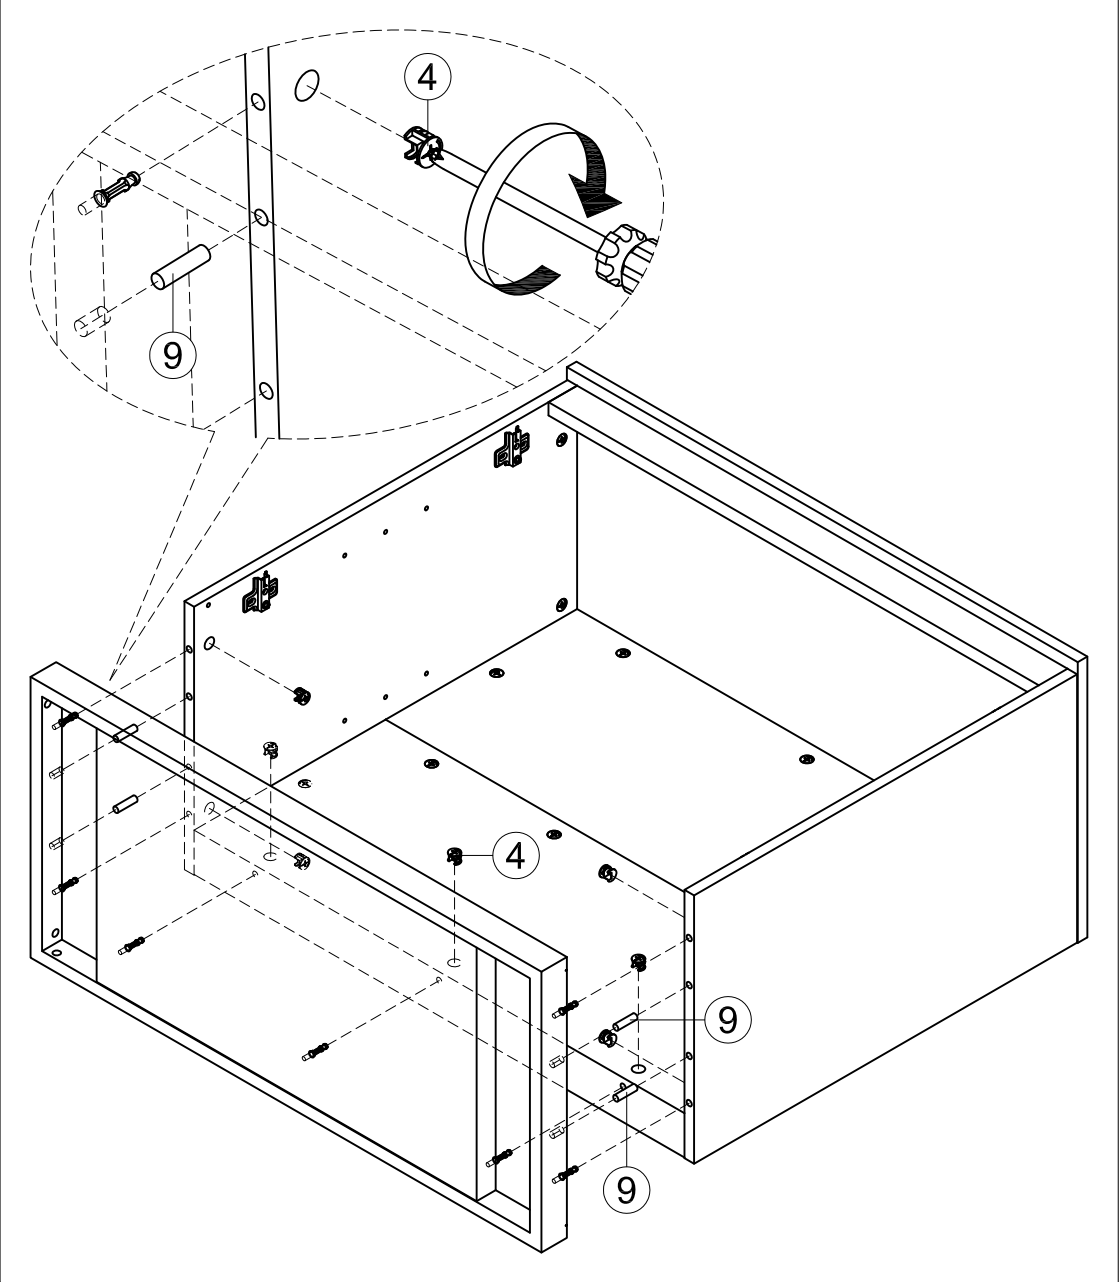


STEP 6 ATTACH BASE ASSEMBLY TO UNIT USING CAM LOCKS AND DOWELS.

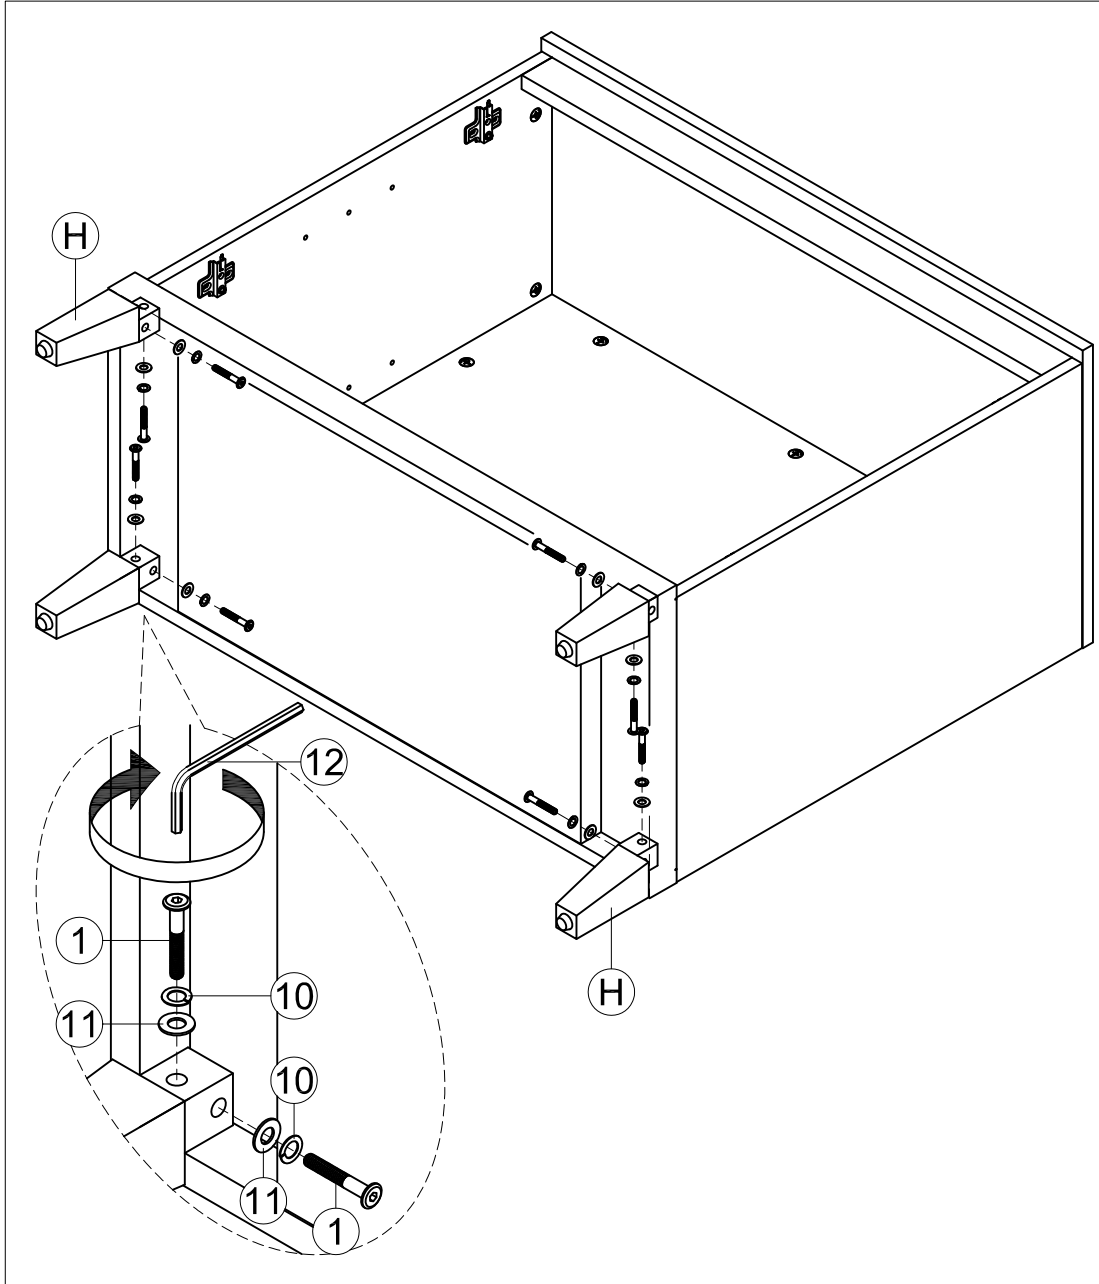


STEP 7 ATTACH LEGS TO UNIT USING BOLTS, SPRING AND FLAT WASHERS. TIGHTEN BOLTS USING ALLEN KEY.

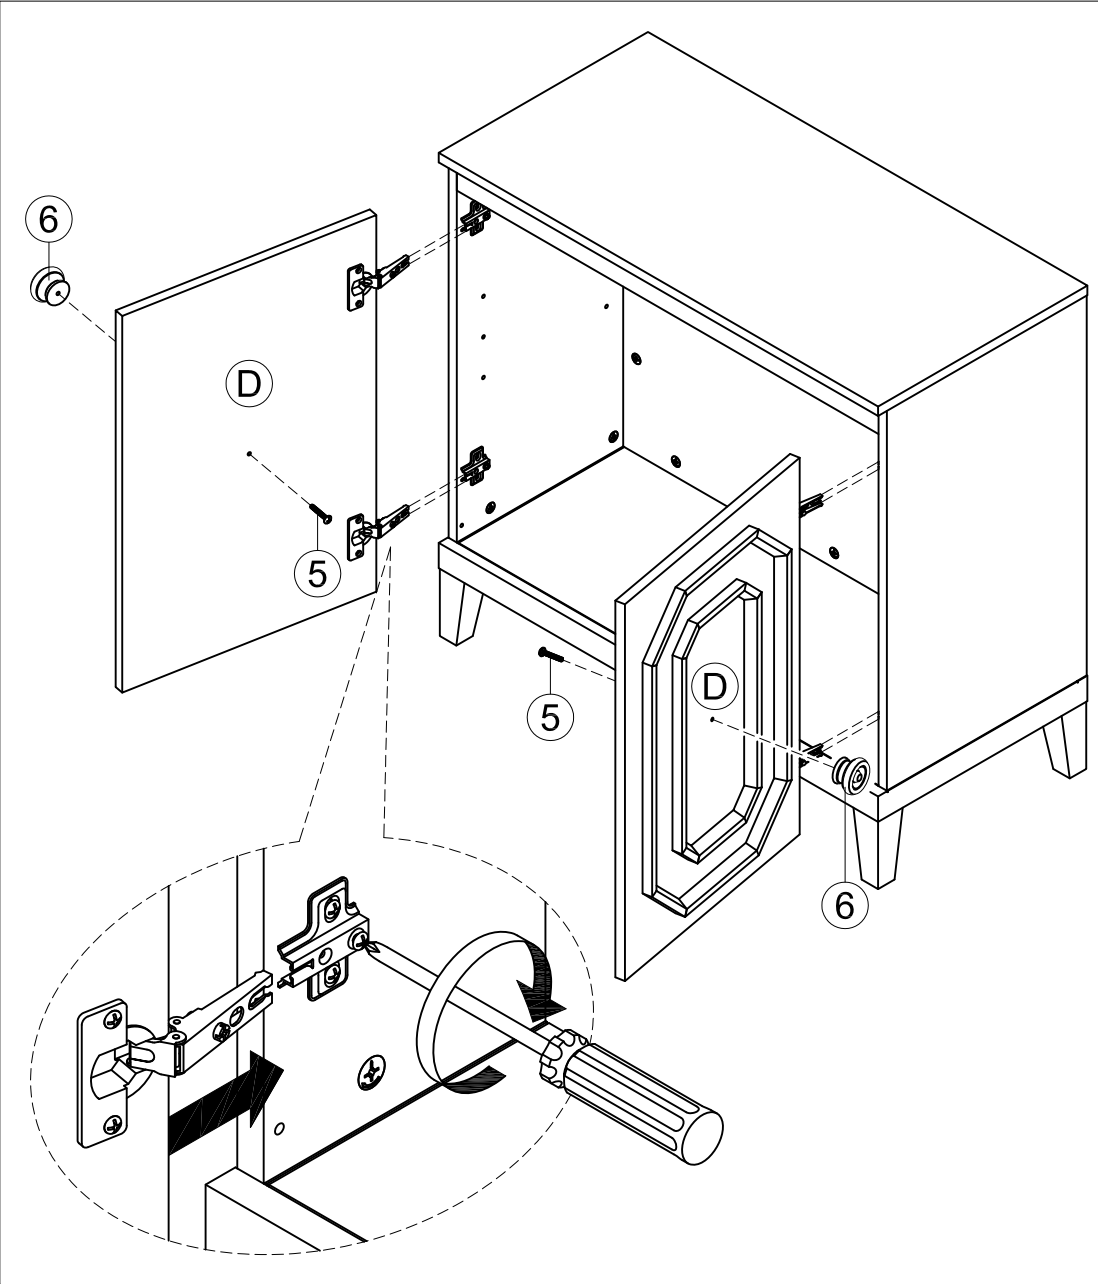

STEP 8 ATTACH HANDLES TO DOORS USING HANDLE BOLTS. ATTACH DOORS TO UNIT BY RE-ATTACHING THE HINGES.

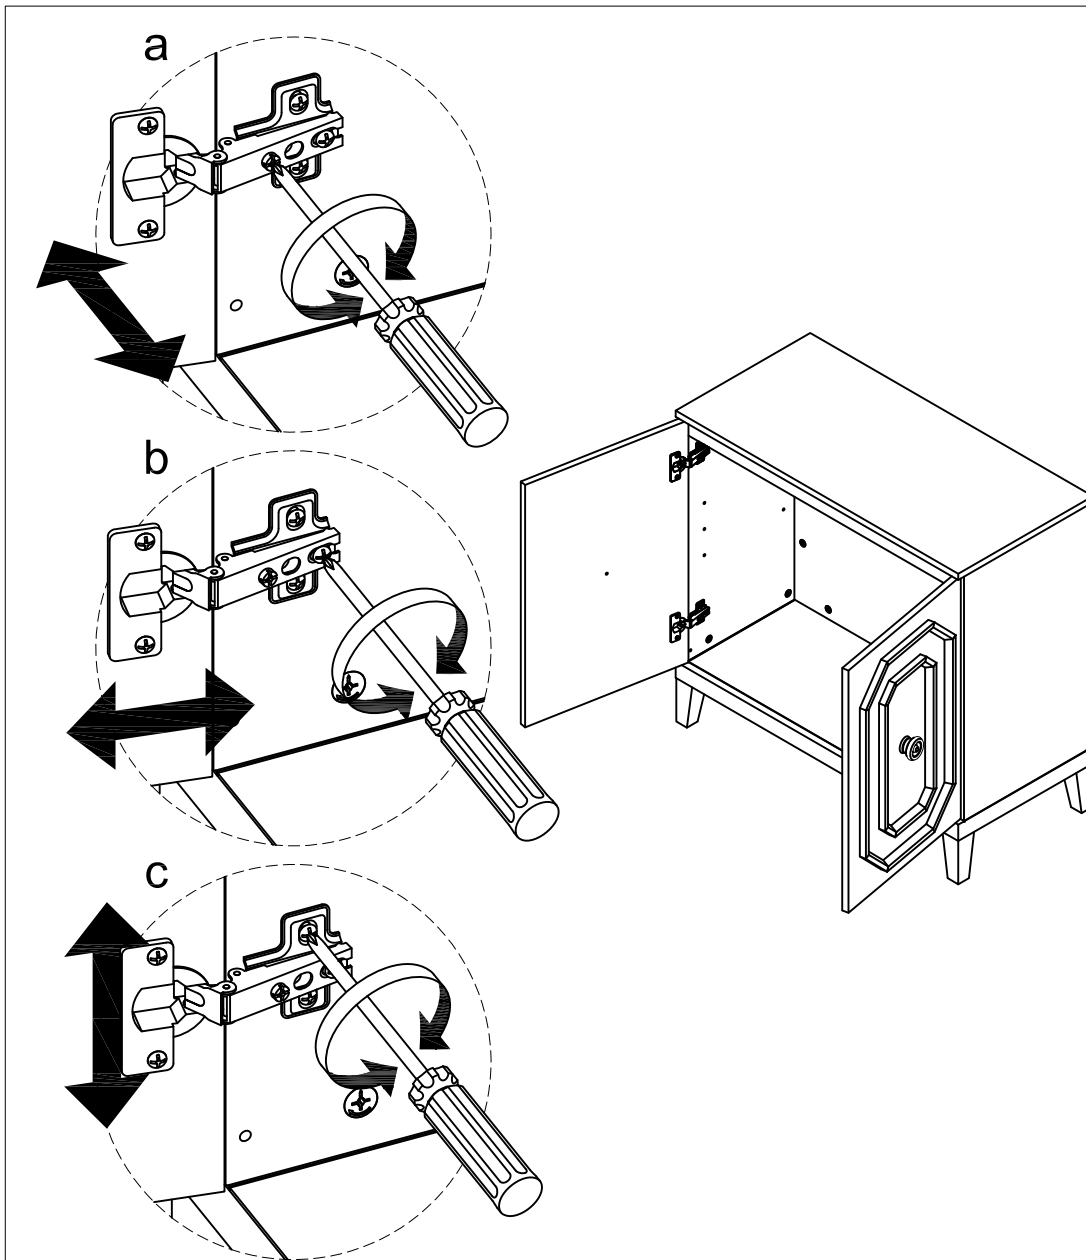

STEP 9 (a) ADJUST THE DOOR PANEL LEFT OR RIGHT. (b) ADJUST THE DOOR PANEL FORWARD OR BACKWARD. (c) ADJUST THE DOOR PANEL UP OR DOWN.

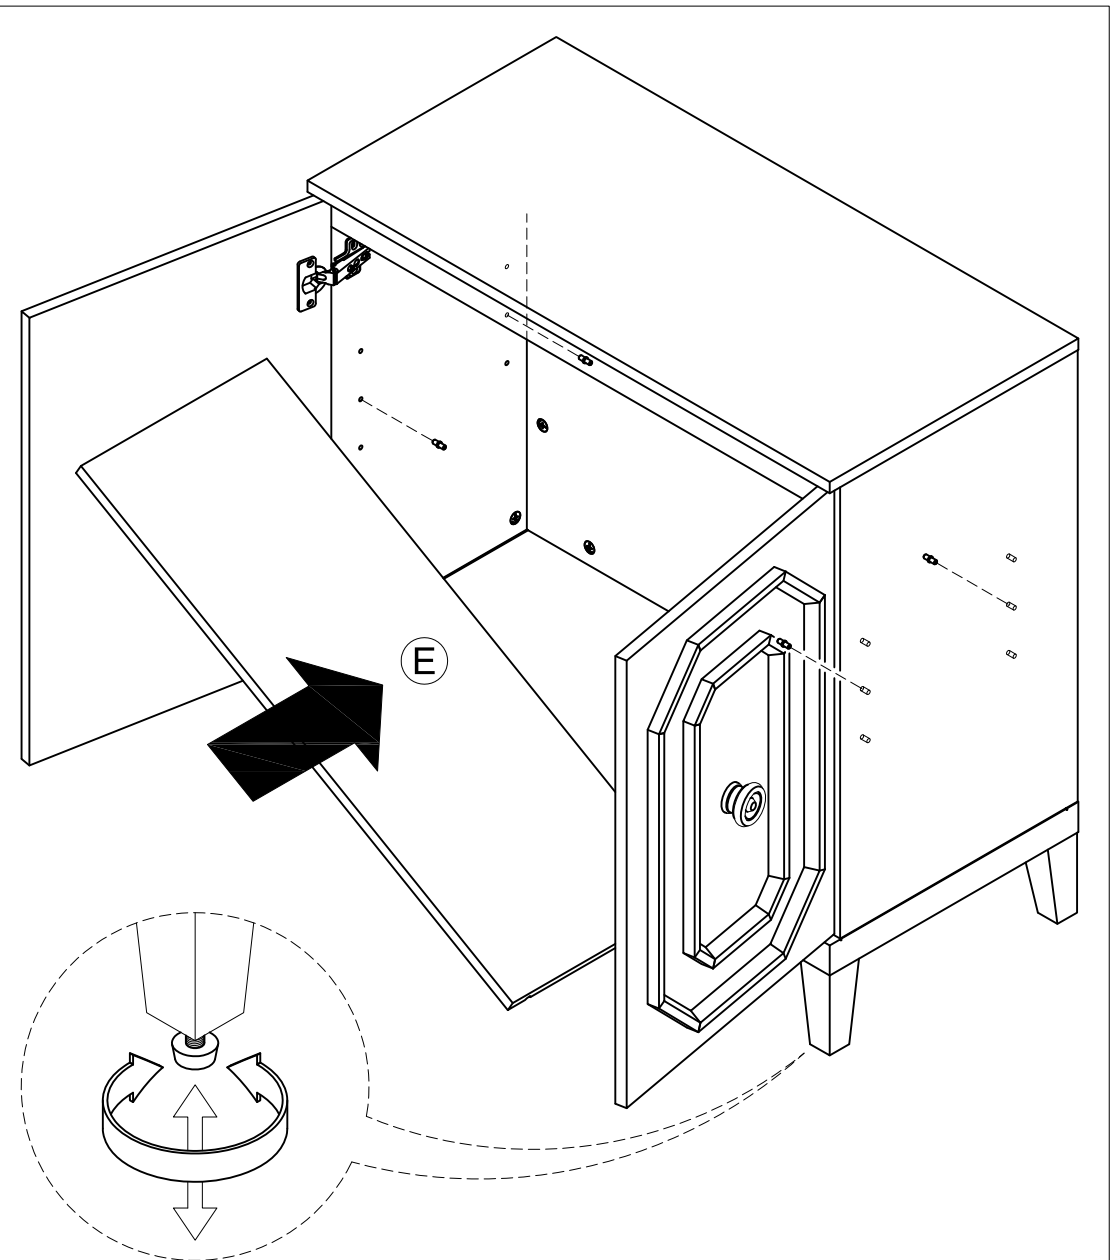

STEP 10 INSERT SHELF PINS INTO SIDE PANELS AT DESIRED LEVEL. PLACE ADJUSTABLE SHELF INTO POSITION. ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT