


CROSLEY

 
 

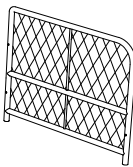

 
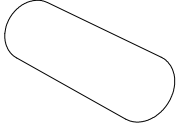
FURNITURE

Outdoor Wicker Sofa

 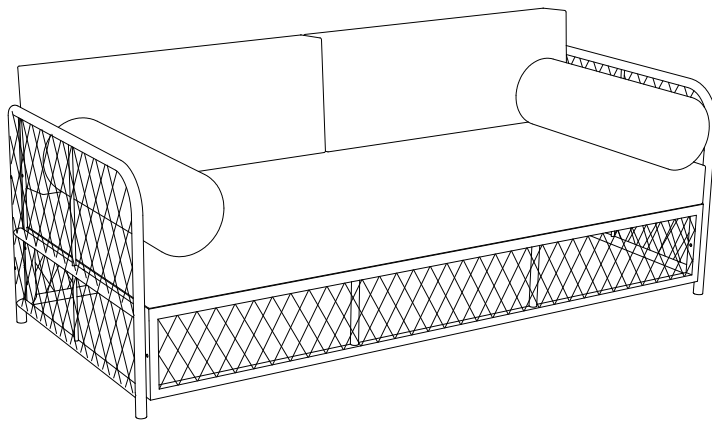


CO6280



PART LIST


| | | | | |
|---|---|---|---|---|
| A  | B  | C  | D  | E  |
| Back Panel 1 PC | Seat Panel 1 PC | Left Arm Panel 1 PC | Right Arm Panel 1 PC | Seat Cushion 1 PC |
| F  | G  | | | |
| Back Cushion 2 PCS | Arm Cushion 2 PCS | | | |




HARDWARE LIST

| | | |
|--|--|--|
| #1  | #2  | #3  |
| M6*45mm Bolt 16 PCS (Extra 1) | M6mm Flat Washer 16 PCS (Extra 1) | M6mm Allen Wrench 1 PC |

Step 1. Lay seat panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach right arm panel (part D) to seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

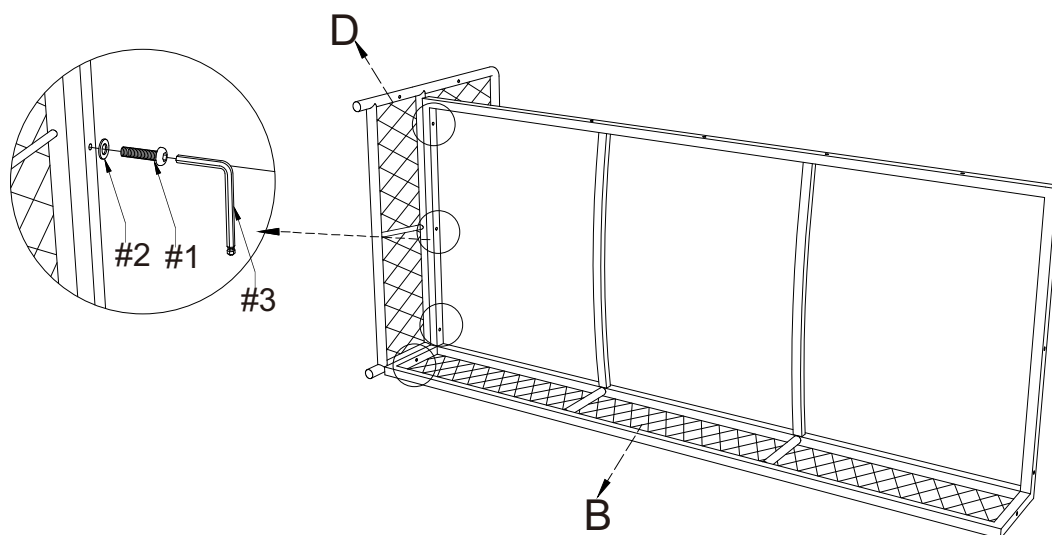
NOTE: Please do not fully tighten bolts until unit is fully assembled.






| | | |
|----|---|----|
| #1 |  | x4 |
| #2 |  | x4 |
| #3 |  | x1 |

Step 2. Attach left arm panel (part C) to seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

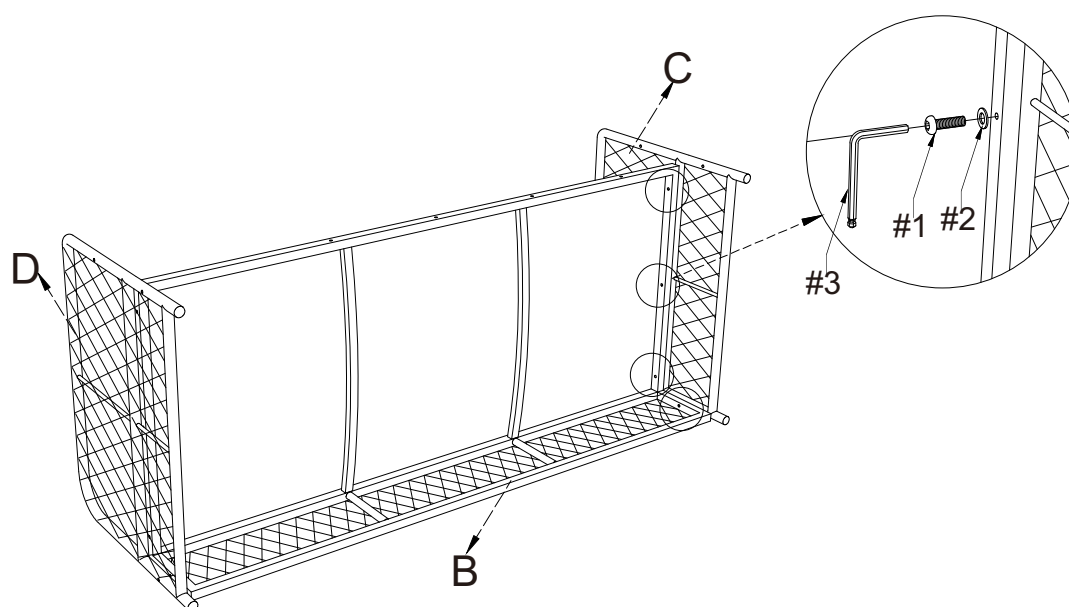
NOTE: Please do not fully tighten bolts until unit is fully assembled.



| | | |
|----|---|----|
| #1 |  | x4 |
| #2 |  | x4 |
| #3 |  | x1 |

Step 3. Attach back panel (part A) to assembled unit (parts B, C & D) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

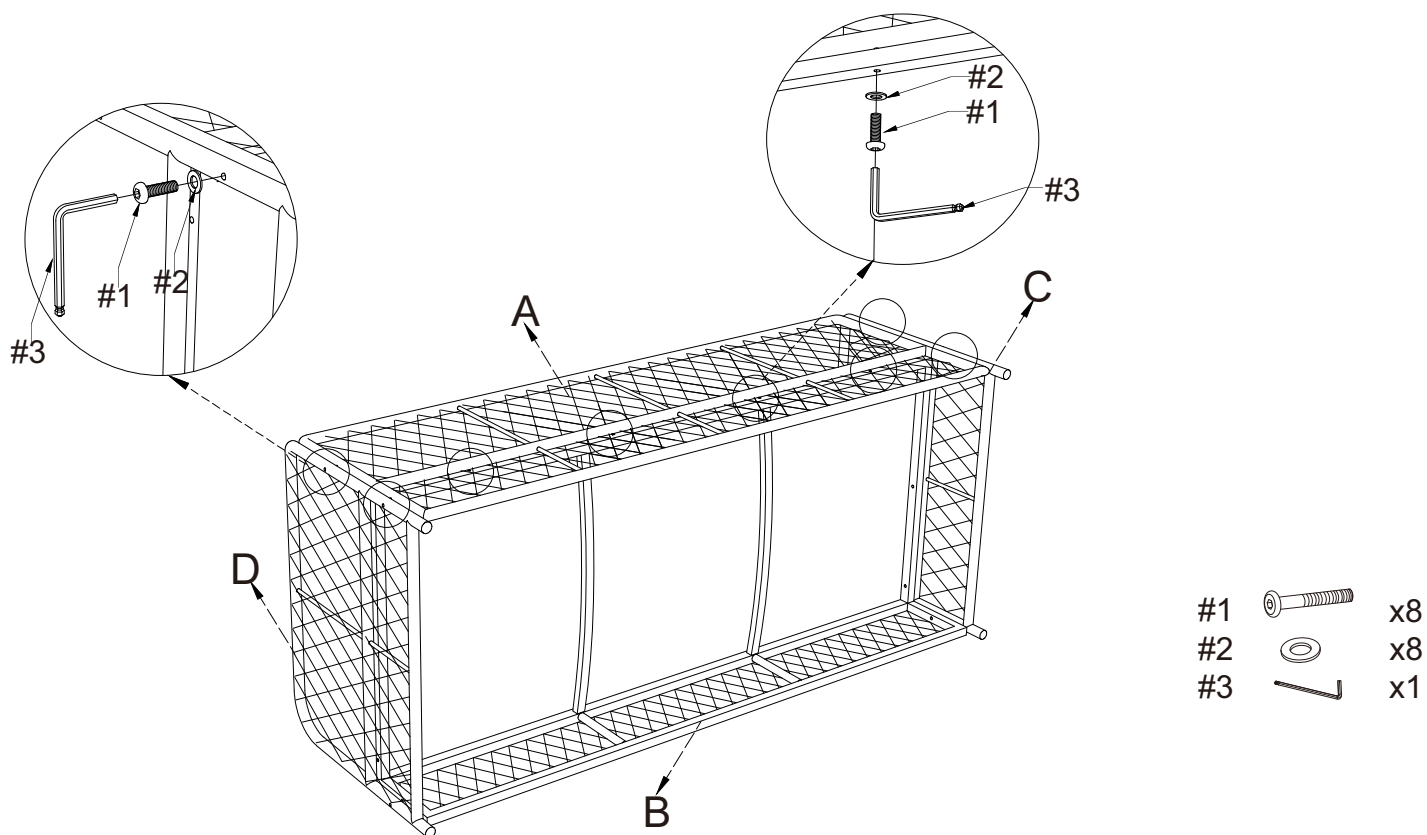

Step 4. Carefully turn unit upright. Place seat cushion (part E), back cushions (part F) and arm cushions (part G) as shown below.

