
User's Manual

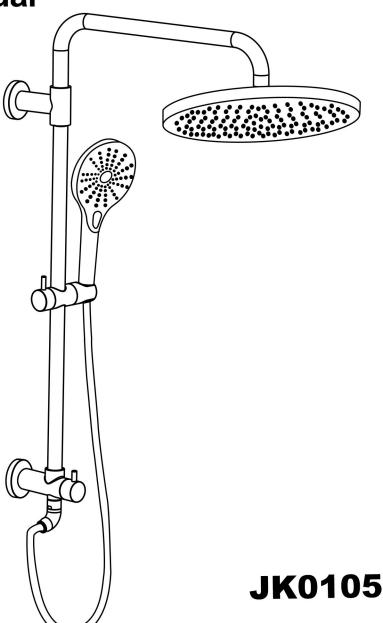

Installation Manual



IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.












BEFORE INSTALLATION

► Installation Environment


- 1. Before installation, confirm whether the inlet pipe and angle valve are correc, Make sure that the installation is completed, and the water has been flushed to ensure that there is no impurities in the water inlet pipe;
- 2. Water inlet pressure requirements: 5bar≥ inlet pressure ≥0.5bar, it is recommended to install a pressure reducing valve if it is greater than 0.05MPa;
- 3. When installing and using the faucet, please use normal torque to prevent the handle from breaking.
- 4. If the customer goes out for a long time or does not use the faucet for a long time, please close the faucet valve and turn on the faucet switch to release the pressure and water in the faucet.

► Installation Aids

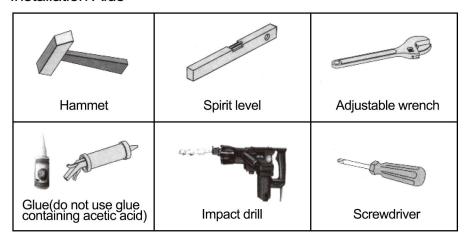

▶ Parts List

NO.	Item	Qty
1	Water knockout drum	1
2	Slider	1
3	Top shower tube	1
4	Curved foot cover	2
5	Water inlet joint	1
6	Holder	1
7	Screw packet	1

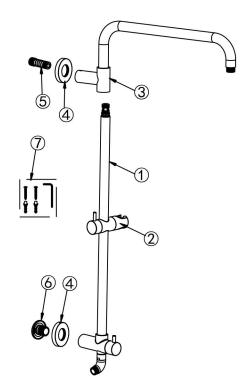

Check accessories

Standard List of Accessories:

 
When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.

Note: 1.Accessories are subject to change without prior notice if the change does not affect usage;


2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.


INSTALLATION STEPS

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



 Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.



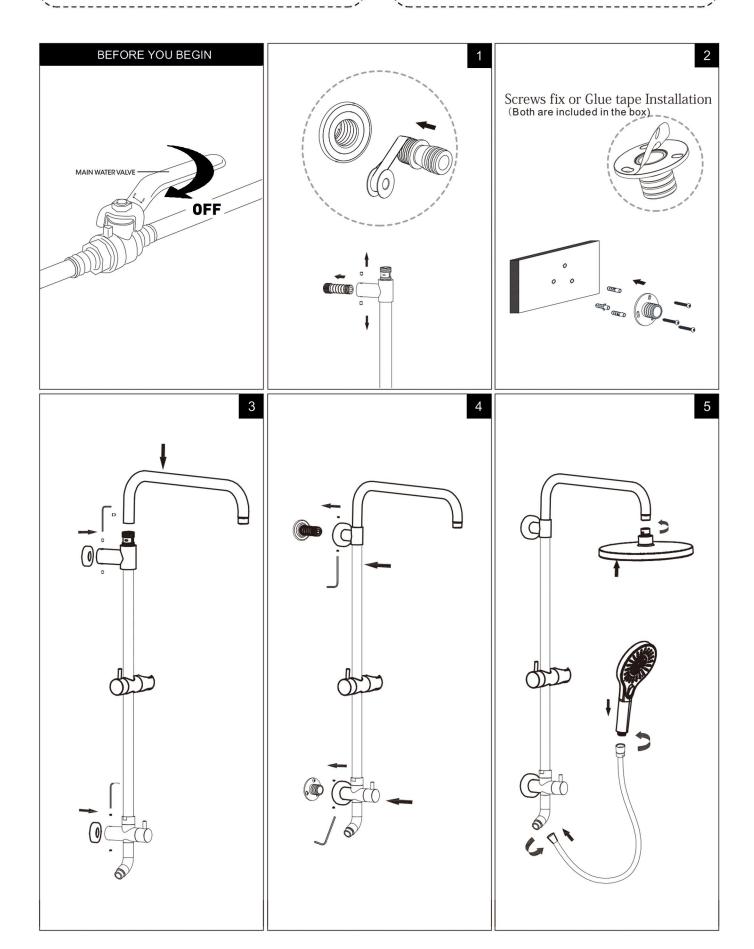


INSTALLATION STEPS

▶ Test method


- 1. Turn the faucet handle to the closed position, open the water inlet valve, and check whether there is any leakage at all water inlet ports.
- 2. Open the faucet handle to the maximum, and open the water inlet valve to check whether there is leakage at the water outlet and the sprinkler connection port.
- 3. Operate the reversing valve several times to check the shower water condition and whether there is any leakage outside the connection.
- 4. If the water pressure is lower than 0.05M Pa (it is possible that the faucet drips while the shower sprinkles water, or the faucet reversing valve does not work), a booster pump should be installed in the pipeline.

INSTALLATION DIMENSION

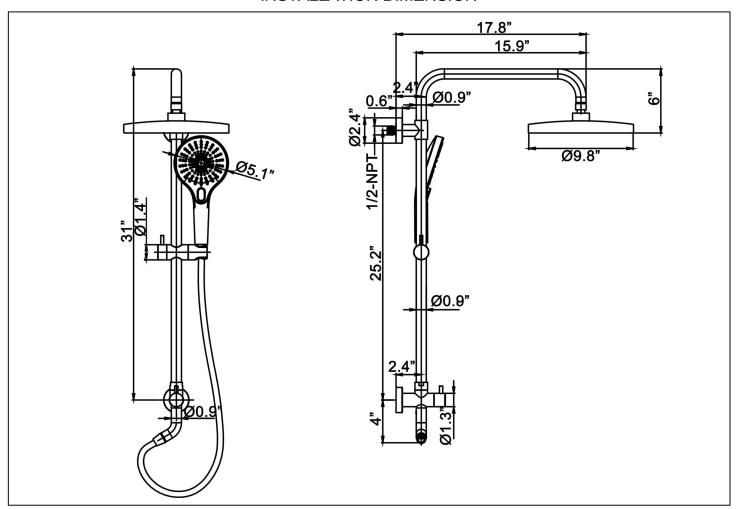

CLEANING CARE

 In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;



- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com





Manufacturer: Rbrohant
After-sale phone:+1(801) 800-9309
After-sale email: services@rbrohant.com