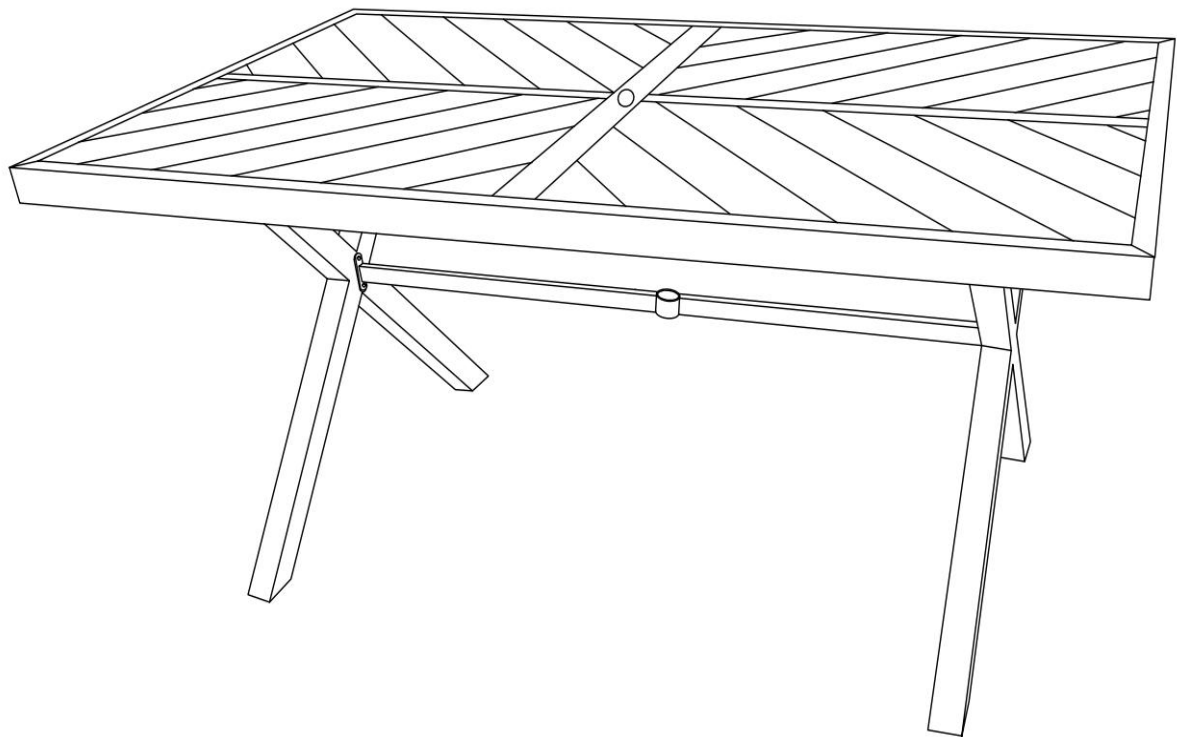


# **CROSLEY**





---

FURNITURE




## **Outdoor Metal Dining Table CO6292**



## PART LIST

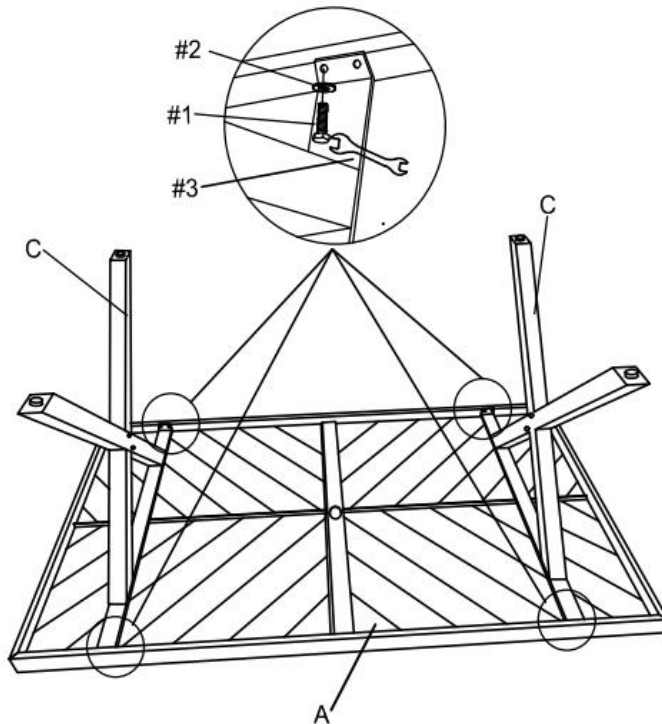
| A   | B   | C   | D   |
|---|---|---|---|
|  |  |  |  |
| Table Top<br>1 PC   | Table Connector<br>1 PC   | Table Leg<br>2 PCS  | Plastic Cover<br>1 PC   |




## HARDWARE LIST

| #1  | #2  | #3  |
|---|---|---|
|  |  |  |
| M6*20mm   | M6mm  |   |
| Bolt<br>12 PCS (Extra 1)  | Flat Washer<br>12 PCS (Extra 1)   | Wrench<br>1 PC  |

Step 1. Lay table top (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach table legs (part C) to table top (part A) using bolts (part #1), flat washers (part #2) and wrench (part #3).

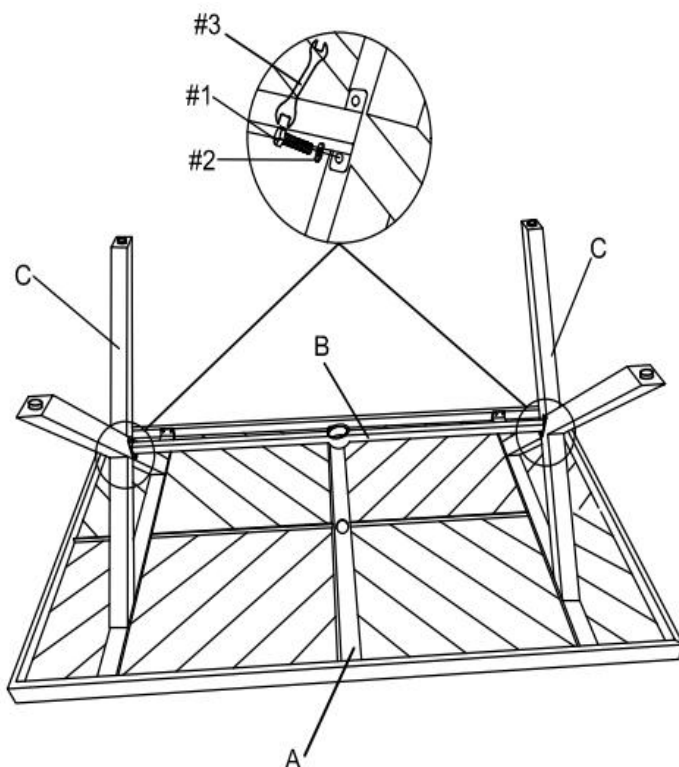
NOTE: Please do not fully tighten bolts until unit is fully assembled.






|    |  |     |
|----|--|-----|
| #1 |   | x 8 |
| #2 |   | x 8 |
| #3 |  | x 1 |

Step 2. Attach table connector (part B) to table legs (part C) using bolts (part #1), flat washers (part #2) and wrench (part #3).

NOTE: Please fully tighten all bolts at this time.



|    |   |     |
|----|---|-----|
| #1 |  | x 4 |
| #2 |  | x 4 |
| #3 |  | x 1 |

Step 3. Carefully turn assembled unit upright as shown below.  
Place the plastic cover (part D) in the middle of table.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

