




 



CROSLEY

FURNITURE

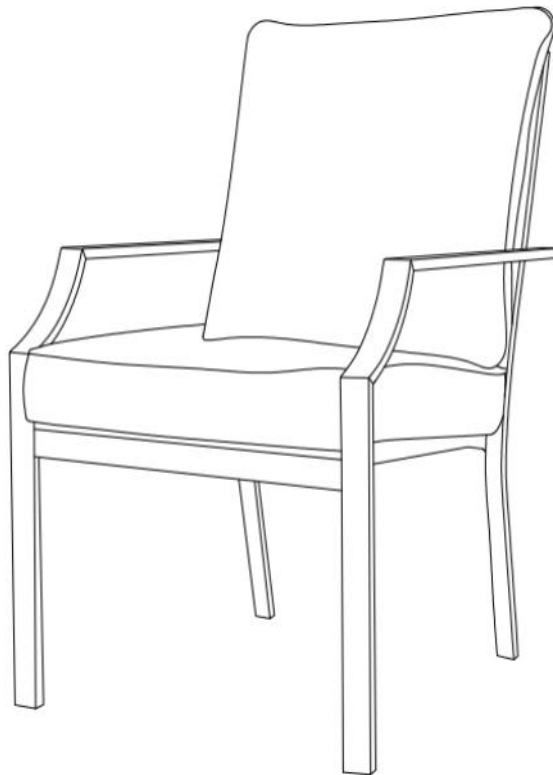


 
Outdoor Metal Dining Chair CO6291

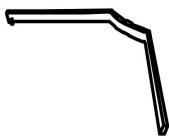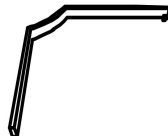

PART LIST


A		B		C		D		E	
Right Arm 2 PCS		Left Arm 2 PCS		Back Panel 2 PCS		Seat Panel 2 PCS		Back Cushion 2 PCS	
F									
Seat Cushion 2 PCS									




HARDWARE LIST

#1		#2		#3		#4	
M6*20mm		M6*40mm		M6mm		M6mm	
Bolt 16 PCS (Extra 1)		Long Bolt 4 PCS (Extra 1)		Flat Washer 20 PCS (Extra 1)		Allen Wrench 1 PC	

Step 1. Lay right arm (part A) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part D) to right arm (part A) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).

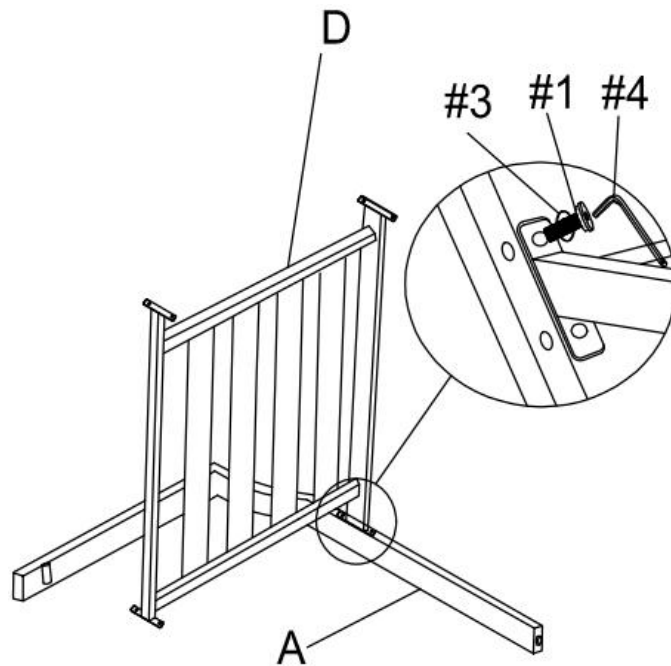
NOTE: Please do not fully tighten bolts until unit is fully assembled.






#1		x 2
#3		x 2
#4		x 1

Step 2. Attach left arm (part B) to seat panel (part D) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).

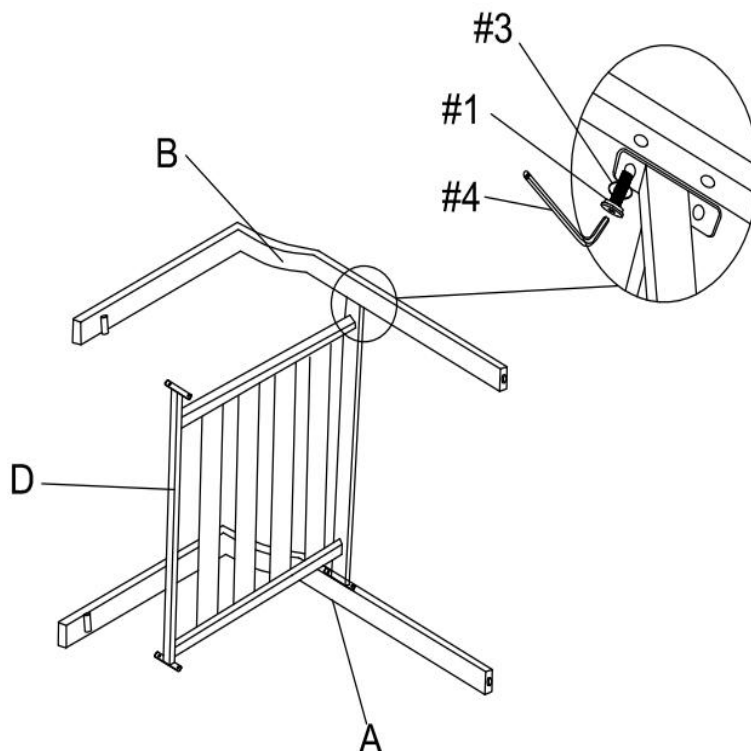
NOTE: Please do not fully tighten bolts until unit is fully assembled.



#1		x 2
#3		x 2
#4		x 1

Step 3. Attach back panel (part C) to assembled unit (parts A, B & D) using bolts (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

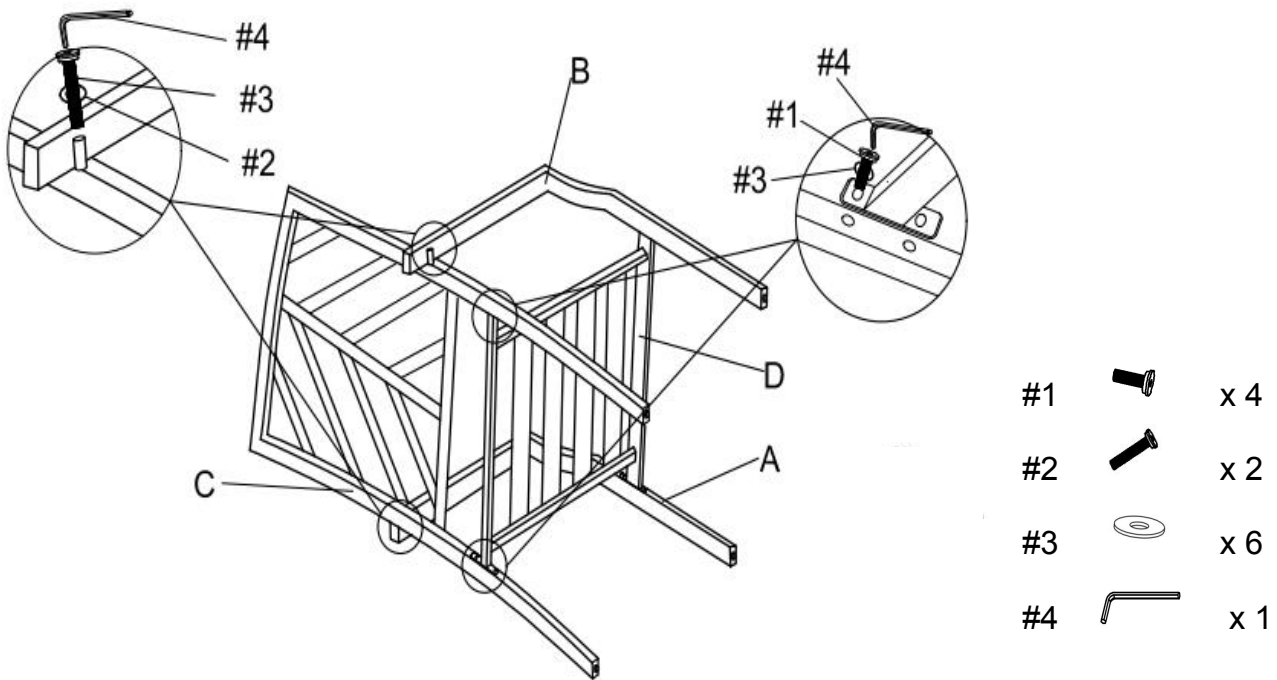

Step 4. Carefully turn unit upright. Place seat cushion (part F) and back cushion (part E) as shown below. Repeat steps 1-4 to assemble remaining chair.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

