


Outdoor Metal Conversation Set CO6294



PART LIST

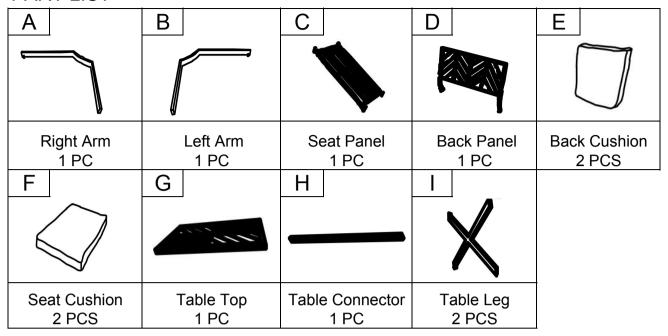


HARDWARE LIST

#1	#2	#3	#4	#5
M6*15mm	M6*20mm	M6*40mm	M6mm	M6mm
Short Bolt 10 PCS (Extra 1)	Bolt 8 PCS (Extra 1)	Long Bolt 2 PCS (Extra 1)	Flat Washer 20 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Lay right arm (part A) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part C) to right arm (part A) using bolts (part #2), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

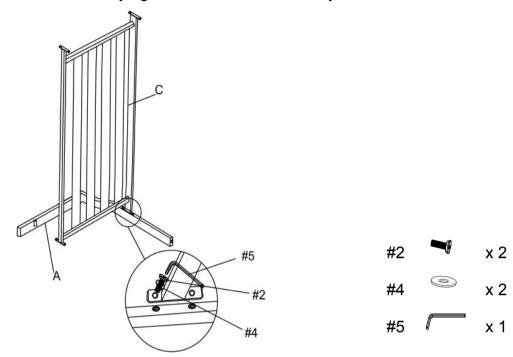


Step 2. Attach left arm (part B) to seat panel (part C) using bolts (part #2), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

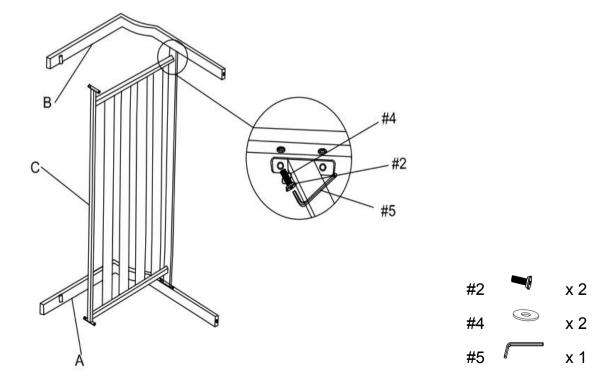

Step 3. Attach back panel (part D) to assembled unit (parts A, B & C) using bolts (part #2), long bolts (part #3), flat washers (part #4) and allen wrench (part #5).


NOTE: Please fully tighten all bolts at this time.

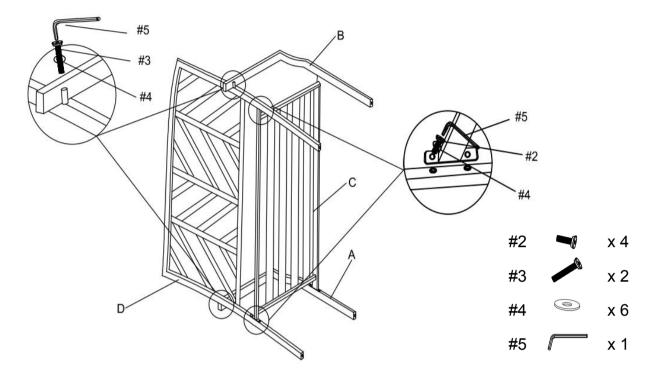

Step 4. Carefully turn assembled unit upright as shown below.


Place seat cushions (part F) and back cushions (part E) as shown below.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

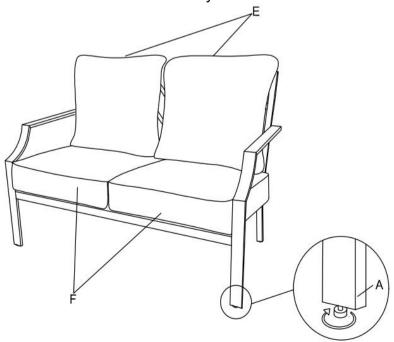


Step 5. Lay table top (part G) upside down on a soft flat surface, such as carpet, as shown below. Attach table legs (part I) to table top (part G) using short bolts (part #1), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

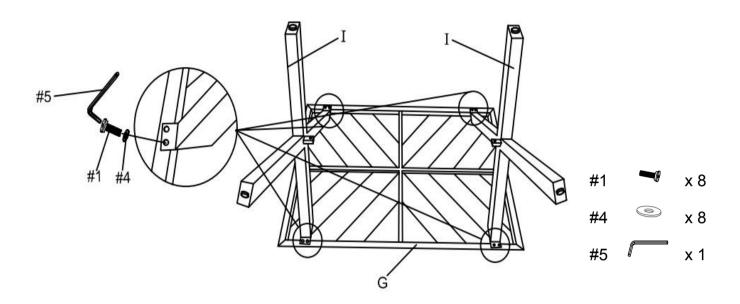

Step 6. Attach table connector (part H) to table legs (part I) using short bolts (part #1), flat washers (part #4) and allen wrench (part #5).

NOTE: Please fully tighten all bolts at this time.

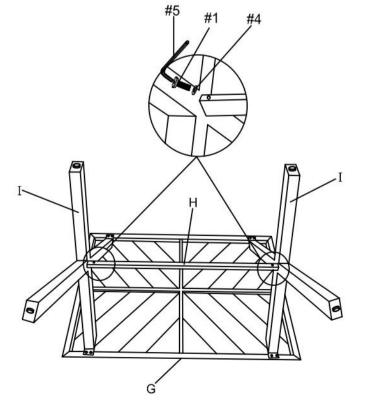

Step 7. Carefully turn assembled unit upright as shown below.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

