


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

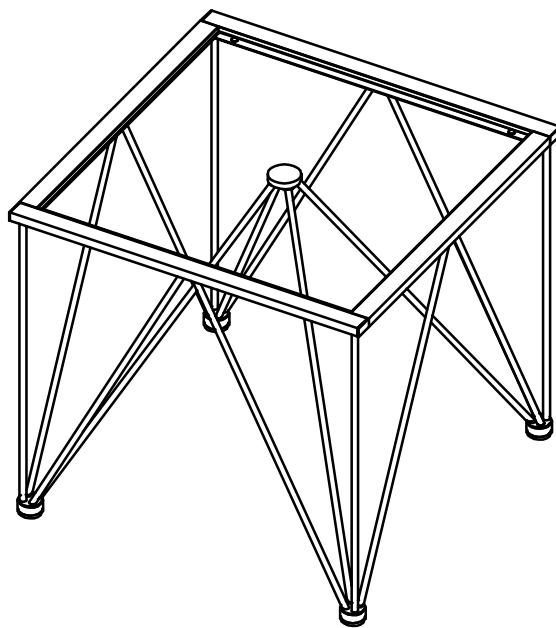

Fine Furniture for every stage of life

709717
END TABLE

REVISION 0 : 03/01/2024

ITEM: 709717



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 






WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 35 MINUTES

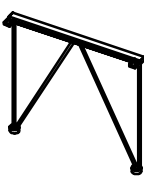PARTS IDENTIFICATION






A	TOP GLASS		1PC
B	FRONT AND BACK FRAME		2PCS
C	LEFT AND RIGHT FRAME		2PCS
D	TOP SUPPORT CROSSBAR		1PC
E	BOTTOM SUPPORT CROSSBAR		1PC

ITEM: 709717

ASSEMBLY INSTRUCTIONS



HARDWARE IDENTIFICATION

1	CAP (1-1/2")		4PCS
2	BOLT (1/4" x 10mm)		9PCS
3	SMALL BOLT (3/16" x 6.0mm)		8PCS
4	SUCTION CUP		4PCS
5	ALLEN WRENCH (4mm)		1PC


ITEM: 709717




ASSEMBLY INSTRUCTIONS

STEP 1

Do not tighten until each step is completed or instructed.

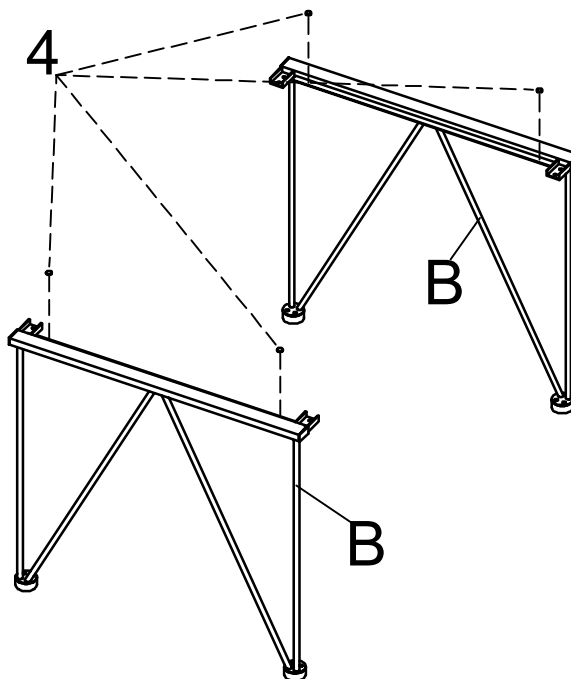


STEP 2

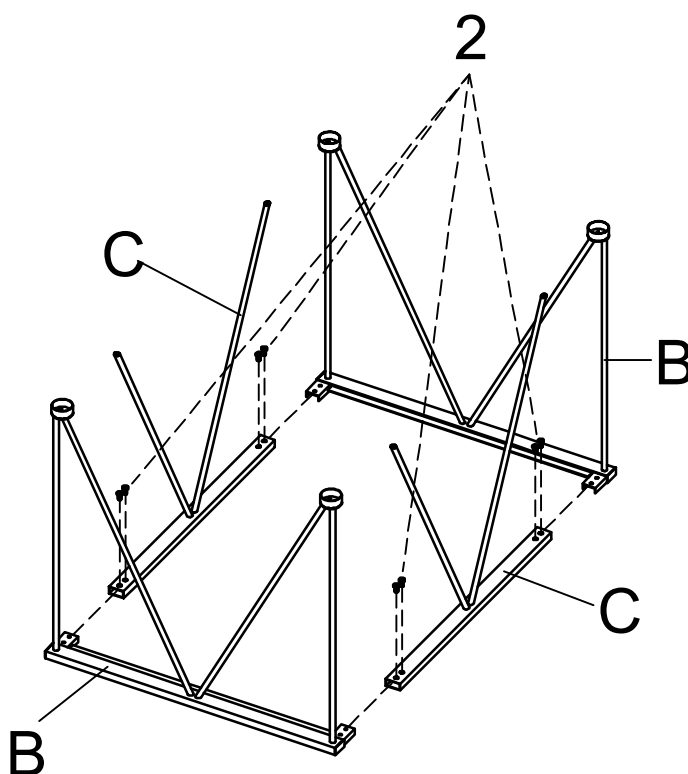


ITEM: 709717

ASSEMBLY INSTRUCTIONS


STEP 3

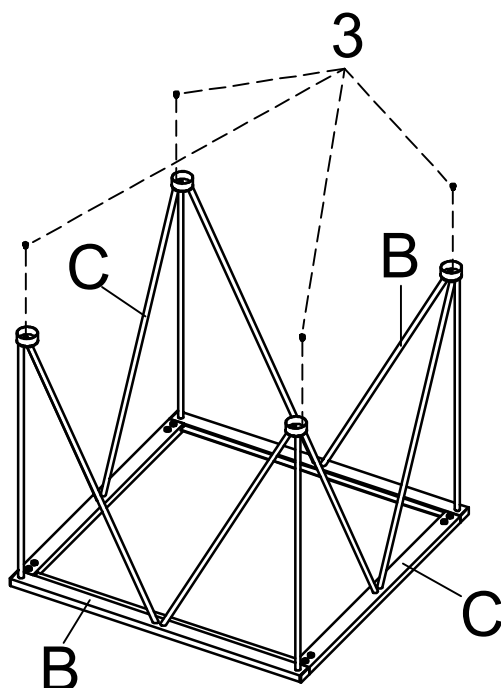


STEP 4

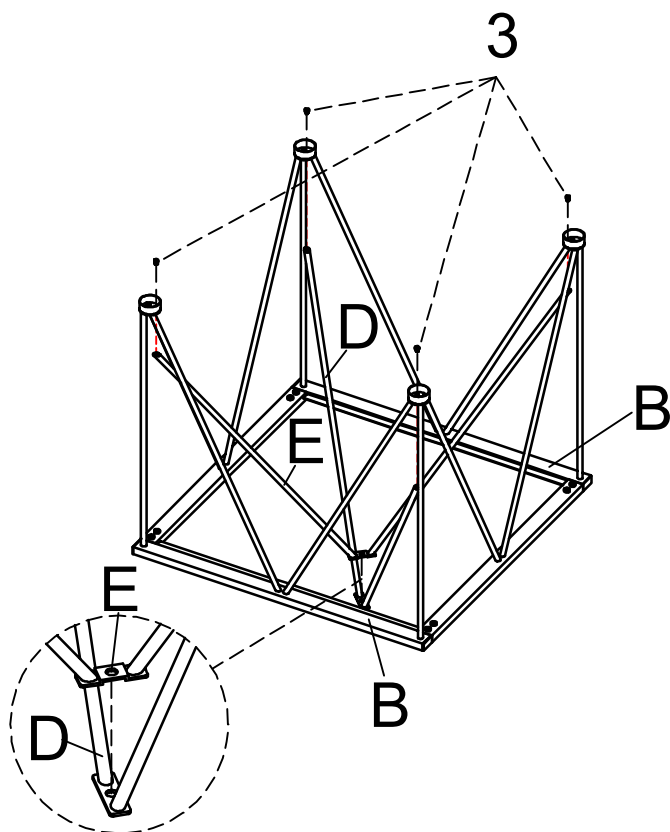

ITEM: 709717
ASSEMBLY INSTRUCTIONS
STEP 5

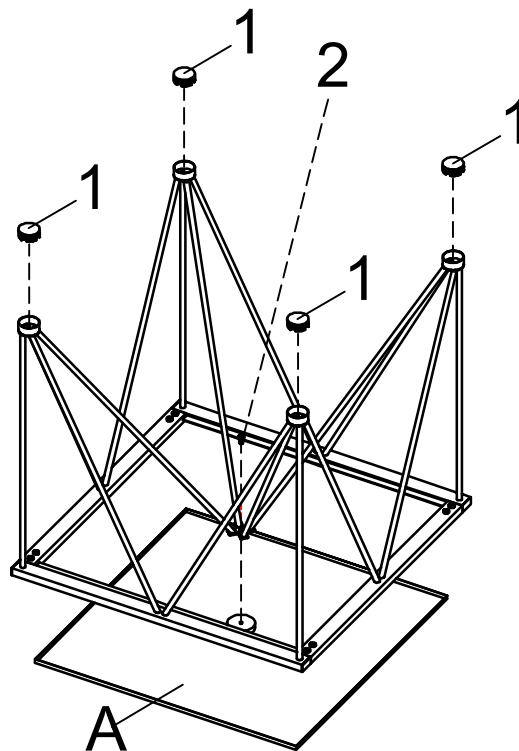

STEP 6
COMPLETE

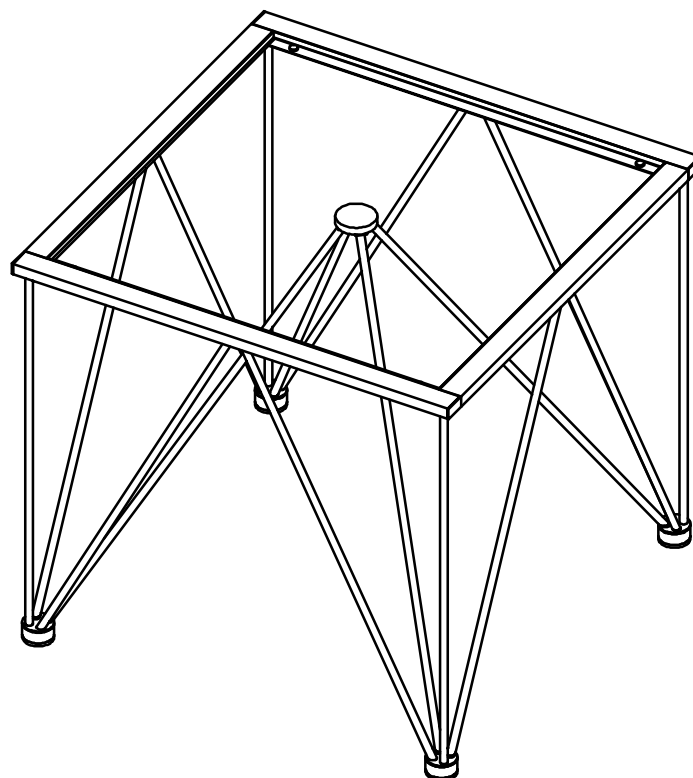


ITEM: 709717

ASSEMBLY INSTRUCTIONS



Product Size : 597 X 597 X 552 H (MM)

Product Size : 23.5" X 23.5" X 21.75"

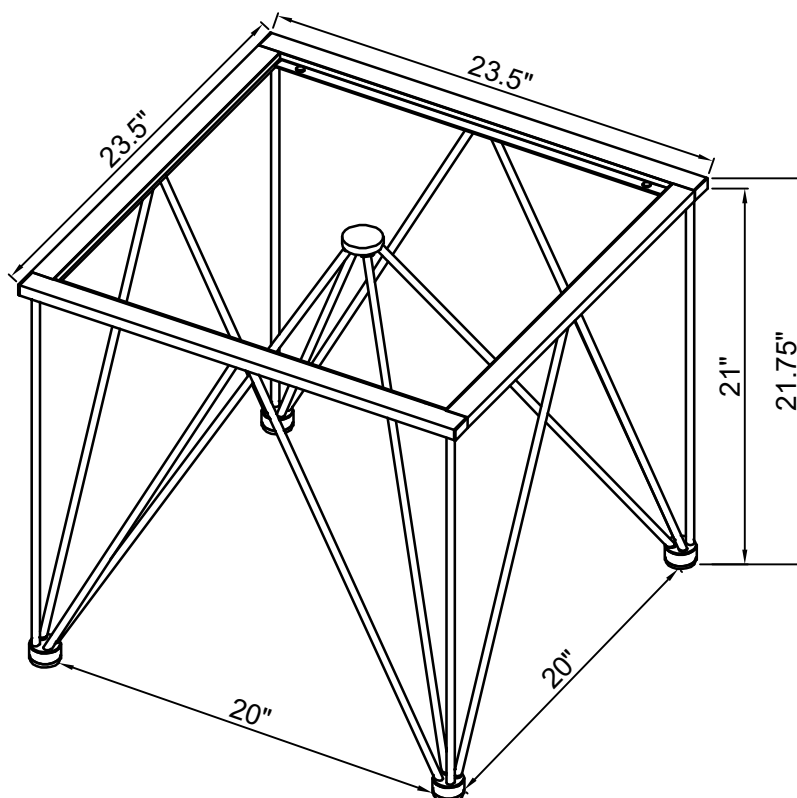

Note : Dimension tolerance $\pm 5\%$