

**W**e believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing [service@casepiece.com](mailto:service@casepiece.com)

Have these ready when you email:

- Item Number
- PO #
- Purchaser Name
- Proof of Purchase
- Description of the problem and/or the Part Number needed

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

## 90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.

 
 
 
 
 
 
 
 
 
2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

 

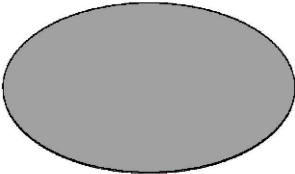 
3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.










We appreciate your business!

# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION
         
## HARDWARES LIST

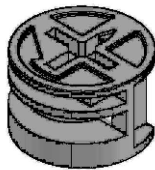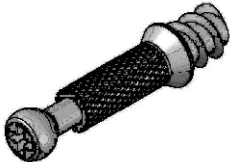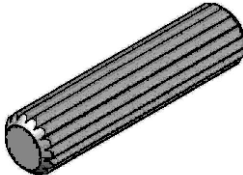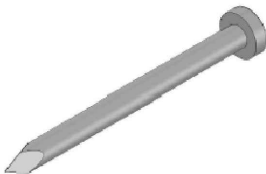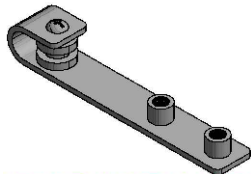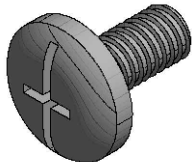
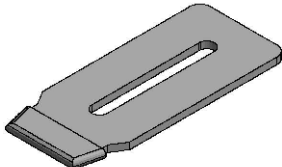
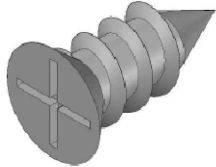
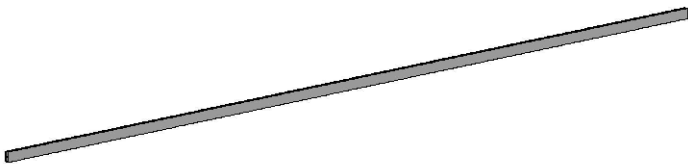
ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		36 PCS
B	MINIFIX CAM BOLT		36 PCS
C	WOOD DOWEL (M6 x 25MM)		10 PCS
D	6/8" NAIL		30 PCS
E	DOOR ROLLER		4 PCS
F	DOOR ROLLER SCREW		8 PCS
G	DOOR ROLLER PLATE		4 PCS
H	CSK SCREW M3.5 X 12MM		8 PCS
I	PLASTIC STRIP (H SHAPE)		2 PCS

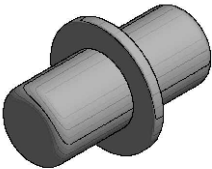C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION			
HARDWARES LIST			
ITEM	DESCRIPTION	DRAWING	QTY
J	SHELF SUPPORT		24 PCS
K	TIPPING RESTRAINT		1 PC
L	STICKER		8 PCS

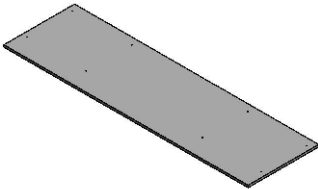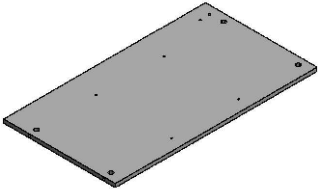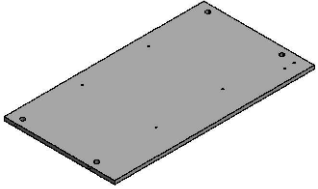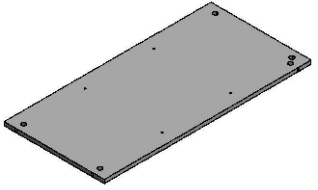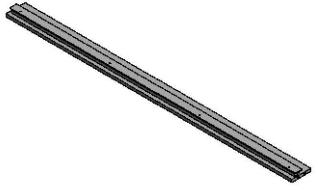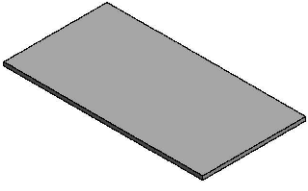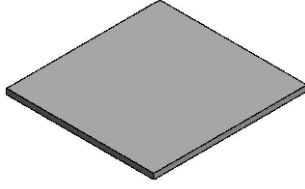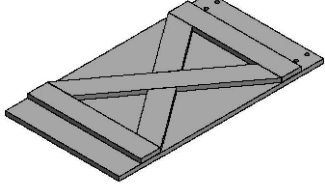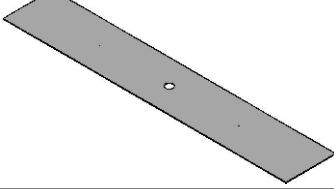C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION			
PARTS LIST			
ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	LEFT PANEL		1 PC
3	RIGHT PANEL		1 PC
4	CENTER PANEL		2 PCS
5	SUPPORT RAIL		1 PC
6	SHELF PANEL(LONG)		2 PCS
7	SHELF PANEL(SHORT)		4 PCS
8	SLIDING DOOR		2 PCS
9	BACK PANEL(SMALL)		2 PCS


C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

    PARTS LIST

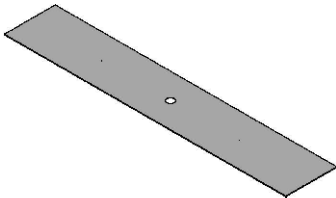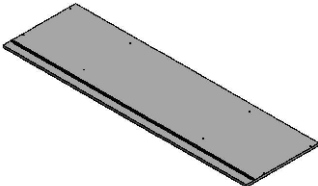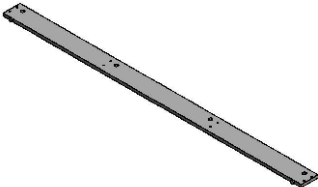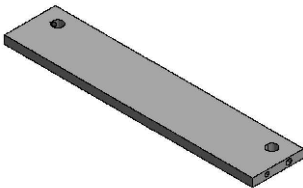
ITEM	DESCRIPTION	DRAWING	QTY
10	BACK PANEL(BIG)		1 PC
11	BOTTOM PANEL		1 PC
12	LEG FRAME(LONG)		2 PCS
13	LEG FRAME(SHORT)		4 PCS

ASSEMBLY TOOLS REQUIRED

 1. Screwdriver (not provide)




 2. Hammer (not provide)




# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

 NOTE : - The outer board is for protection of packaging only, not part of furniture. Please throw it before assembly.

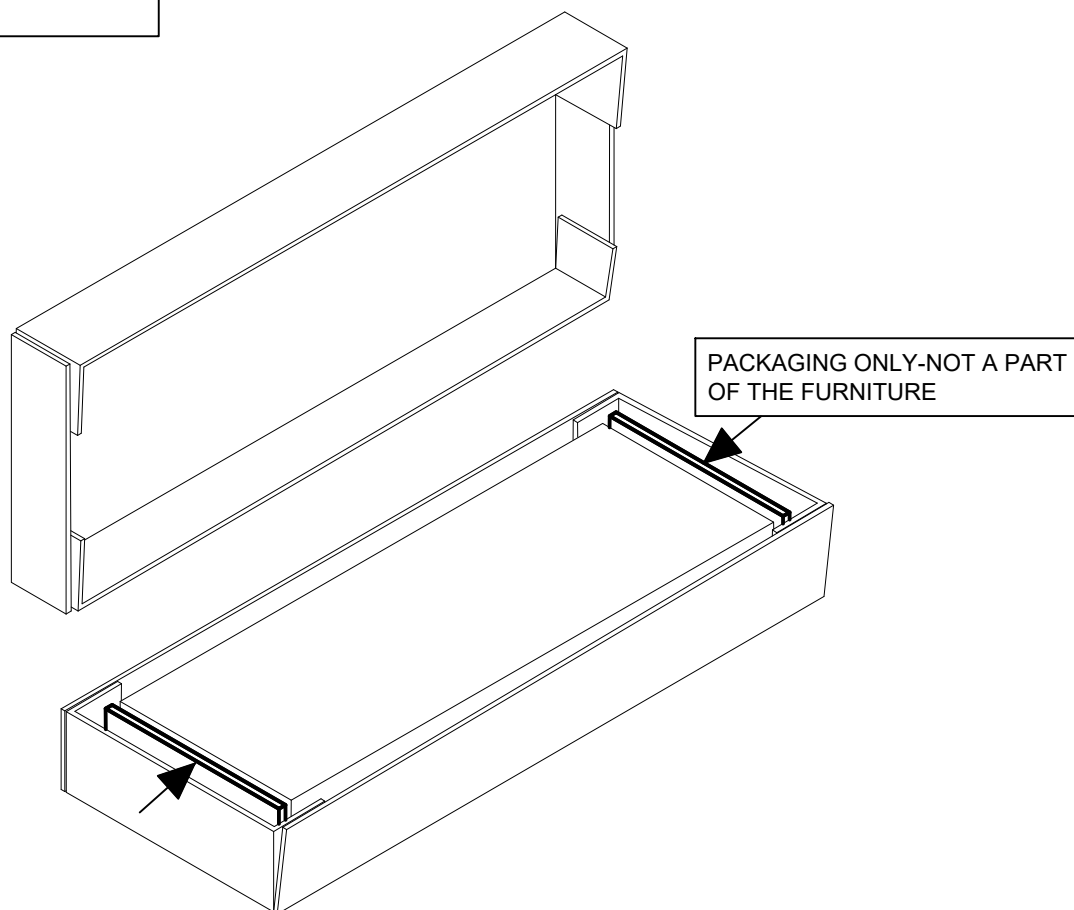


## STEP 1

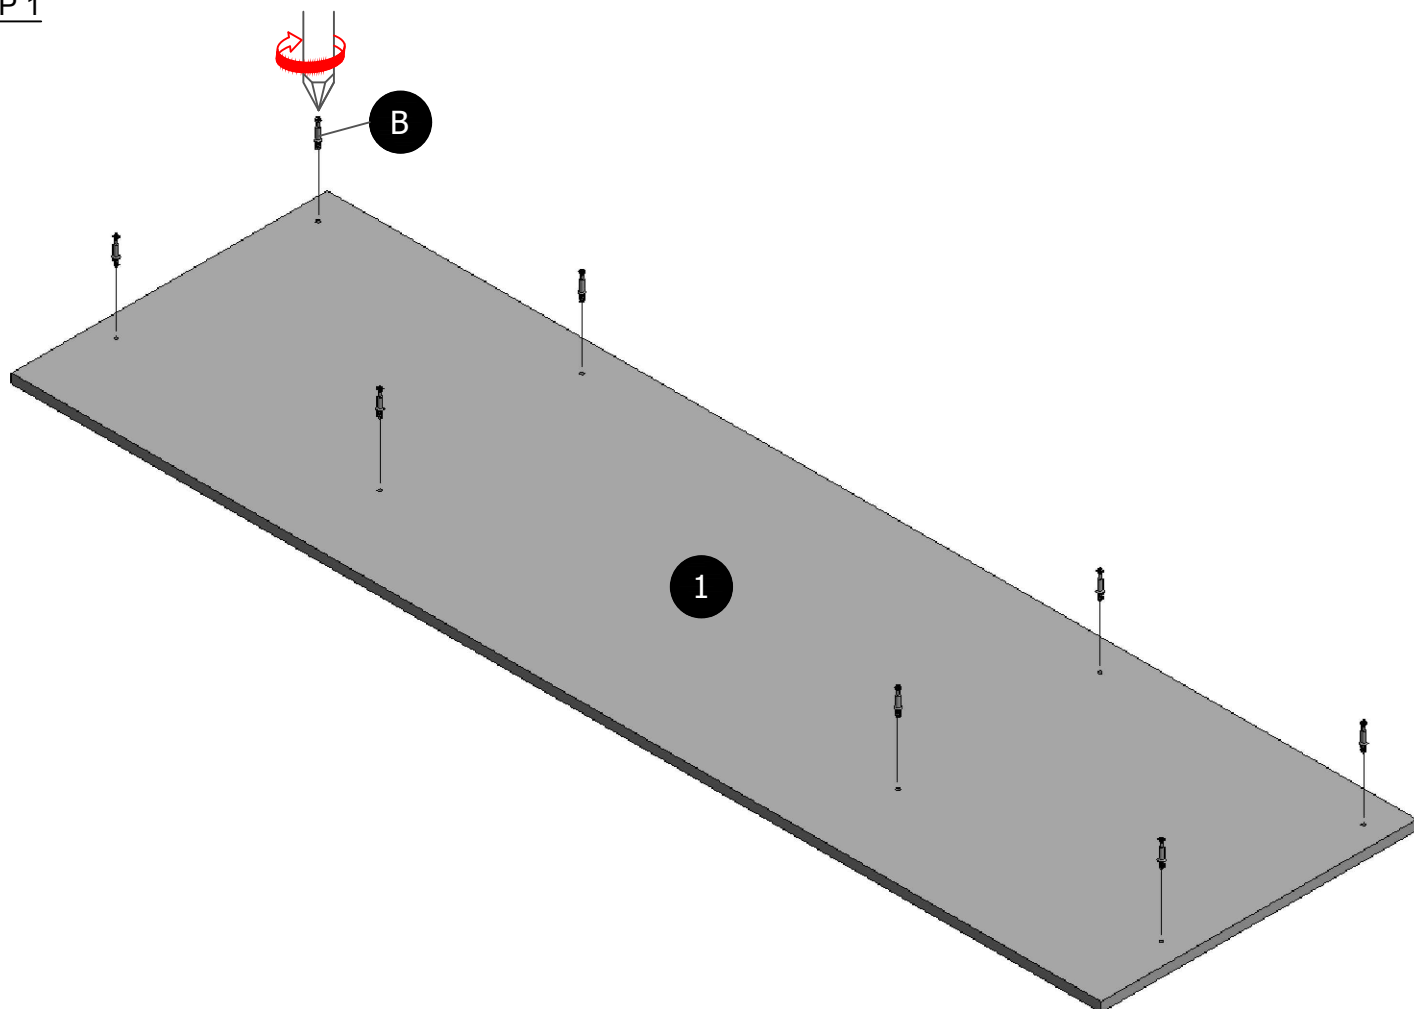 

# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION


## STEP 2

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

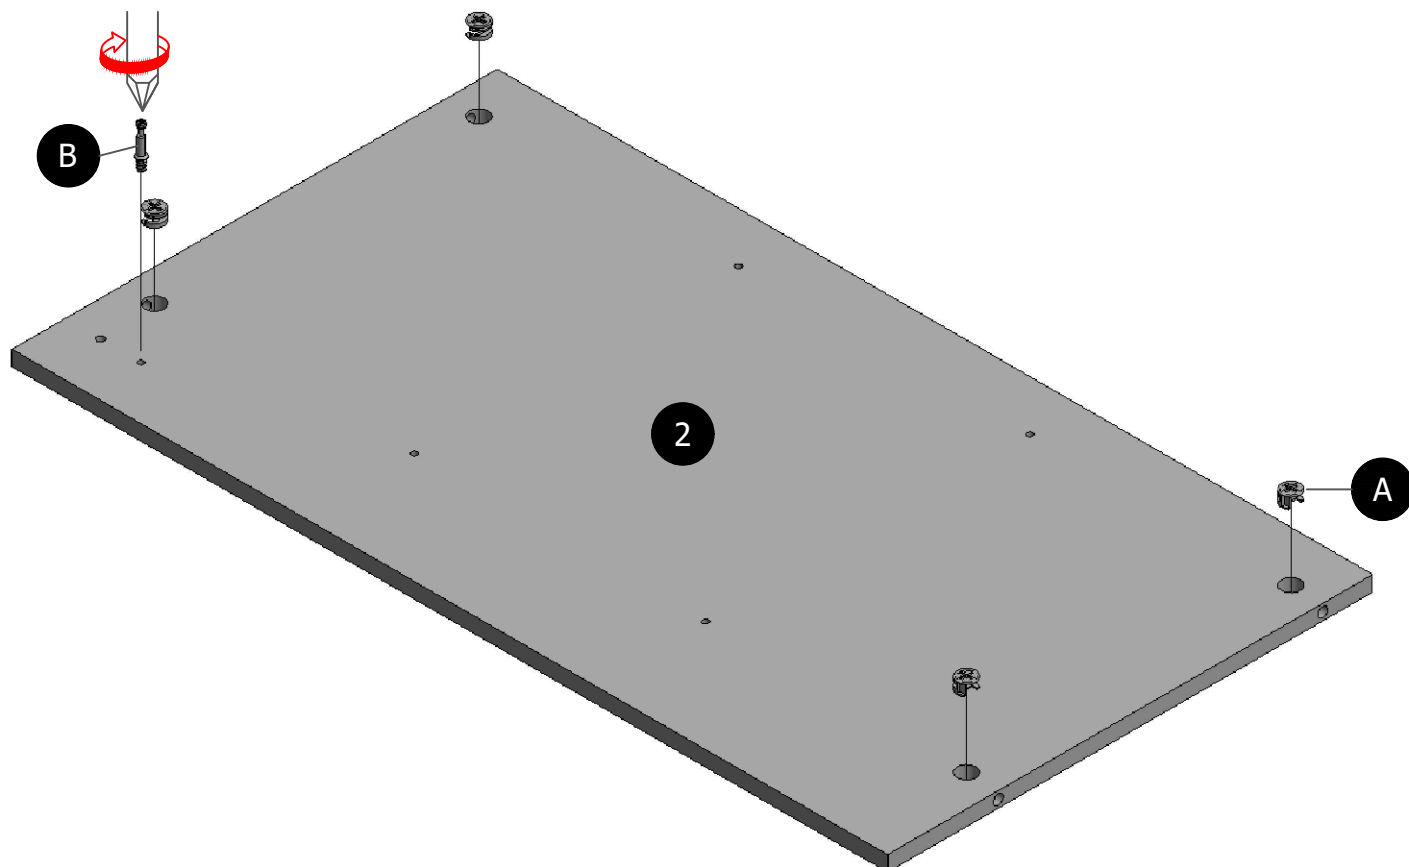

## STEP 3

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

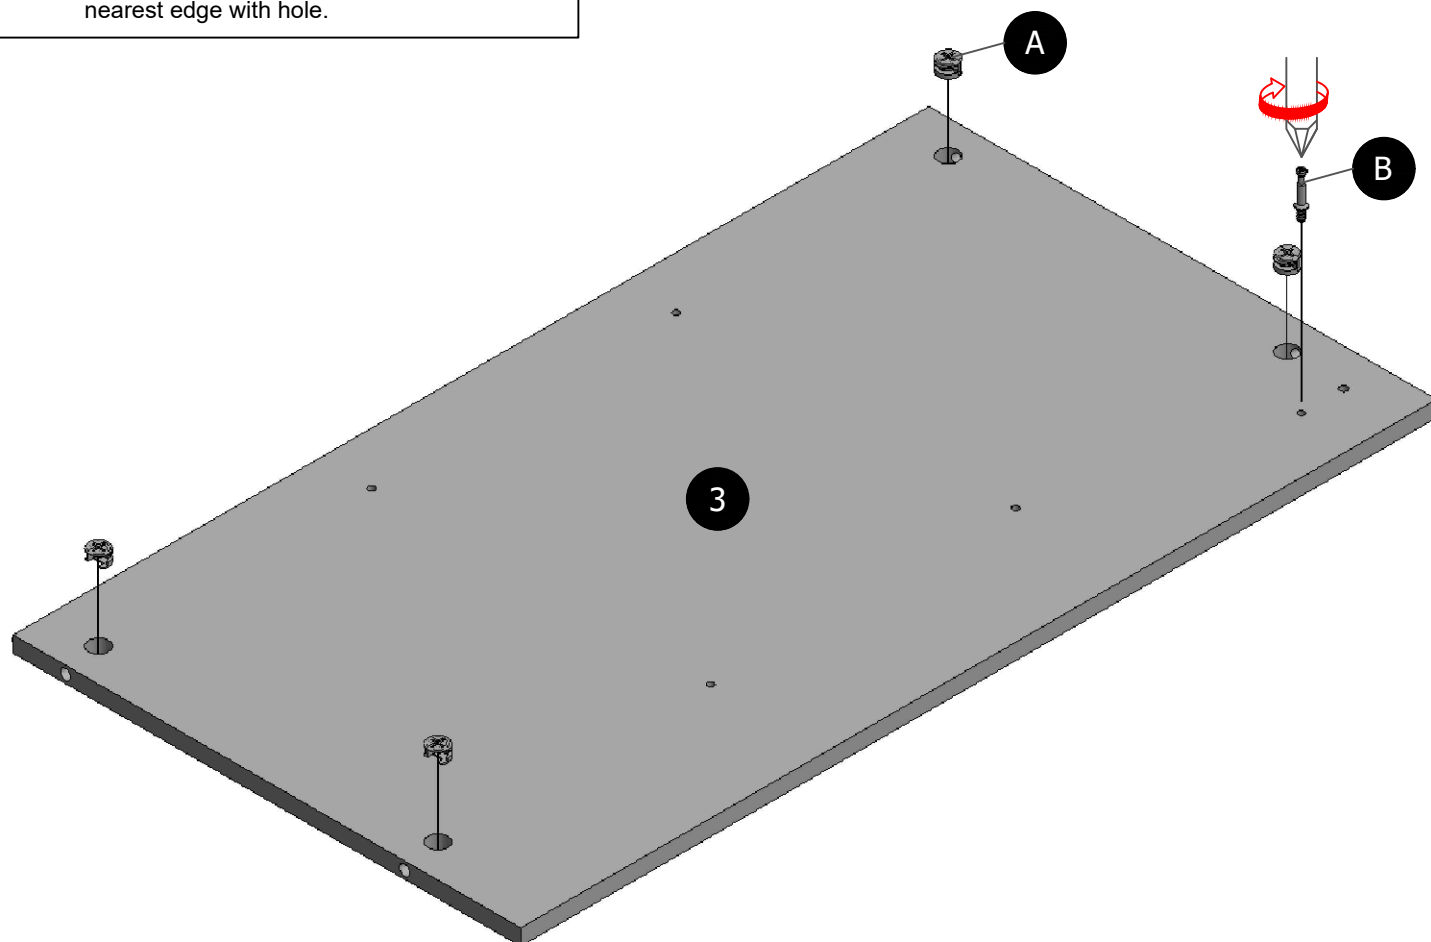


# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

## STEP 4


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 **x 2**

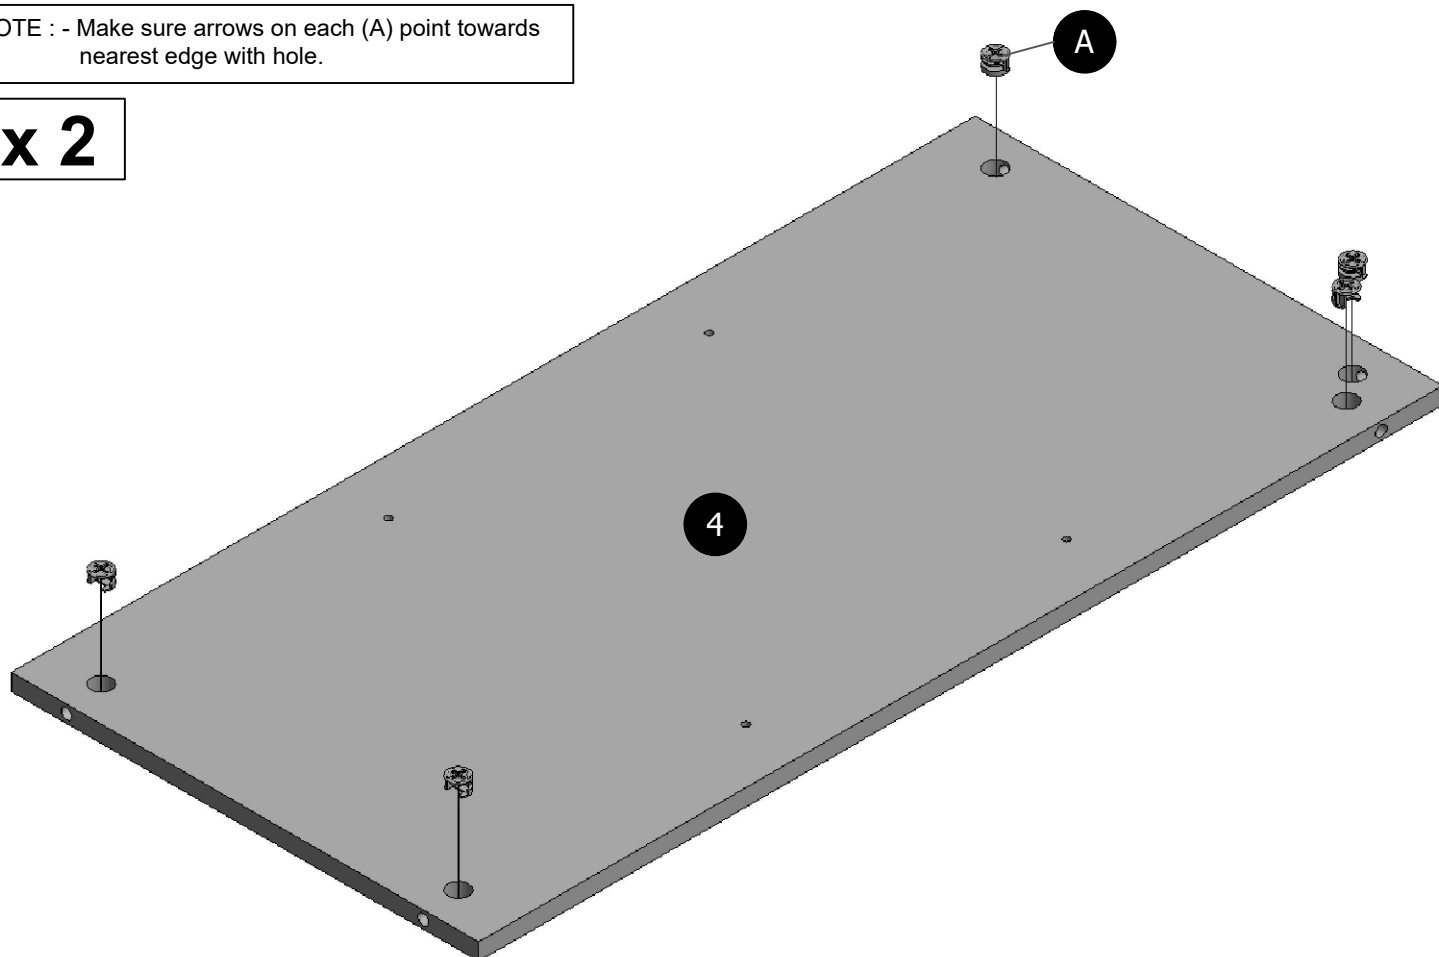


## STEP 5

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

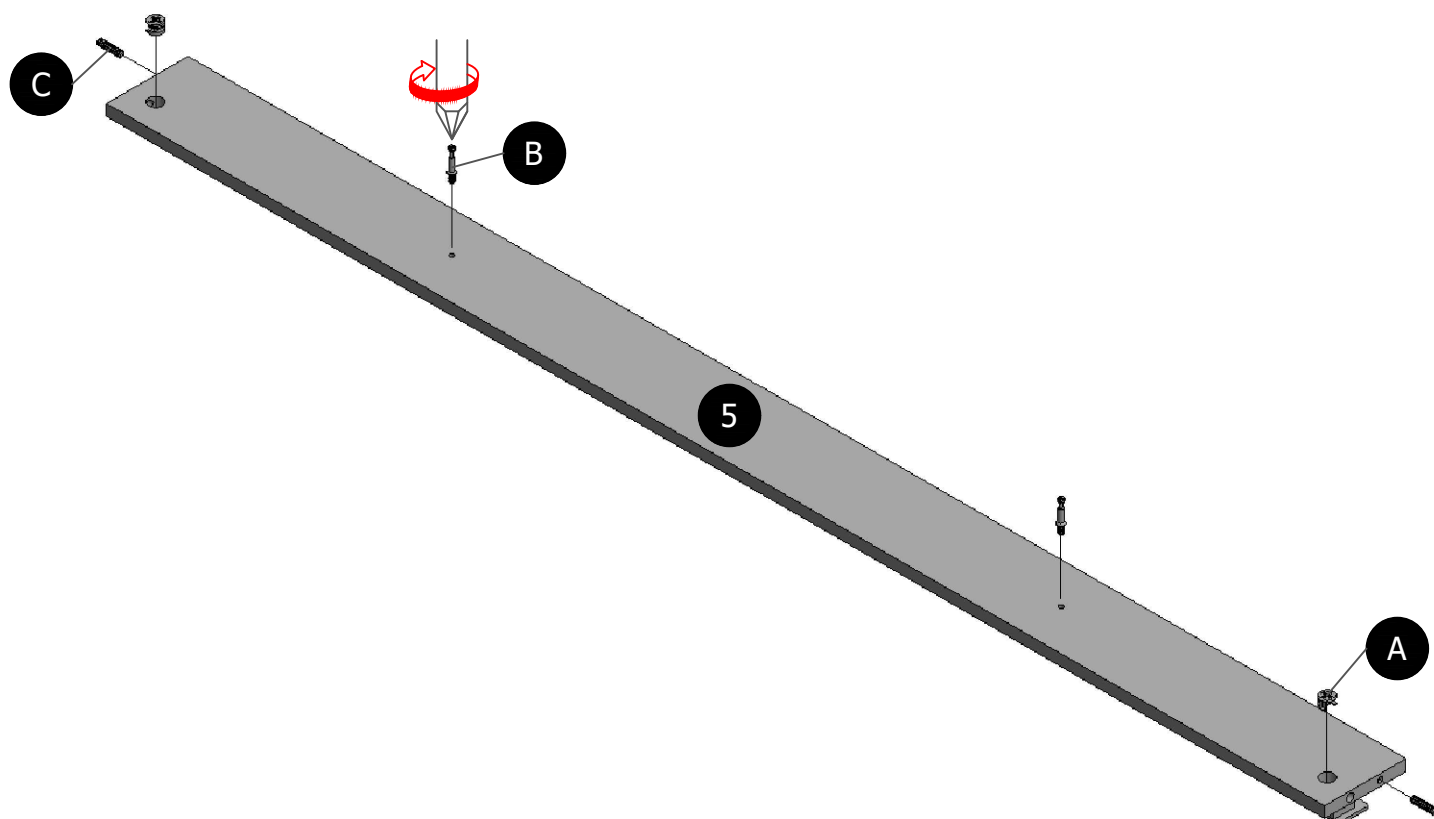



 
STEP 6

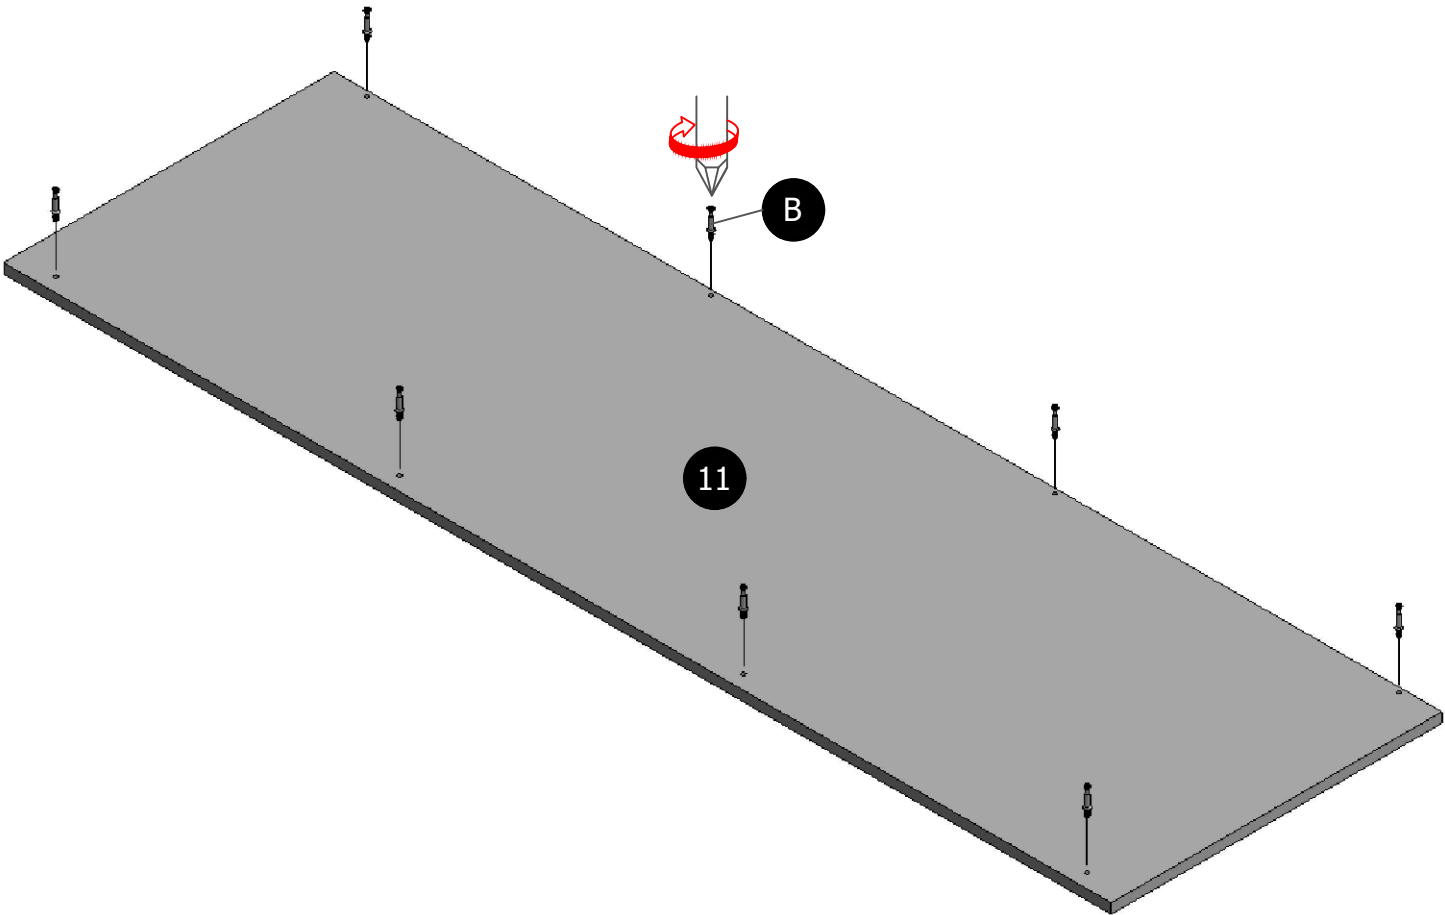

STEP 7

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 2

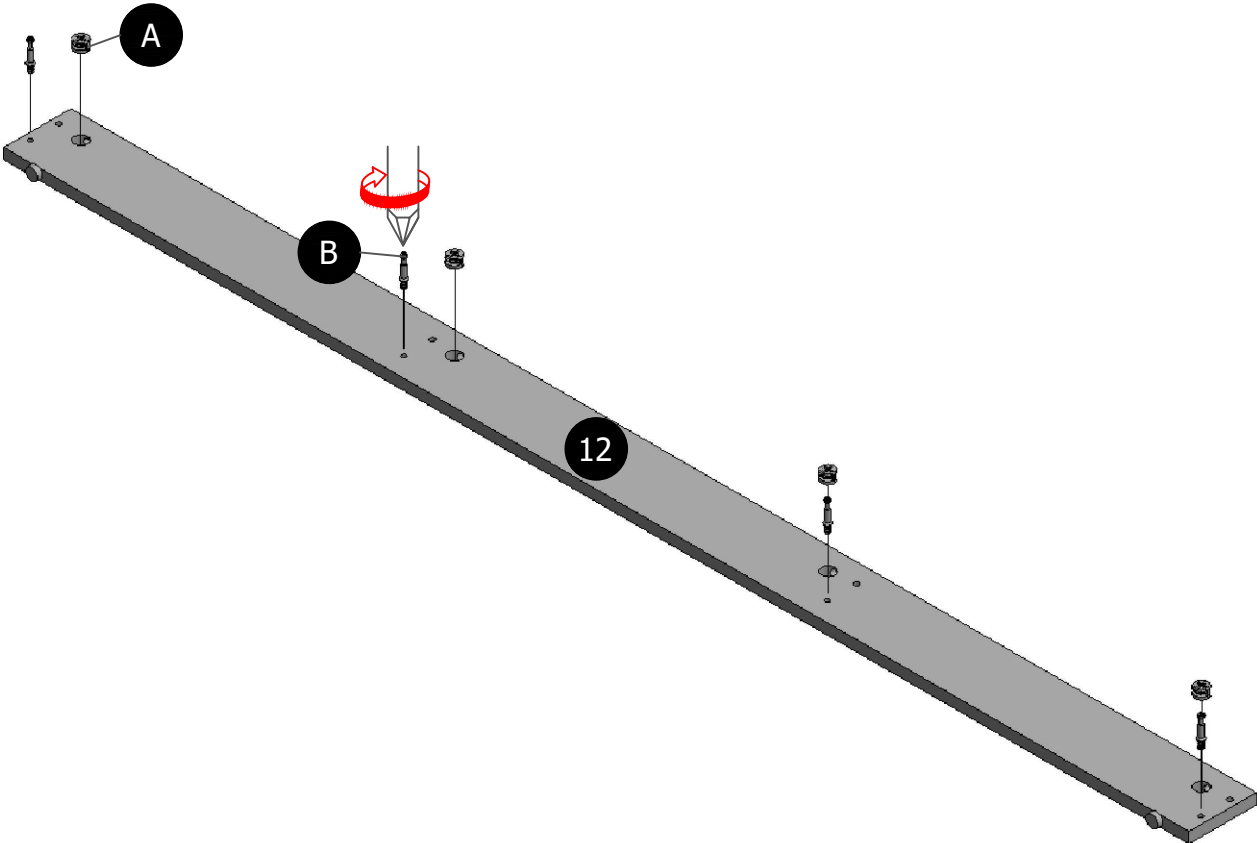


# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION


## STEP 8

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
**x 4**

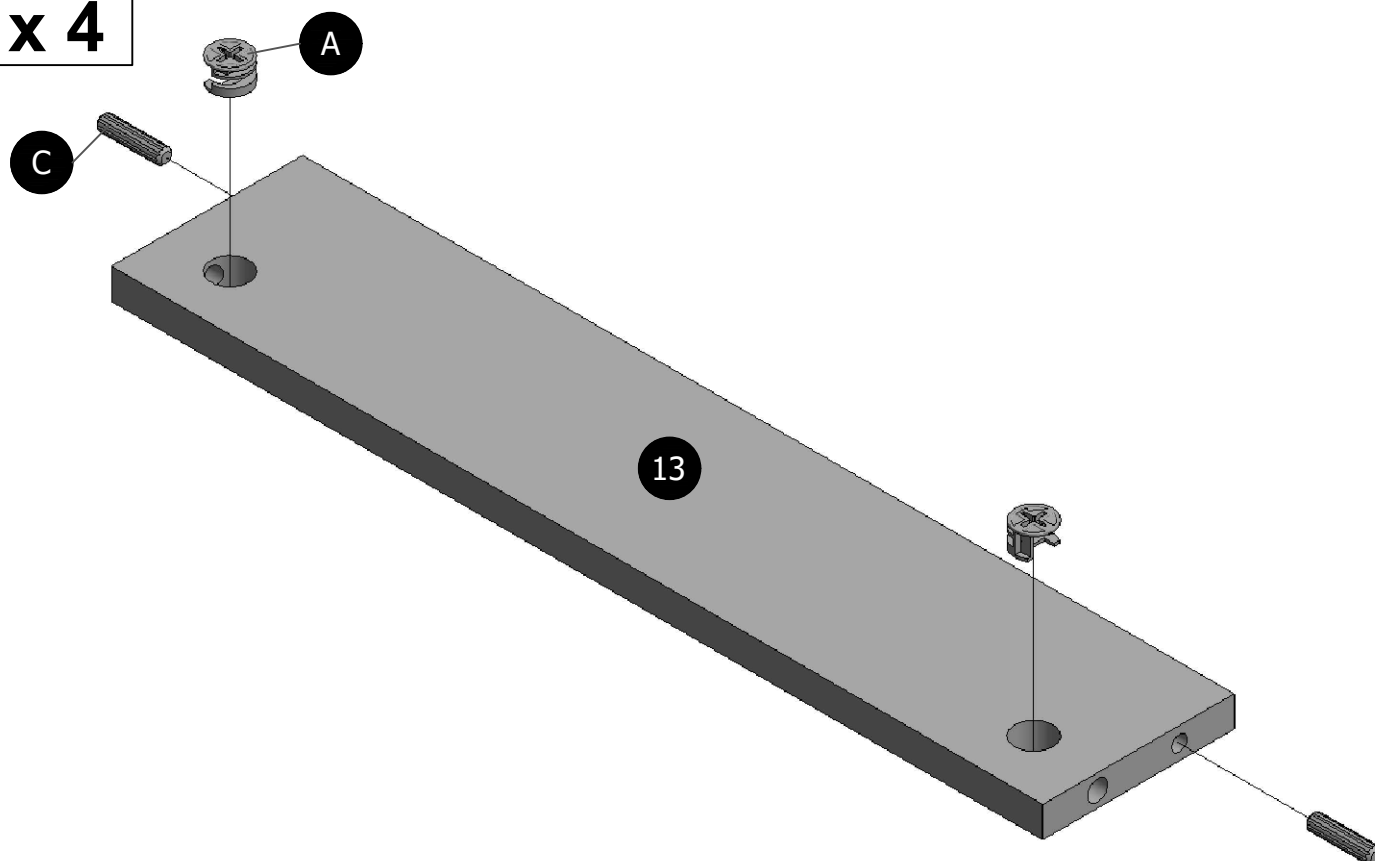


## STEP 9

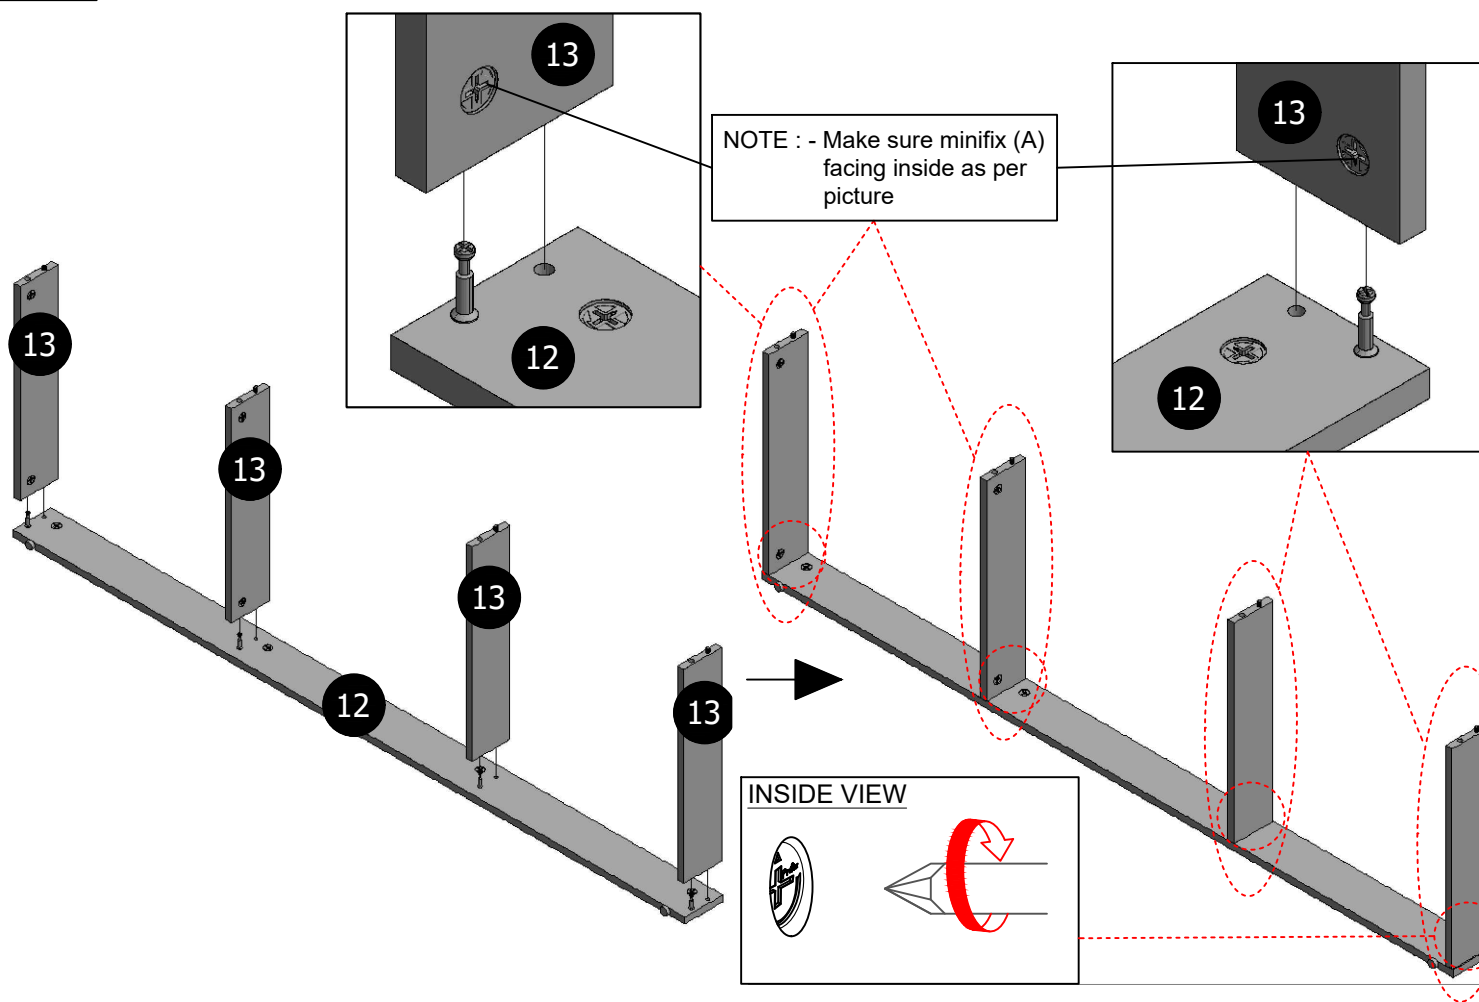 


## STEP 10

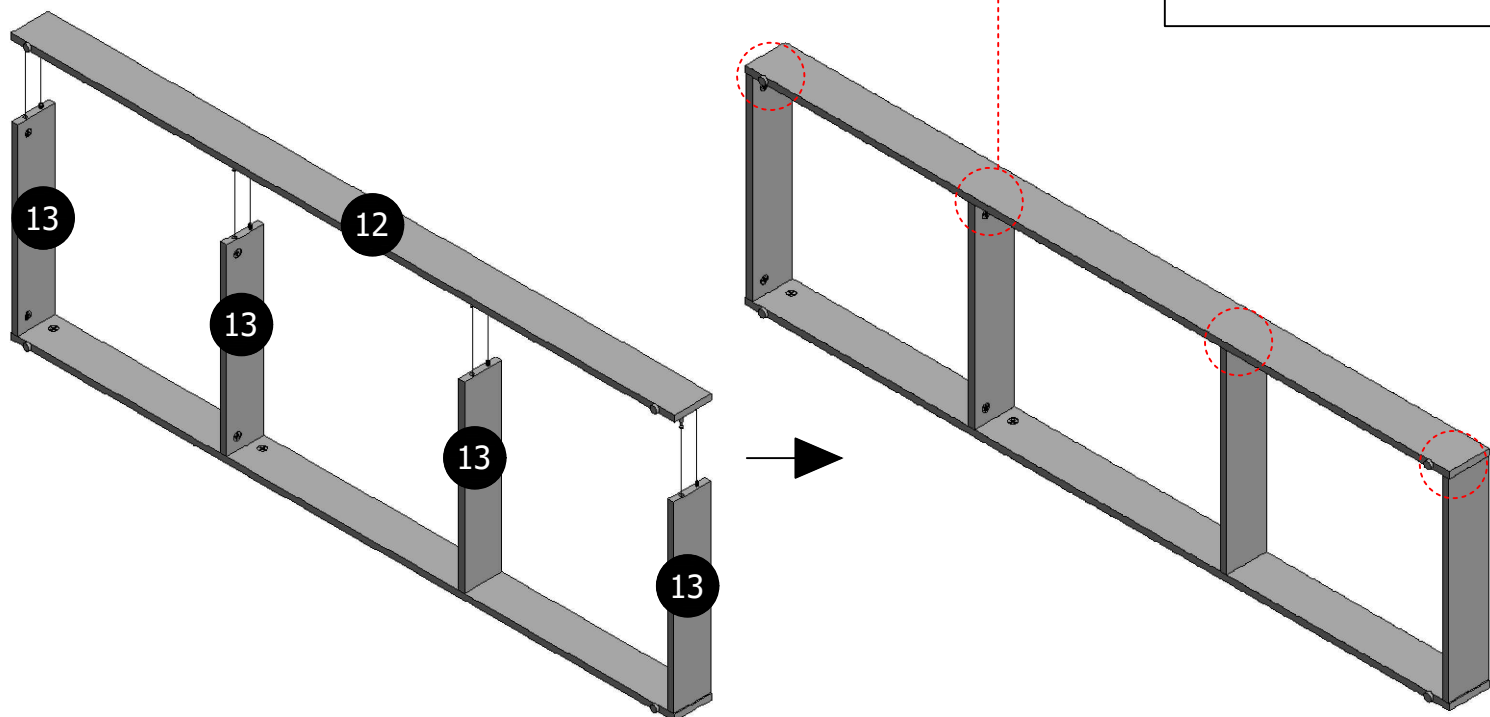 


## STEP 11

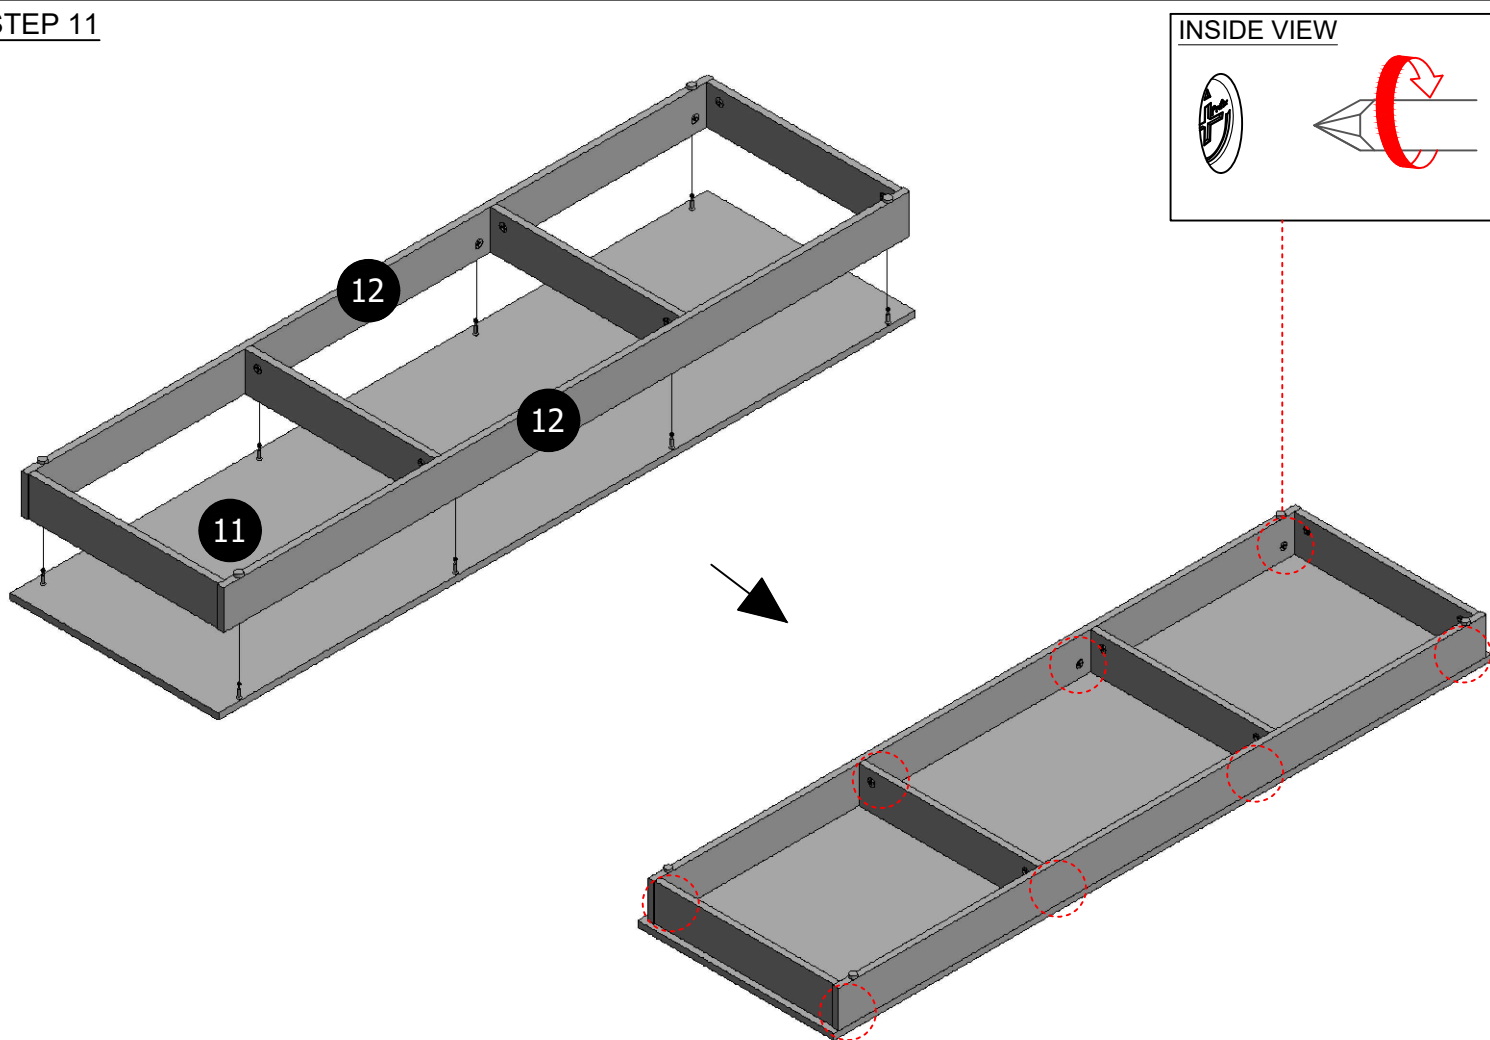 

## STEP 12

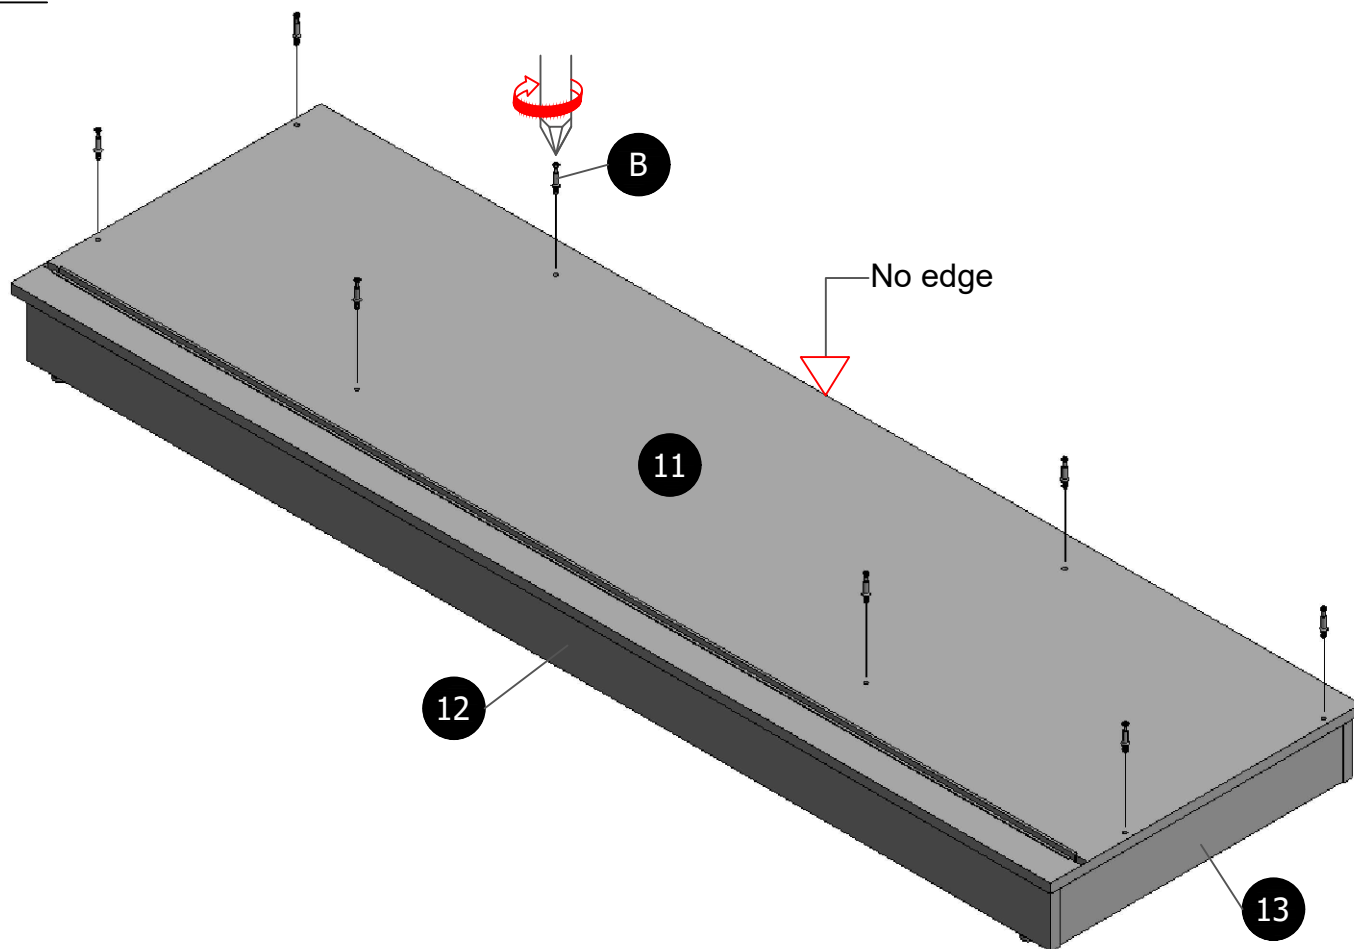 


## STEP 13

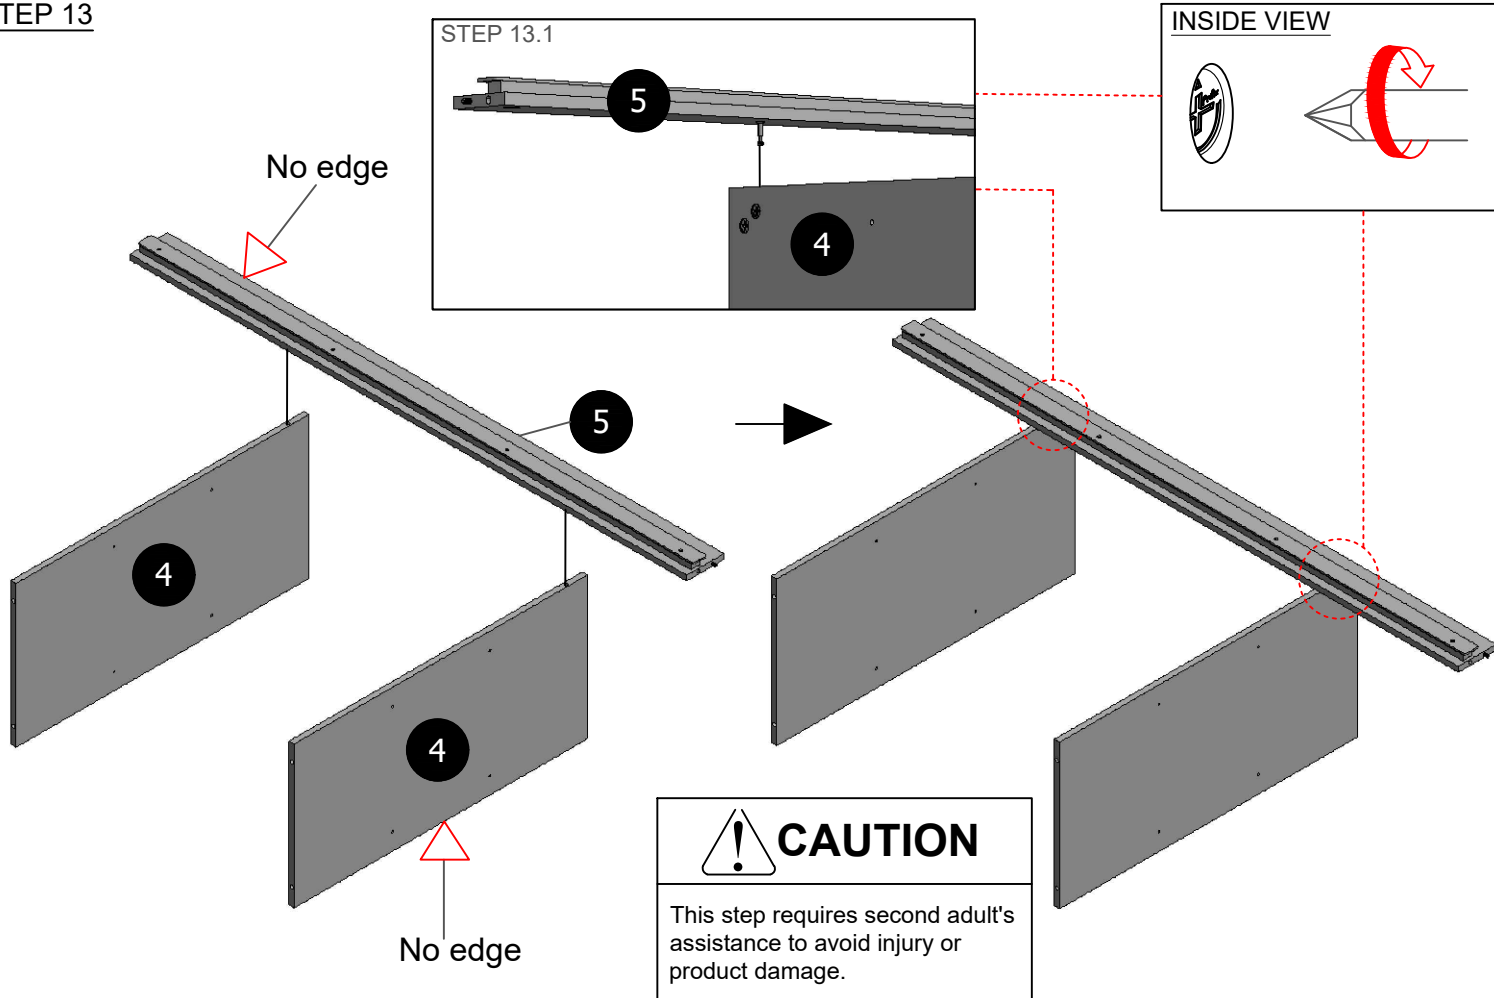 


C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

 STEP 14

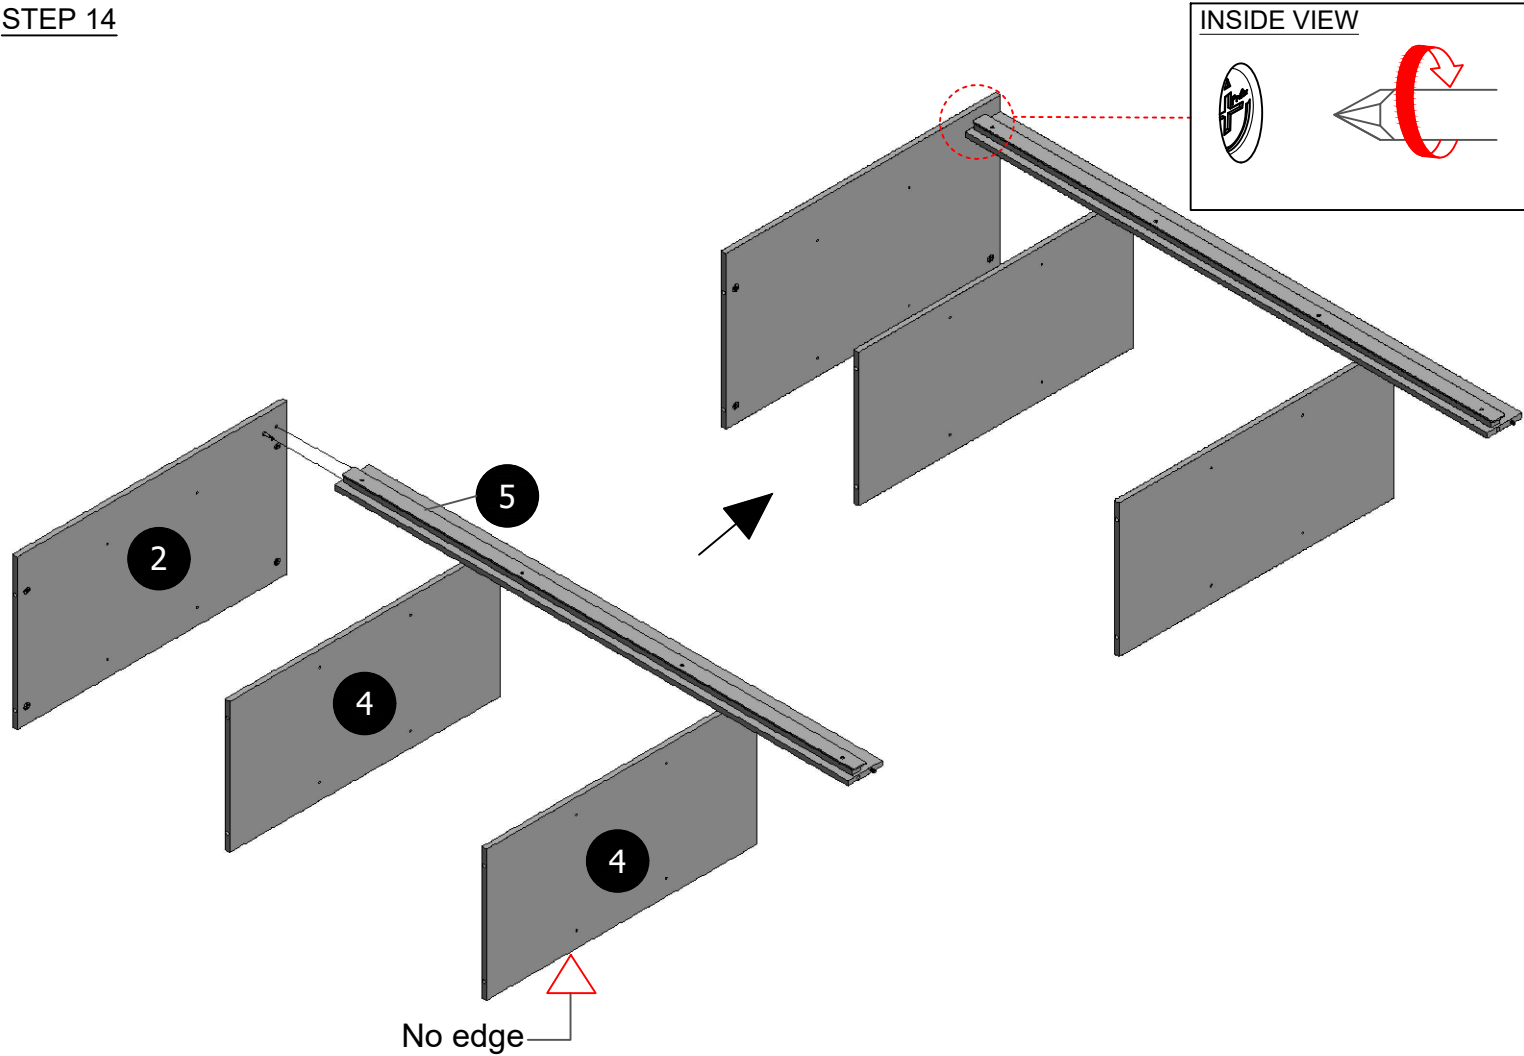


 STEP 15

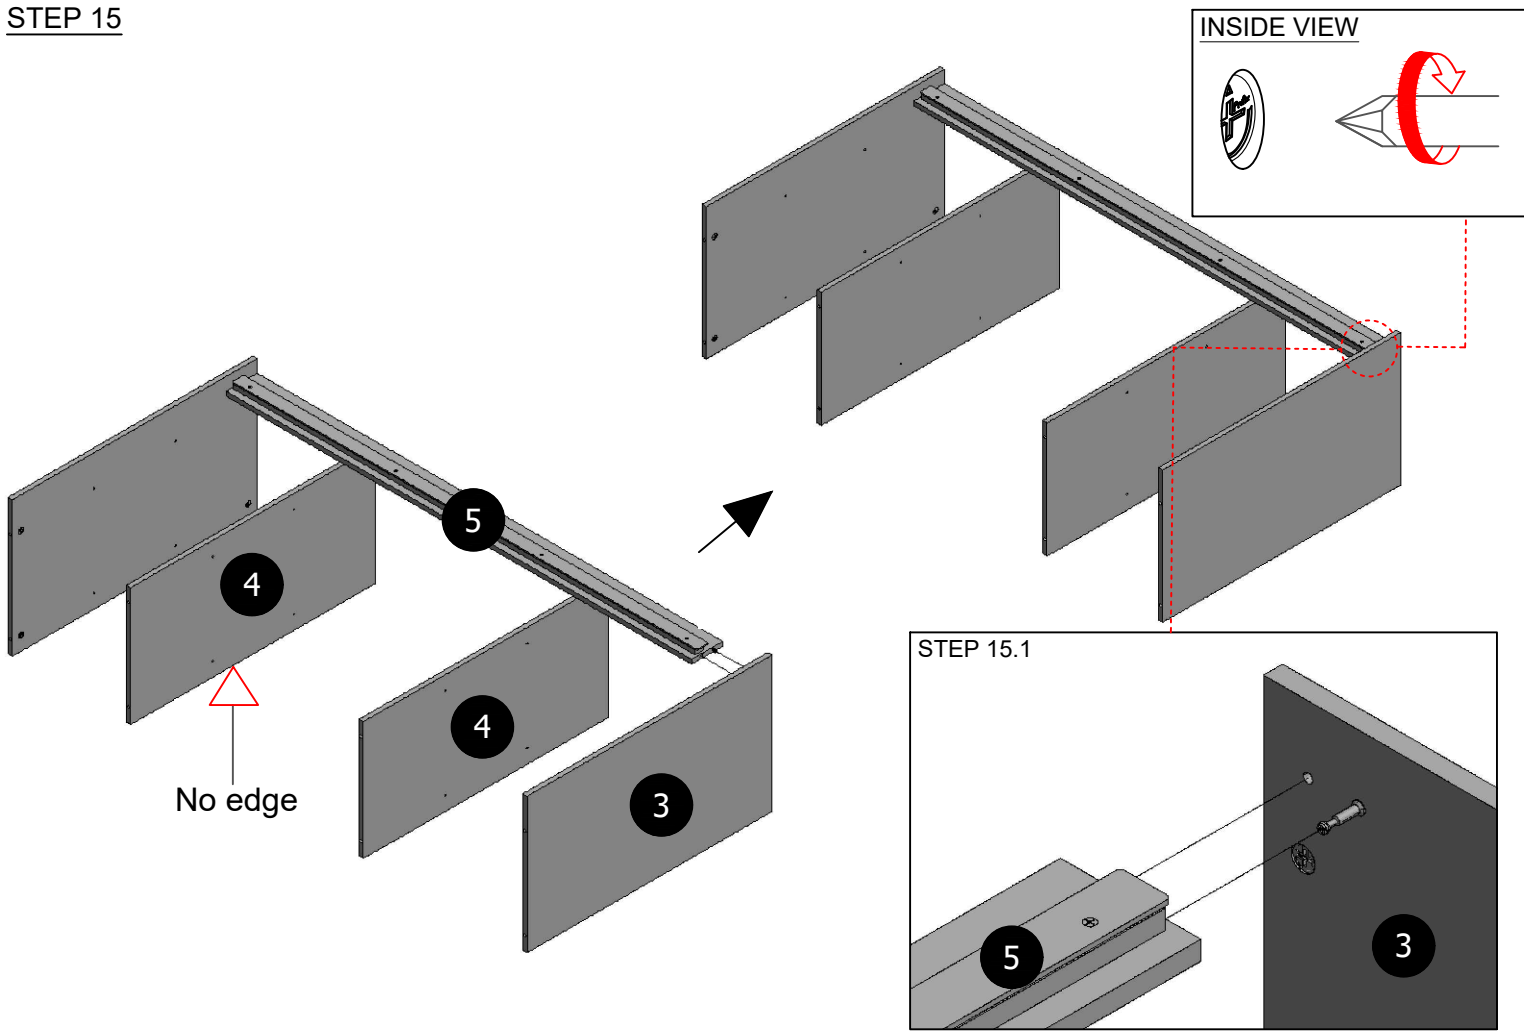


# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION
 
## STEP 16

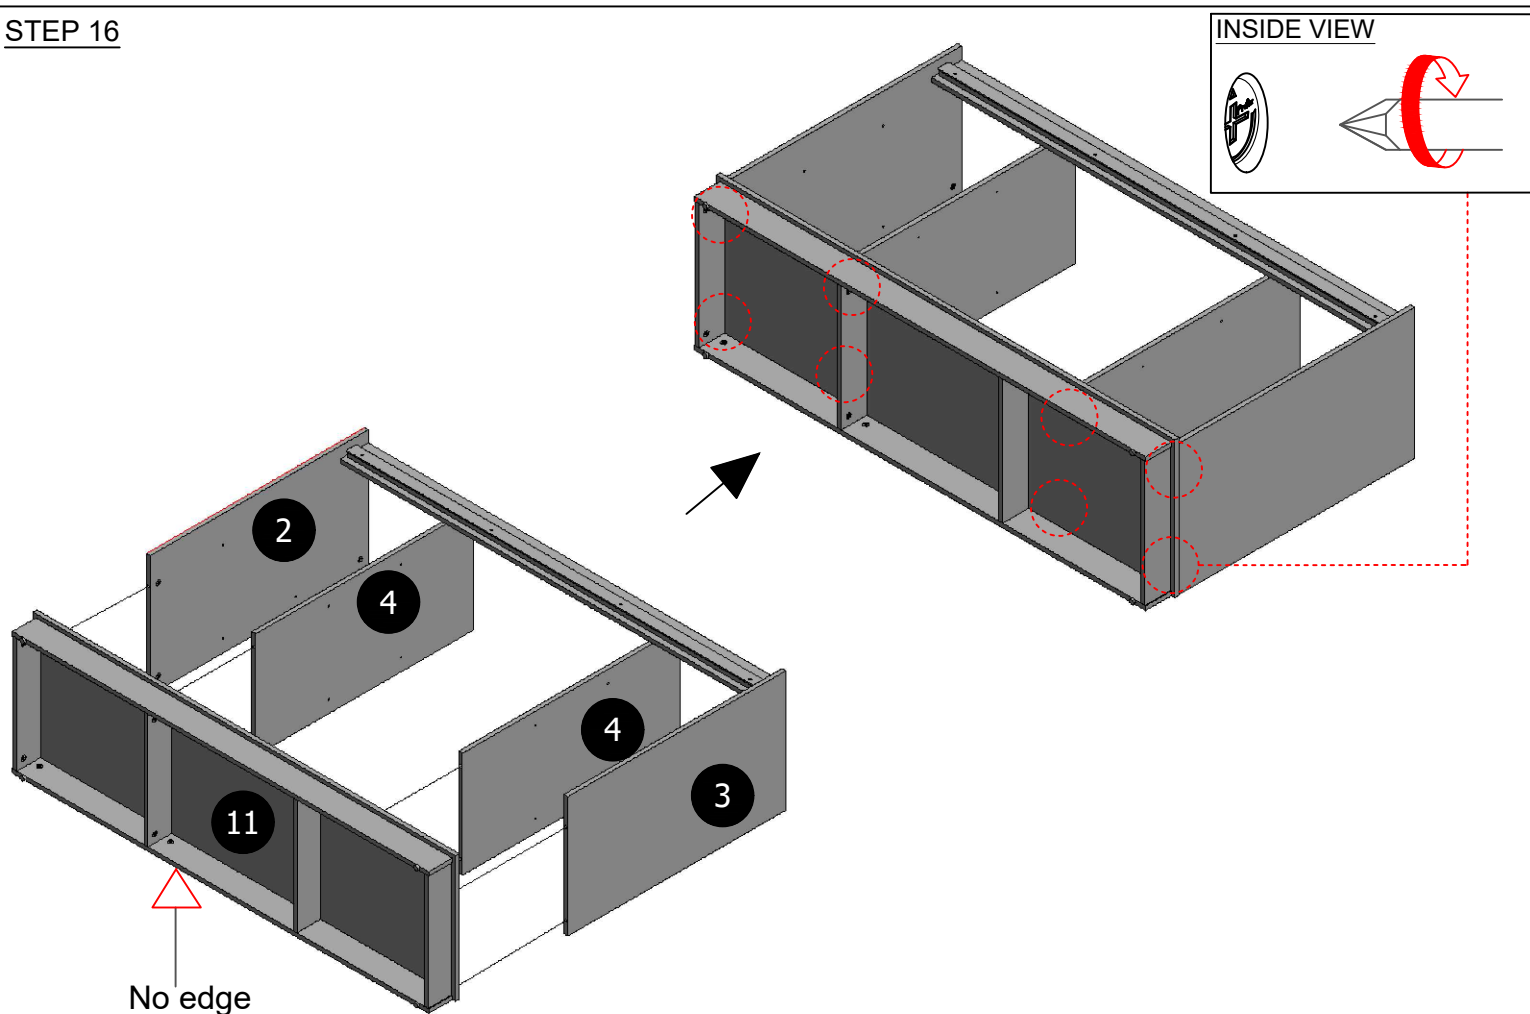


## STEP 17

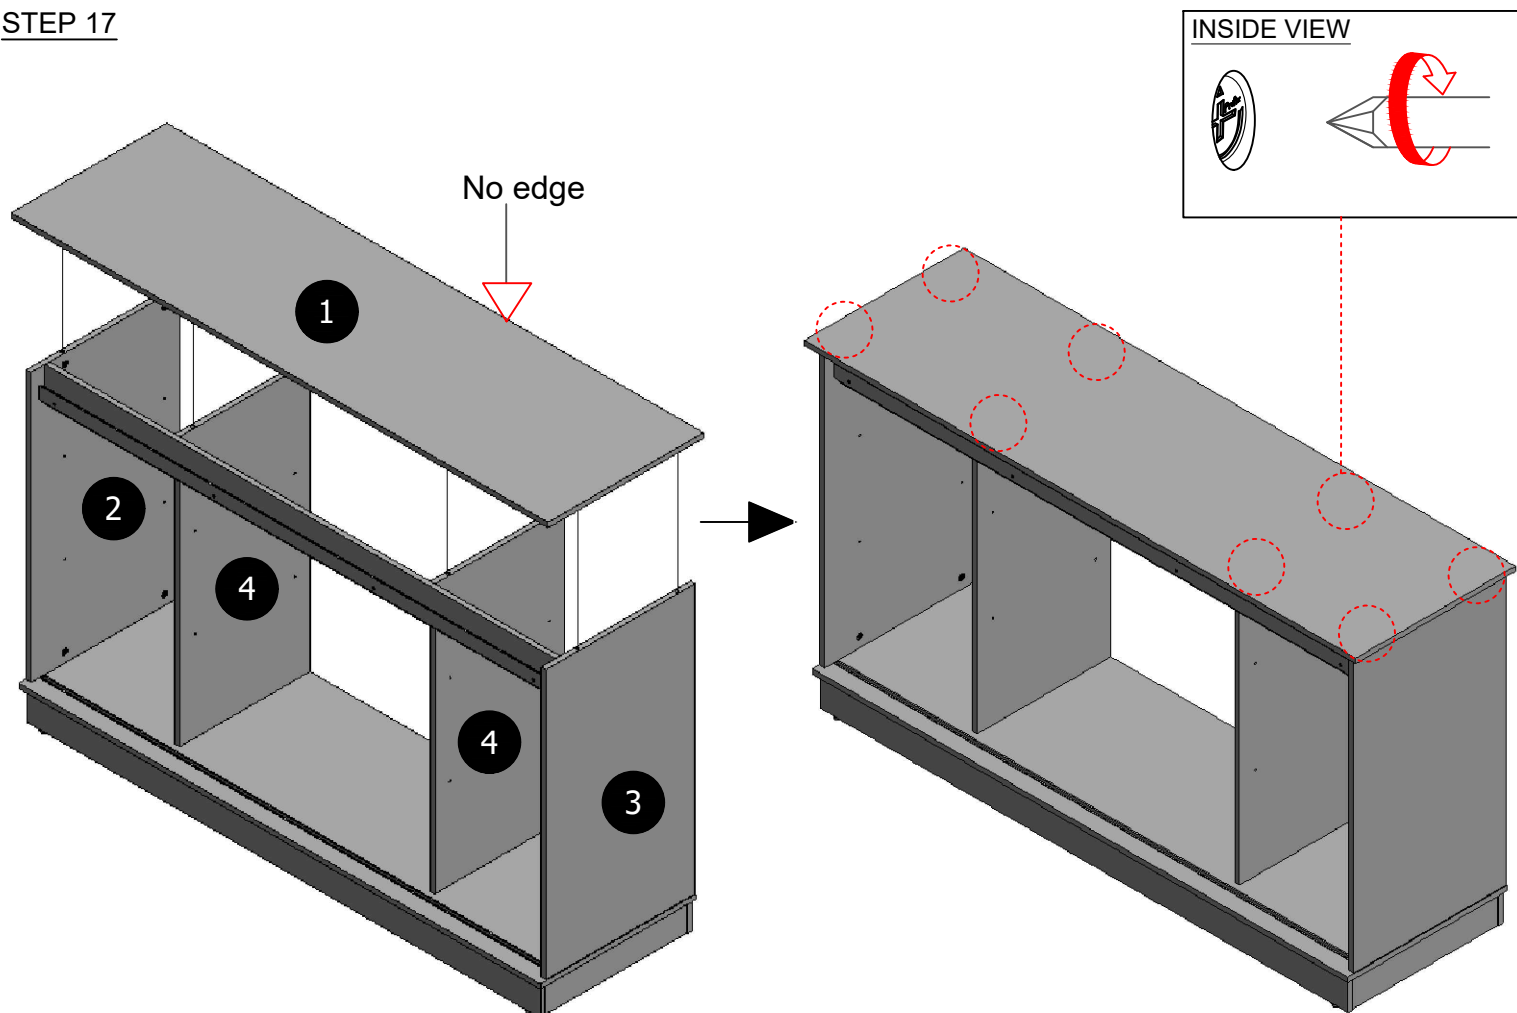 



# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

## STEP 18

 Side with color paper must be the same.

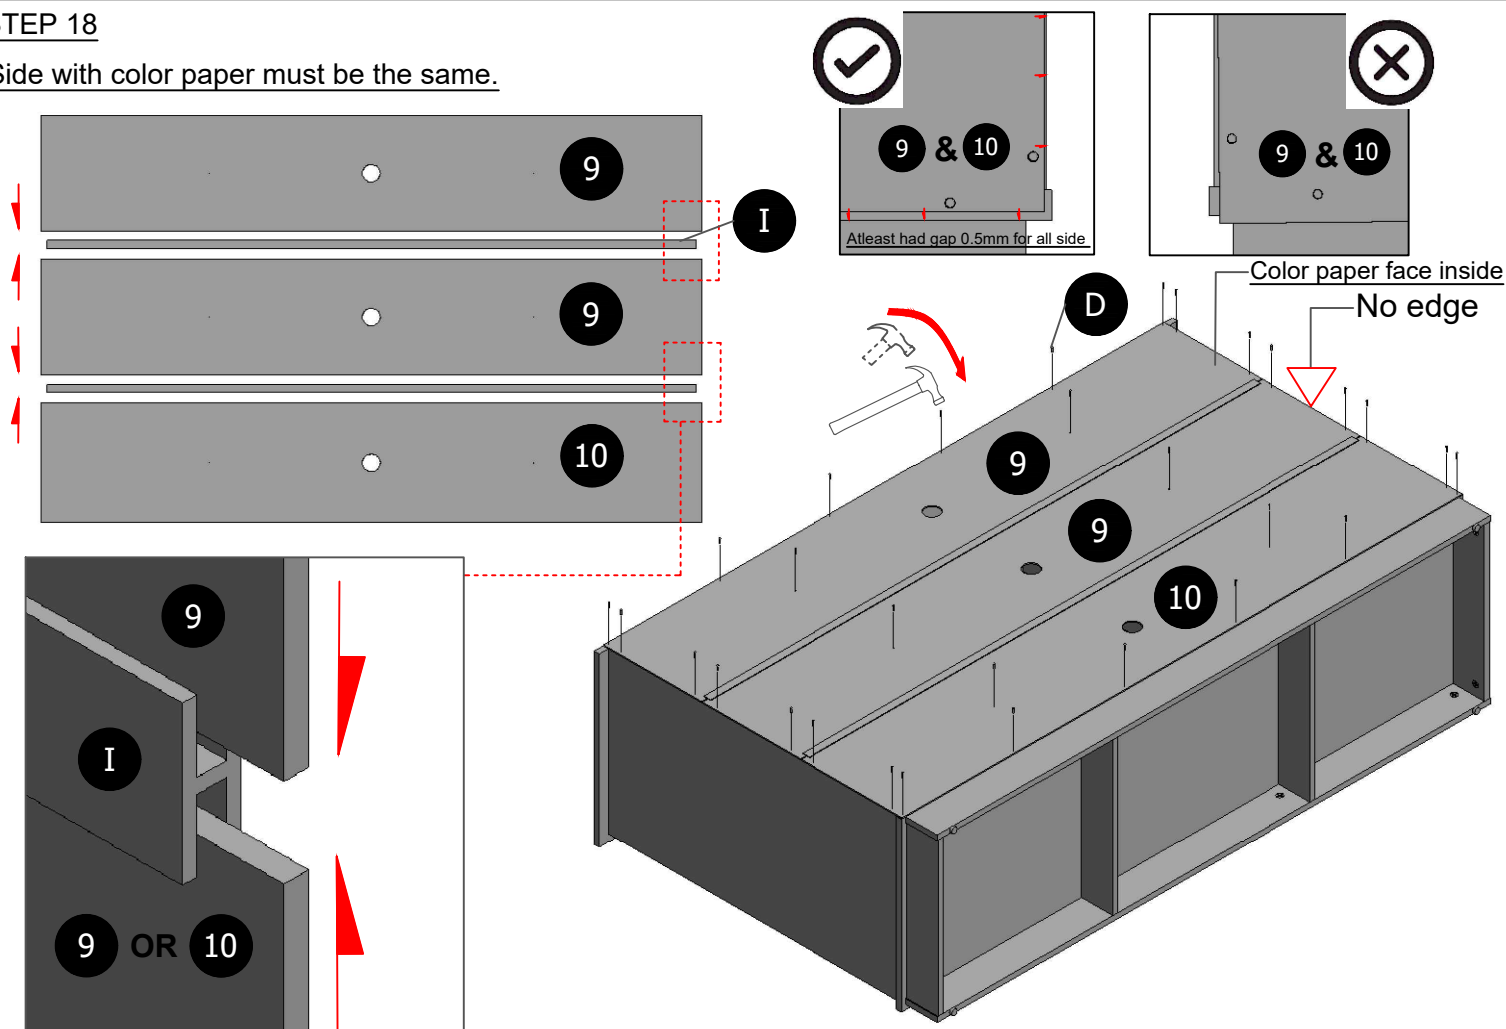


## STEP 19

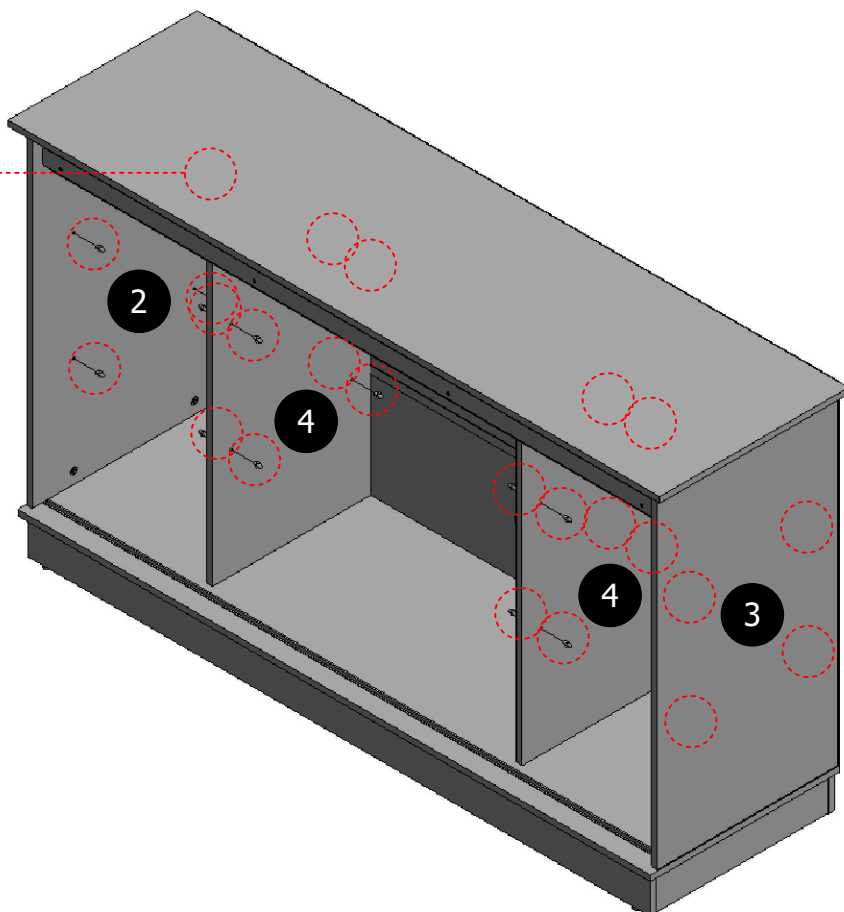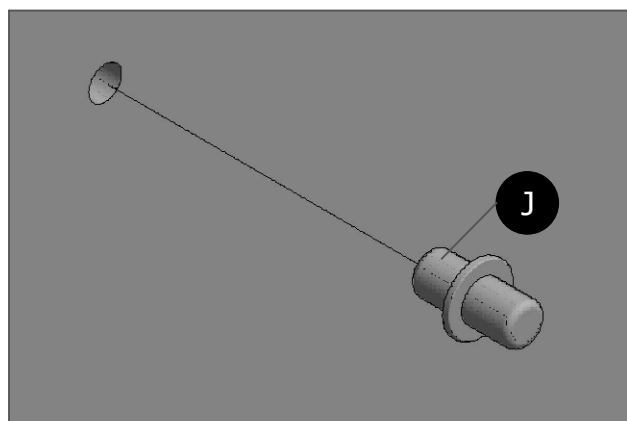  




## STEP 20


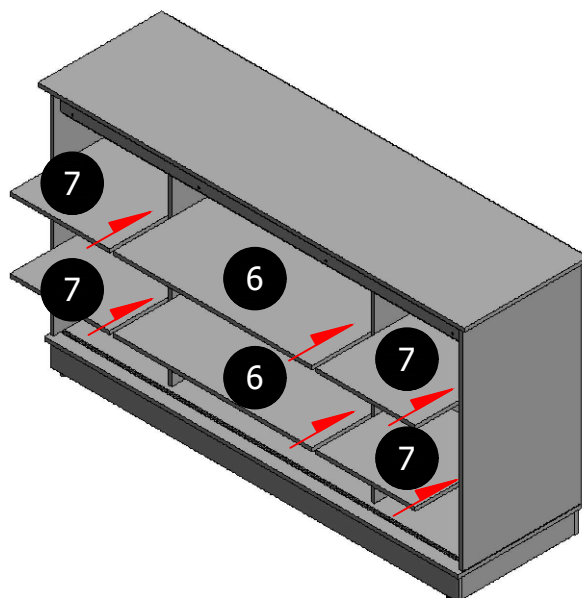 


## STEP 21

 **x 2**

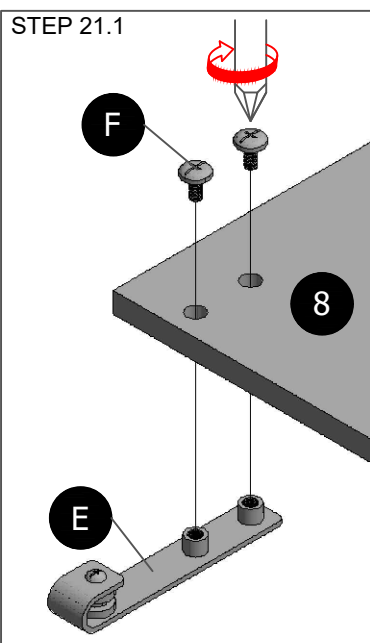

  NOTE : - Tighten or loosen the screw to level the door movement rail get smooth

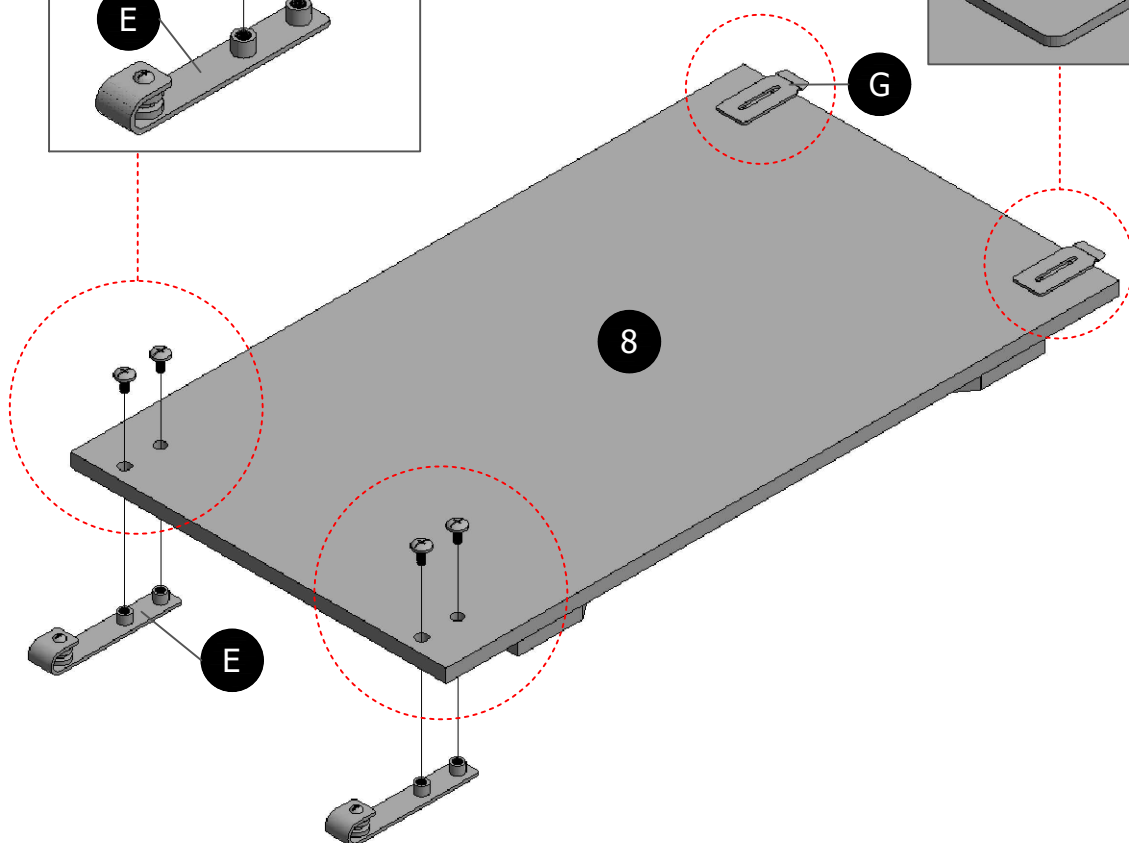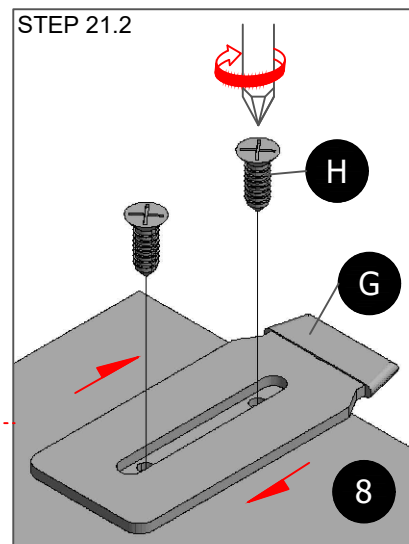




STEP 22



x 2

 SIDE VIEW

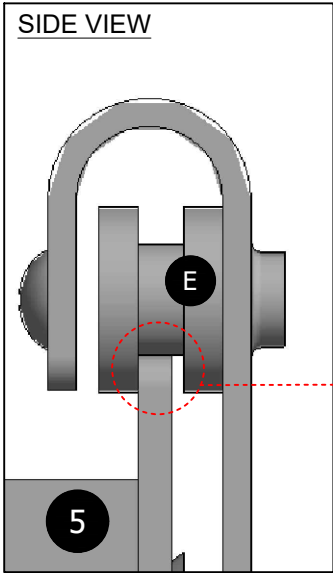


NOTE : - Make sure the middle wheels on roller (E) must enter into the slide on support rail (5)

  STEP 22.1

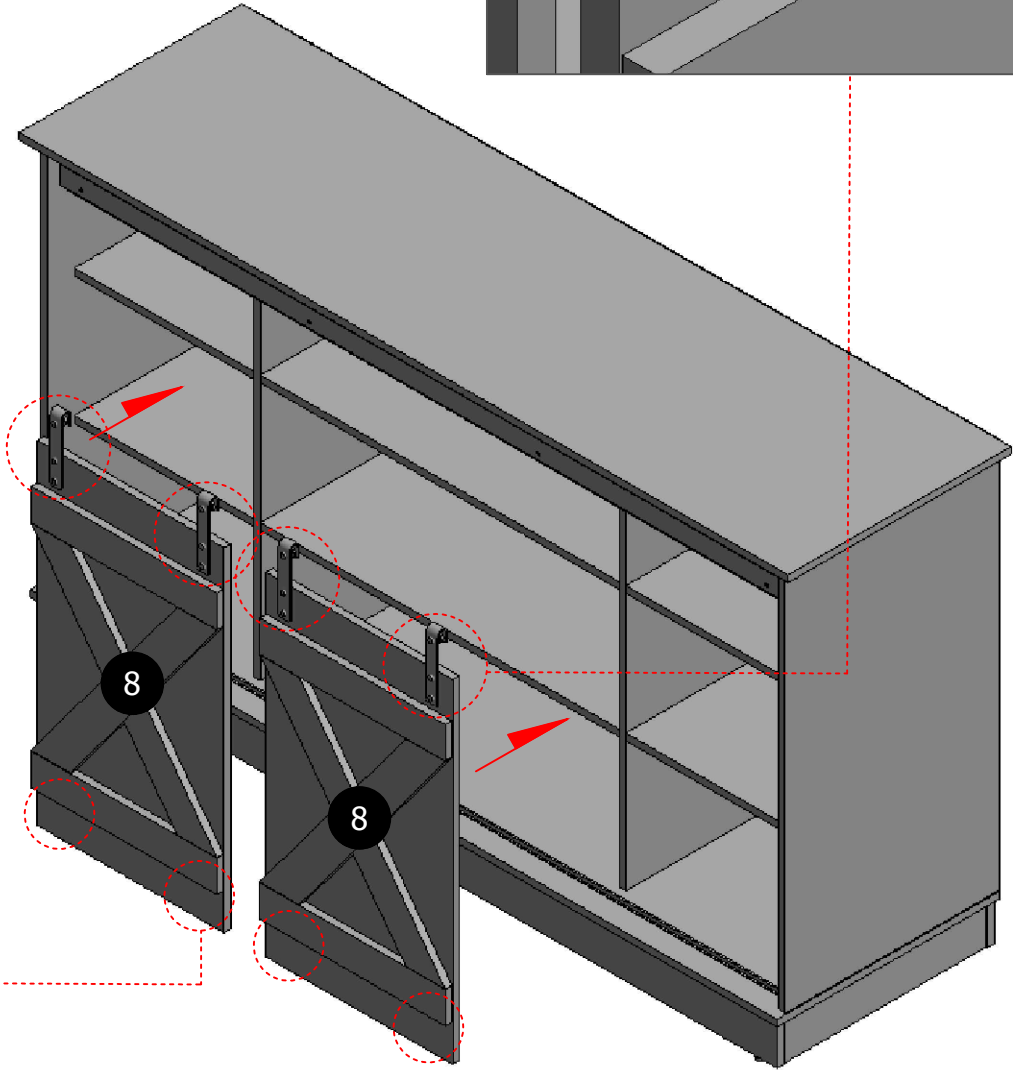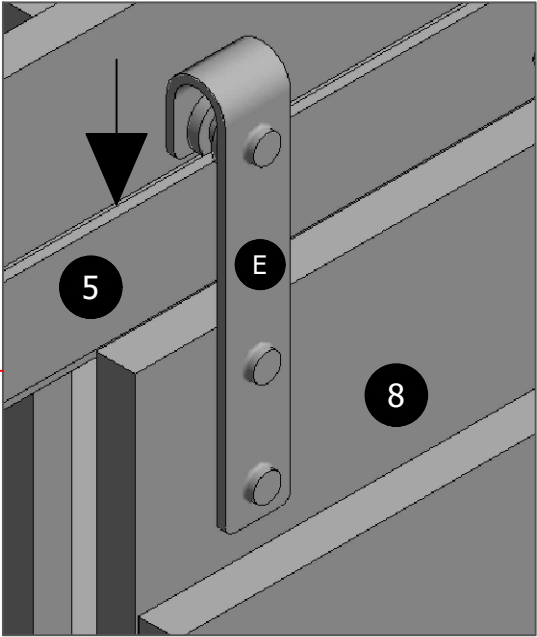

 STEP 22.2

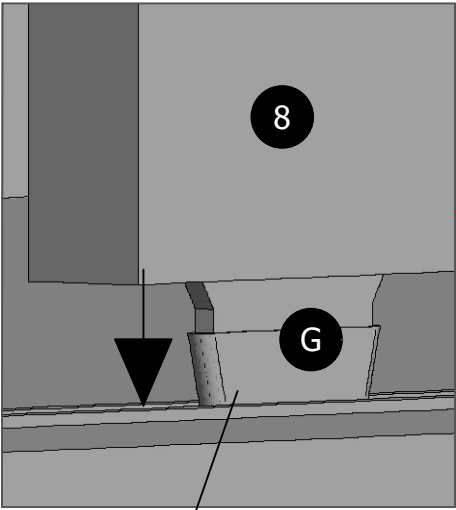

NOTE : - Should be tighten the screw when appropriate

# C7030TV-WT/BN/NOK/LOK/DGY/WN/LGY ASSEMBLY INSTRUCTION

 
 
## STEP 23

WALLBOARD AND STUD

FURNITURE  
TOP

K

FURNITURE  
BACKSIDE

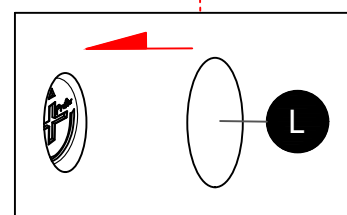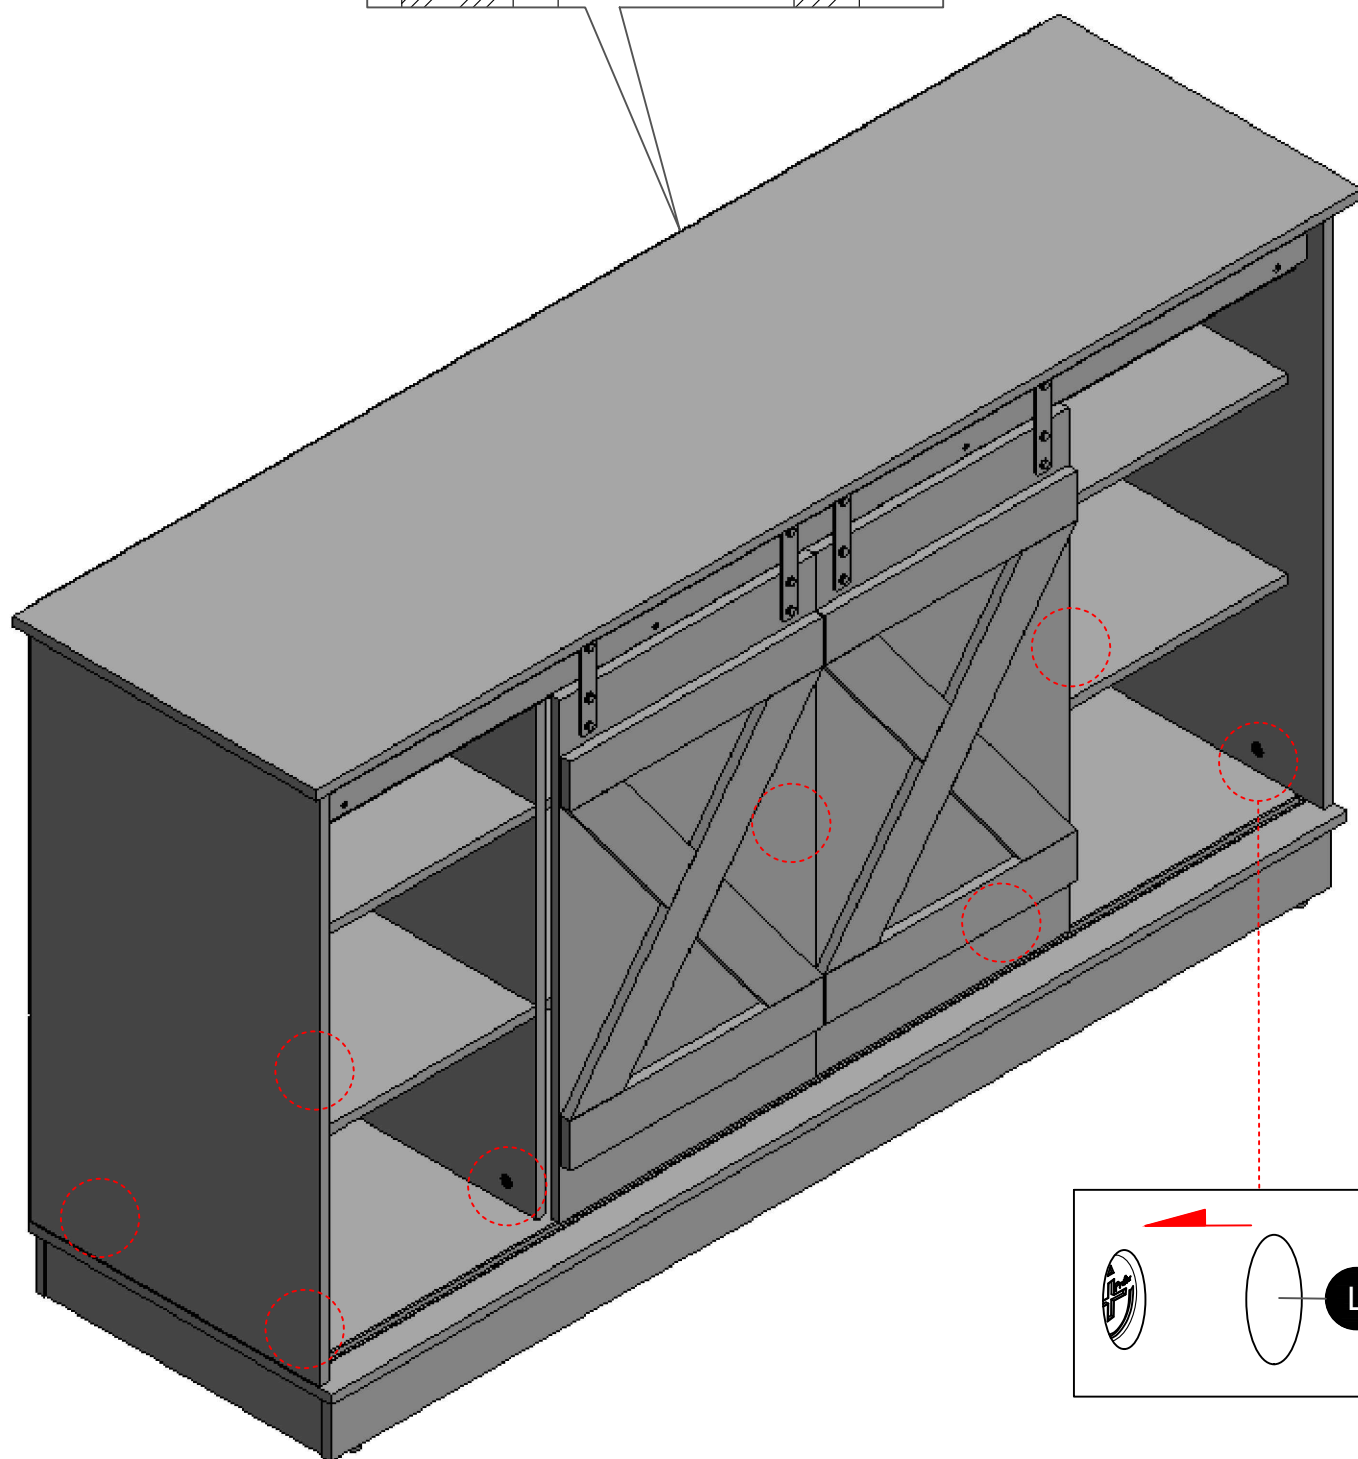

**ASSEMBLY COMPLETED**