

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223583 <u>Dresser</u>

REVISION 0: 02/17/2023

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A DRESSER 1PC

B LEG 4PCS

C LEG SUPPORT 1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


COASTER'

ASSEMBLY INSTRUCTIONS

STEP 1

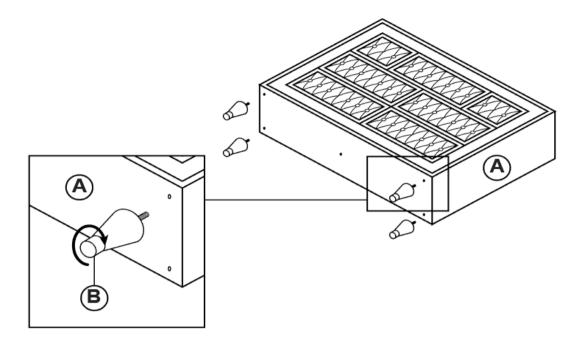


STEP 2

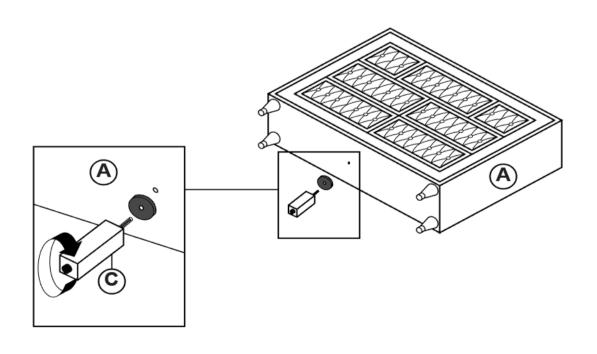


COASTER'

ASSEMBLY INSTRUCTIONS

STEP 3

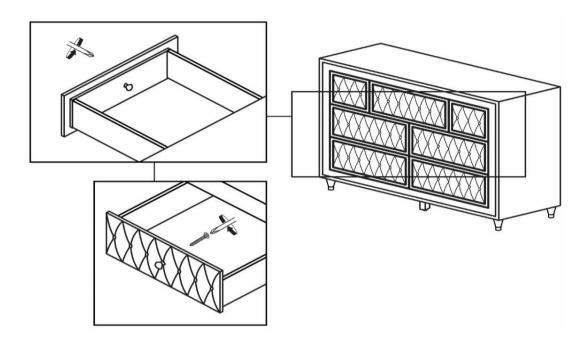

STEP 4 COMPLETE

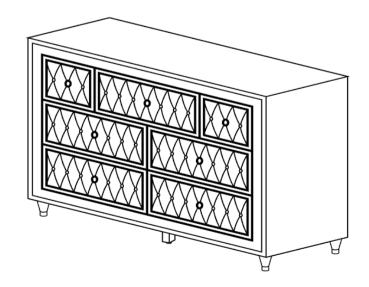





ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

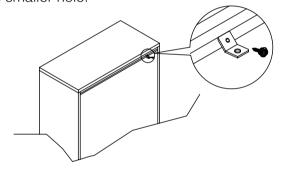


STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

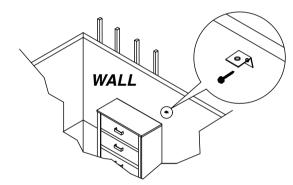

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

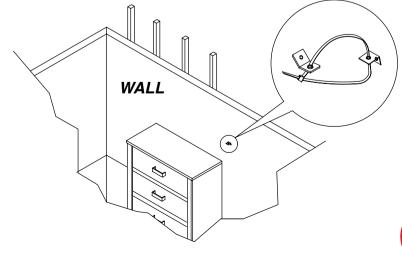


PAGE 5 OF 5



COASTERFURNITURE.COM



Inner Size of Drawer A: 11.75"W X 12.75"D X 5.00"H X 0.25"T Inner Size of Drawer B: 26.00"W X 12.75"D X 5.00"H X 0.25"T

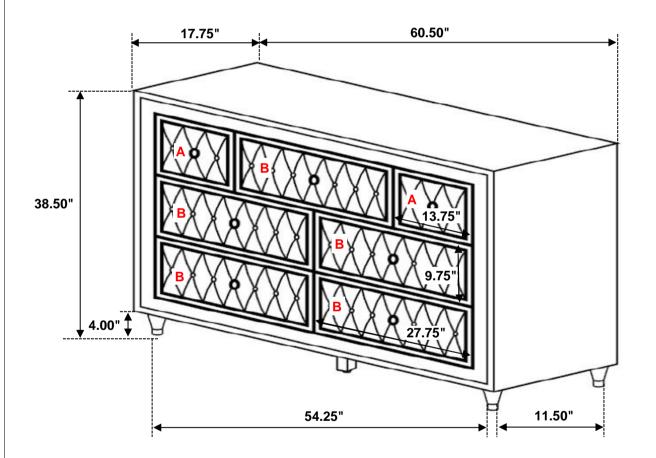

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223584 <u>Mirror</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





15 MINUTES

1PC

PARTS IDENTIFICATION

A MIRROR

B MIRROR SUPPORT (PACKED WITH MIRROR) 2PCS

C DRESSER
* FROM BOX ITEM# 223523

HARDWARE IDENTIFICATION

1 ALLEN WRENCH (P6 - ZINK) 1PC

2 BOLT (Ф6 X 40mm - RBW) 8PCS

3 LOCK WASHER (P6 - RBW) 8PCS

4 MEDIUM FLAT WASHER (Φ7 X 19mm X 2.0 - RBW) 8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


COASTER

ASSEMBLY INSTRUCTIONS


STEP 1

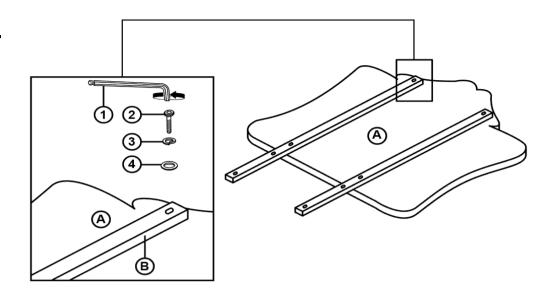

STEP 2

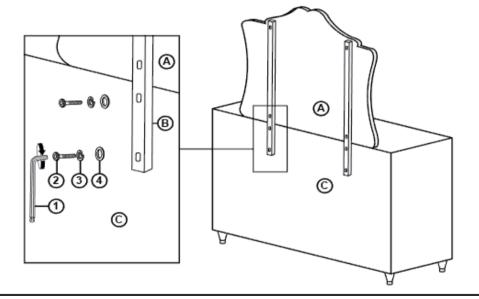

STEP 3 COMPLETE

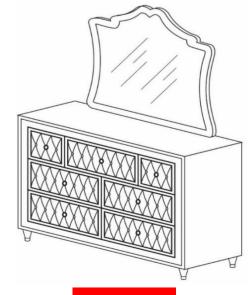




PAGE 3 OF 3

COASTERFURNITURE.COM



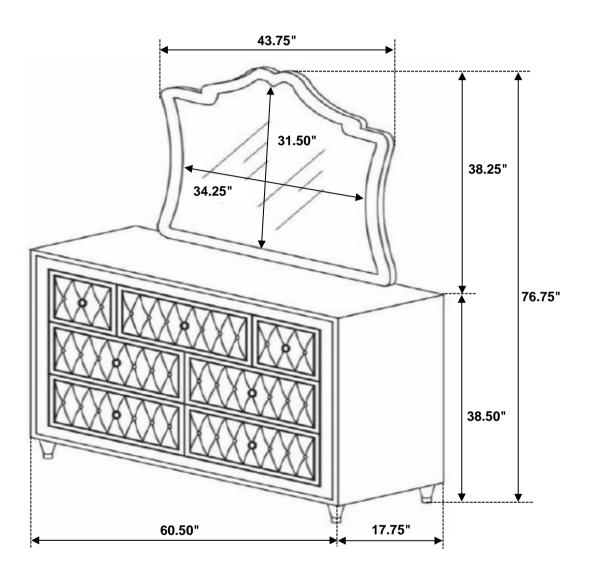

Note: Dimension tolerance ±5%