



ASSEMBLY GUIDE


Please Note: in each installation step, screws cannot be tightened all at once. There should be some space left for adjustment. The screws can only be locked after the screws are completely installed.

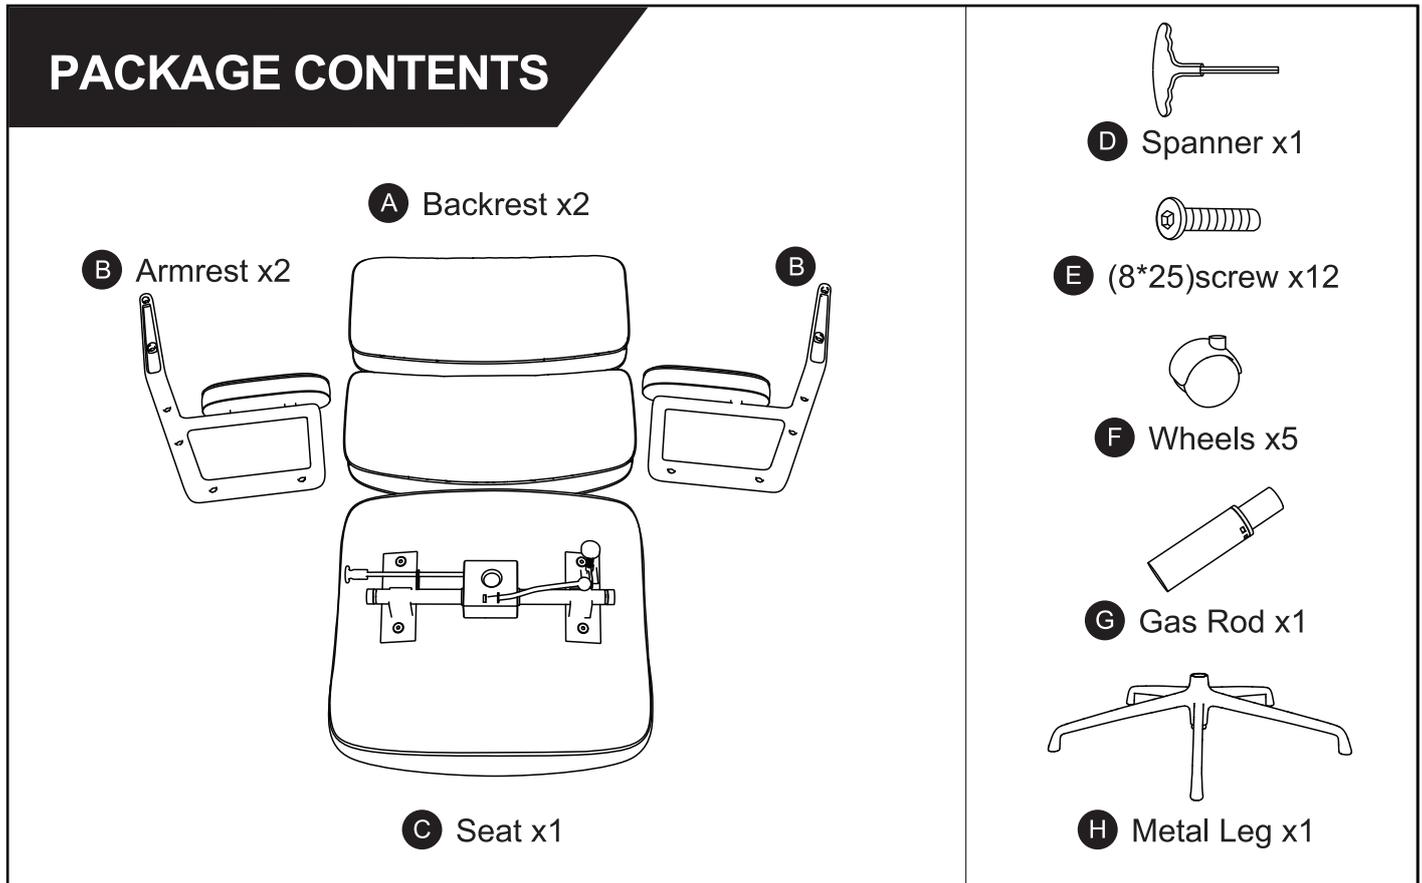


1 Screw both armrests to the seat.
(Screw in clockwise)
Note: do not tighten the screws immediately.

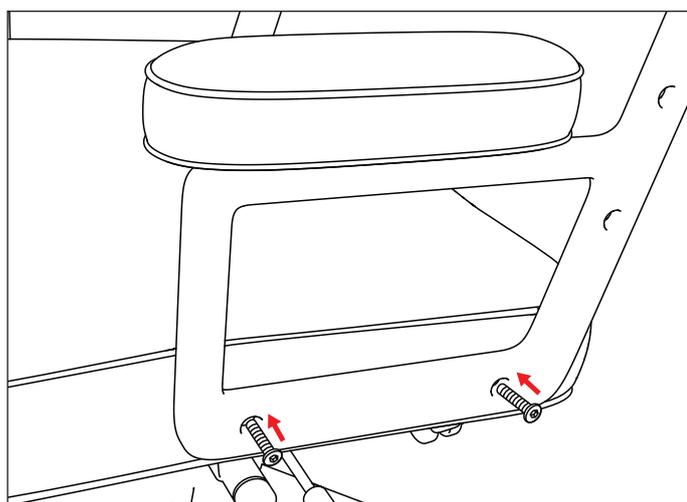


2 Fix the two backrests to the armrest Aluminum alloy frame with screws. (Screw in clockwise)

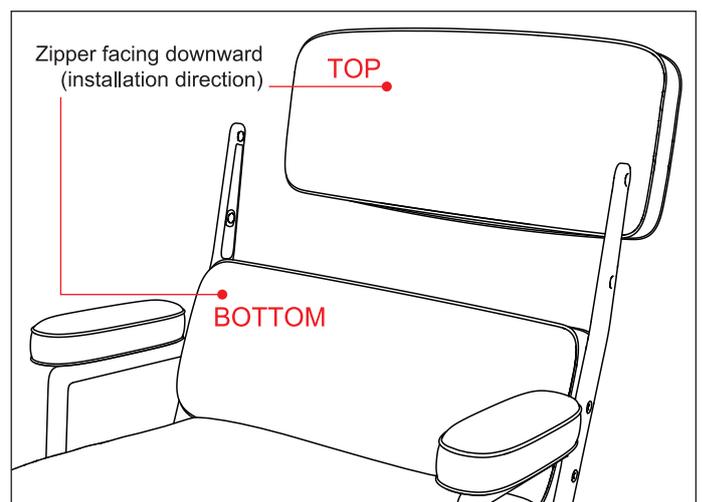


3 Insert the wheels into the base.

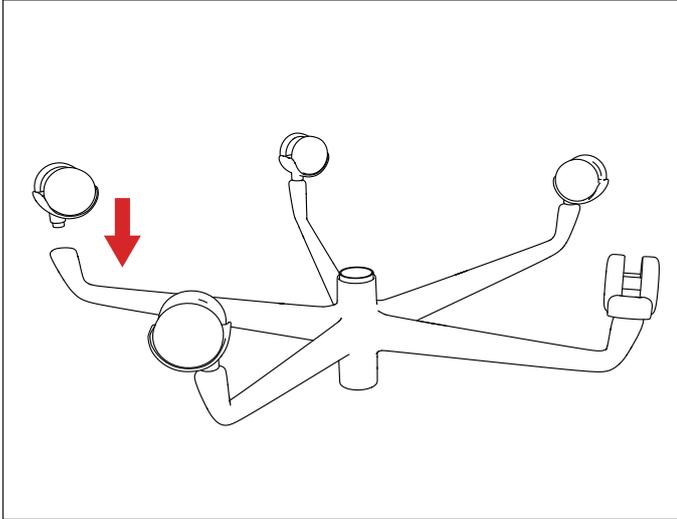

4 Buckle the bottom of the gas rod into the base.

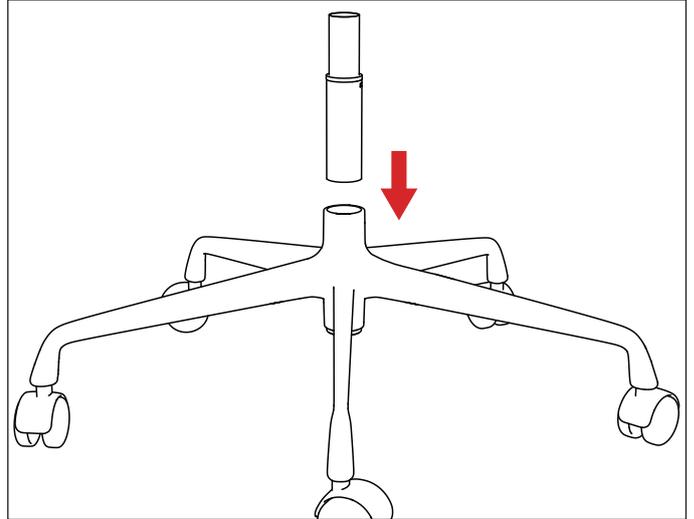


5 Align the installed seat into the air pressure bar.

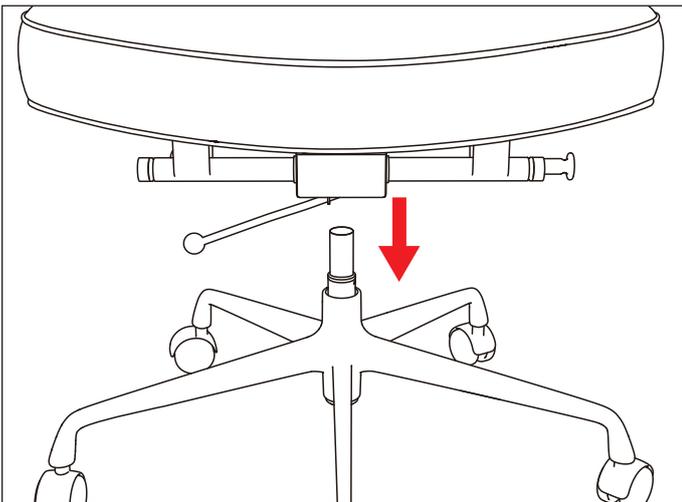

6 Confirm that all screws have been tightened, and the installation is completed.

7 A: Seat tifting tension adjuster.
Loose/Locking

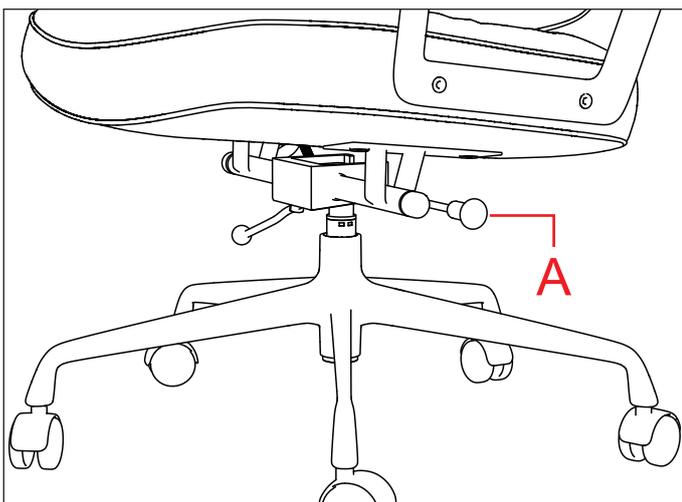

8 B: Seat height adjuster

