 


# TV Cabinet

**Assembly Instructions - Please keep for future reference**

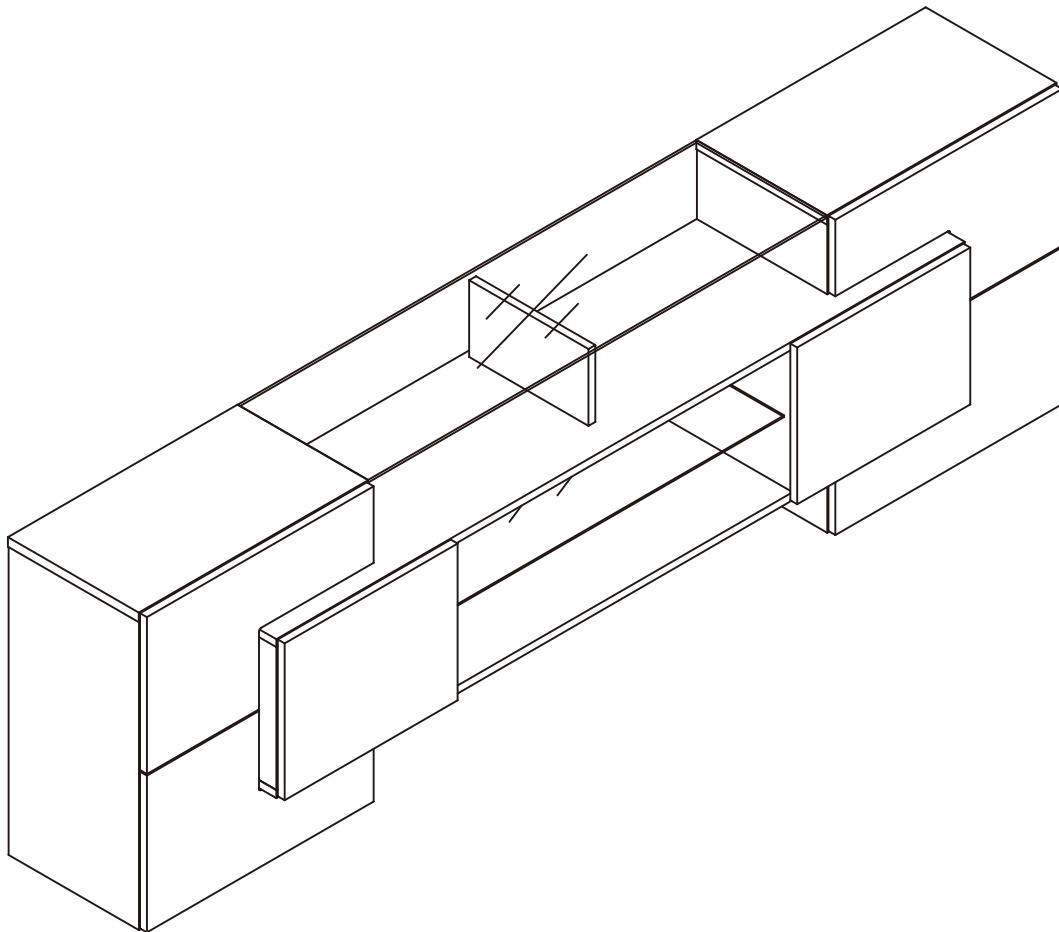

## Dimensions

Width-78.74inch

Depth-13.77inch

Height-23.62inch

**Important – Please read these instructions fully before starting assembly**



## Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**

 





 

 

 
To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p>(A)</p>  <p>5*40mm Cam Bolt x 76+3</p>	<p>(B)</p>  <p>15*12mm Cam Lock x 76+3</p>	<p>(C)</p>  <p>8*30mm Dowel x 32+2</p>	<p>(D)</p>  <p>5*40mm Screw x 2</p>
<p>(E)</p>  <p>6*20mm Screw x 8+1</p>	<p>(F)</p>  <p>Glass holder x 12+1</p>	<p>(G)</p>  <p>Hinge x 12</p>	<p>(H)</p>  <p>3.5*14mm Screw x 88+4</p>
<p>(J)</p>  <p>Foundation x 8</p>	<p>(K)</p>  <p>Light Belt x 1</p>	<p>(L)</p>  <p>Screwdriver x 1</p>	

 
# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

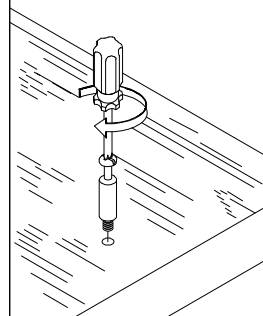

## Step 2

Push the male camlock into the entry hole.

 2

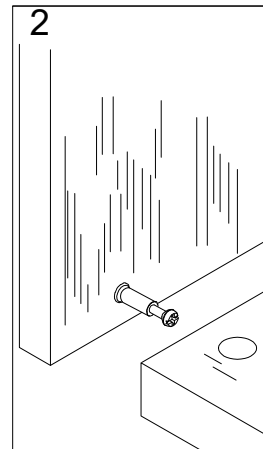


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

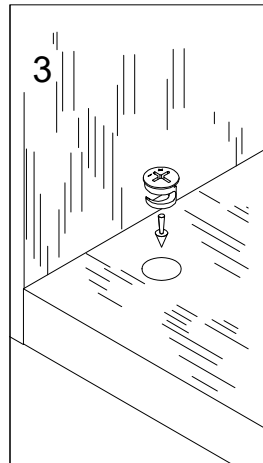


## Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

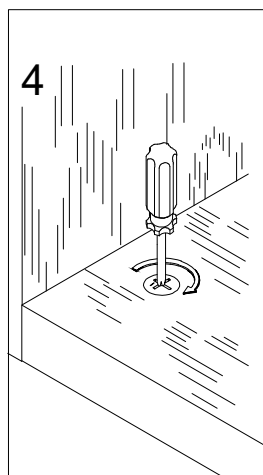


# Assembly Instructions

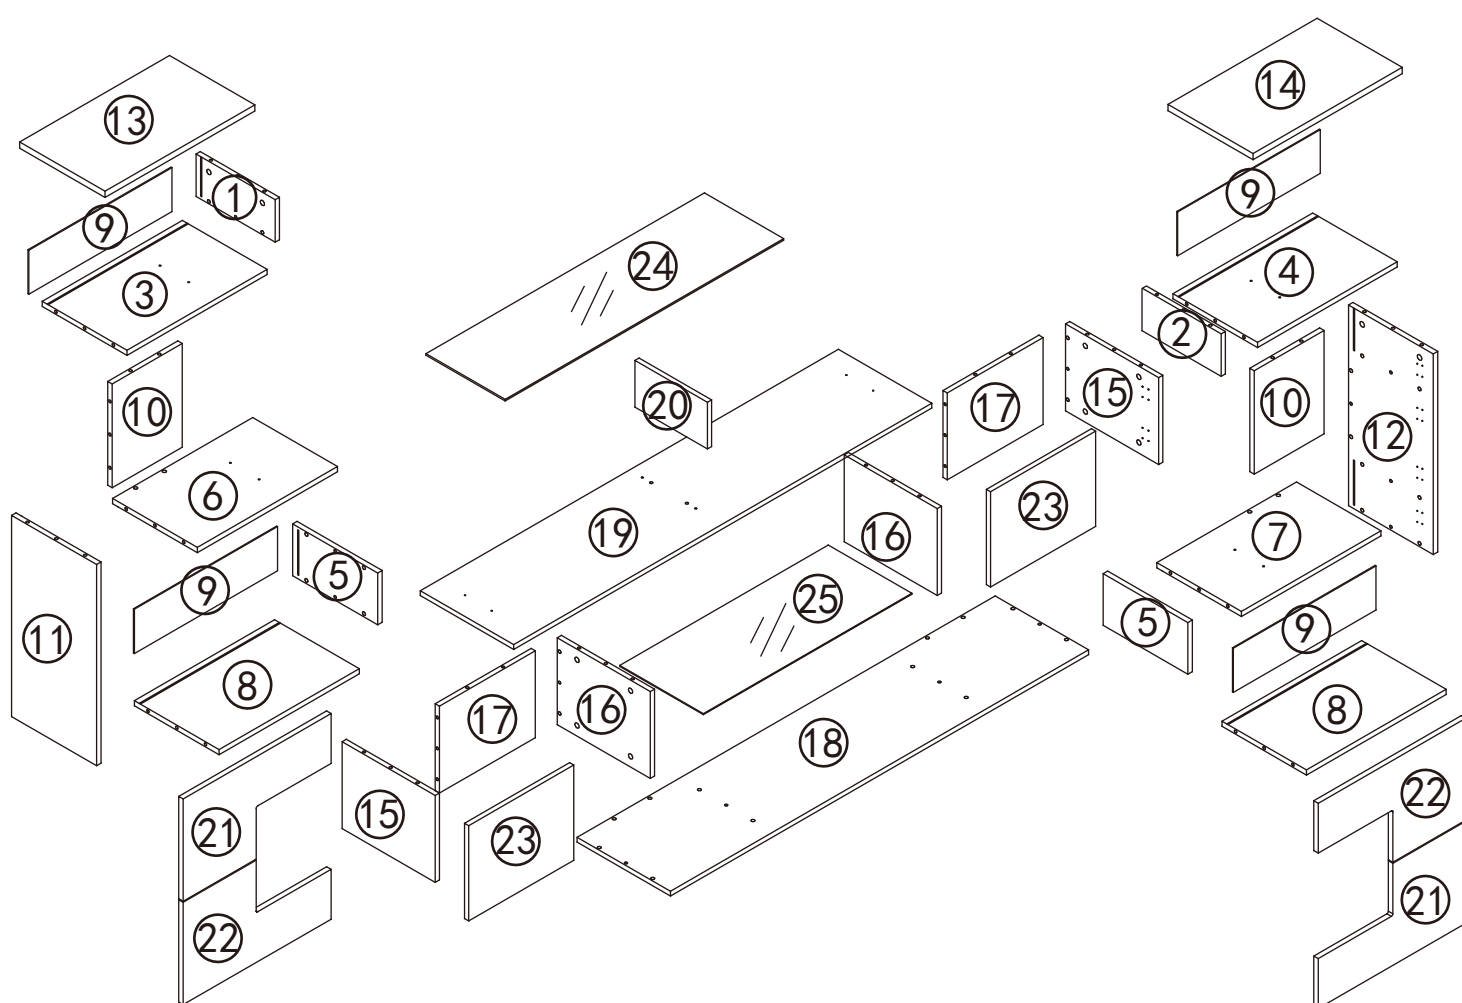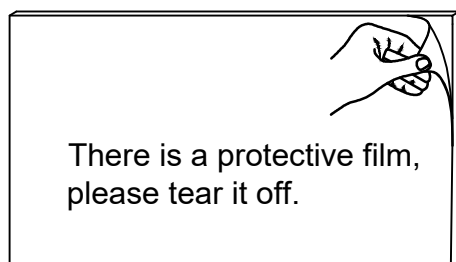  


# Assembly Instructions
 
## Step 1

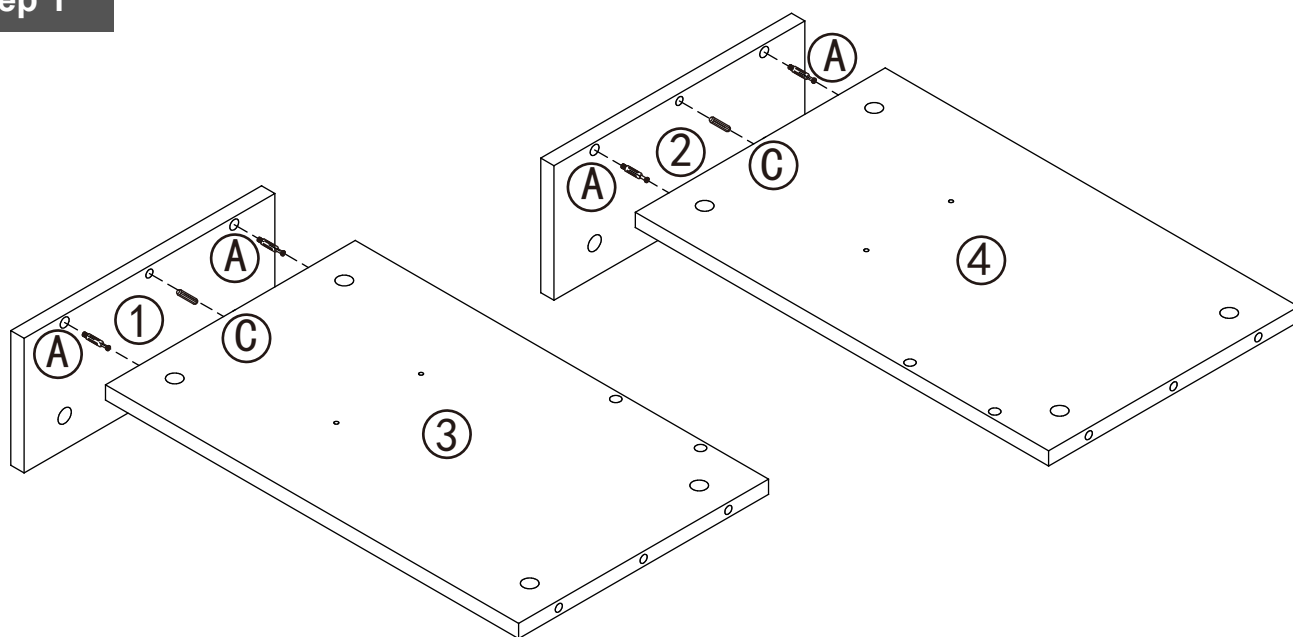


(A)

 


Cam Bolt x 4

 (C)



8\*30mm Dowel x 2

## Step 2

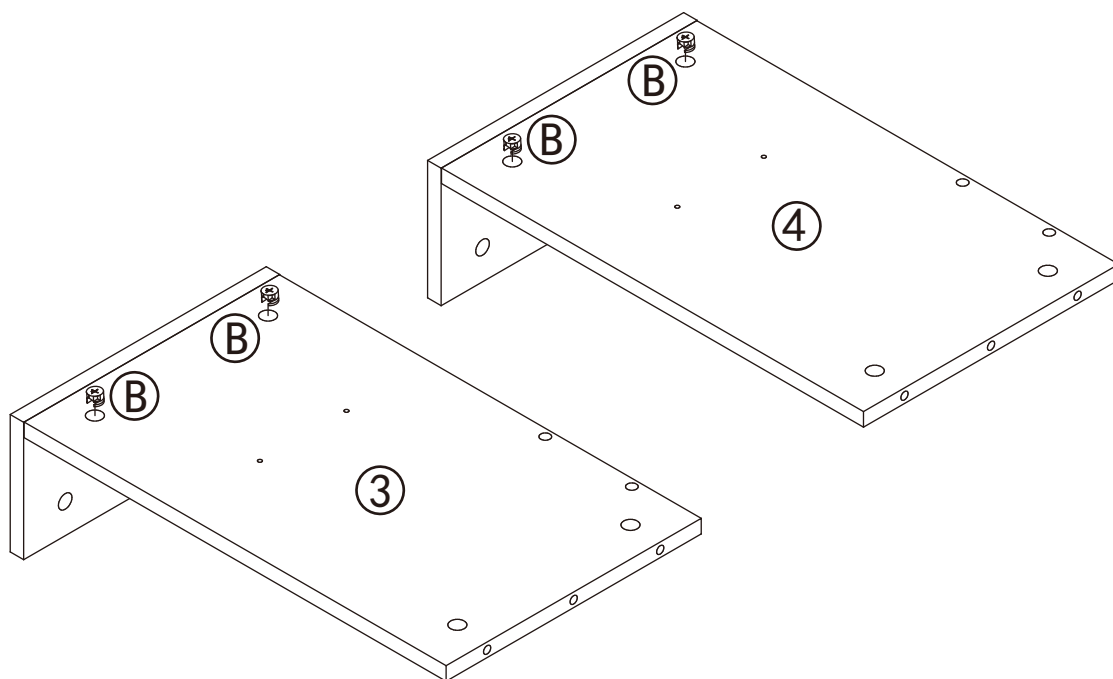 



(B)




Cam Lock x 4

# Assembly Instructions
  
## Step 3

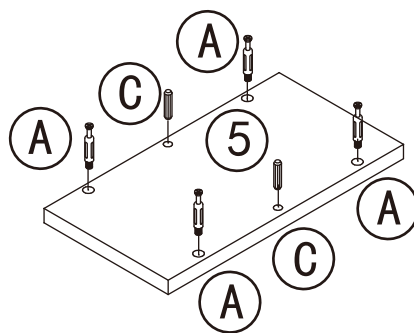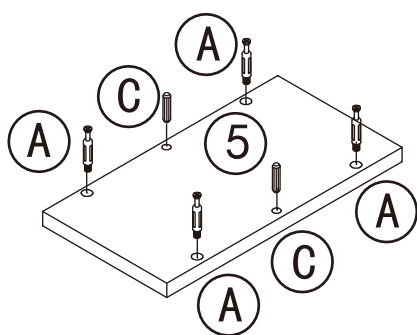


(A)

 



Cam Bolt x 8

 (C)



8\*30mm Dowel x 4

## Step 4

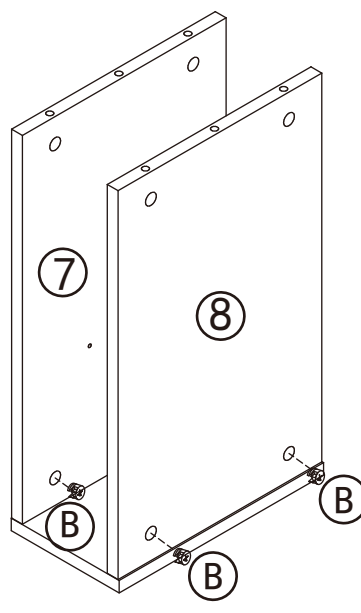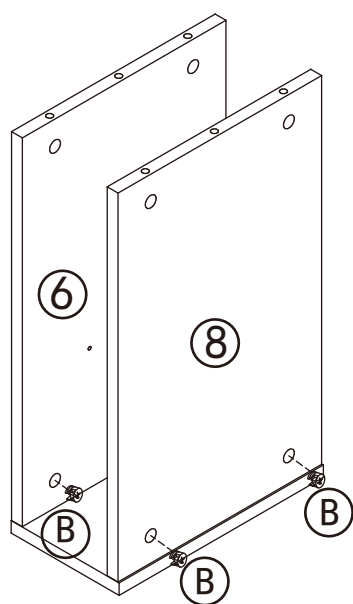  


(B)




Cam Lock x 8

# Assembly Instructions

 
## Step 5

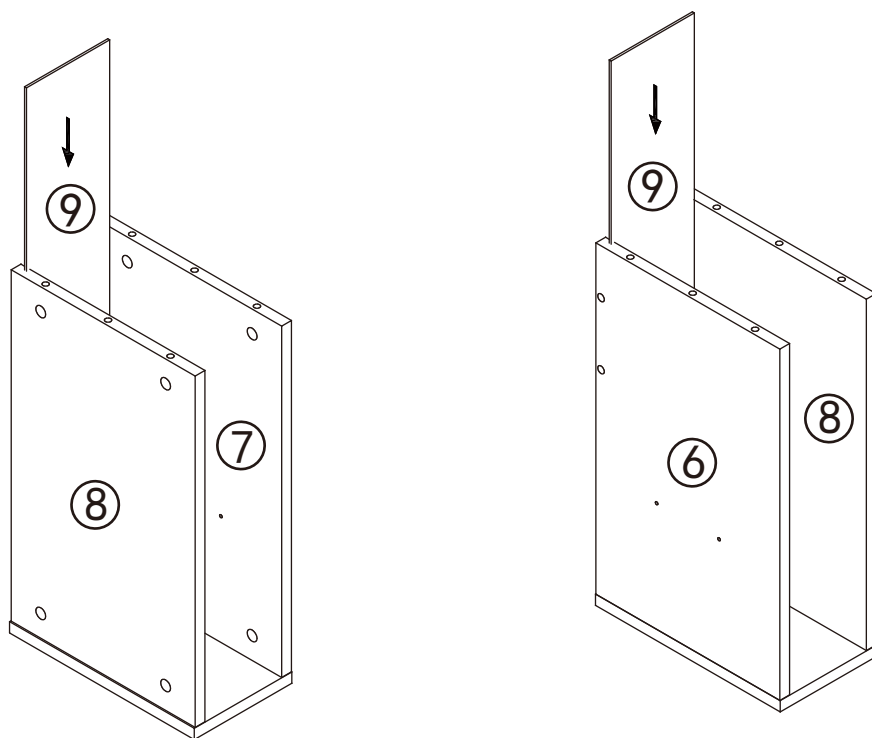

## Step 6

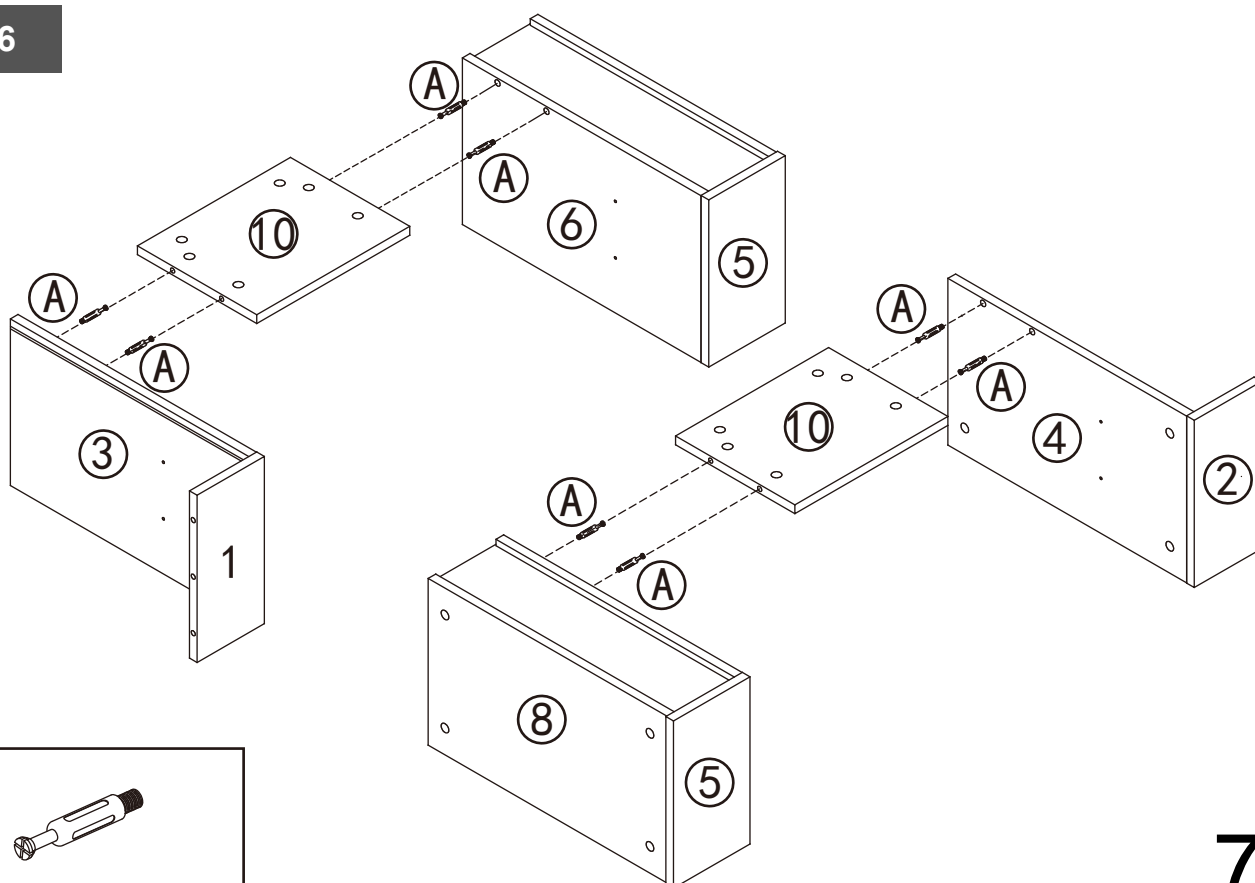 

A

 


Cam Bolt x 8



# Assembly Instructions
 
## Step 7

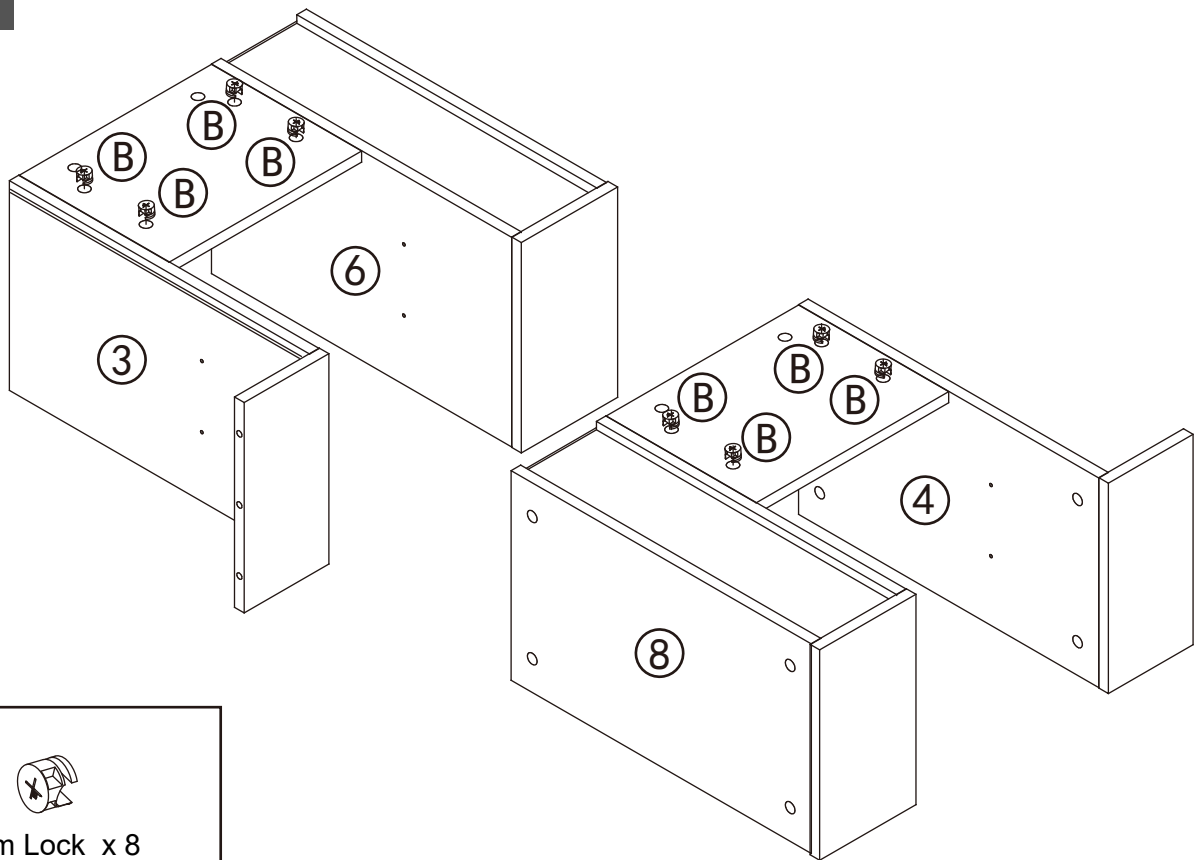


(B)




Cam Lock x 8

## Step 8

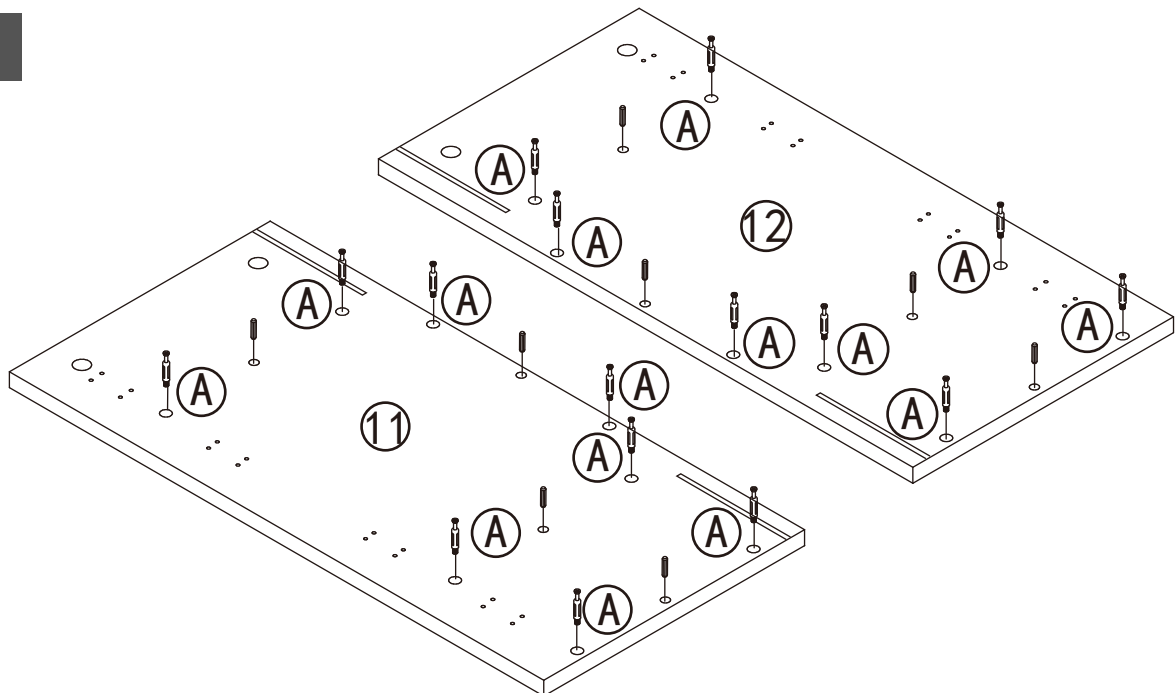 

(A)

 

Cam Bolt x 16



(C)



8\*30mm Dowel x 8

# Assembly Instructions
  
## Step 9

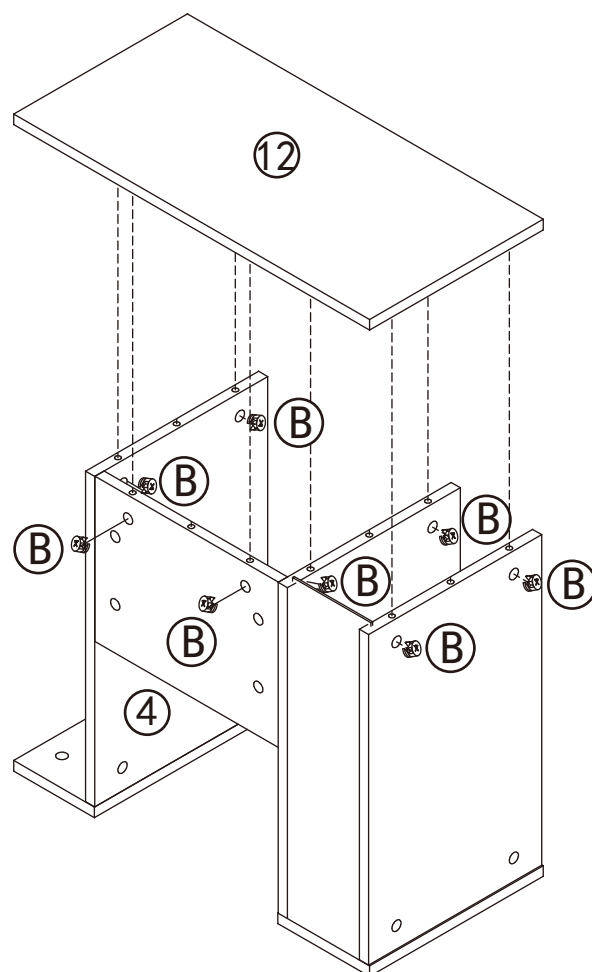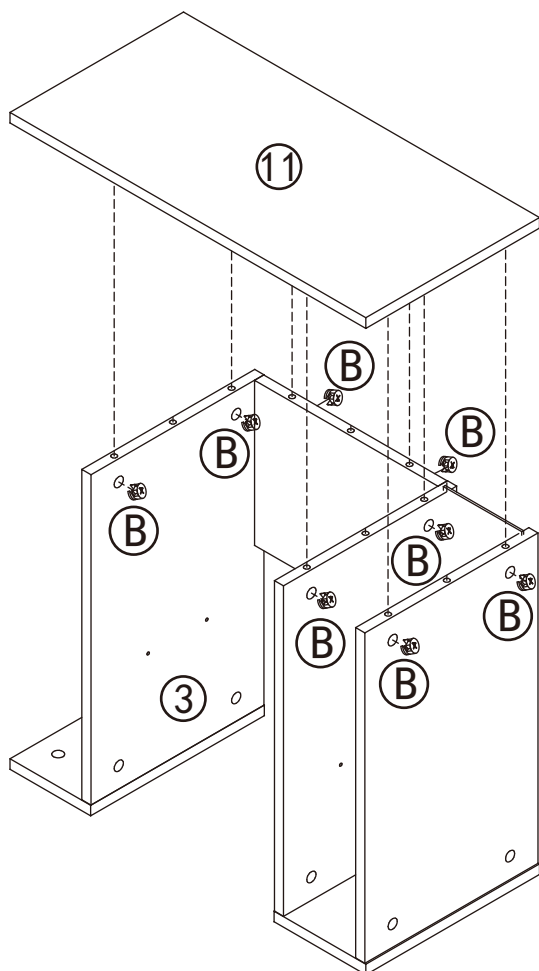


(B)





Cam Lock x 16

# Assembly Instructions
 
## Step 11


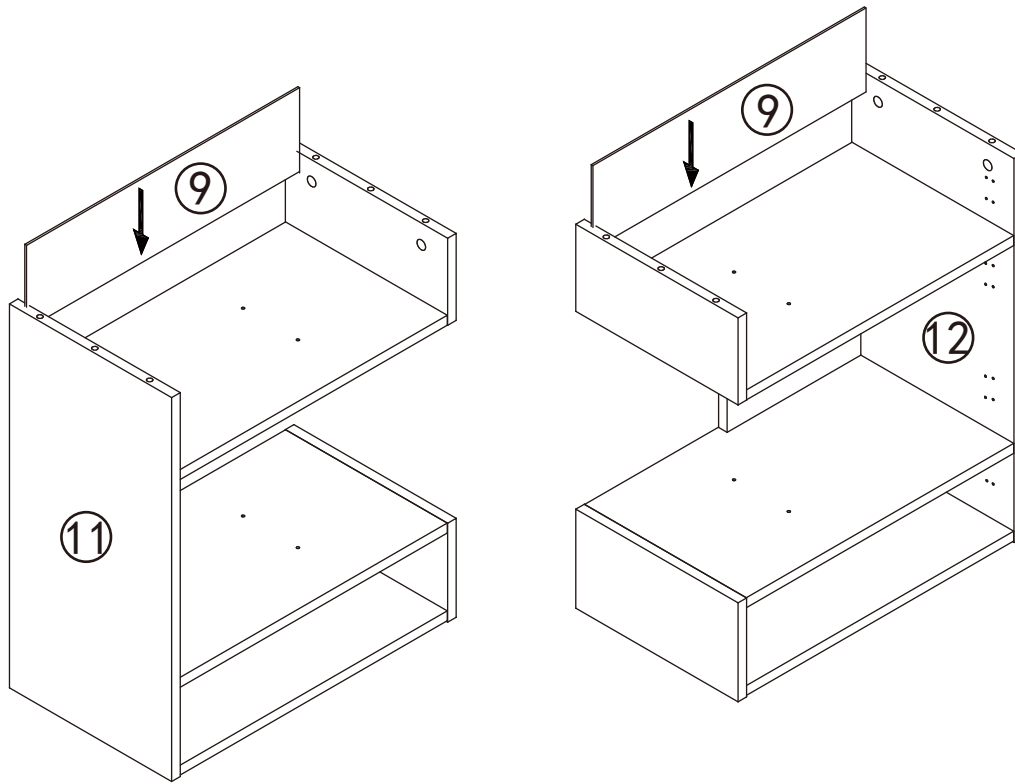


## Step 12

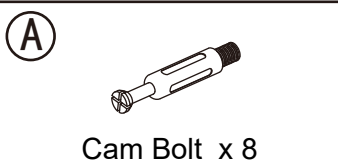 
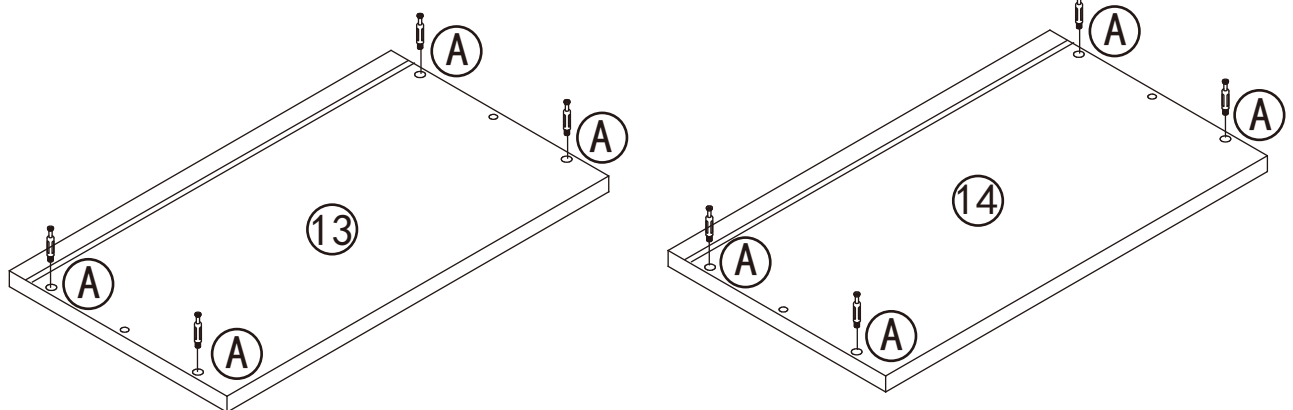 


# Assembly Instructions
  
## Step 13

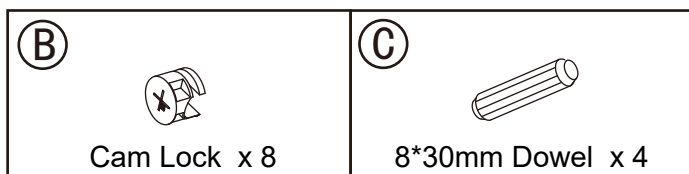
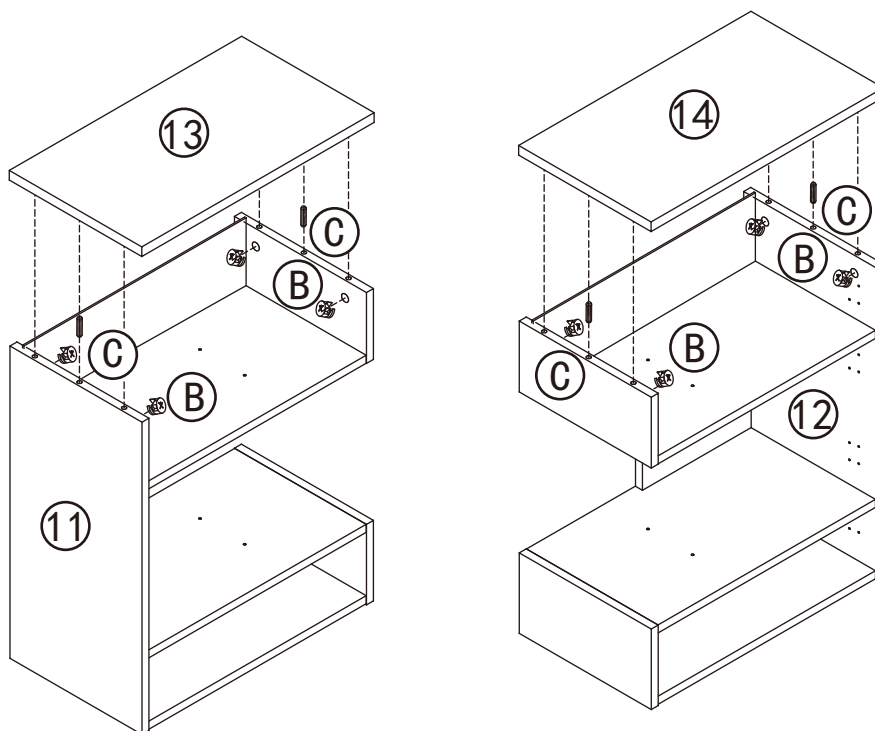


## Step 14

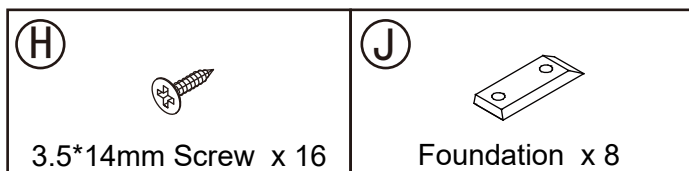 
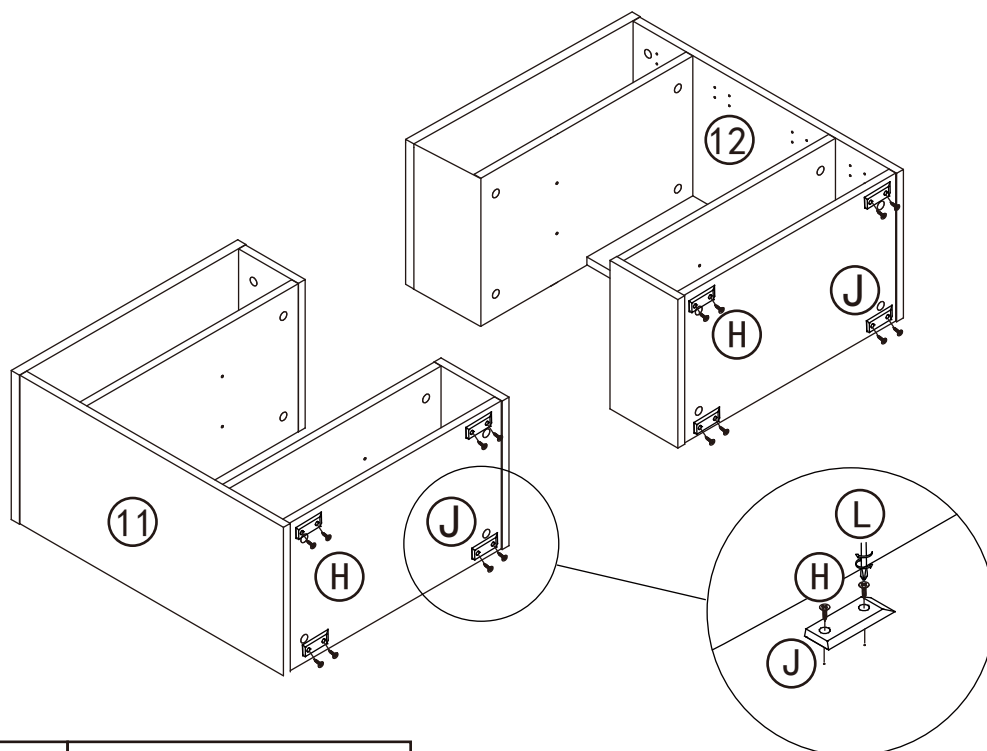 


# Assembly Instructions
  
## Step 15

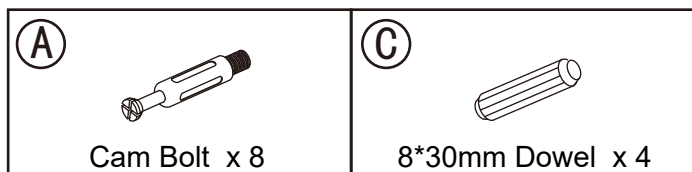
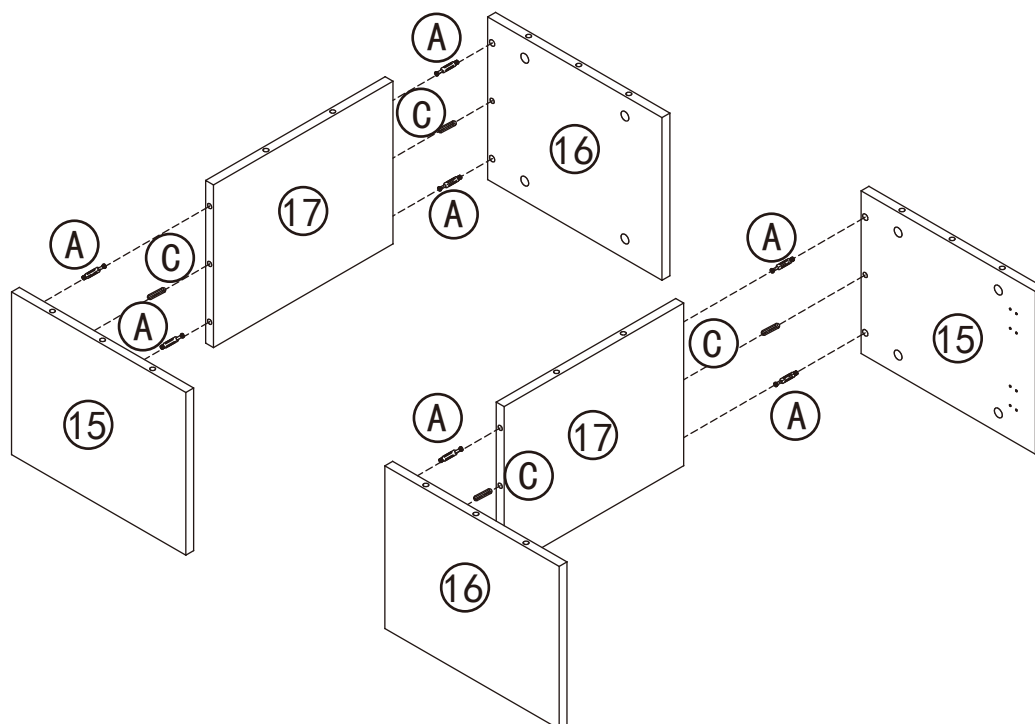


## Step 16

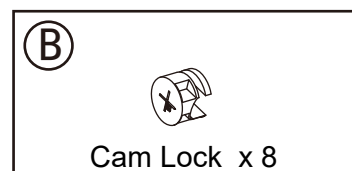 
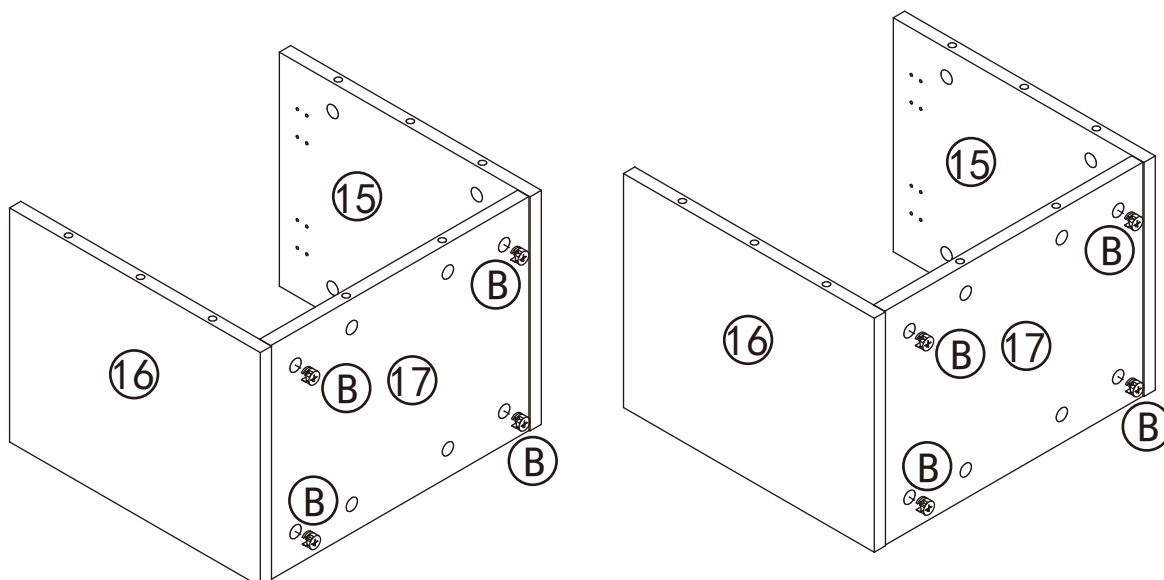 


# Assembly Instructions
  
## Step 17

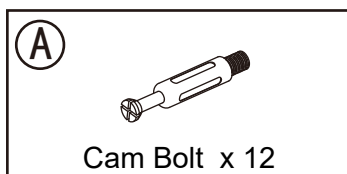
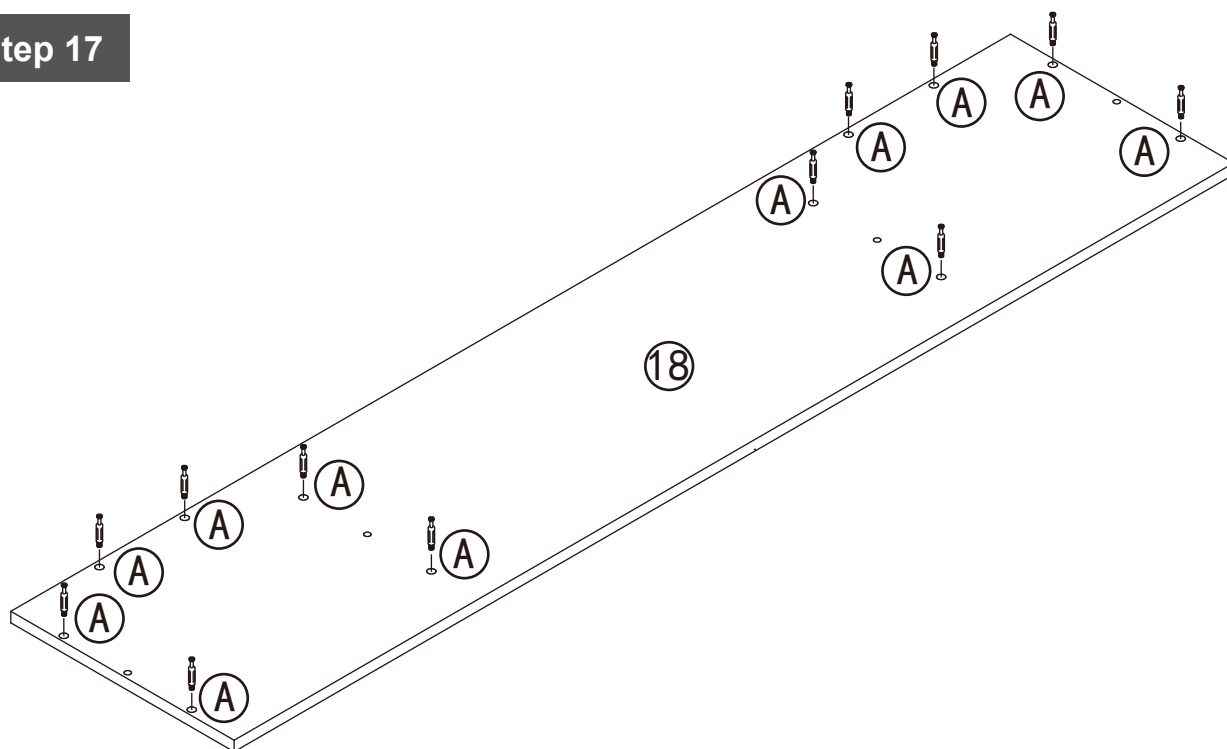


## Step 18

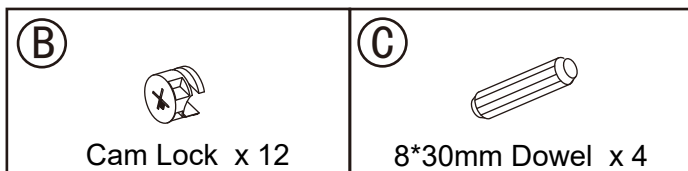 
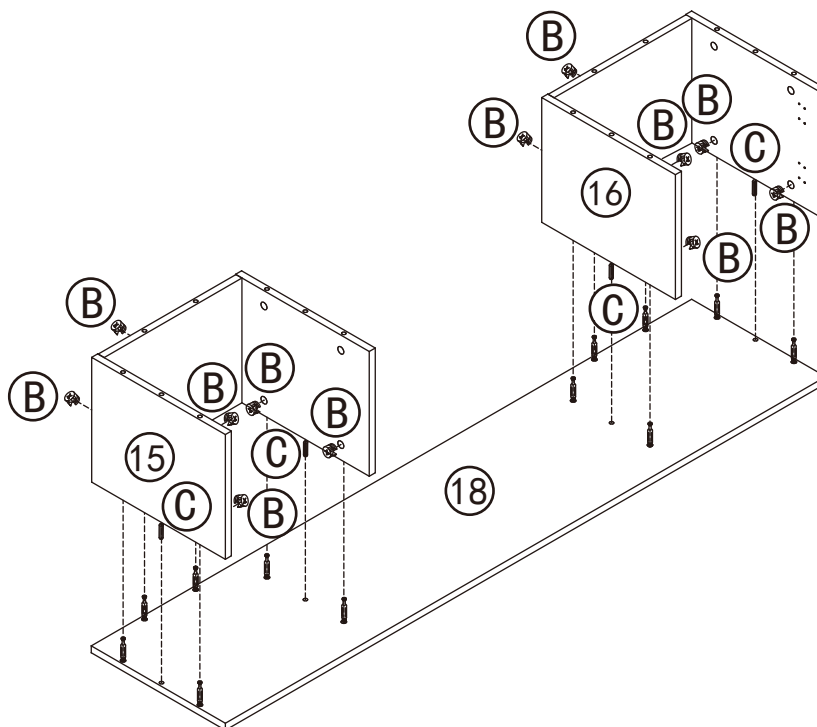 


# Assembly Instructions
  
## Step 19

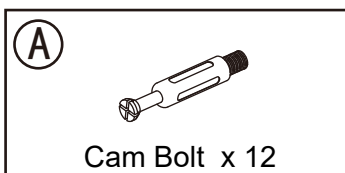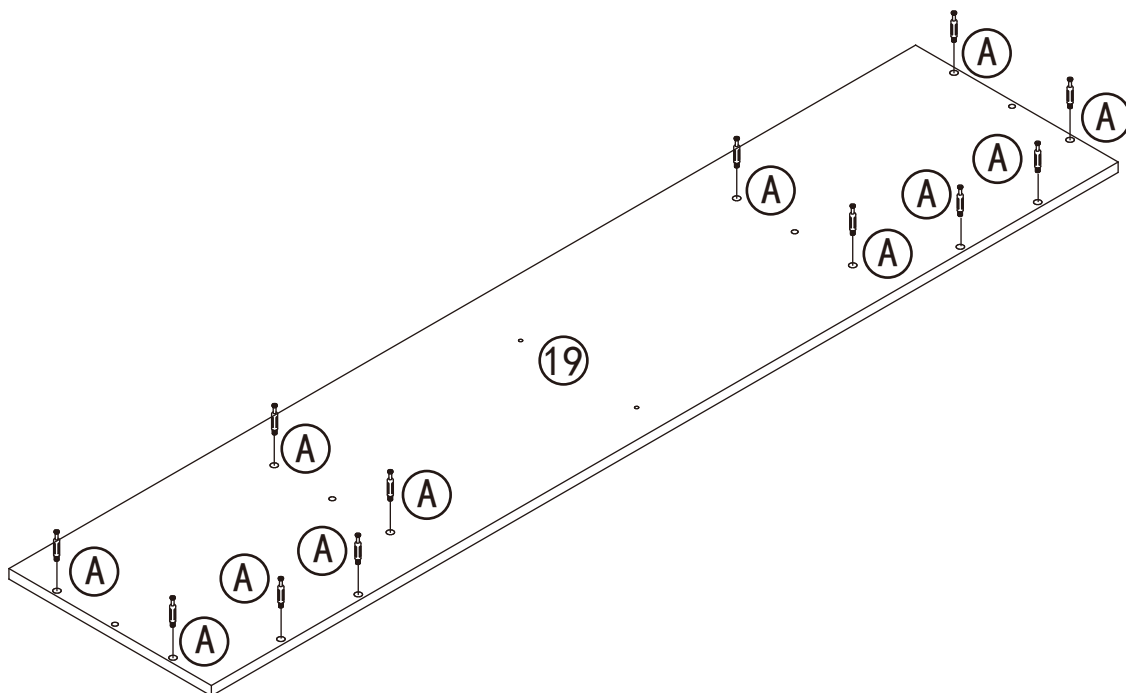


## Step 20

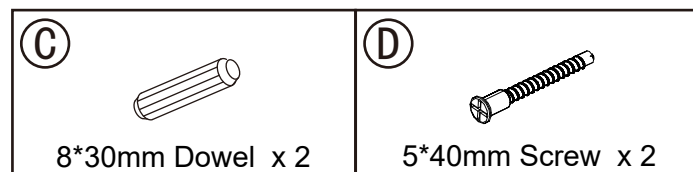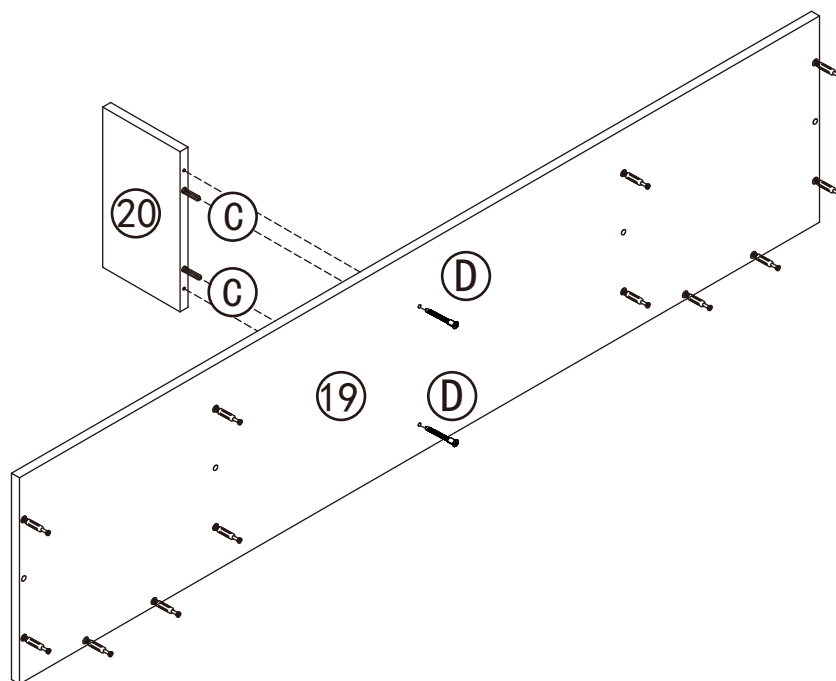  

# Assembly Instructions
 
## Step 21

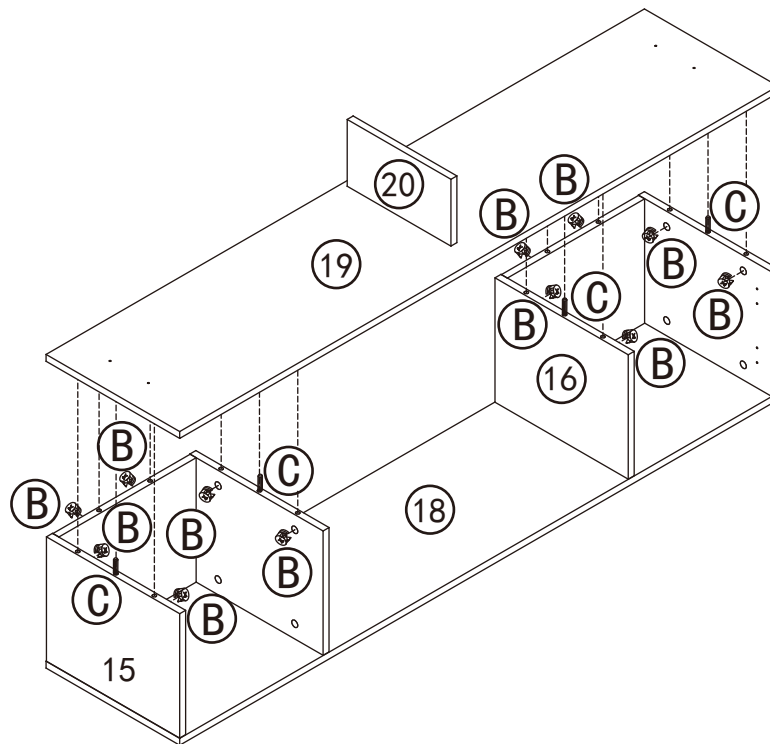


(B)




Cam Lock x 12

 (C)



8\*30mm Dowel x 4

## Step 22

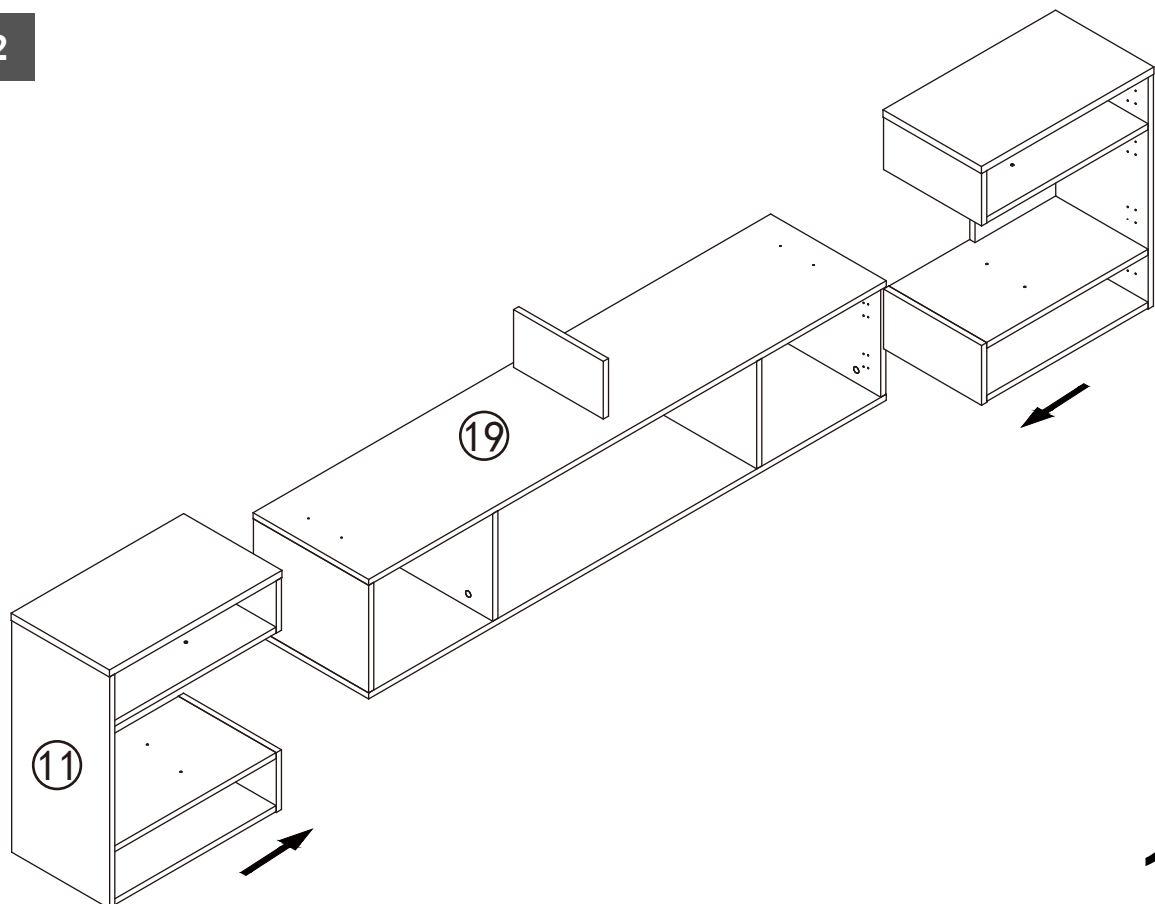 


15



# Assembly Instructions
 
## Step 23

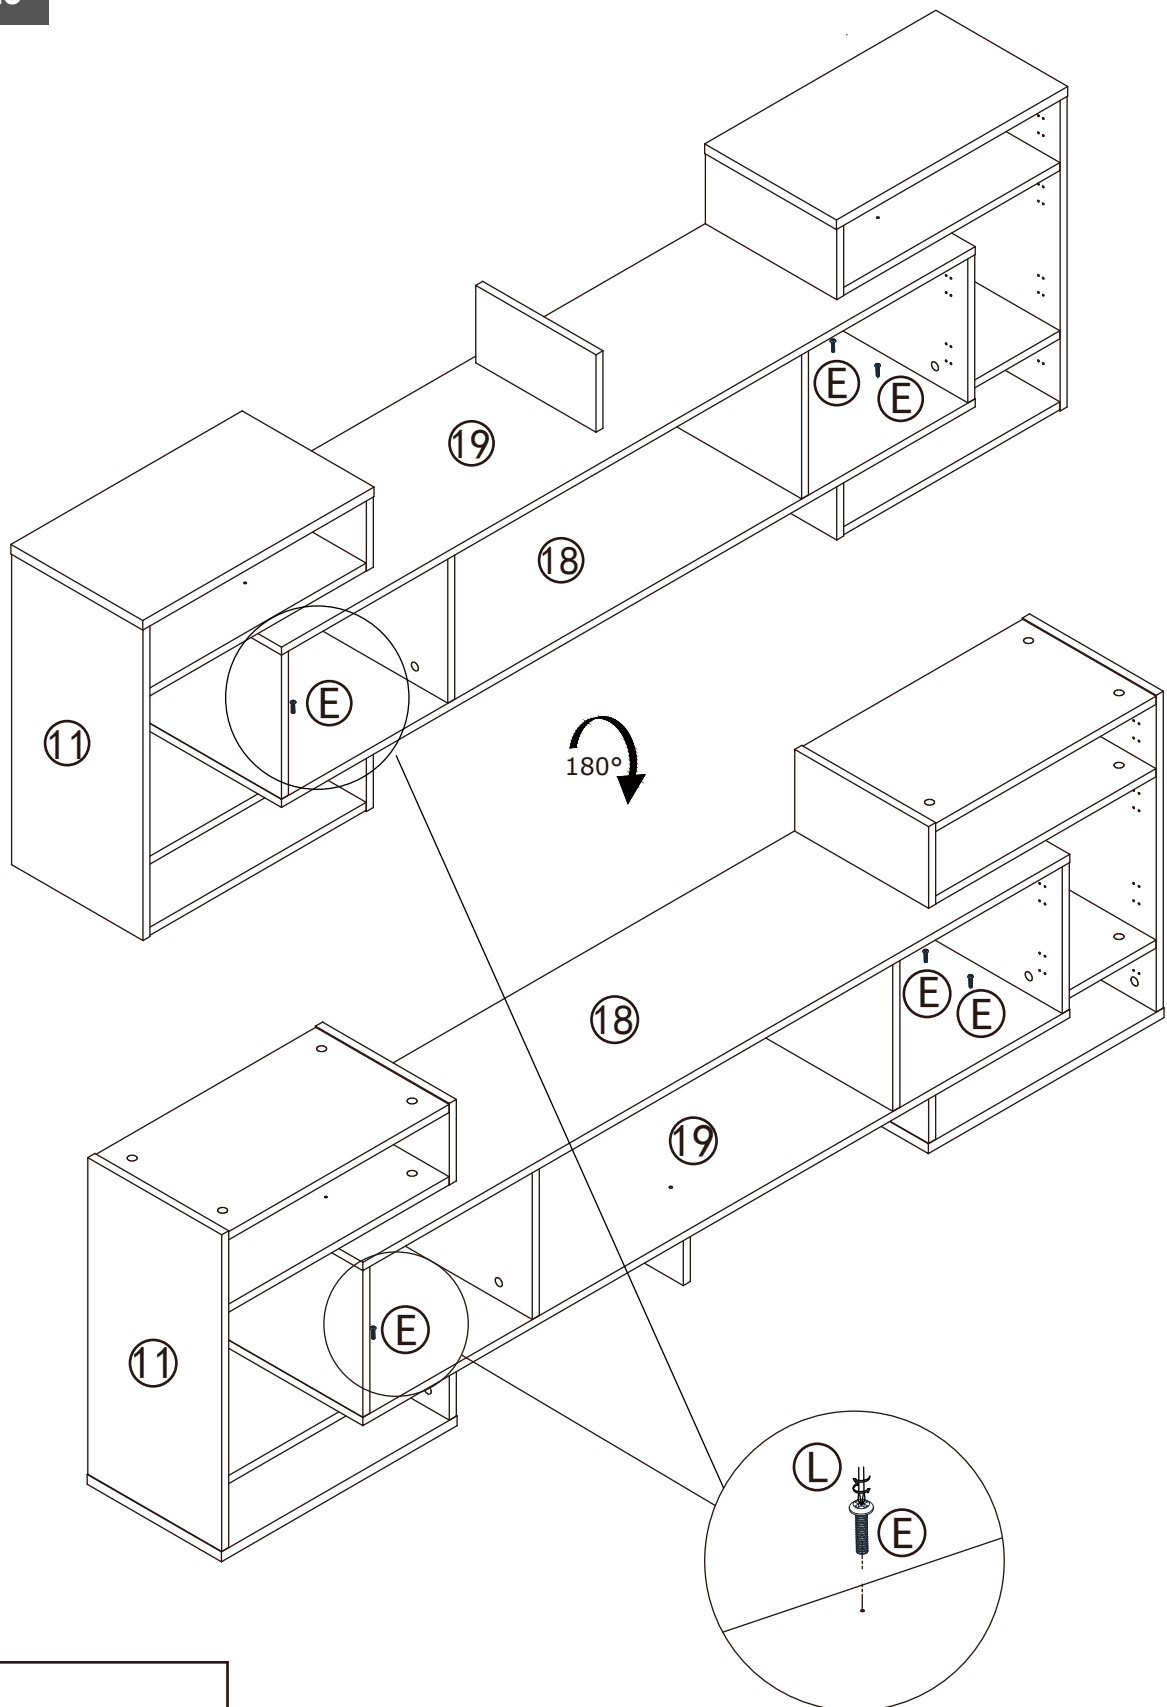


(E)





6\*20mm Screw x 8

# Assembly Instructions

  
## Step 24

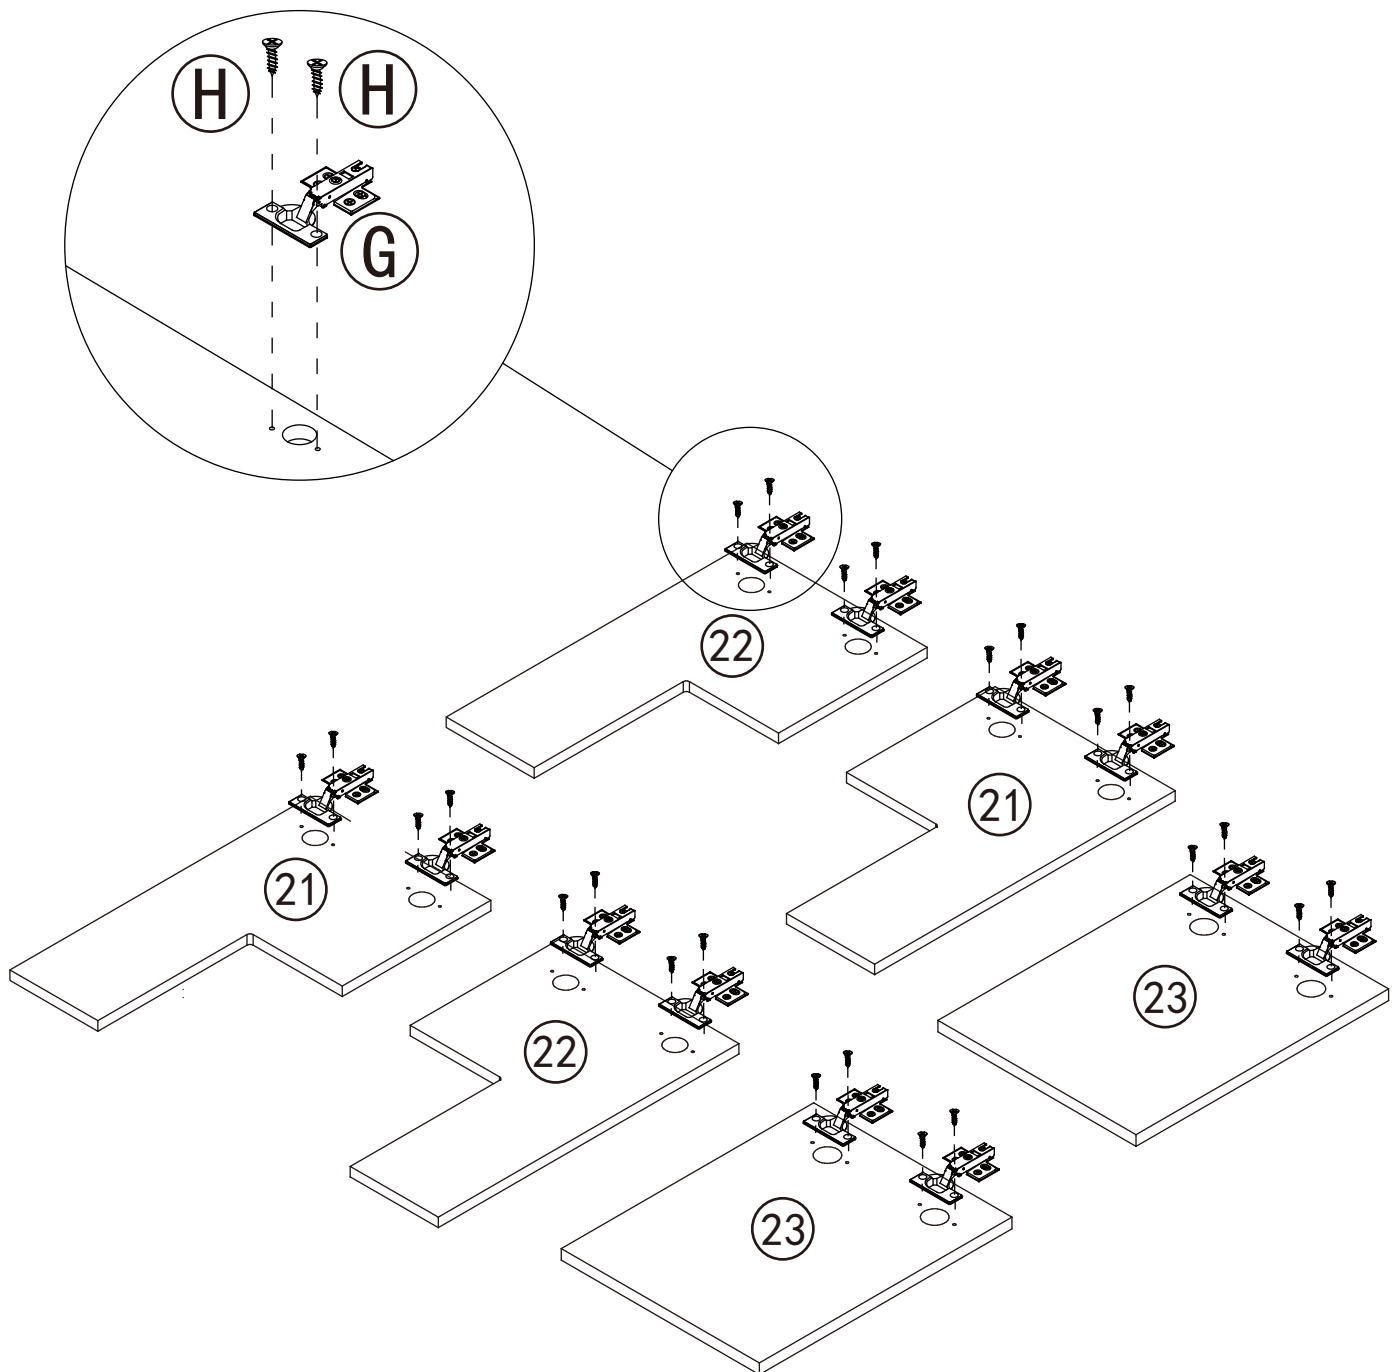


 Hinge x 12	 3.5*14mm Screw x 24
---	--

# Assembly Instructions



 
## Step 25

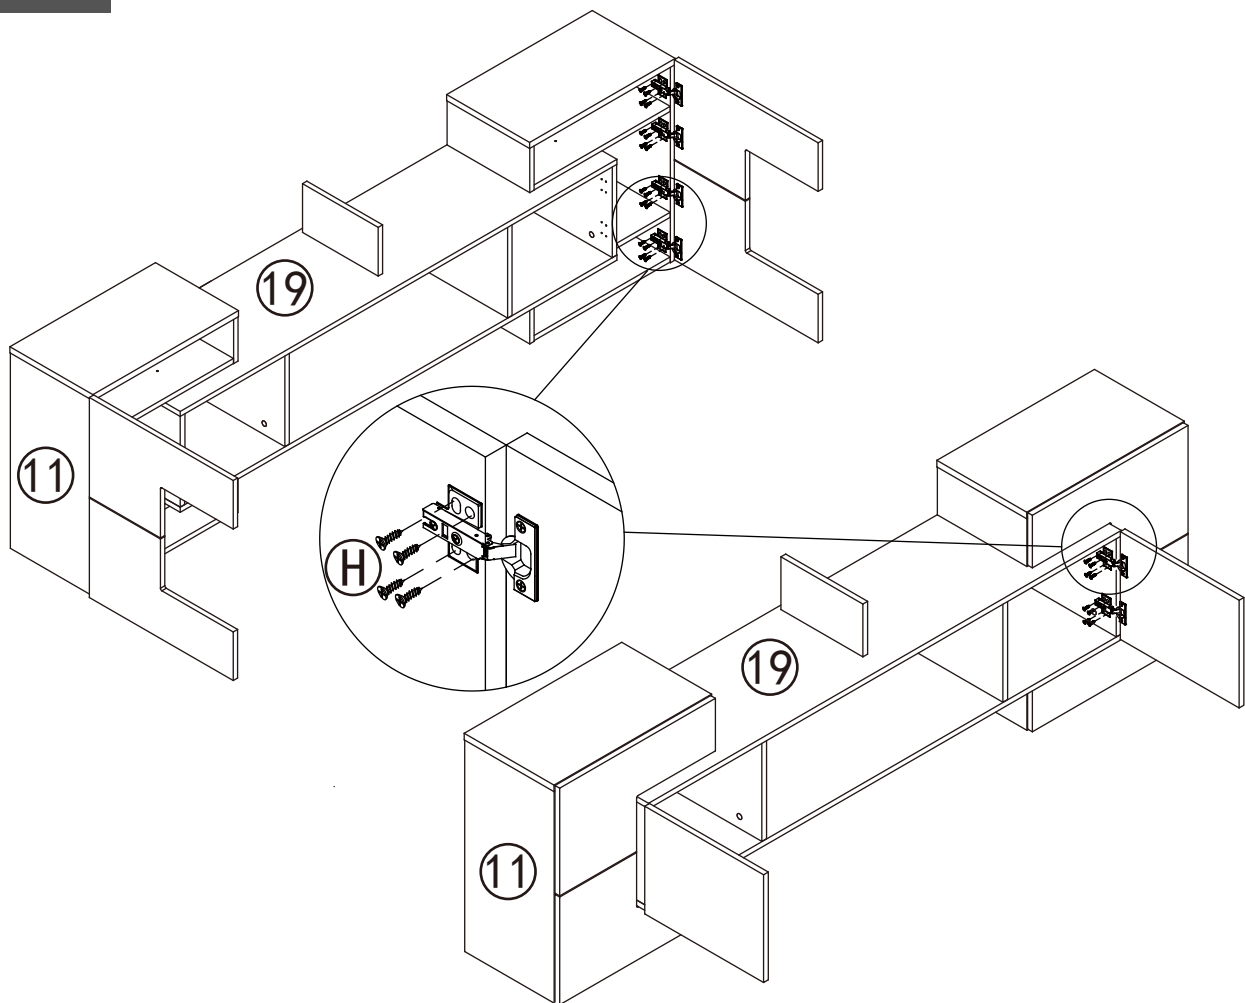

 If the door can't close, please adjust the hinges.

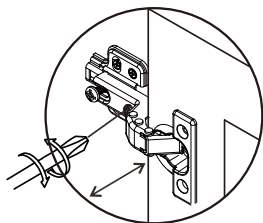

   This is used to  
adjust the door  
panel in the up and  
down direction.

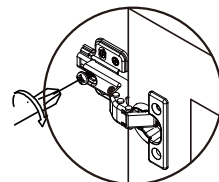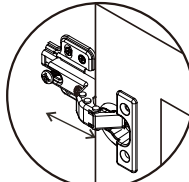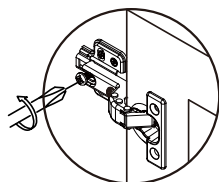

This is used to adjust the door panel in the front and back  
direction: Loosen the screw first, and then tighten screw  
after adjusting the door panel to the proper position.


(H)



3.5\*14mm Screw x 48

# Assembly Instructions
 
## Step 26

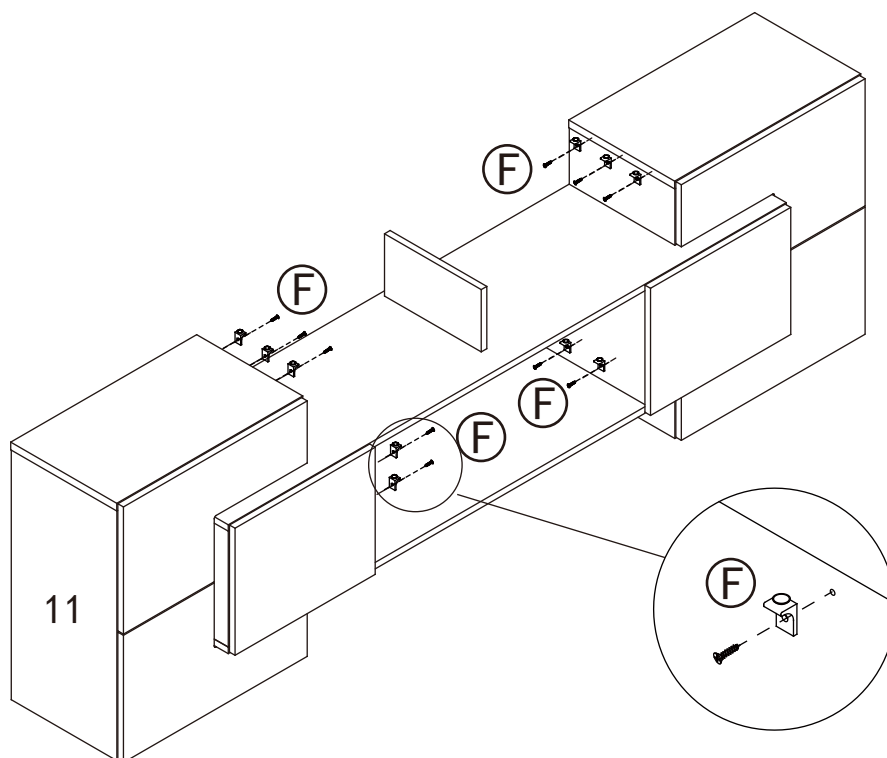


(F)





Glass holder x 12

## Step 27


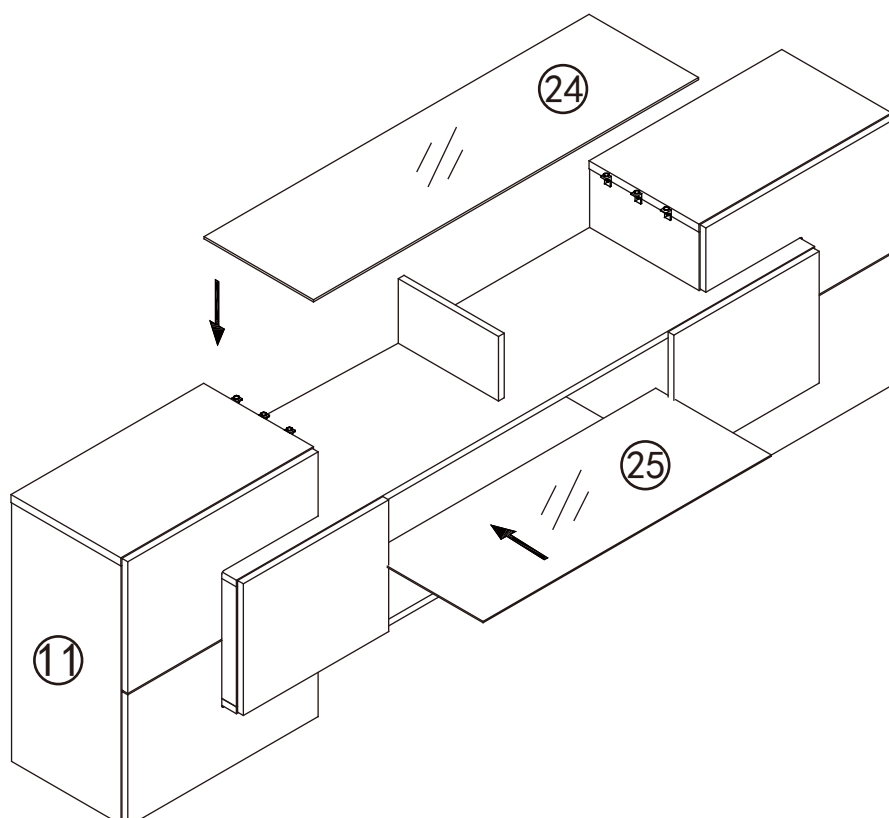 


# Assembly Instructions
  
## Step 28

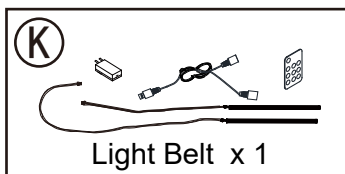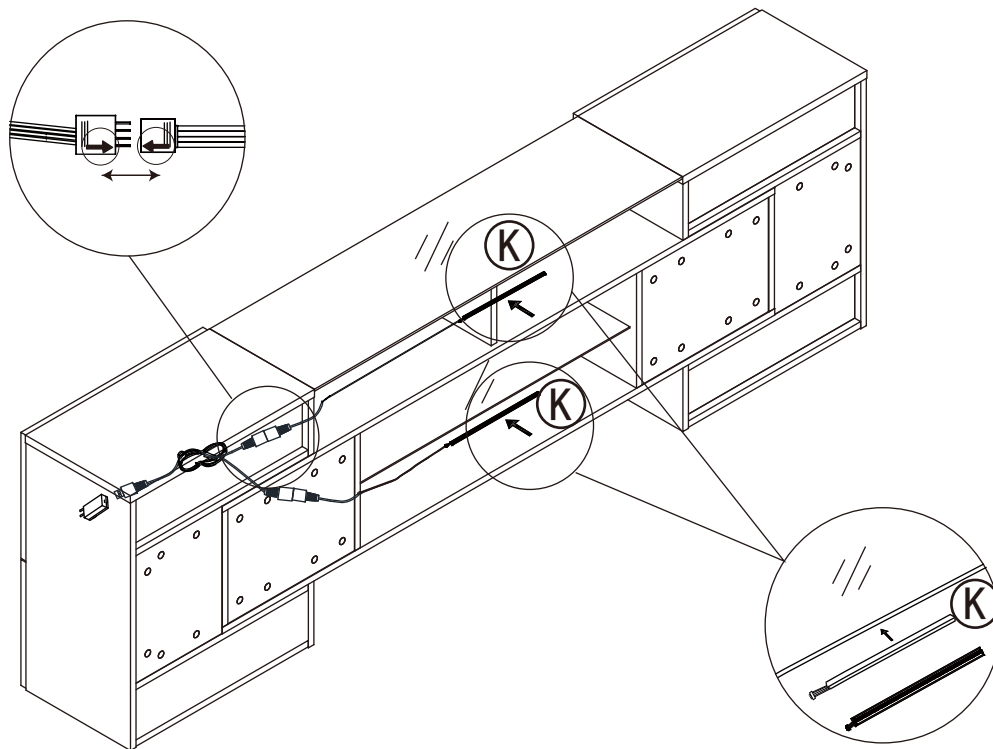


## Step 29

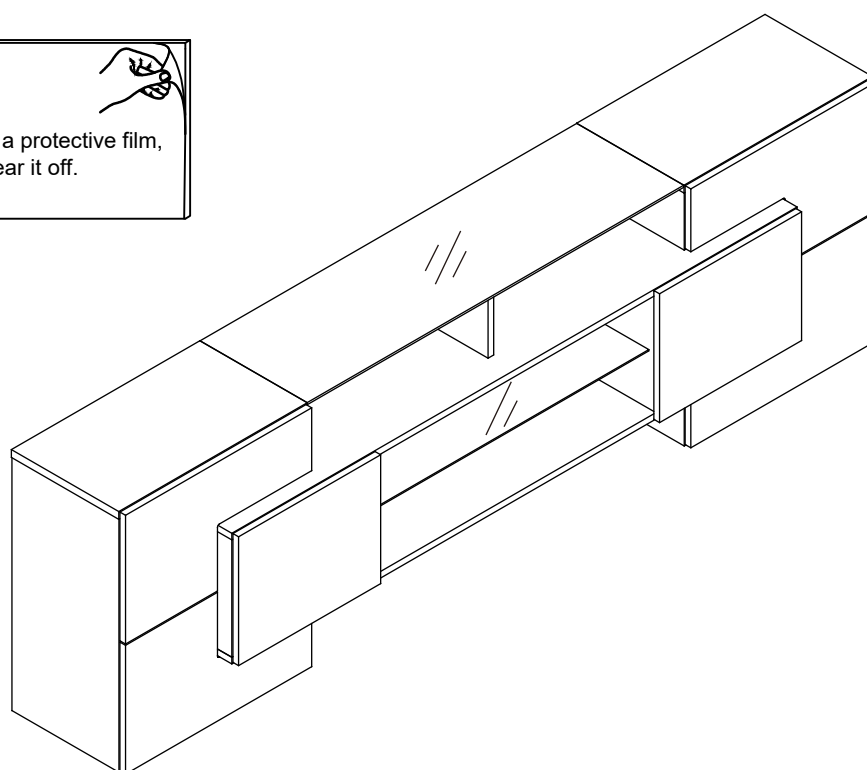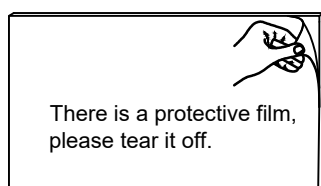  


# LED Light

If you can't let the lights work successfully, please check the following:

 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture .
2. Please check the remote control. it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.
4. When using the remote control, please make sure to aim at thereceiver, not the light strip.

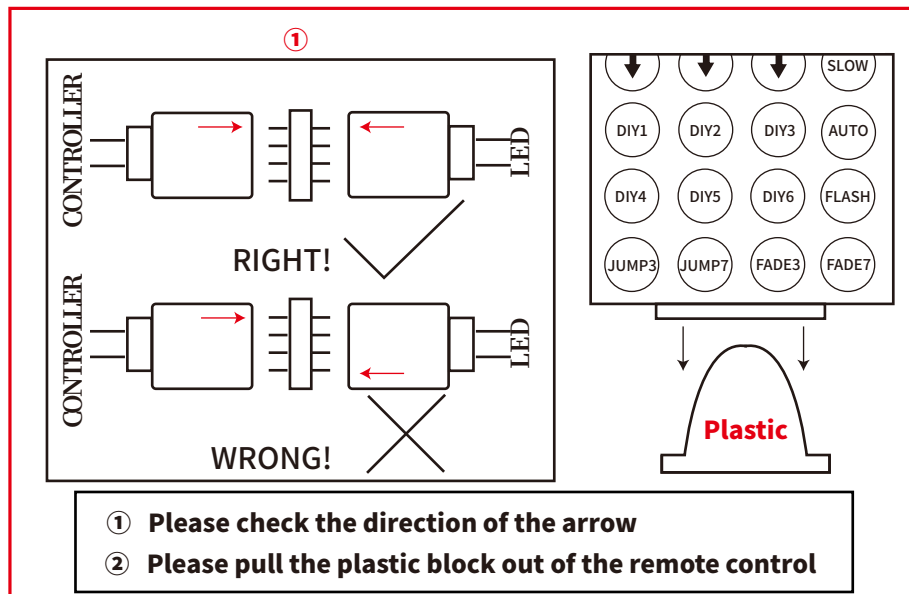

 **Remark:** These two buttons are invalid because the product cannot adjust the brightness of the light.

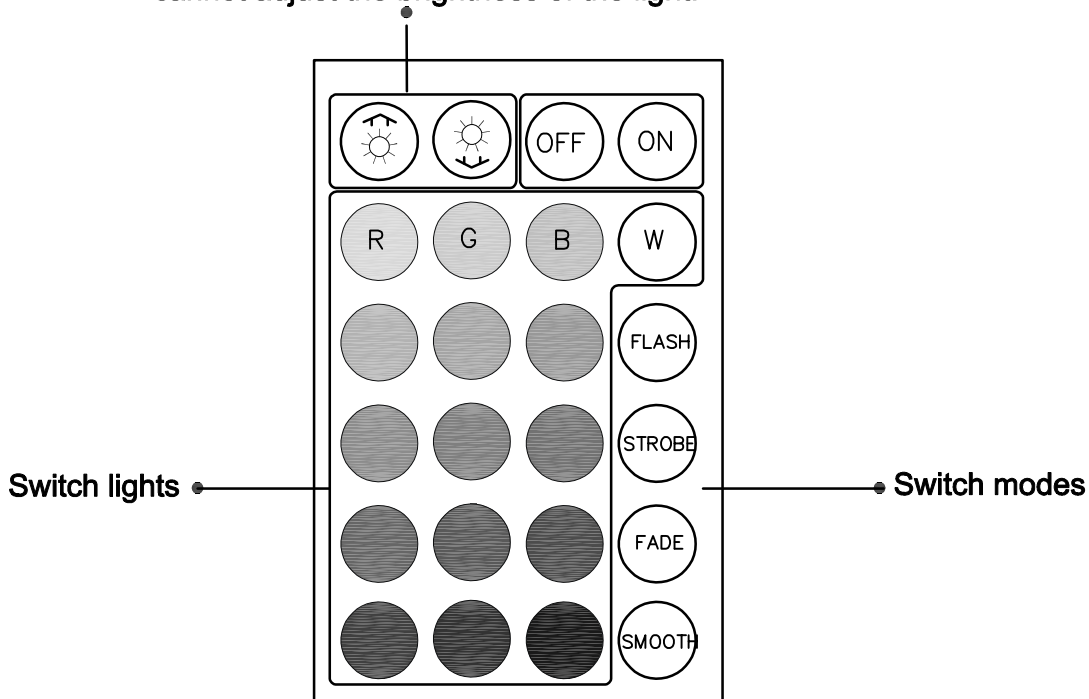

Please note that for transportation safety, the remote control does not contain batteries; the attery model is: CR2025