


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

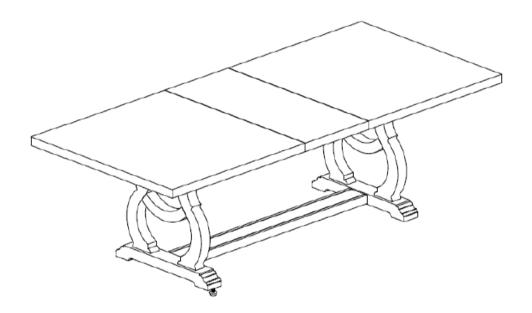

Fine Furniture for every stage of life

110291(B1&B2) *Dining Table* 

## COASTER

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

### **PARTS IDENTIFICATION**

#### **B1 (BOX 1)**

<u> </u>	<u> </u>	
Α	ТОР	1PC
В	LEAF	1PC
С	UPPER CROSSBAR	1PC
D	LOWER CROSSBAR	1PC
B2 ( BOX	<u>( 2)</u>	
E	LEG FRAME	2PCS

## **HARDWARE IDENTIFICATION**


#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 110291(B1)

1	BOLT (Ø5/16 x 13 x 45mm - RBW)	16PCS
2	LOCK WASHER (Ø5/16 x 10 x 1.1mm - RBW)	16PCS
3	FLAT WASHER (Ø5/16 x 22 x 2mm - RBW)	16PCS
4	ALLEN WRENCH (4 x 60mm - RBW)	1PC


PAGE 2 OF 5



# ASSEMBLY INSTRUCTIONS STEP 1

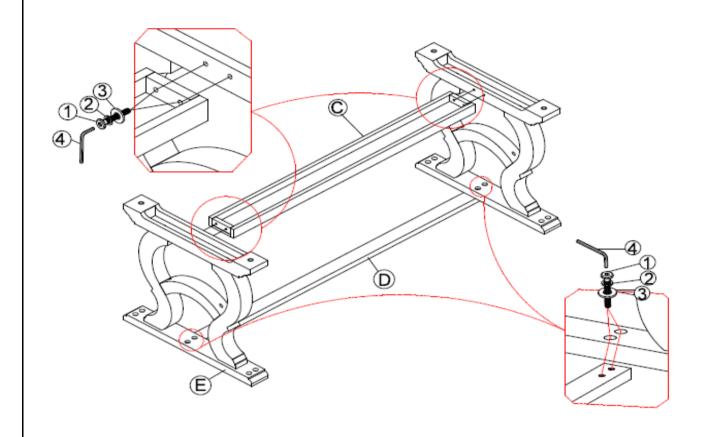


## STEP 2

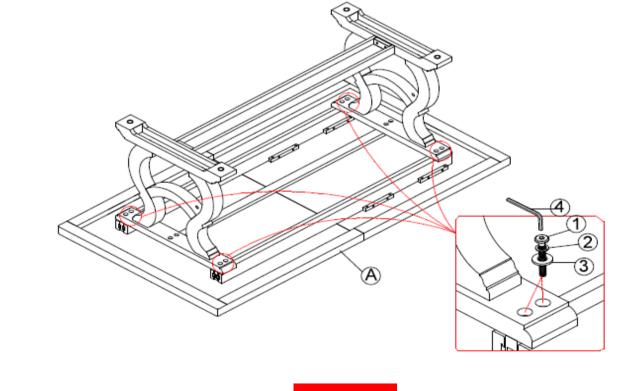

PAGE 3 OF 5




# ASSEMBLY INSTRUCTIONS STEP 3

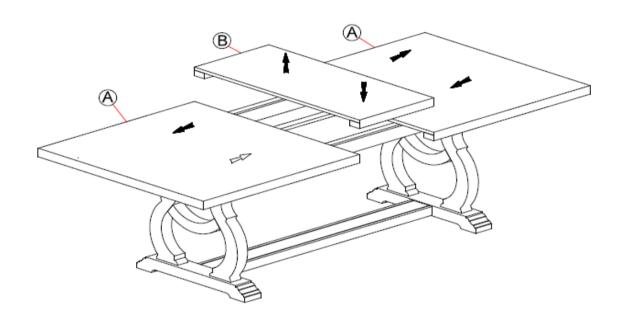


# STEP 4 PAGE 4 OF 5 COASTERFURNITURE.COM



# ASSEMBLY INSTRUCTIONS STEP 5

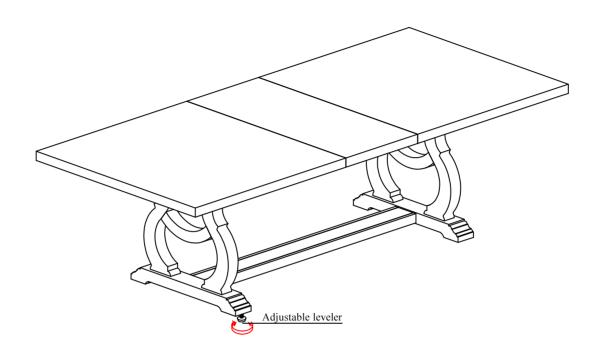


# STEP 6 COMPLETE

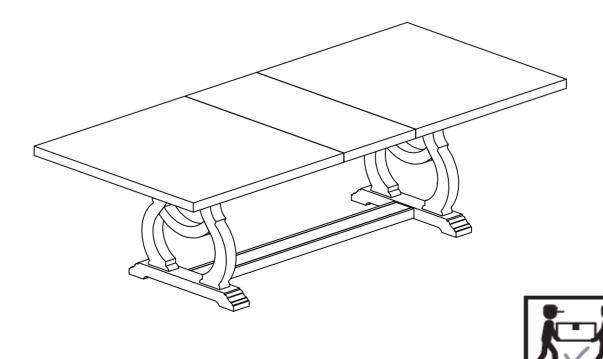

PAGE 4 OF 5



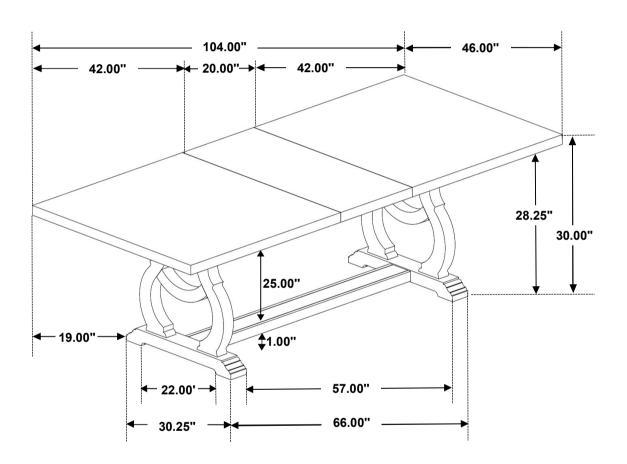

Note: Dimension tolerance ±5%