

Parts and Damage Replacement Procedure

1. Please inspect your purchase immediately.

NAME:

- 2. This procedure covers product purchased from an authorized Roundhill Reseller and was received in its originally sealed carton.
- 3. If you find a part missing or damaged, you have a 30-day window in which to order a replacement part from the date on your purchase receipt.
- 4. You have 3 ways to do this. You will need a copy of your purchase receipt.
 - a. By Fax: Fax the parts order form below and along with your receipt to 614-878-7918
 - b. By Email: Email the order form and along with your receipt to: parts@roundhillfurniture.com
 - c. By Mail: Fill out the parts order form below and along with a copy of your receipt send it to Roundhill furniture parts department 3640 Zane Trace Drive, Columbus OH 43228
- 5. Once this order is sent in, you will be notified if the part(s) you are requesting can or cannot be shipped within 7-10 business days.

A COPY OF YOUR PURCHASE RECEIPT OR INVOICE MUST BE ATTACHED TO THIS ORDER FORM. NO ORDERS WILL BE PROCESSED WITHOUT PROOF OF PURCHASE.

ADDRESS:			(1	No Post Office Boxes)	Office Boxes)		
CITY	ſ:	STATE:	ZIP:				
PHONE:			FAX:				
EMA	AIL:						
	REASO	N FOR REPLACEMEN	T/PLEASE CHECK APPROF	PRIATE BOX.			
 () Damaged /scratched, cracked, broken, crushed, etc. () Mechanical malfunction/ drawer glides, swivel mechanisms, lid stays, etc. () Missing pieces () Unfinished surface () Wrong color () Other 							
	ONE MODEL NUM PROVIDED BELOW		E, PLEASE SPECIFY THE EX	ACT MODEL NUMBER C)F YOUR ITEM		
Model	Number		Part Letter Code	Quantity			

ASSEMBLY INSTRUCTIONS

771-10 DRESSER

Caution: Please read instructions thoroughly before unpacking assembly parts.

- 1. We recommend that you assemble this product with the assistance of another person. This will make assembly easier and help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please put all parts on a non-abrasive surface and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

NO	PARTS LIST		
A		DRESSER	1PC
В		LEGS	4PCS
С	€	SUPPORT LEG	1PC

NO	HARDWARE LIST				
1	Flat Washer Ø1/4" x 3/4"	0	8PCS		
2	Spring Washer Ø1/4" x 3/8"	O	8PCS		
3	Bolt Ø1/4" x 2"		8PCS		
4	Allen Key 4 x 59mm		1PC		

