
ASSEMBLY INSTRUCCIONES


DINING TABLE

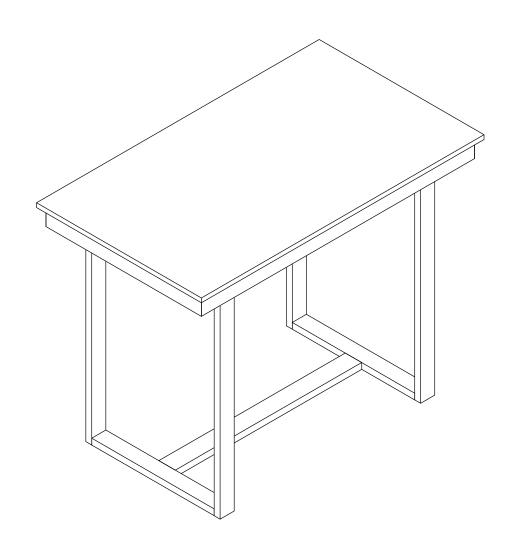

WF308216


IMPORTANT NOTE:


- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OP CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- 2 BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- 3 DO NOT TIGHEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY STEP-UP

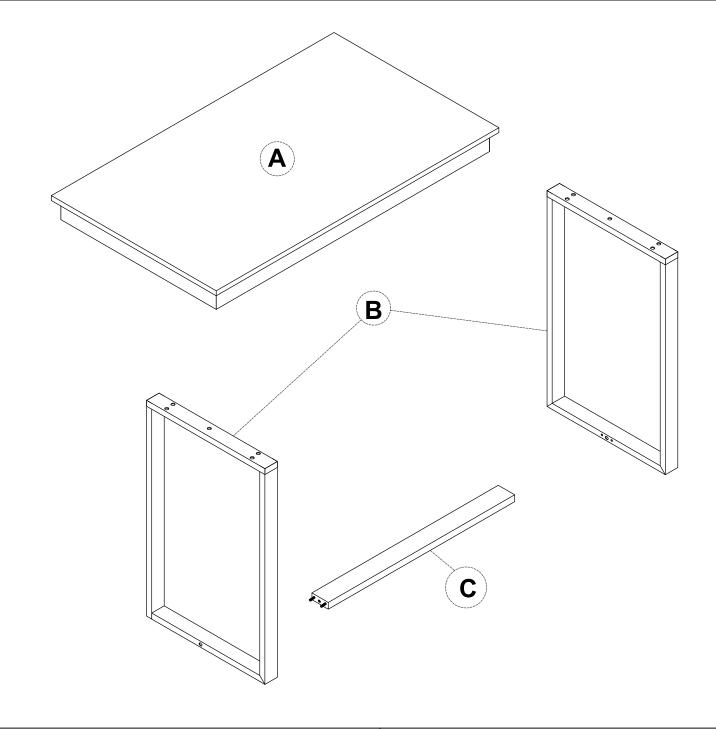

Part List For One					Hardware List For One			
No	Parts Desc.		Q'ty	No	Hardware Desc.	Q'ty		
A	TOP PANEL		1pcs	1	Bolts 9)	10pcs		
				2	Spring Washer 5/16"* 13mm x 1.5mm	10pcs		
			<u> </u>	3	Flat Washer 5/16"* 19mm x 1.5mm	10pcs		
 _B	SEAT FRAME		2pcs	4	Bolts 1/4"* 80mm	2pcs		
В				5	Spring Washer 1/4"* 13mm x 1.5mm	2pcs		
	FRONT LEGS		1pcs	6	Flat Washer 1/4"* 19mm x 1.5mm	2pcs		
С				7	Allen Key 4mm*60mm	1pcs		


STEP 1

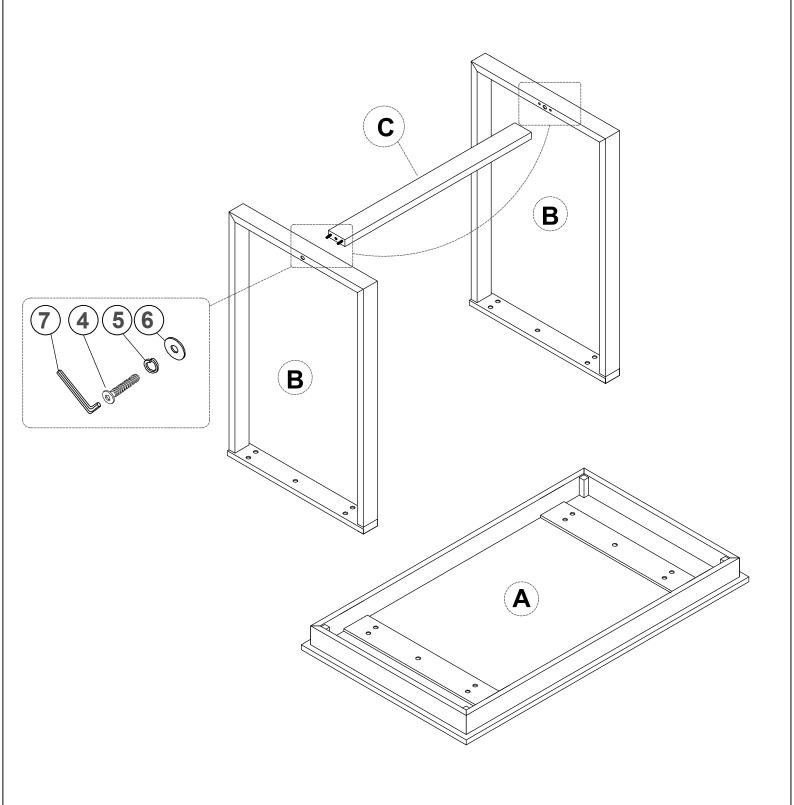

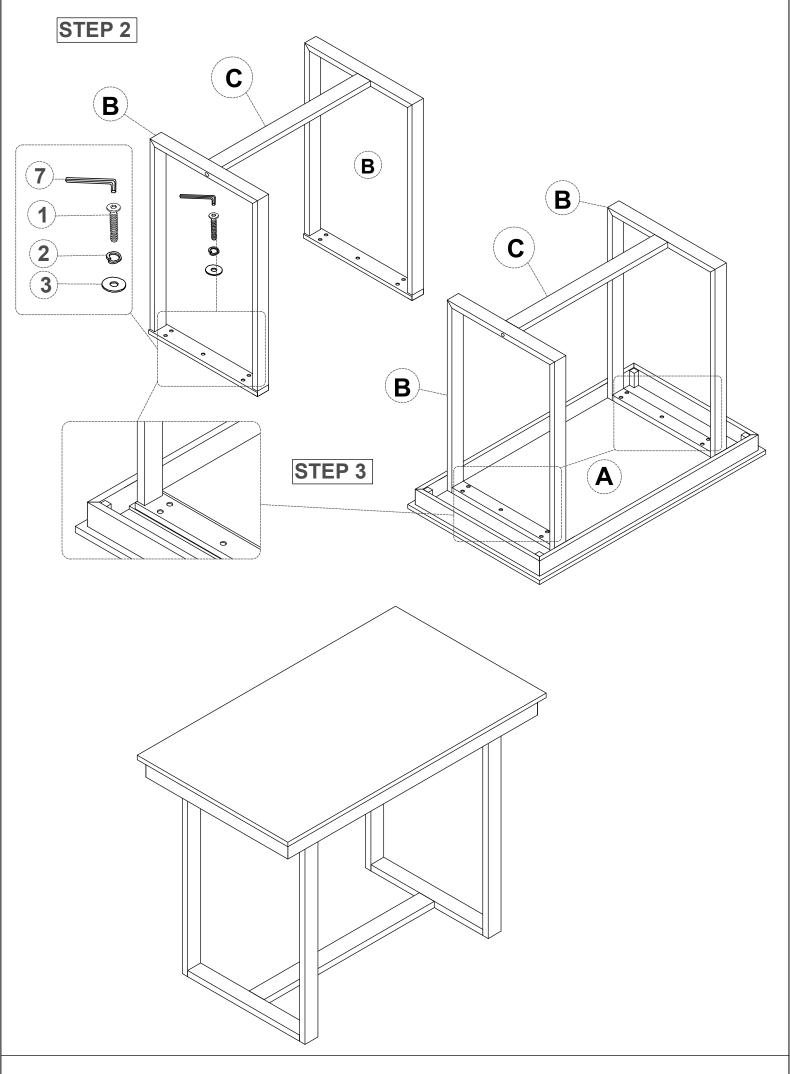

ASSEMBLY INSTRUCCIONES


DINING CHAIR

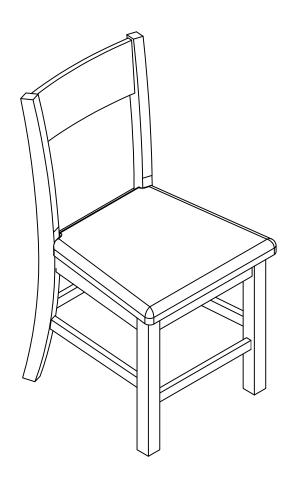

WF 308217

IMPORTANT NOTE:

- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OP CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- 2 BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- 3 DO NOT TIGHEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY STEP-UP

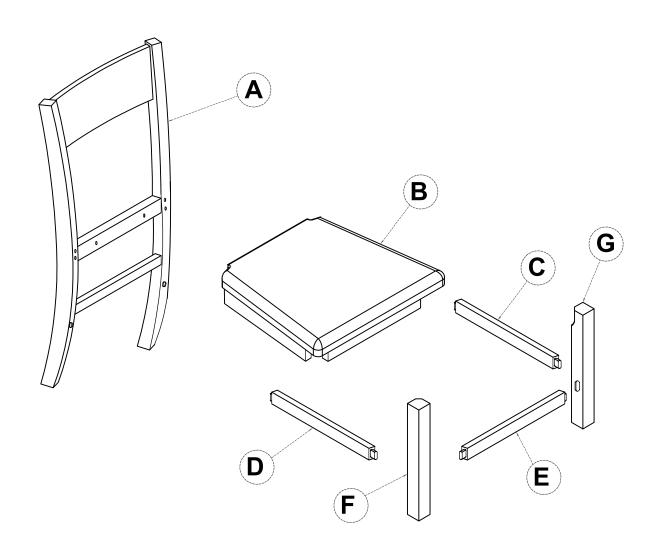

Part List For One				Hardware List For One			
No	Parts Desc.	Q'ty	No	Hardware Desc.	Q'ty		
A	BACK FRAME	1pcs	1	Bolts 1/4"* 35mm	2pcs		
			2	Bolts 1/4"* 75mm	4pcs		
В	SEAT FRAME	1pcs	3	Spring Washer 1/4"* 13mm x 1.5mm	10pcs		
			4	Flat Washer 1/4"* 19mm x 1.5mm	10pcs		
С	RIGHT STRETCHER	1pcs	5	Bolts	4pcs		
D	LEFT STRETCHER	1pcs	6	Screws 4* 38mm	6pcs		
Е	FRONT STRETCHER	1pcs	7	Allen Key 4mm*60mm	1pcs		
F	FRONT LEGS (LEFT)						
G	FRONT LEGS (RIGHT)	1pcs					
	1						

