

Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828


 







 



Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

CARTON CONTENTS:

 
Hardware –

Ax13	Bx13	Cx24	Dx4	Ex13
			 M3x12	 M4x35
Fx2	Gx2	Hx10	Ix16	Jx1
		 M4x40	 M4x25	
Kx8	Lx2	Mx8		
	 M3.5x12	 M6 x50		

Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828

Panels –

 
① x1	② x1	③ x1	④ x1	⑤ x1
⑥ x1	⑦ x1	⑧ x1	⑨ x1	⑩ x1
⑪ x1	⑫ x4	⑬ x2	⑭ x2	⑮ x4

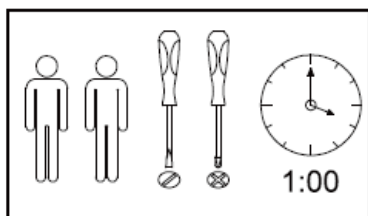

Tools required for assembly: Philips screwdriver and flathead screwdriver (if using power tools, use with care).

Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828

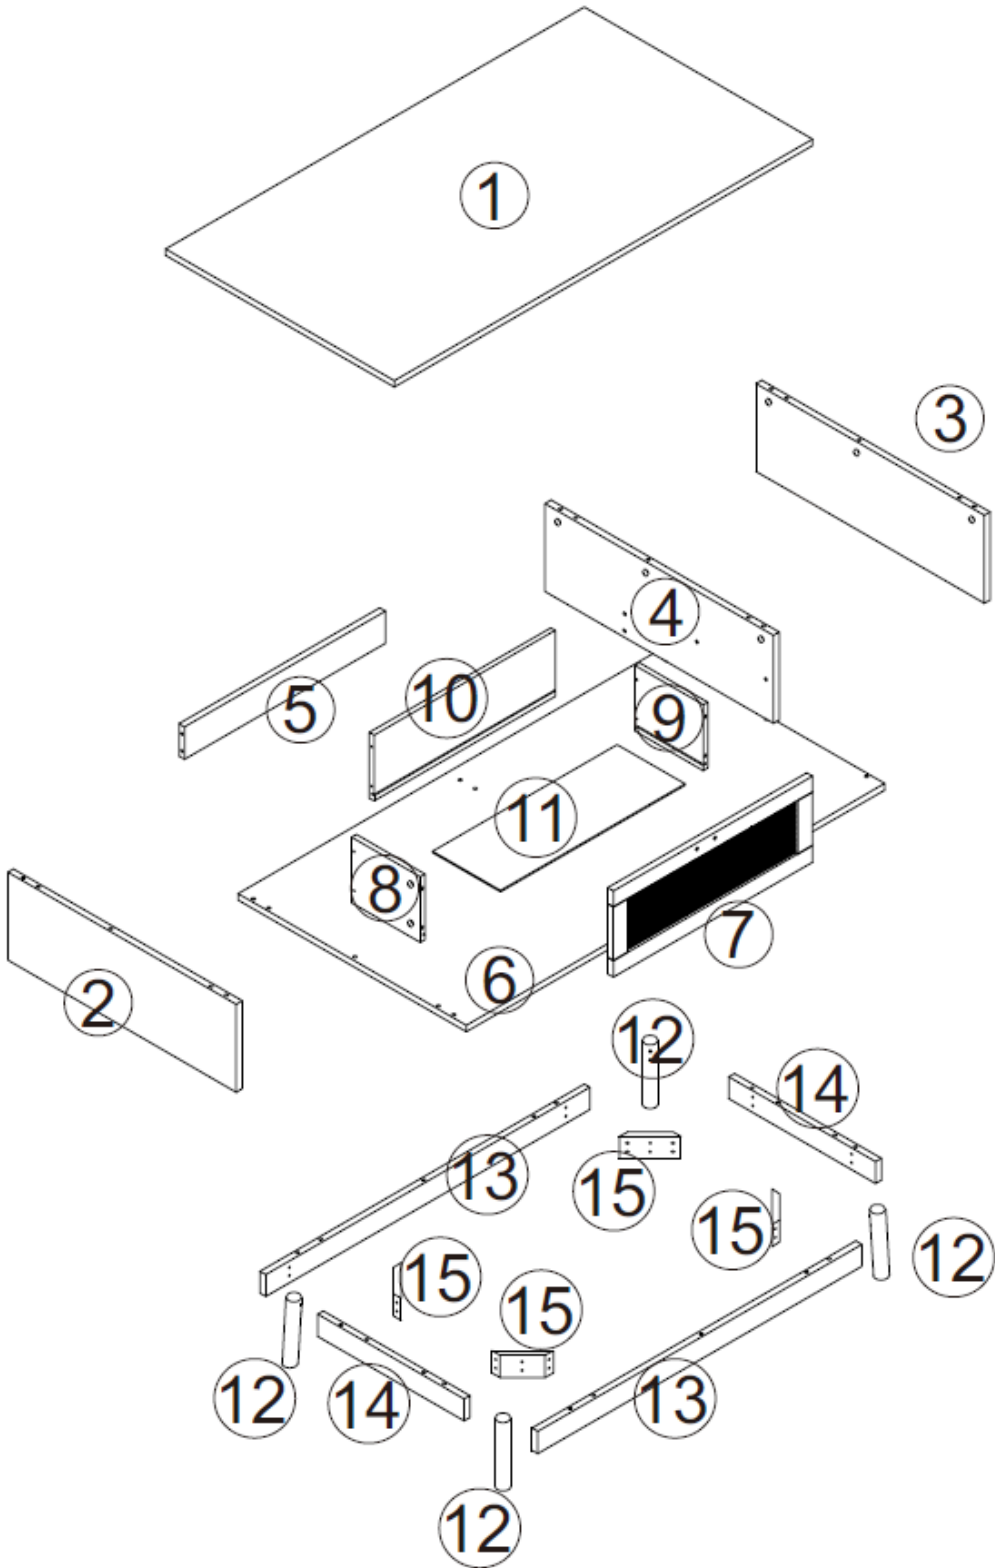

Assembly Illustration:

 
 
 
 


Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828

ASSEMBLY INSTRUCTIONS:



Step 1: Extend hardware F and attach it to panel 2 using hardware D.

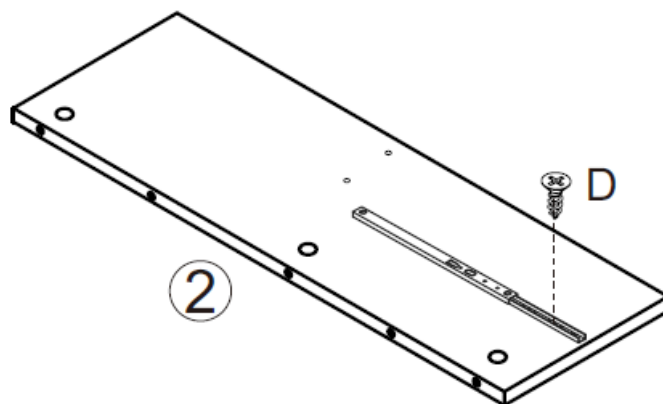 
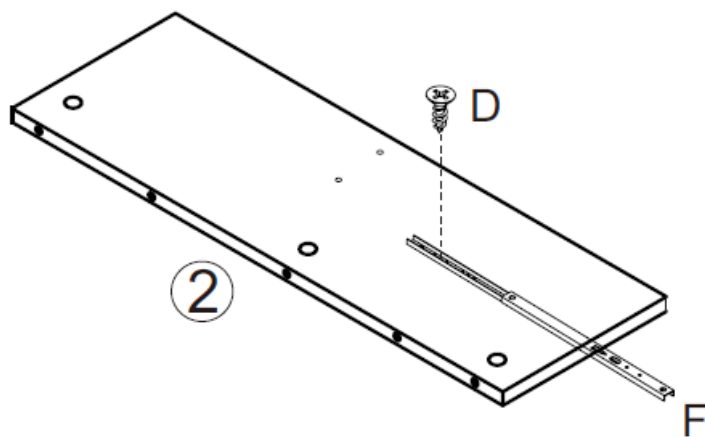 
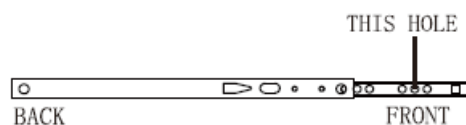 
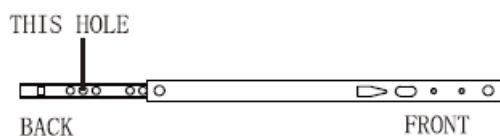 
Ⓓx2	Ⓕx1
	



Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828

Step 2: Extend hardware F and attach it to panel 4 using hardware D.

 
 
D x2	F x1
	

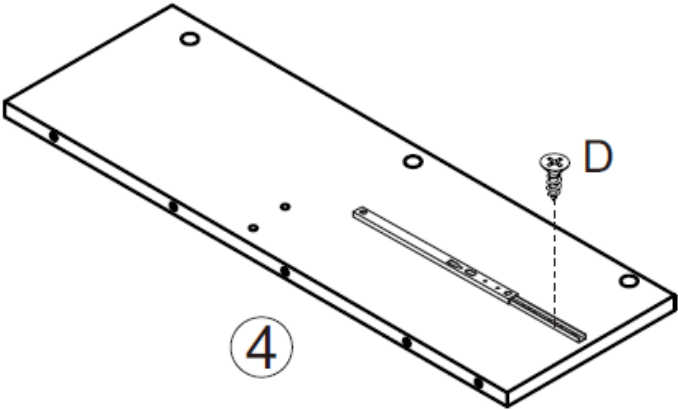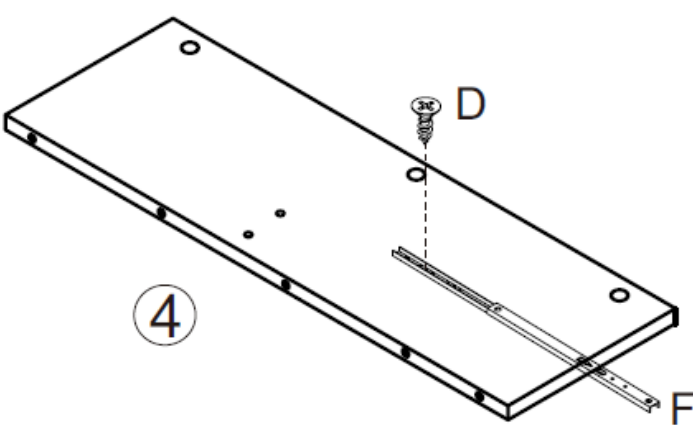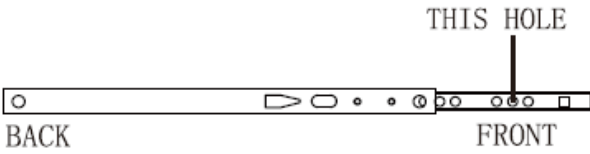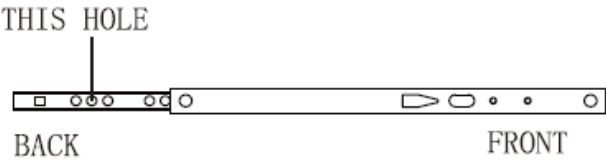

Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828




Step 3: Connect panel 5 to panels 2 and 4 using hardware C.

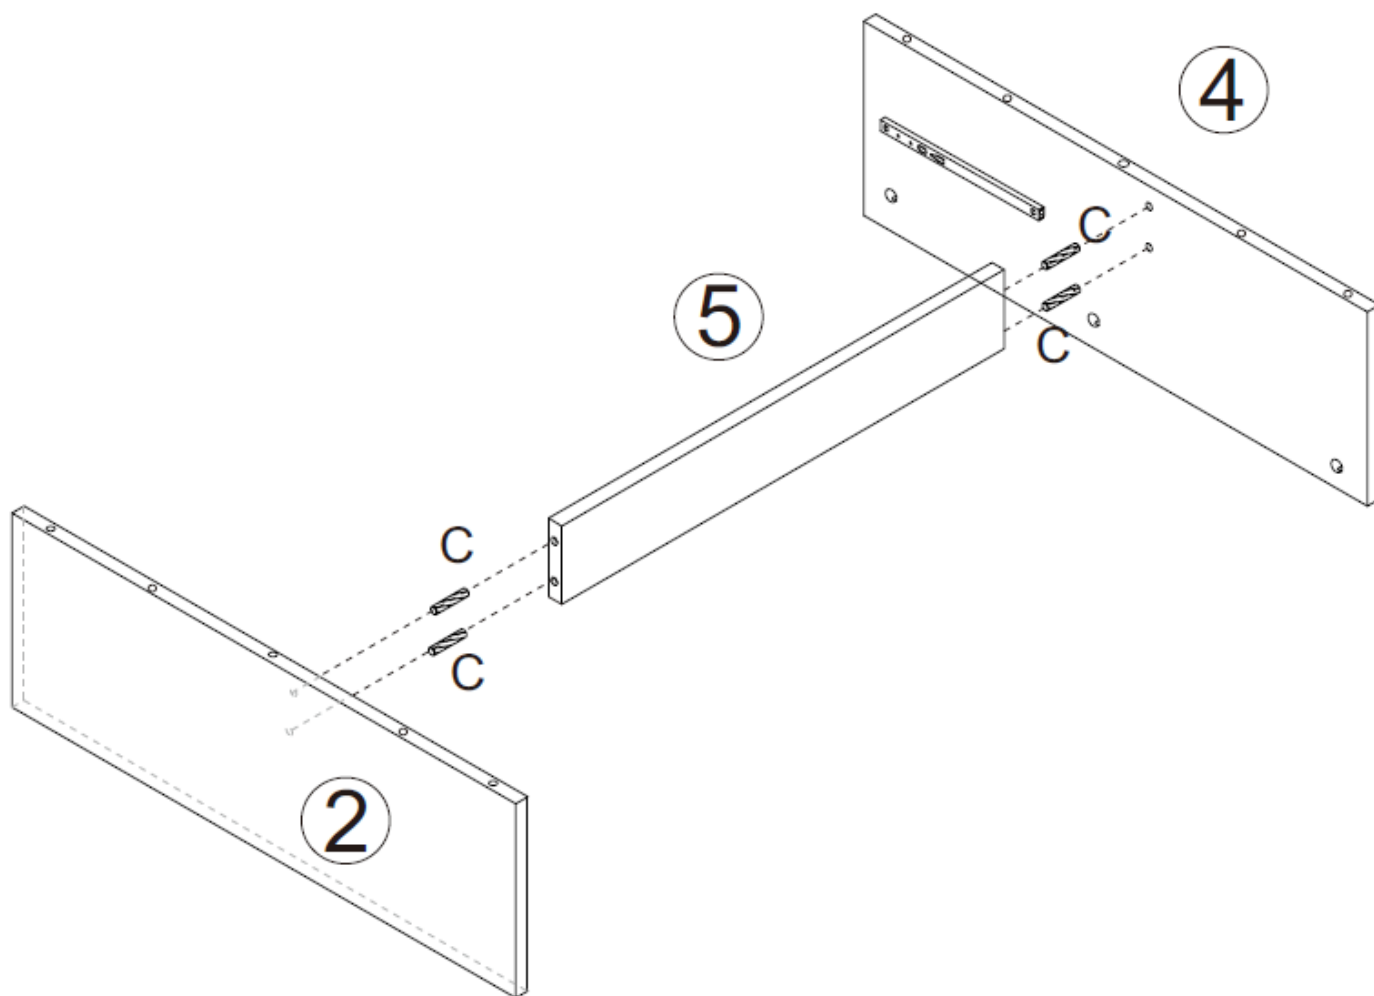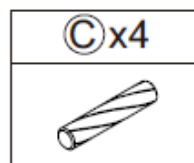 
1 2 3



Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828



Step 4: Connect assembled section panels 2 and 4 to panel 1 using hardware A, B, and C. Connect panel 3 to panel 1 using hardware A, B, and C.

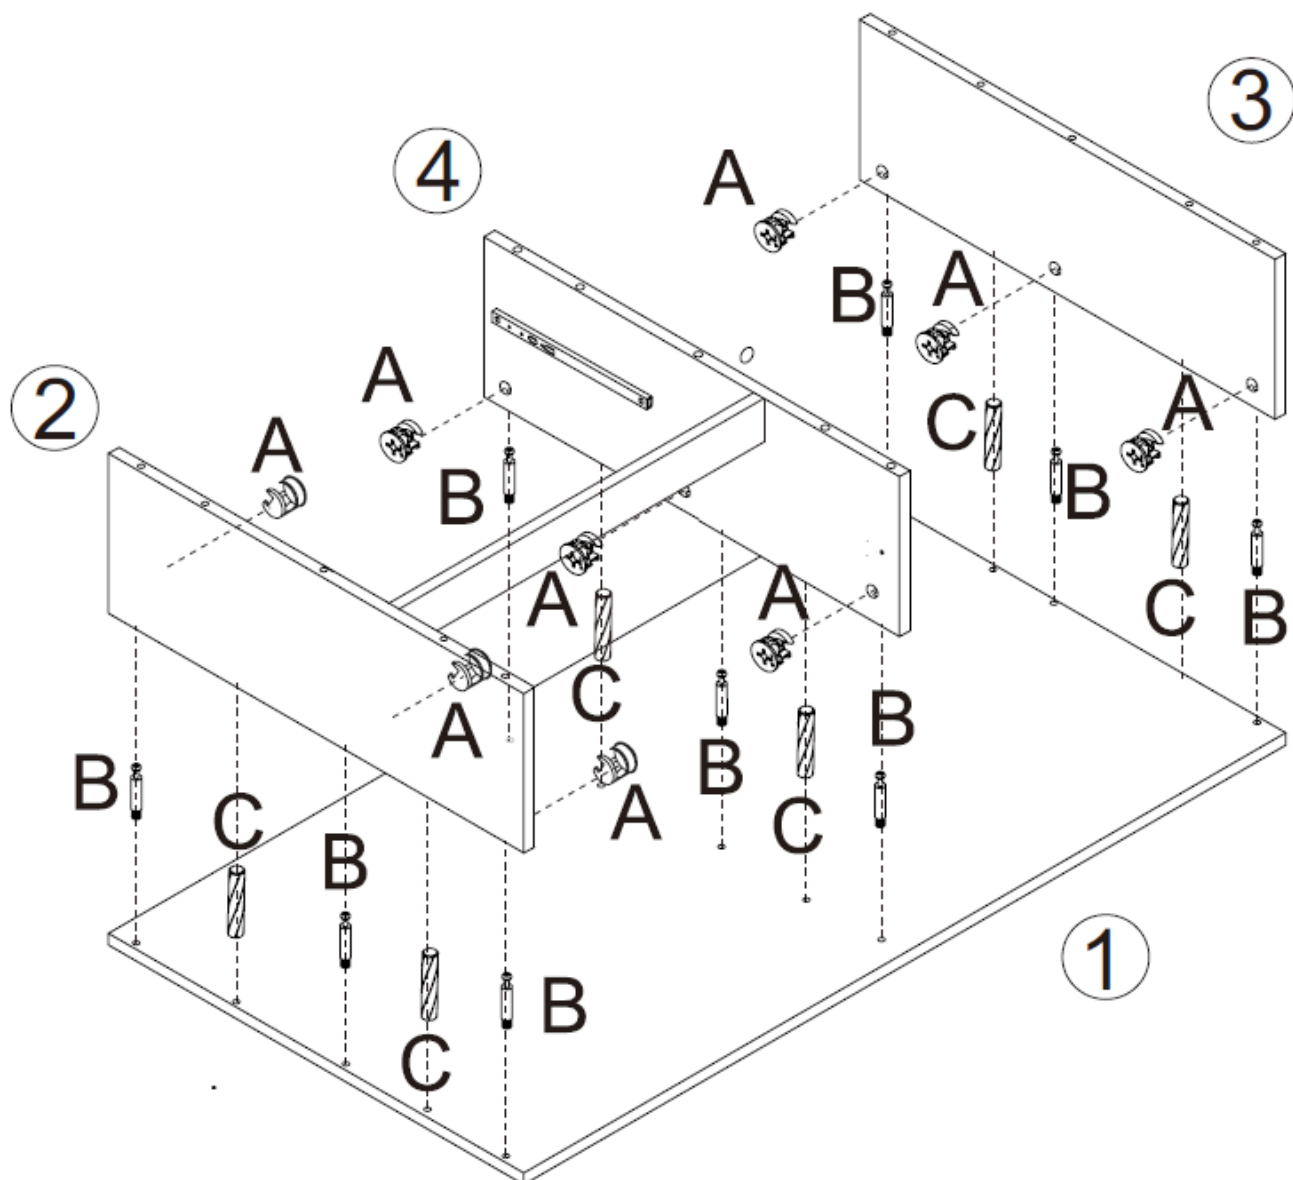 
A x9	B x9	C x6
		



Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828



Step 5: Connect panel 6 to the assembled section of panels 2, 4, and 3 using hardware C and E.

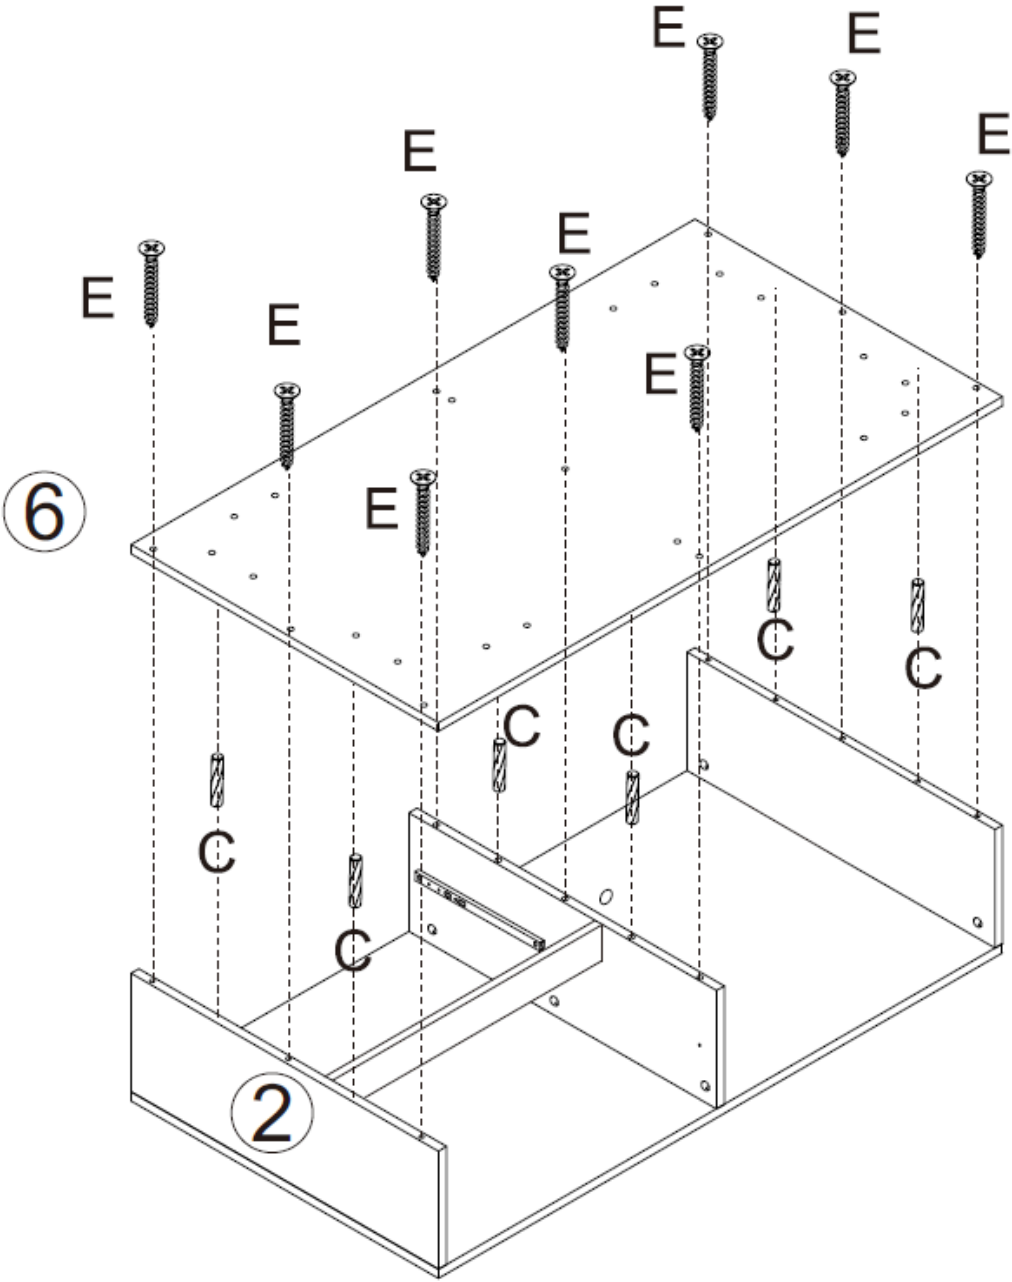 
C x6	E x9
	



Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828



Step 6: Connect panels 14 to panel 6 using hardware C and H.

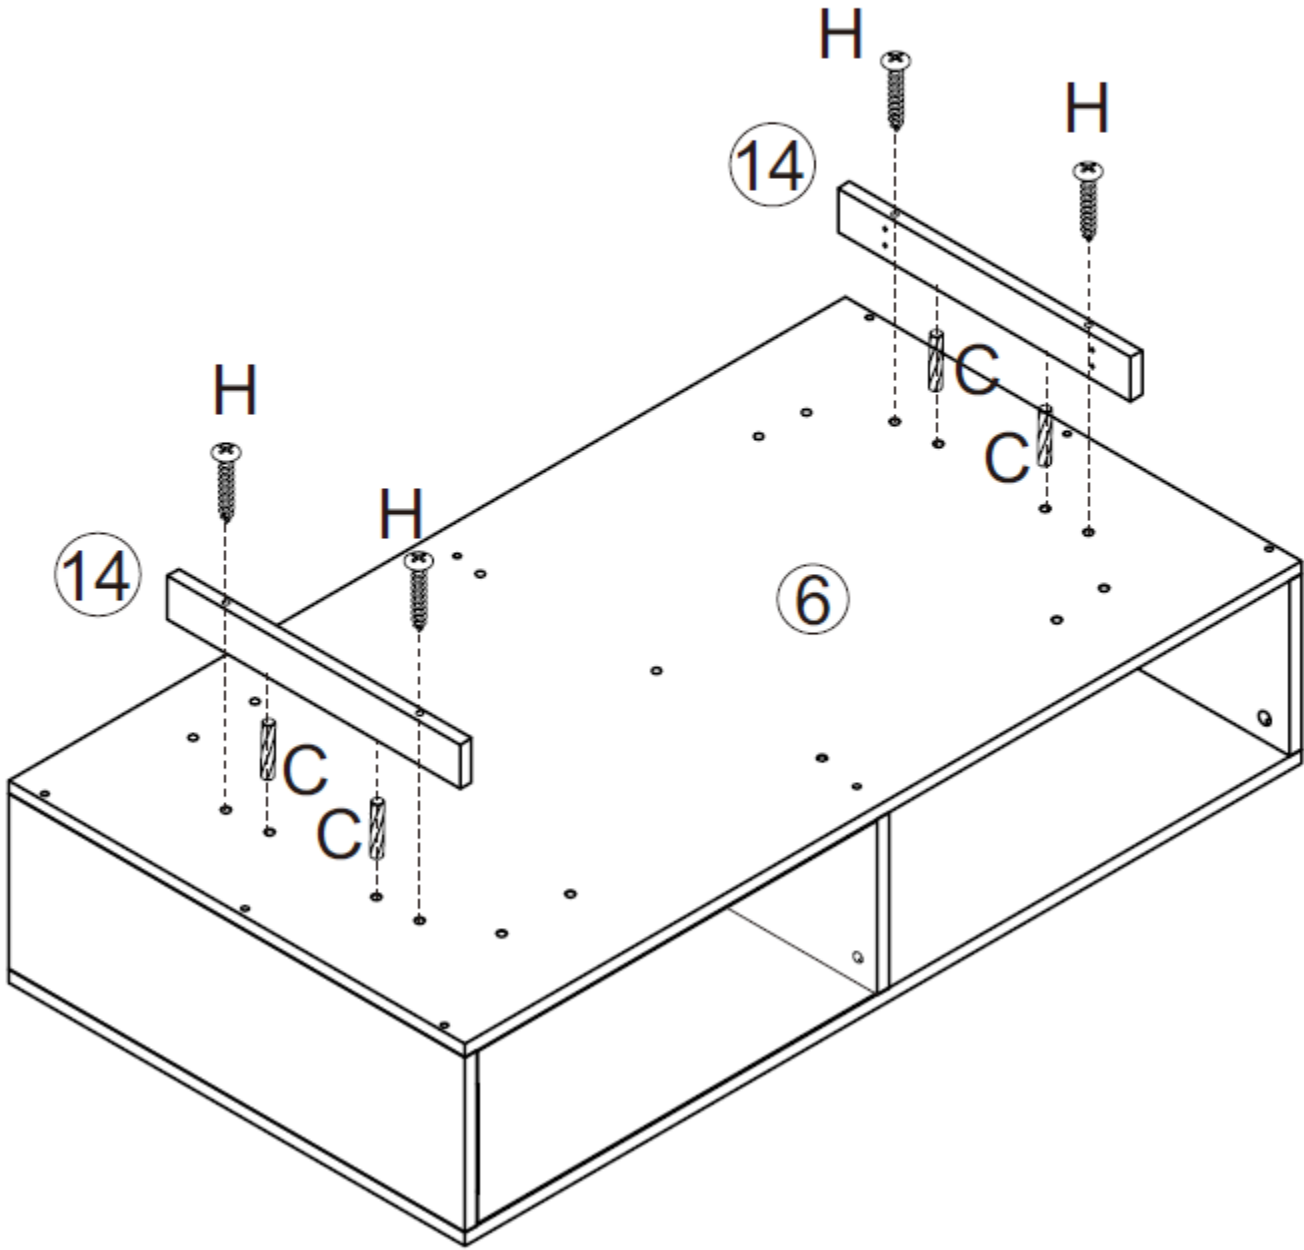 
Ⓒ x4	Ⓗ x4
	



Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828

Step 7: Connect panels 13 to panel 6 using hardware C and H.

 
 
Ⓒ x4	Ⓗ x6
	

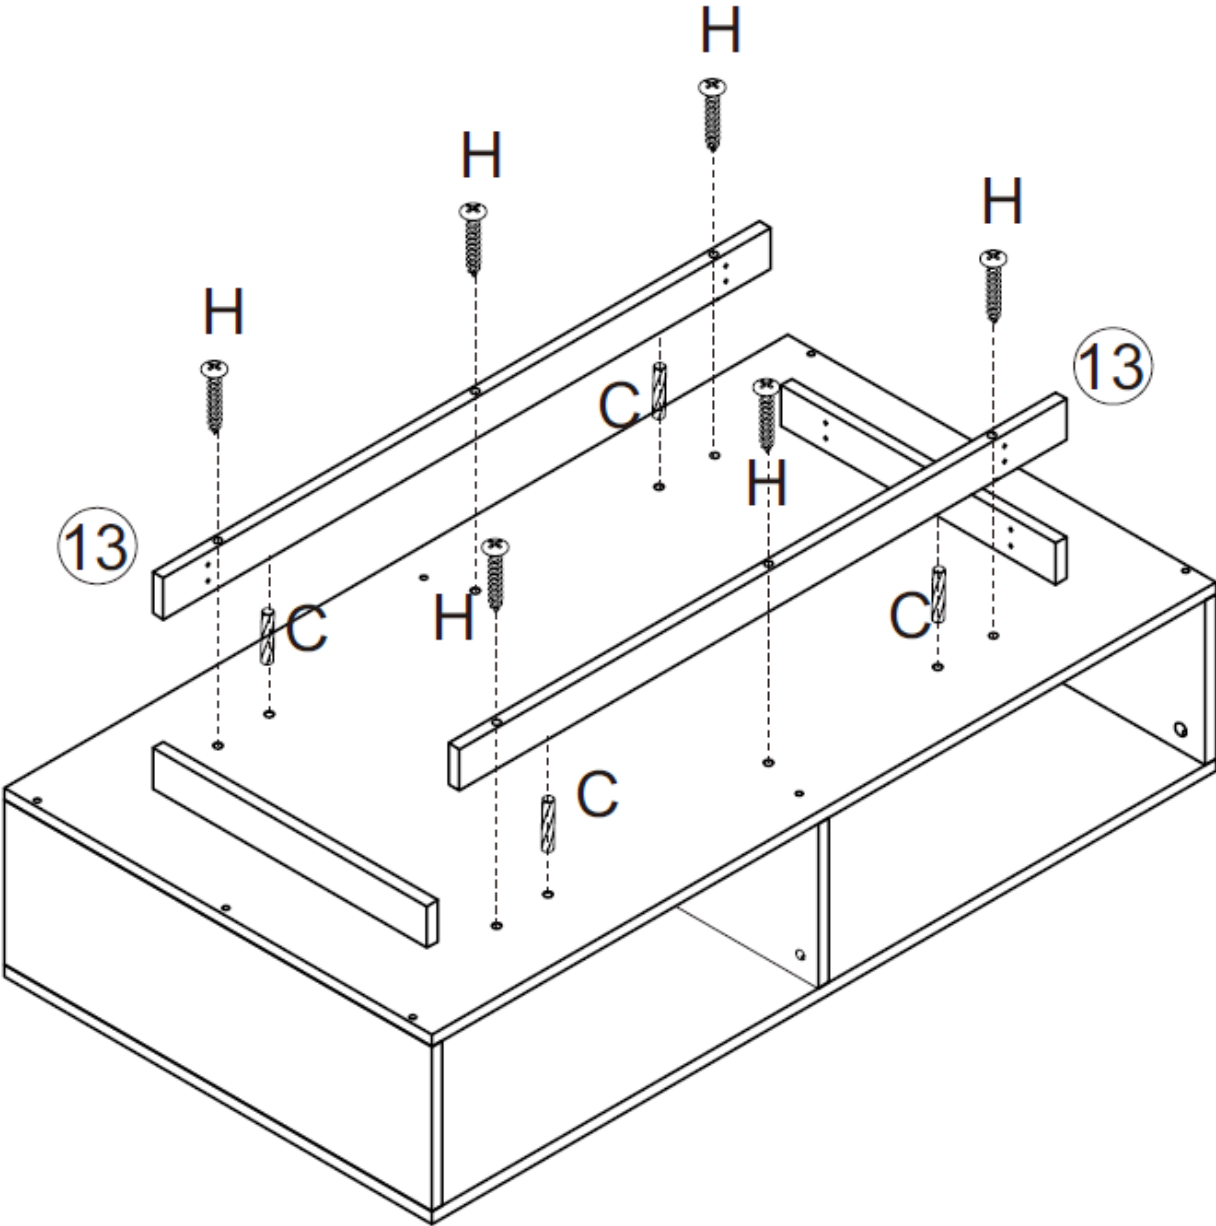

Product Name:	White Oak Finish Wood and Rattan TV Stand with Wood Legs
SKU #:	WHIF1828



Step 8: Attach panels 15 to the corners of assembled section 13 and 14 using hardware I.

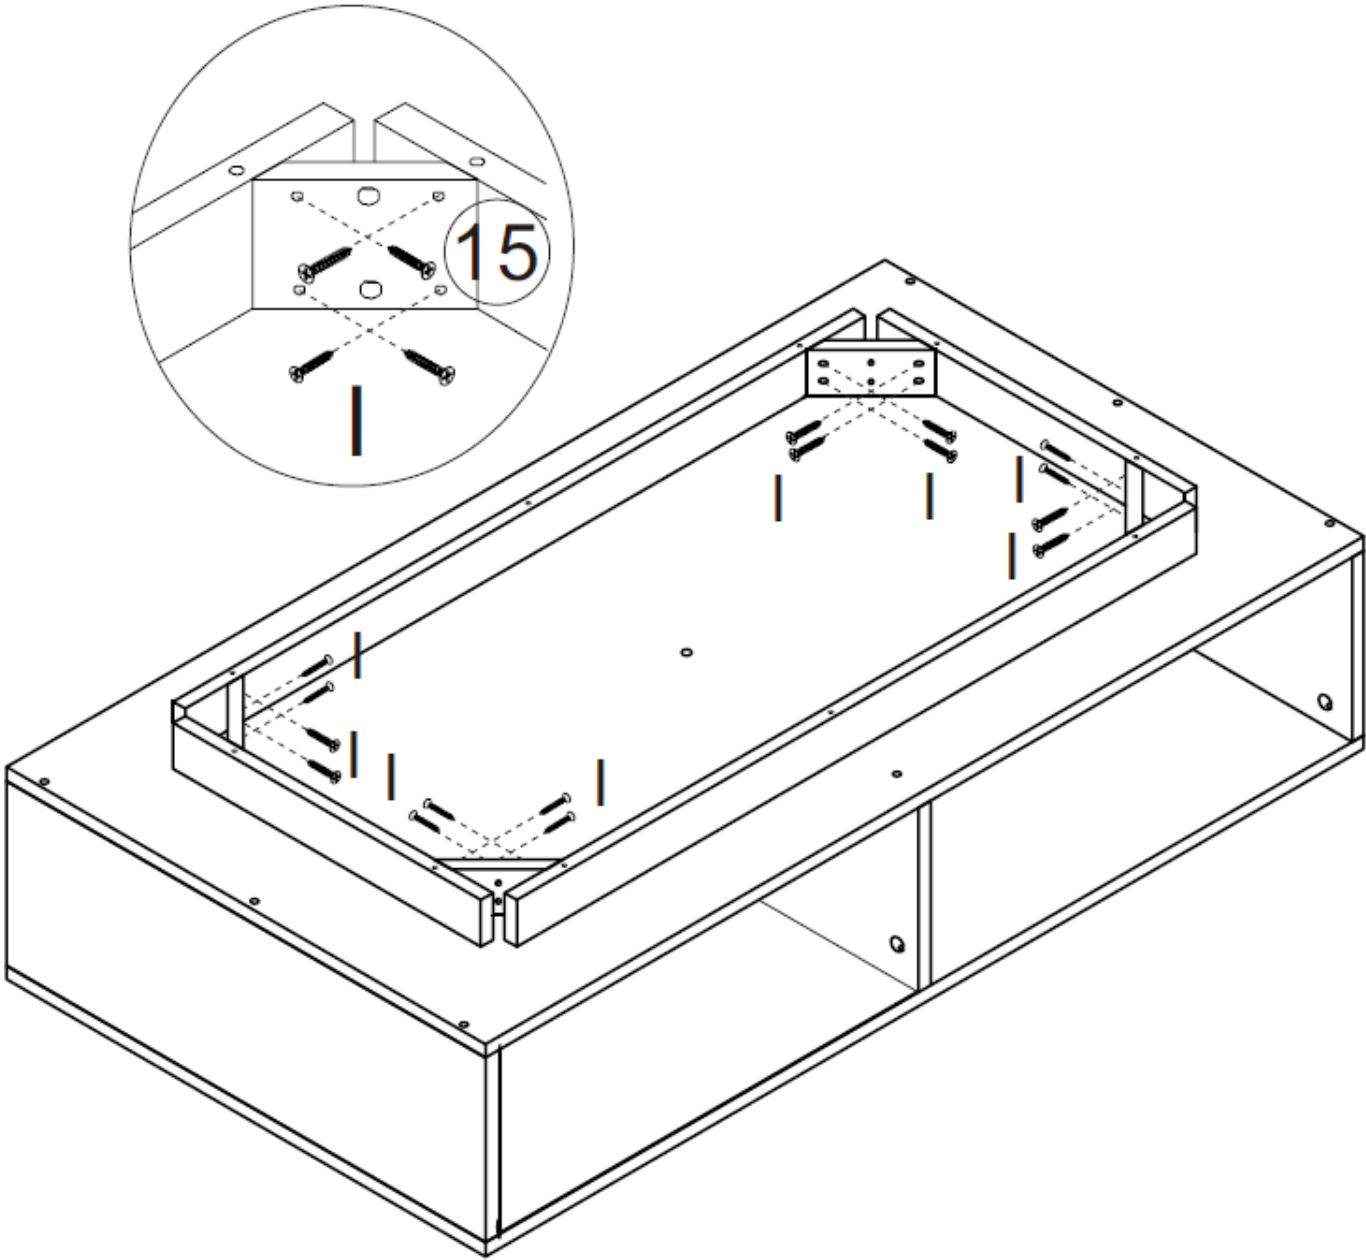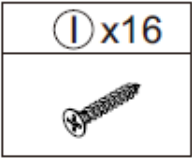 
1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15.



| | |
|----------------------|--|
| Product Name: | White Oak Finish Wood and Rattan TV Stand with Wood Legs |
| SKU #: | WHIF1828 |

 
Step 9: Attach the leg 12 (x 4) to panel 15 using hardware M and K.

| | |
|---|---|
| M x8 | K x8 |
|  |  |

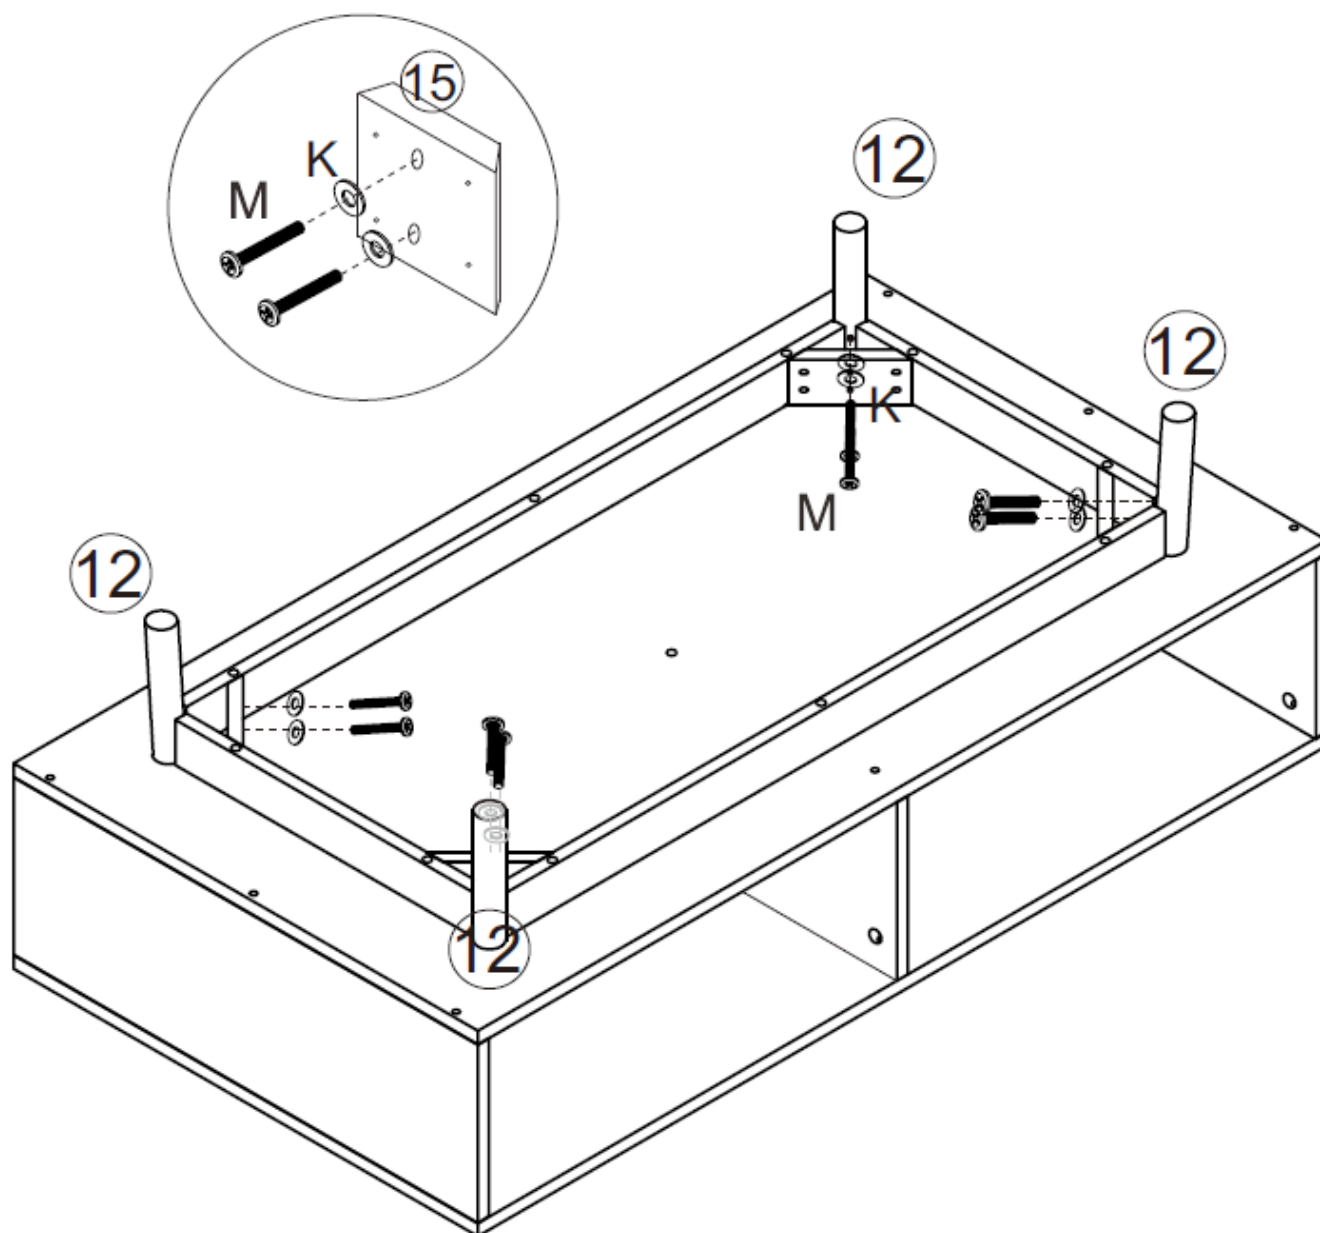




 
| | |
|----------------------|--|
| Product Name: | White Oak Finish Wood and Rattan TV Stand with Wood Legs |
| SKU #: | WHIF1828 |

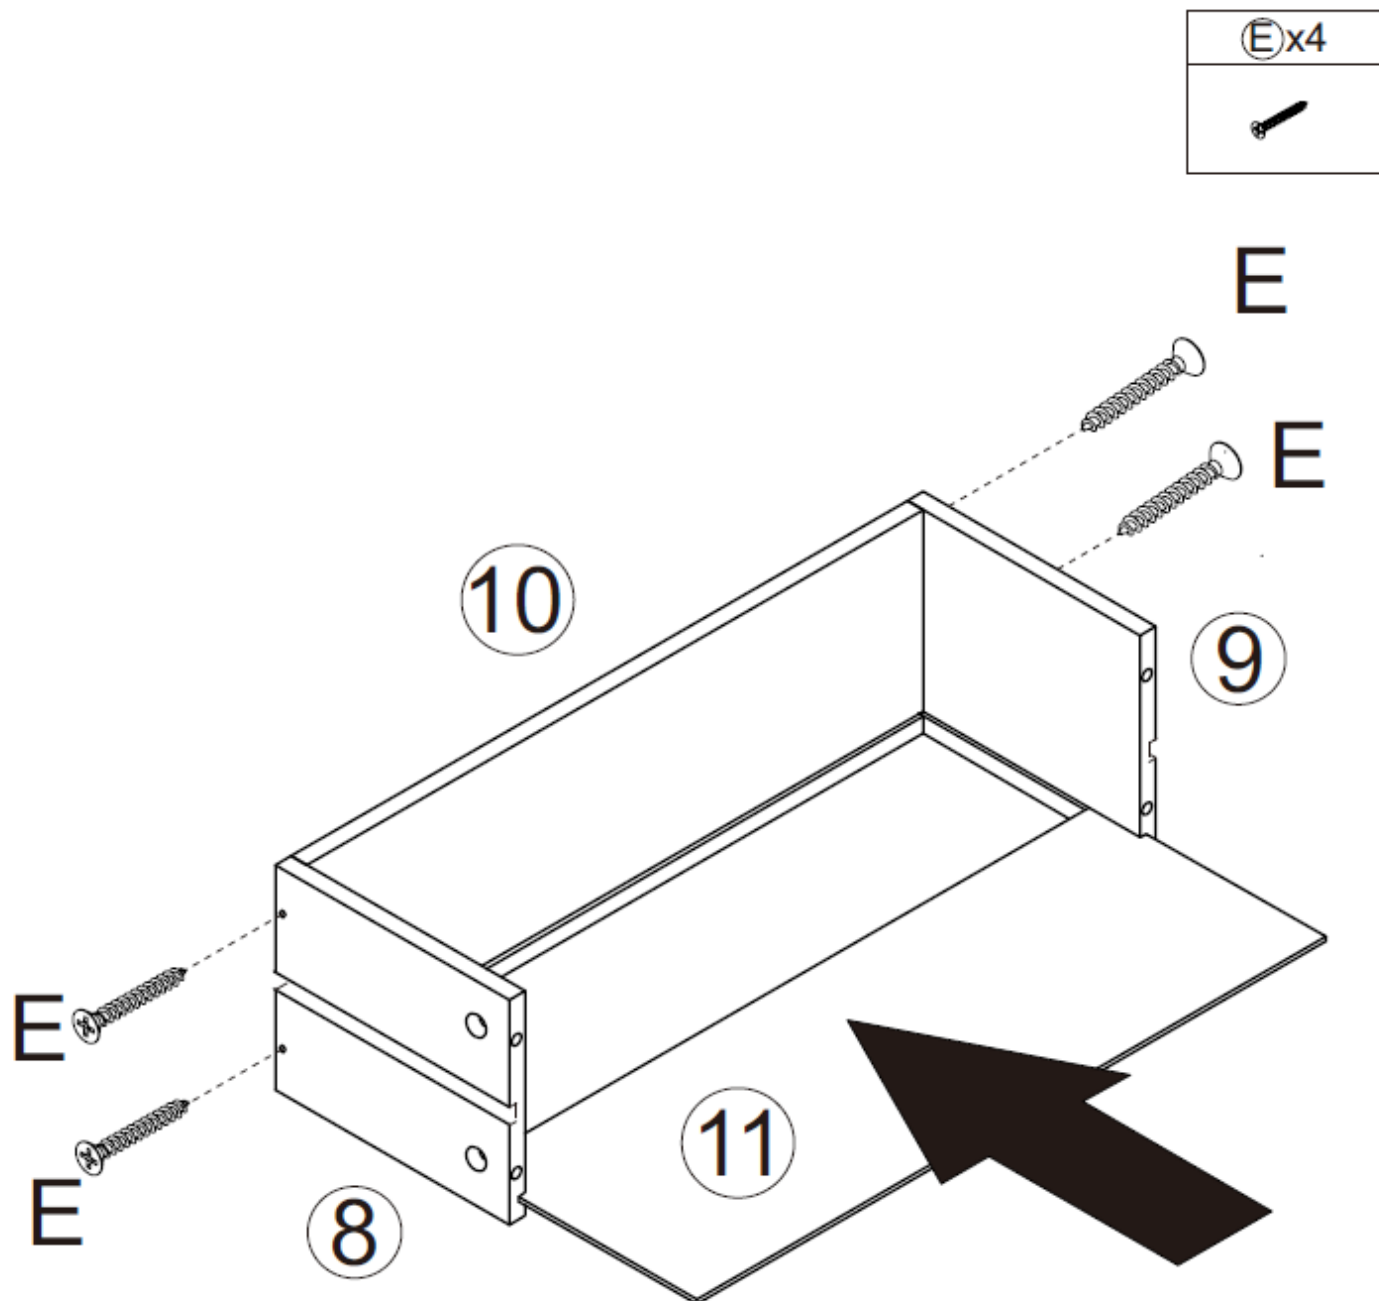 
Step 10: Attach panel 10 to panels 8 and 9 using hardware E. Slide panel 11 into the grooves of 8 and 9 until it fits into the groove of 10.



| | |
|----------------------|--|
| Product Name: | White Oak Finish Wood and Rattan TV Stand with Wood Legs |
| SKU #: | WHIF1828 |

Step 11: Connect drawer front 7 to the assembled section 8 and 9 using hardware A and B. Install hardware J to drawer front 7 using hardware L.

 
| | | | |
|---|--|---|---|
| Ⓐx4 | Ⓑx4 | ⒴x2 | Ⓐx1 |
|  |  |  |  |

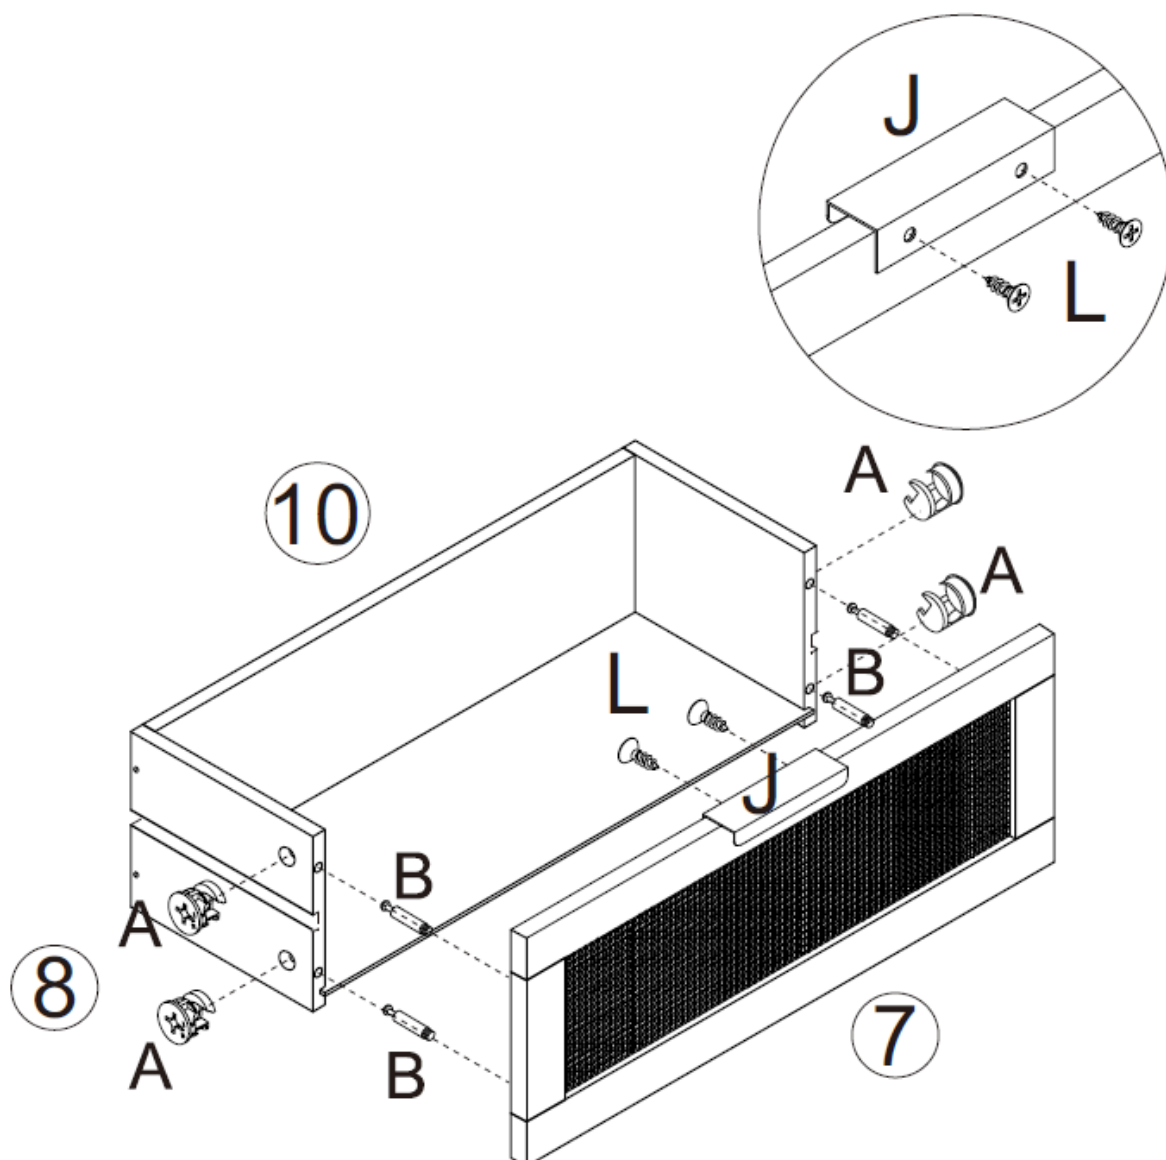

| | |
|----------------------|--|
| Product Name: | White Oak Finish Wood and Rattan TV Stand with Wood Legs |
| SKU #: | WHIF1828 |

 
 
Step 12: Carefully flip the stand right side up. Stretch out hardware F.

THIS STEP TO BE ACCOMPLISHED
BY TWO PERSONS

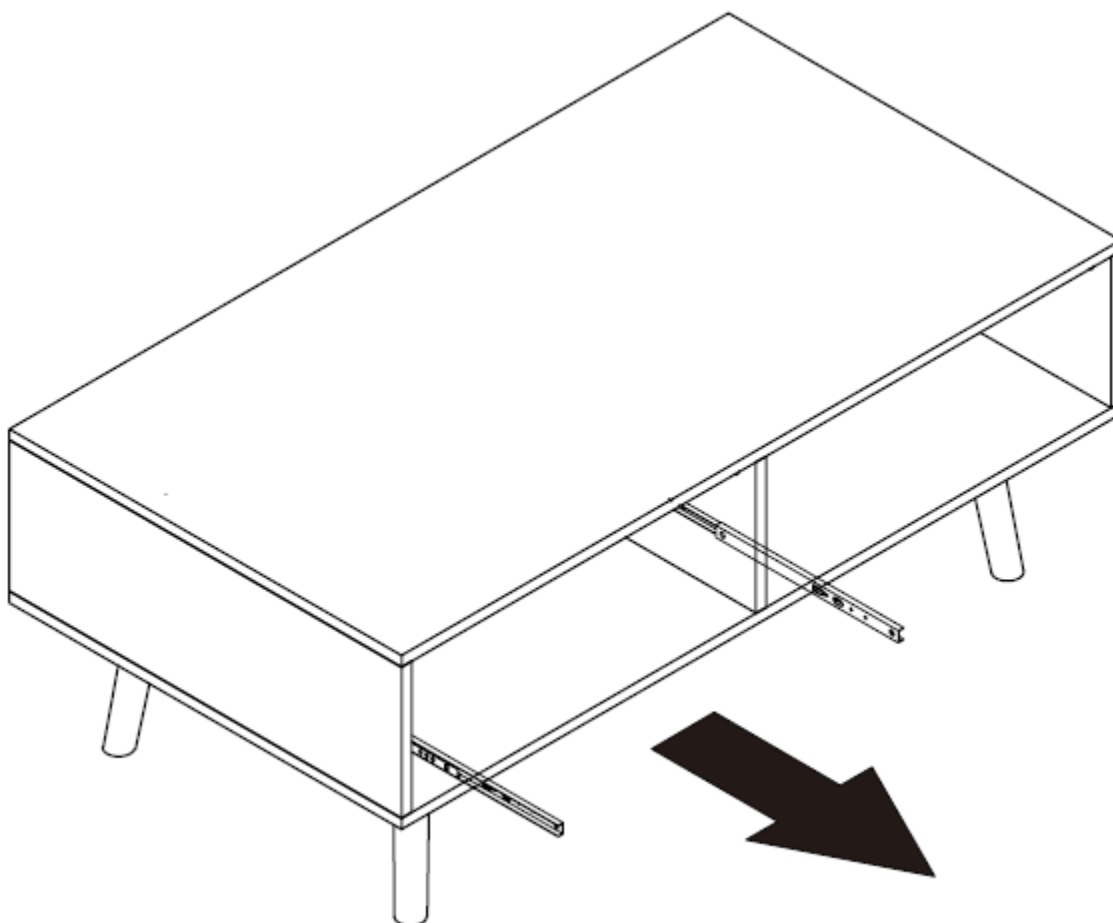

| | |
|----------------------|--|
| Product Name: | White Oak Finish Wood and Rattan TV Stand with Wood Legs |
| SKU #: | WHIF1828 |

Step 13: Attach drawer to hardware F (drawer rails) using hardware G.

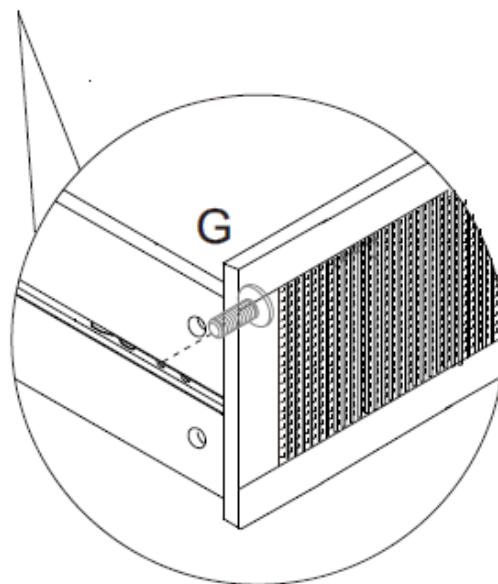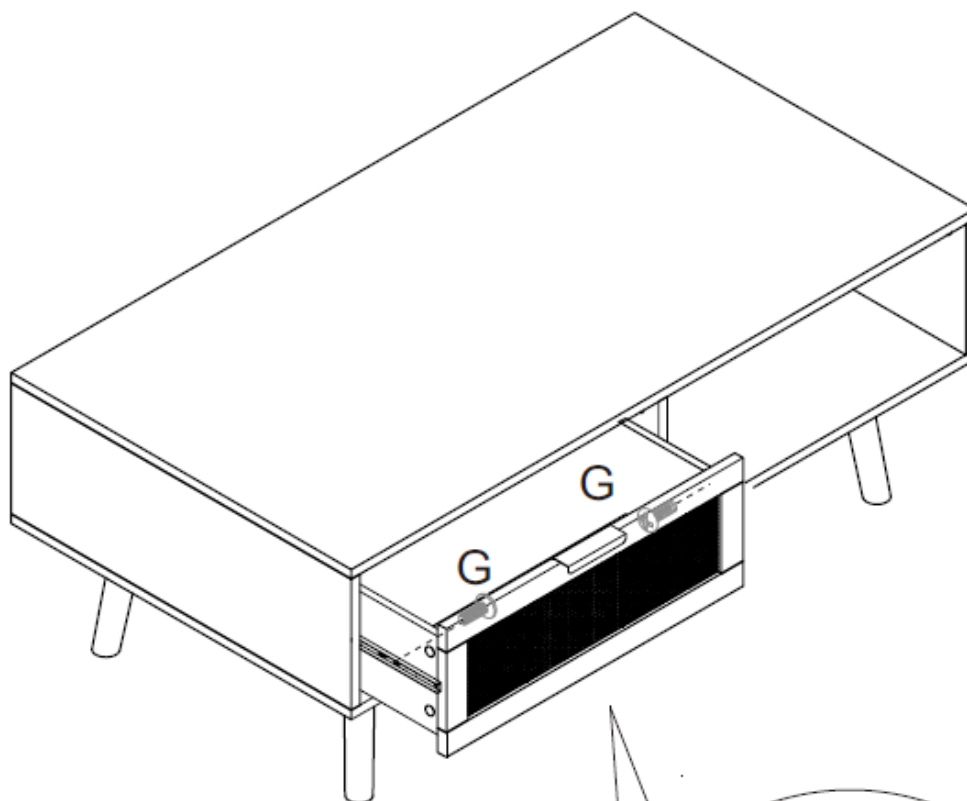

Warning: DO NOT stand on the TV stand as this may damage the product and cause serious bodily injury.