
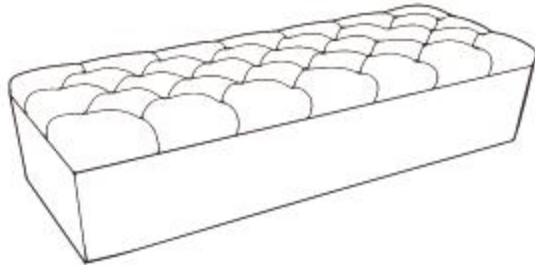
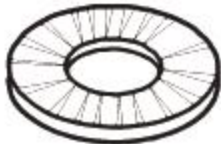


PARTS LIST

NO	DESCRIPTION		QTY
A	Top Frame		1
B	Leg		4
C	Plastic Washer		4

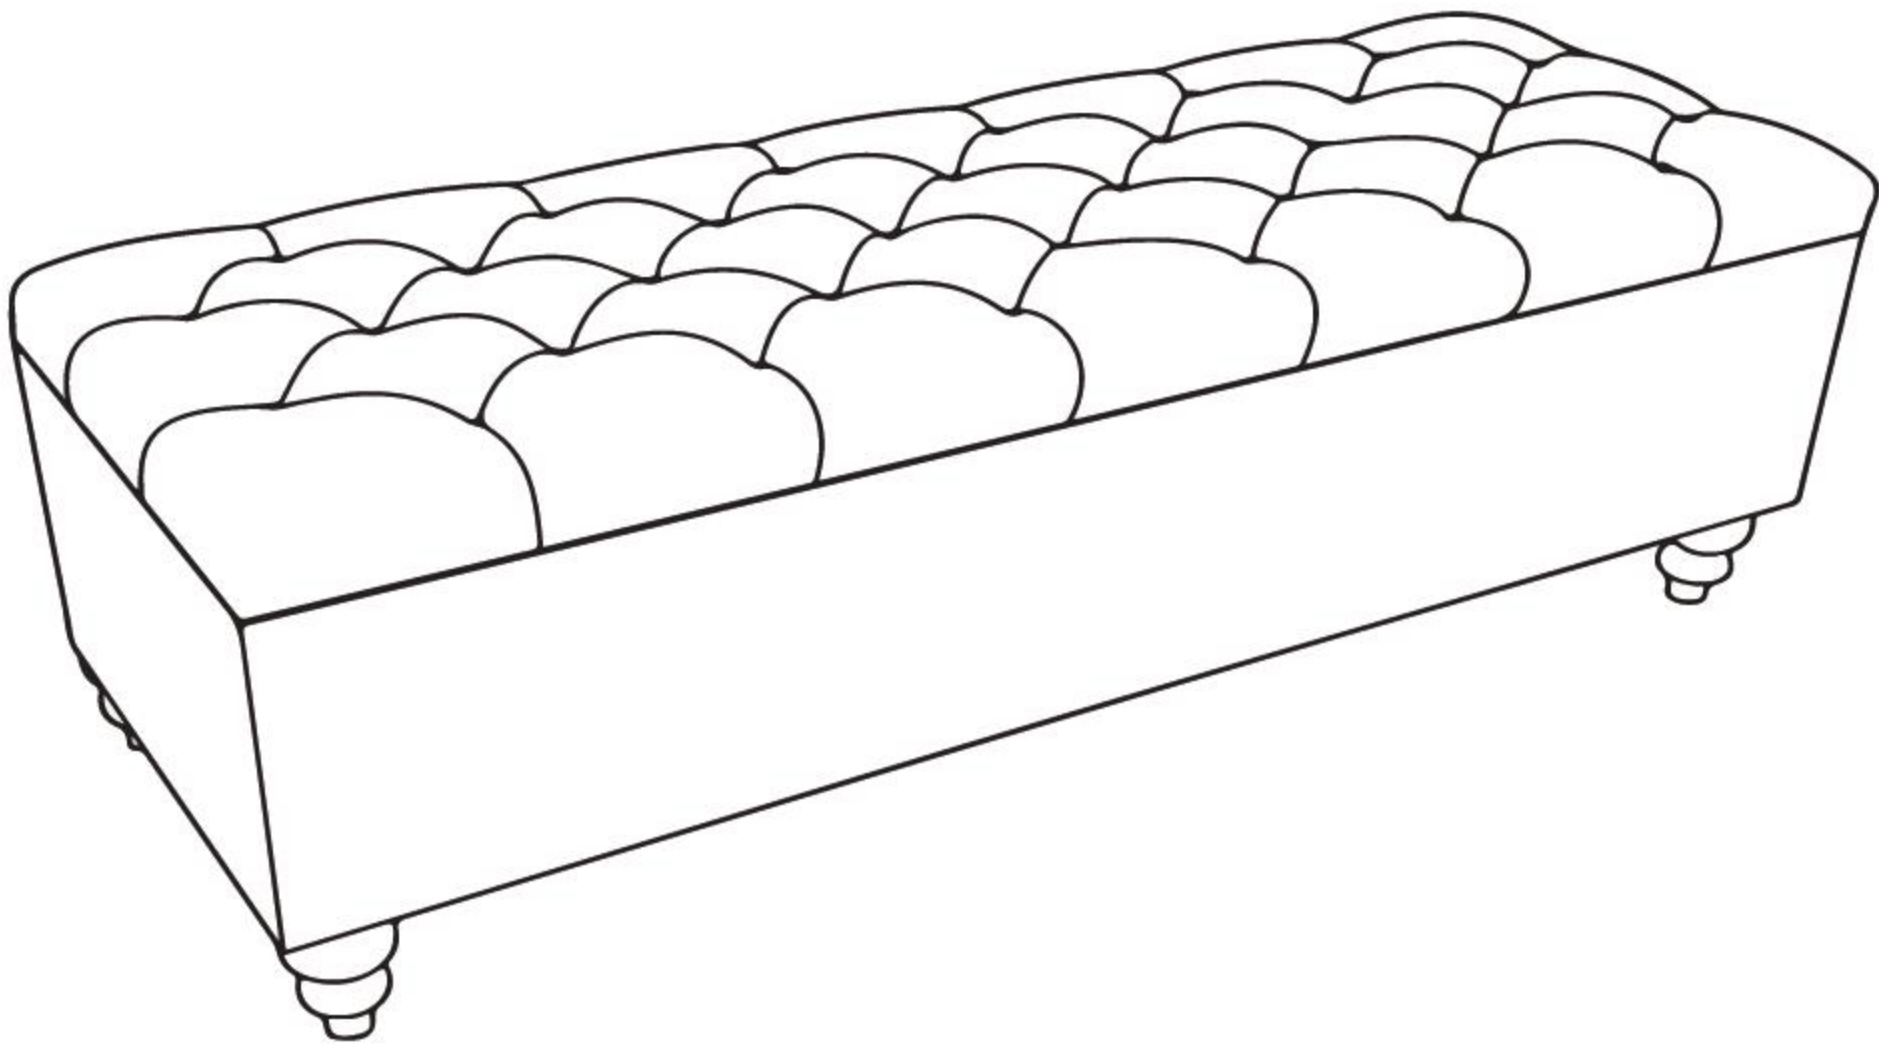

STEP1

Carefully take out the legs(B) and hardwares(C) from inside of top frame(A), be aware of the staples that fixed the rope.



**BE CAREFUL
STAPLES!**

STEP2

Rotate the legs (B) with hardware (C) into the holes as shown below.

