

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

701702
TV CONSOLE

ITEM:701702



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 65"




PARTS IDENTIFICATION

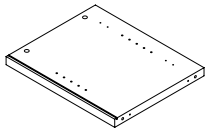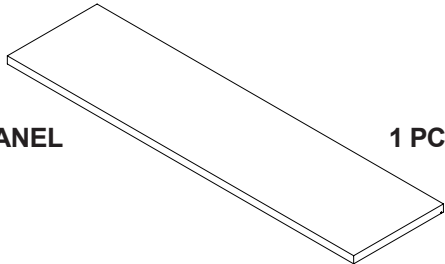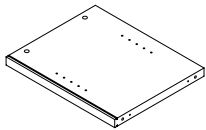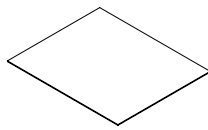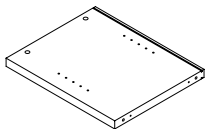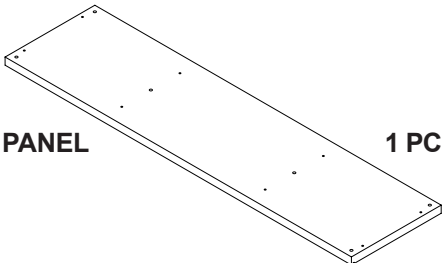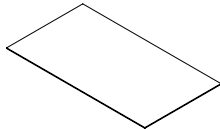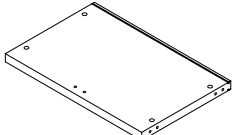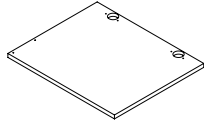A	LEFT SIDE PANEL		1 PC	G	ADJUSTABLE PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	H	TOP PANEL		1 PC
C	LEFT DIVIDER PANEL		1 PC	I	BACK PANEL		2 PCS
D	RIGHT DIVIDER PANEL		1 PC	J	UPPER BACK PANEL		1 PC
E	BOTTOM PANEL		1 PC	K	LOWER BACK PANEL		1 PC
F	CROSS PANEL		1 PC	L	LARGE LEFT DOOR		1 PC

    

 
 
 


 
 
 
 

 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

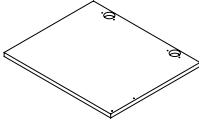ITEM: **701702**

M	LARGE RIGHT DOOR		1 PC	O	SMALL RIGHT DOOR		1 PC
N	SMALL LEFT DOOR		1 PC				

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HANDLE SCREW φ3x15mm BLK		8 PCS
2	WOODEN DOWEL φ8x30mm		20 PCS	10	HINGE φ35mm SR		8 SET
3	CAM BOLT φ7x35.5mm SR		12 PCS	11	HINGE SCREW φ4x15mm SR		32 PCS
4	CAM LOCK φ15x12mm SR		12 PCS	12	FOOT φ35xH19mm		6 PCS
5	BOLT φ9.5x55mm SR		8 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF φ4.9x8mm SR		8 PCS	14	FIXER SCREW φ3x19mm SR		6 PCS
7	DOOR CATCH		3 PCS	15	STICKER φ20mm		2 PCS
8	HANDLE L=120mm BLK		4 PCS				

Z8,Z10,Z12 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: 701702

COASTER
FINE FURNITURE

STEP 1

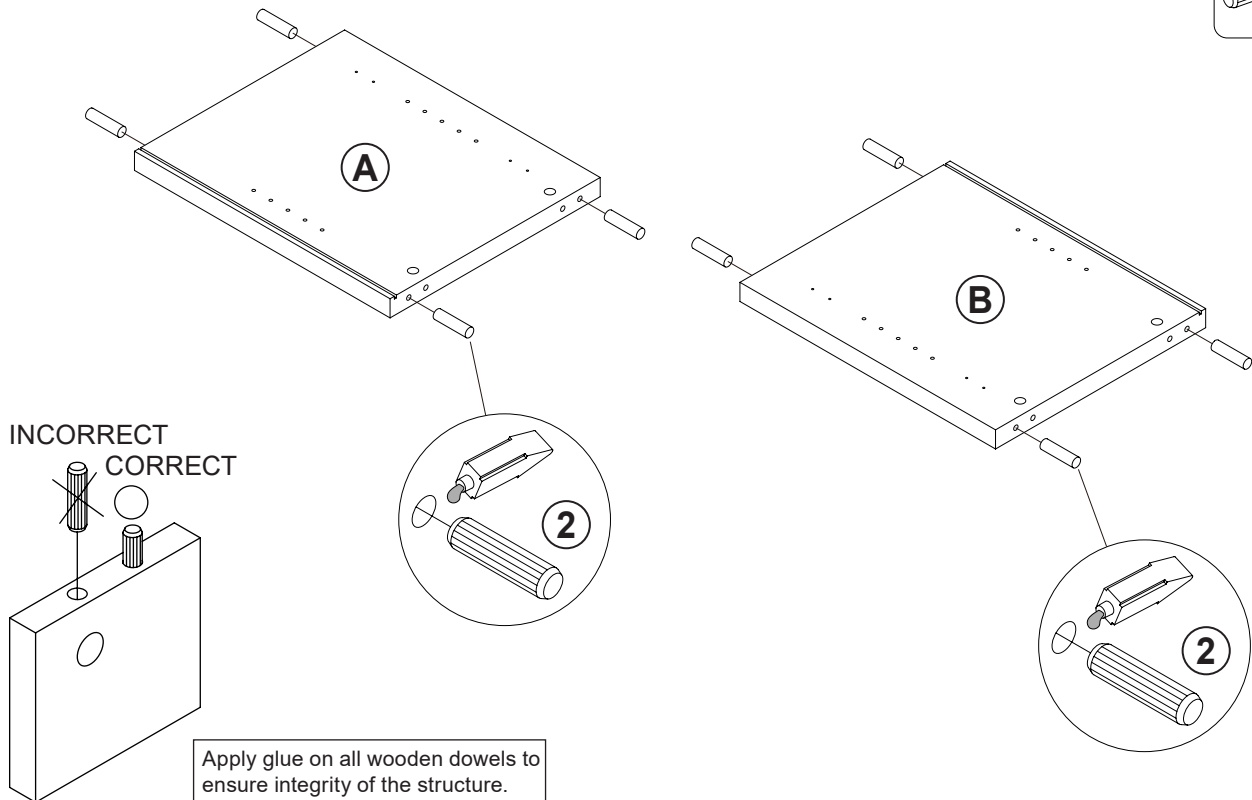

   
STEP 2

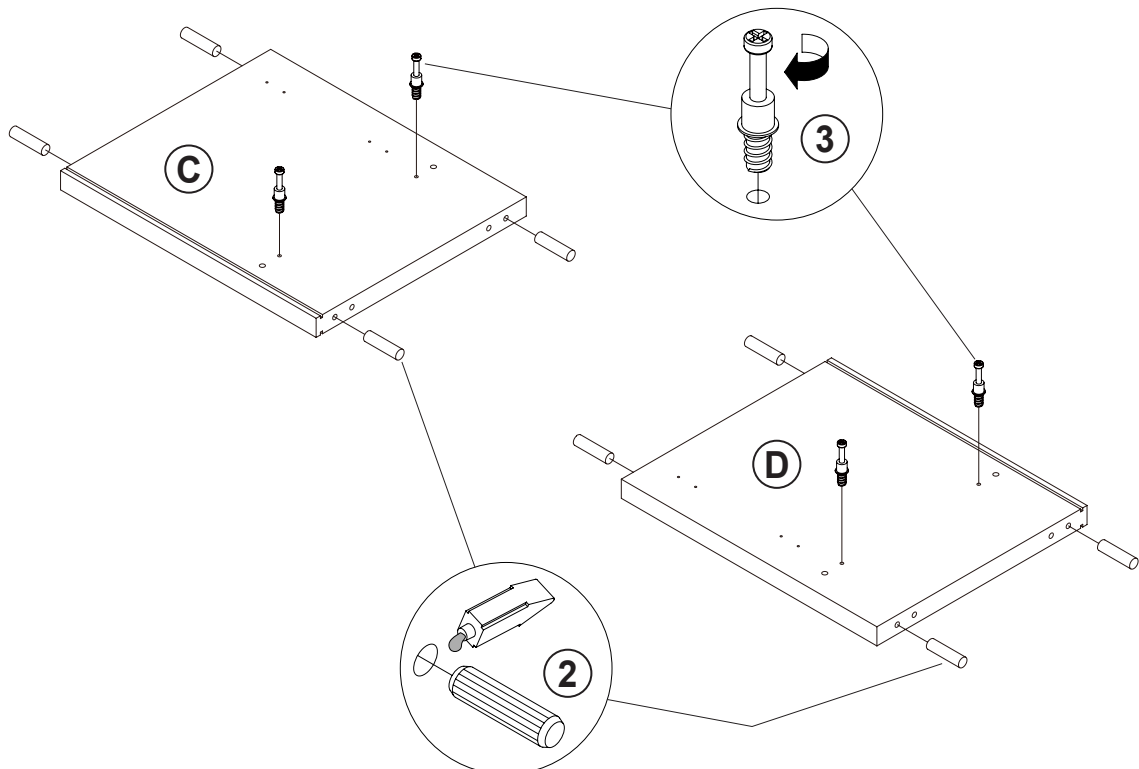


ITEM: 701702

COASTER
FINE FURNITURE

 STEP 3

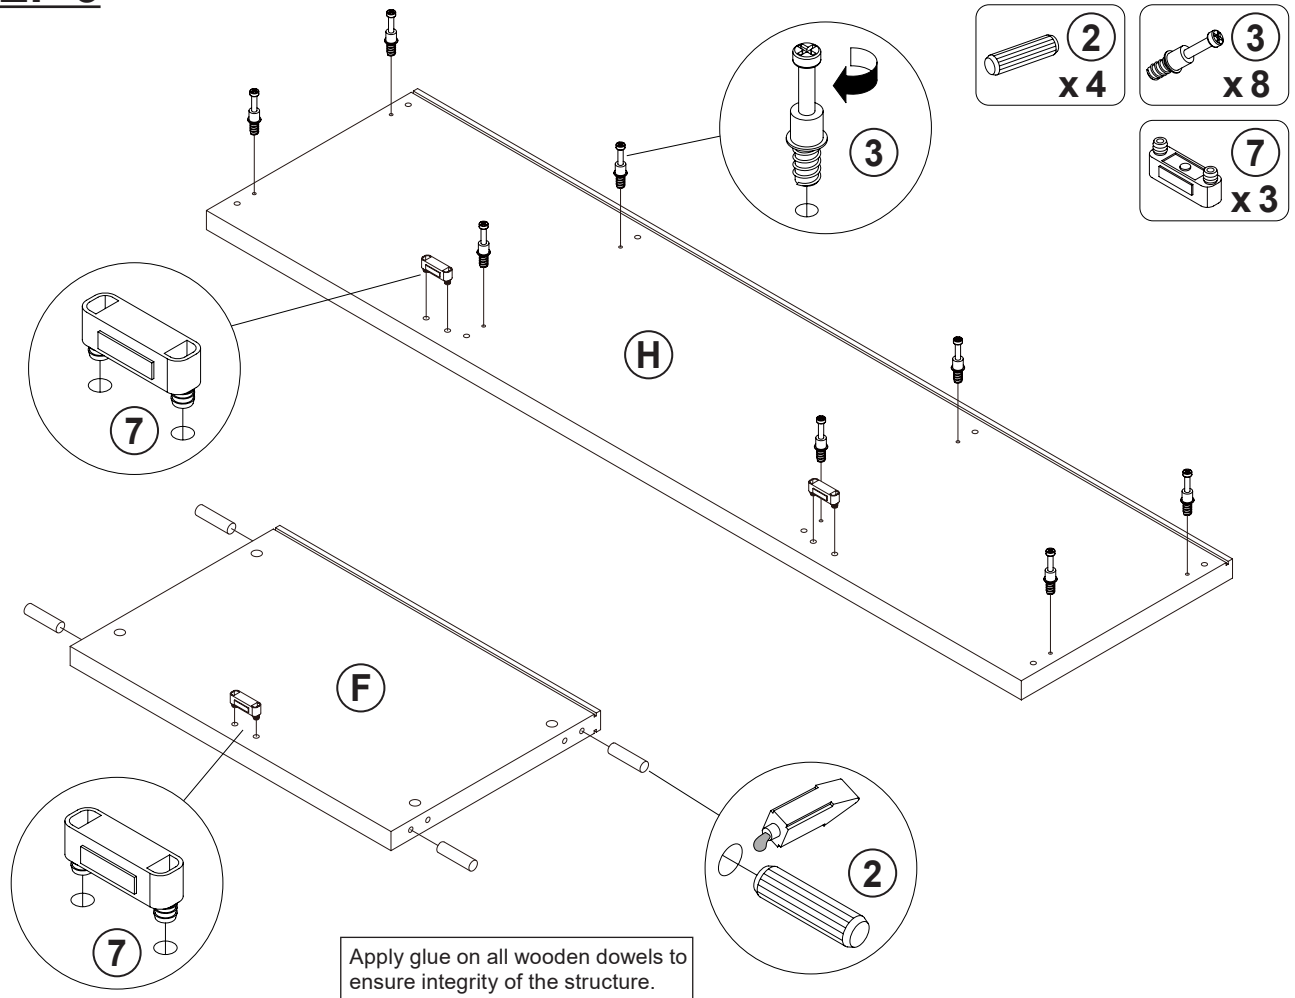

 
STEP 4

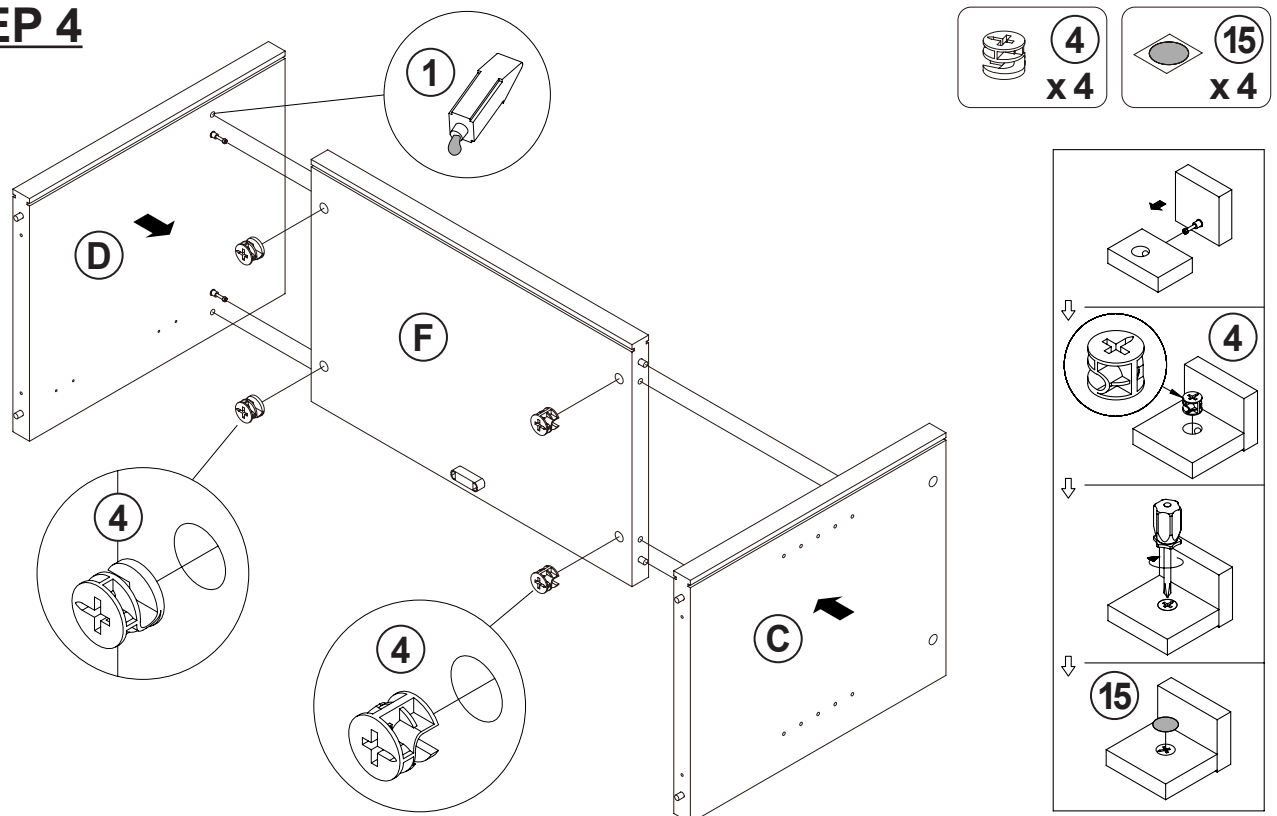


ITEM: 701702

COASTER
FINE FURNITURE

 STEP 5

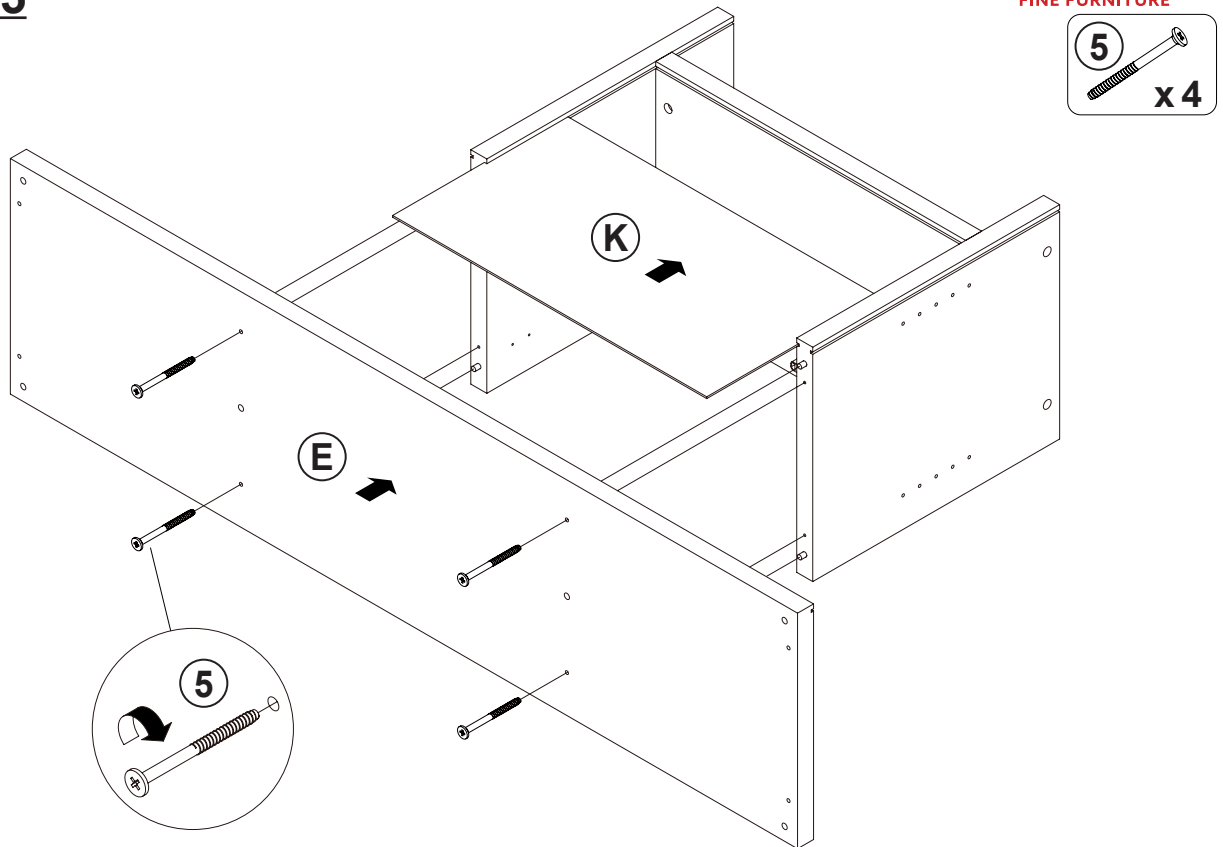


 
STEP 6

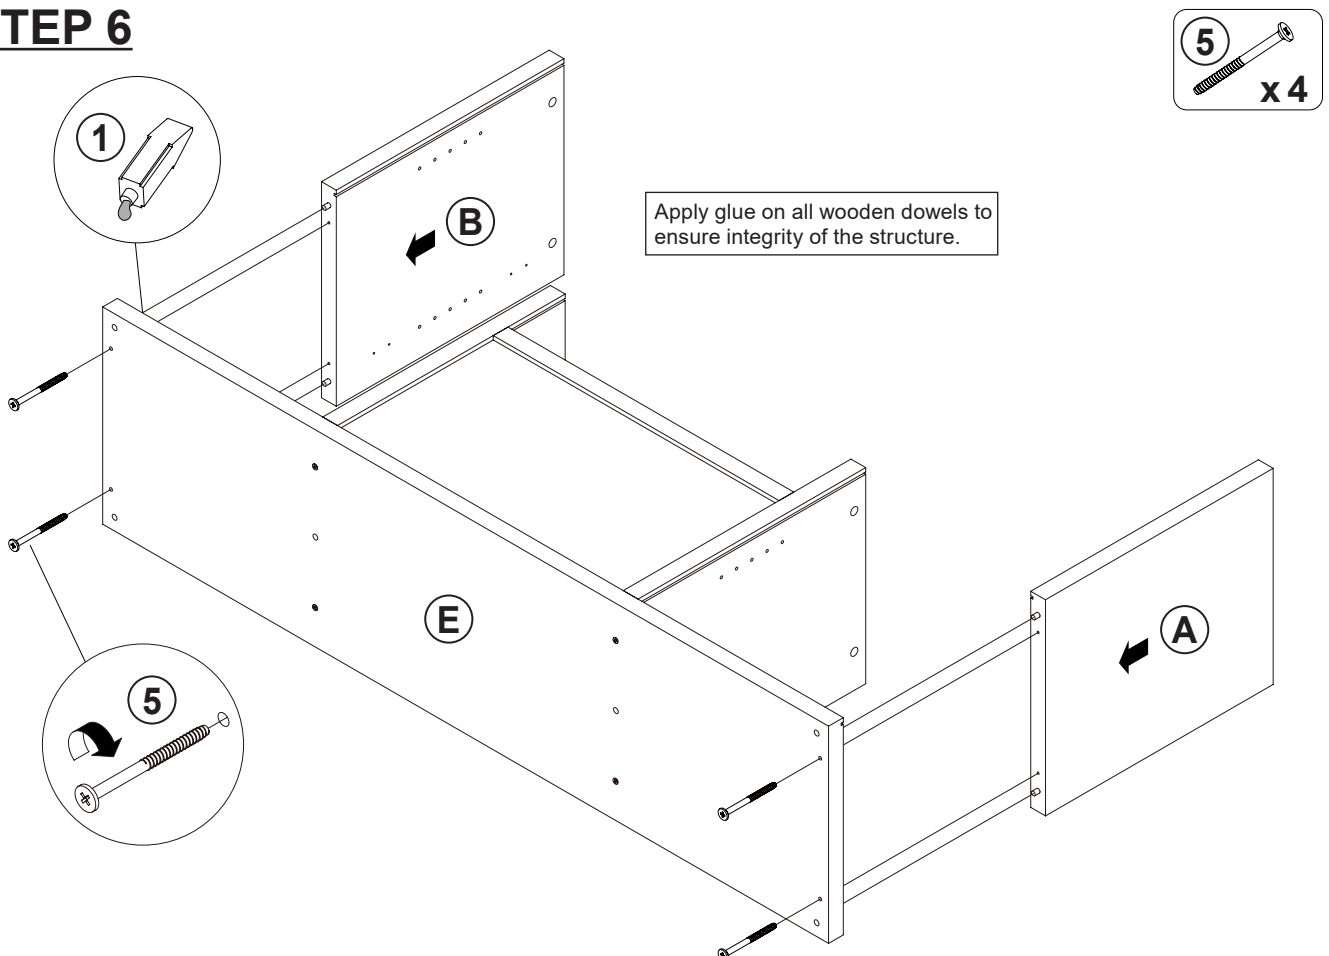




ITEM: **701702**

COASTER
FINE FURNITURE

  STEP 7

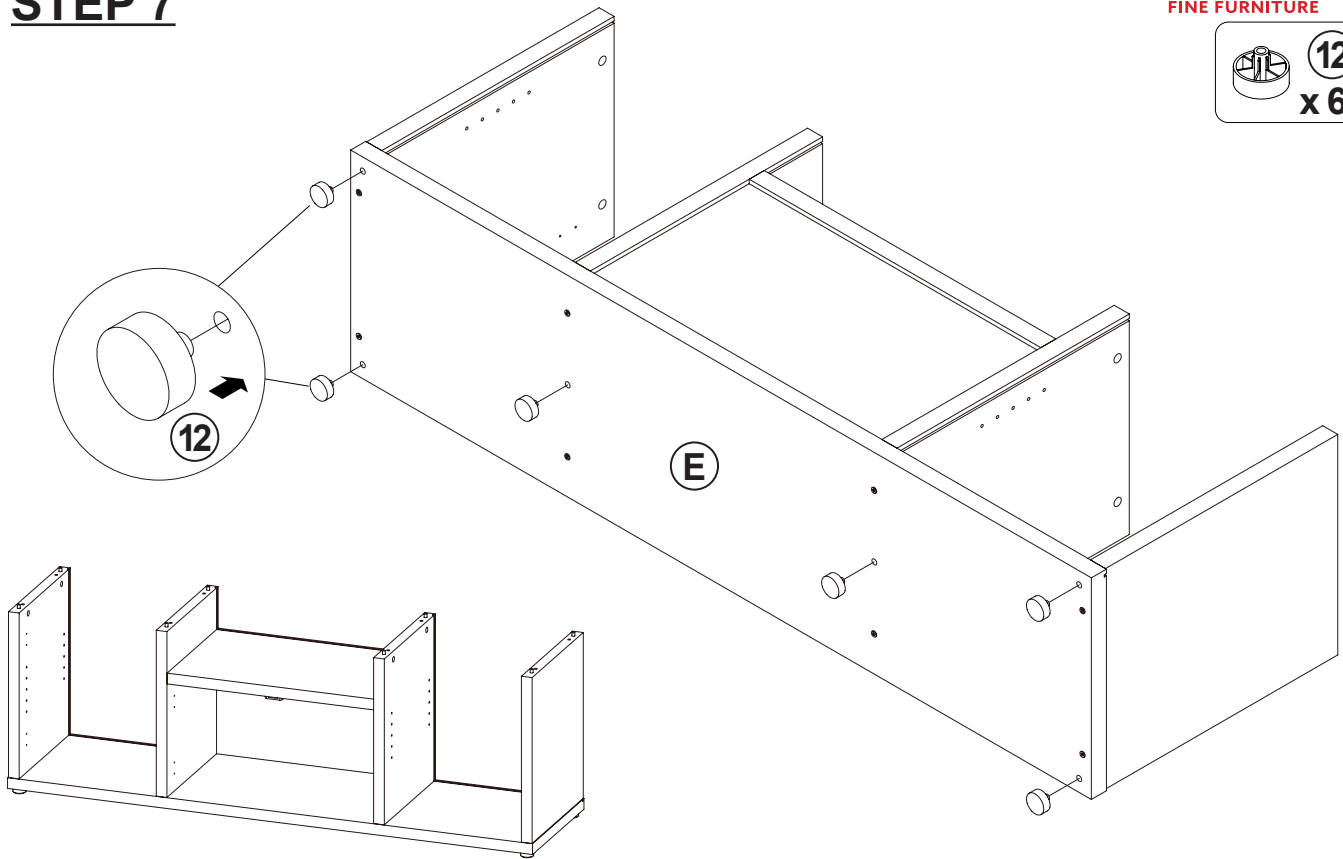

   
STEP 8

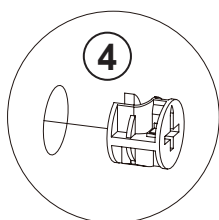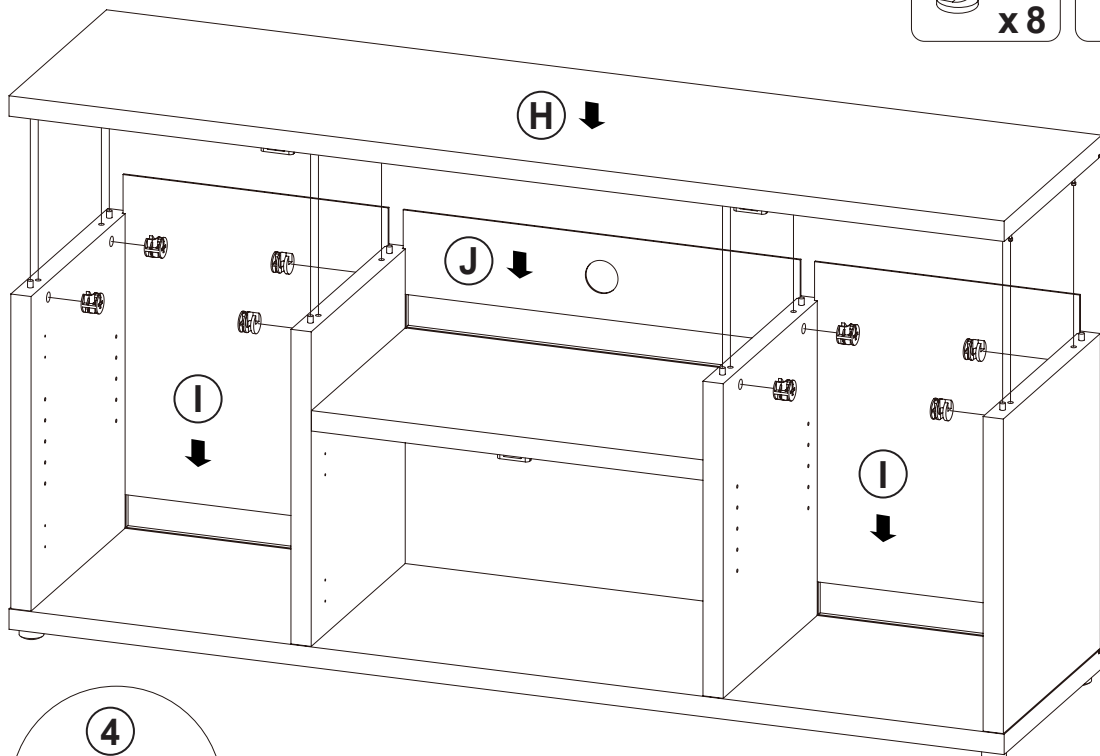


ITEM: 701702

STEP 9

 COASTER
FINE FURNITURE

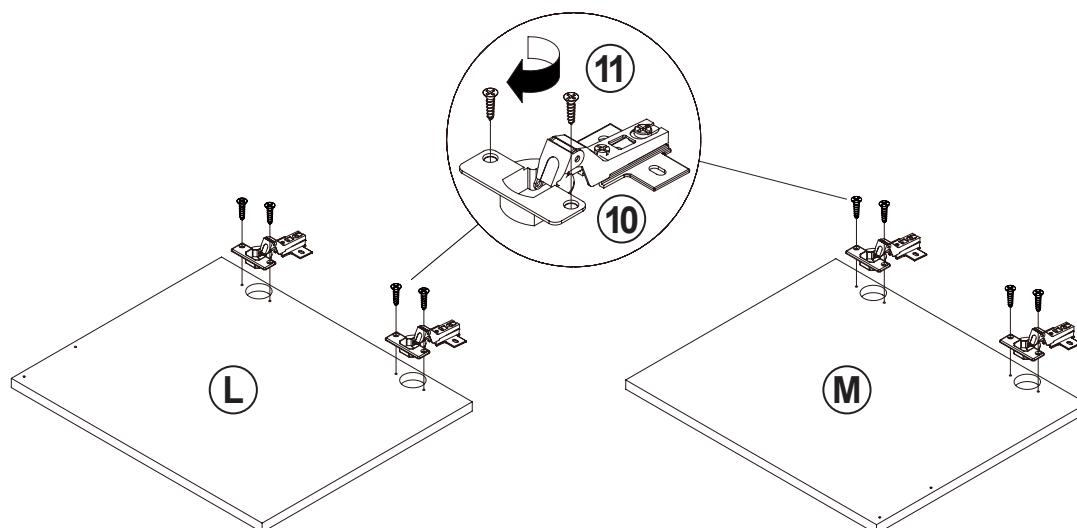



 
STEP 10

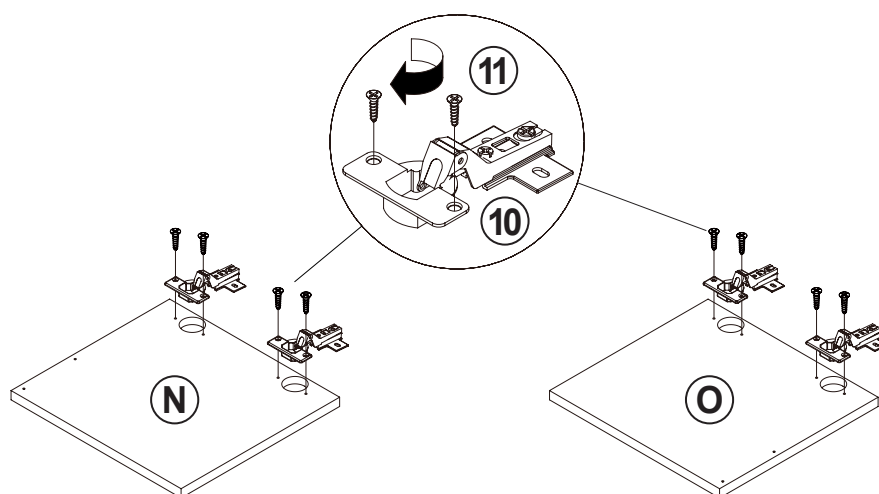


ITEM: **701702**

COASTER
FINE FURNITURE

   
STEP 11

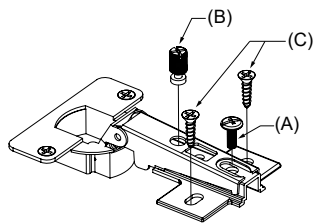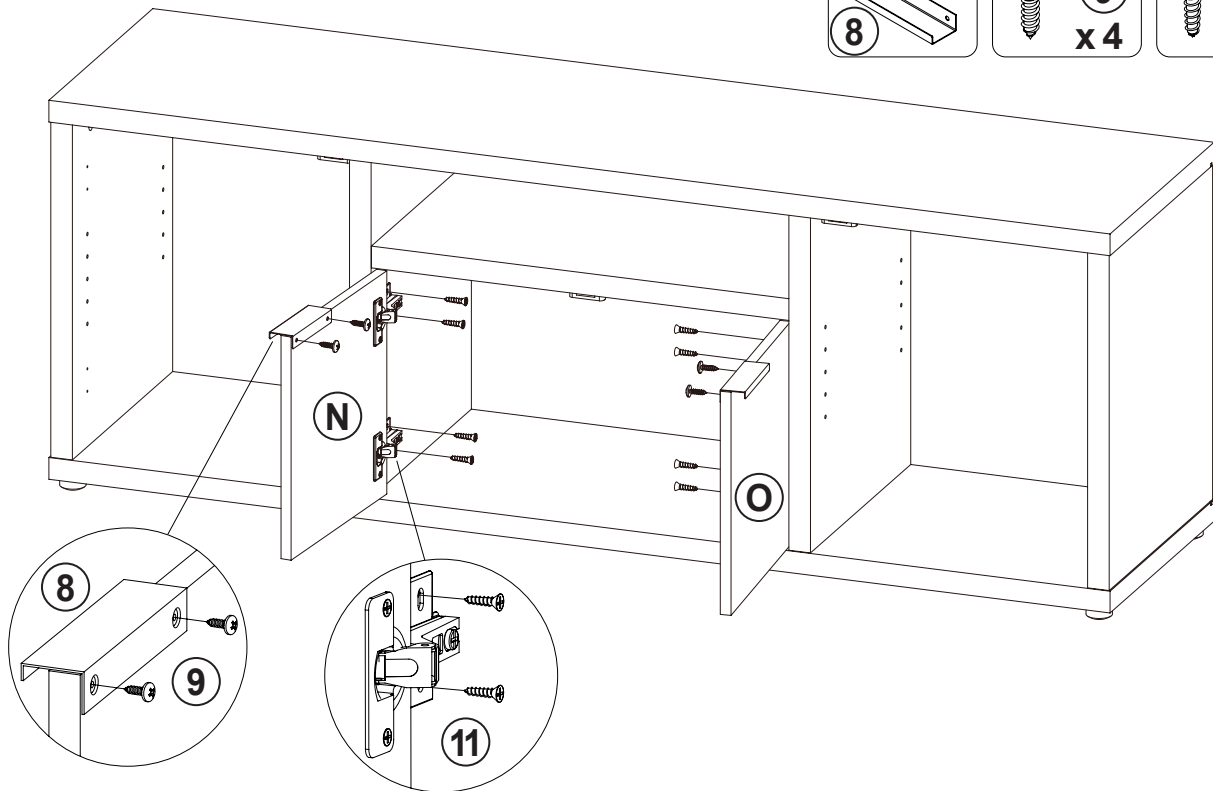


HORIZONTAL BY
SCREW A ADJUSTMENT

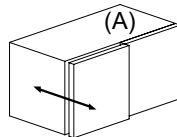 




LATERAL BY
SCREW B ADJUSTMENT

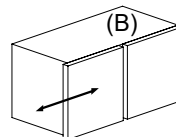 

VERTICAL BY
SCREW C ADJUSTMENT

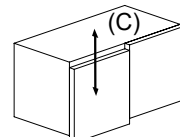 



 
 
 
STEP 12

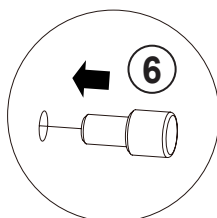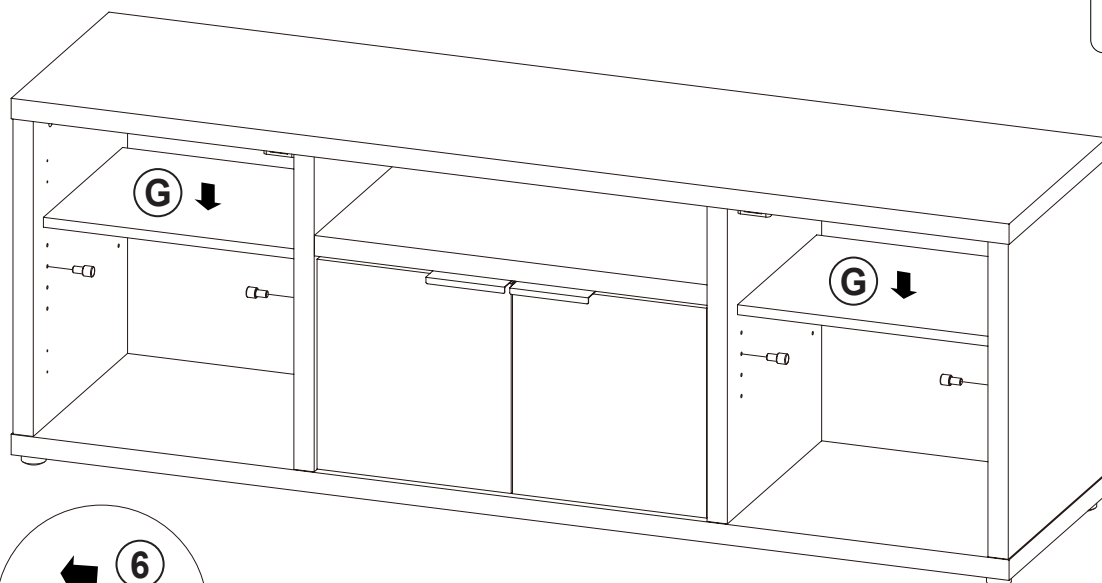

ITEM: 701702

COASTER
FINE FURNITURE

   
 
 
STEP 13

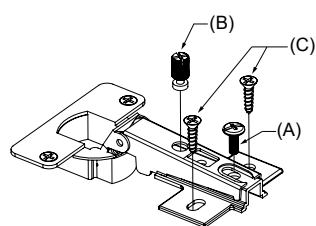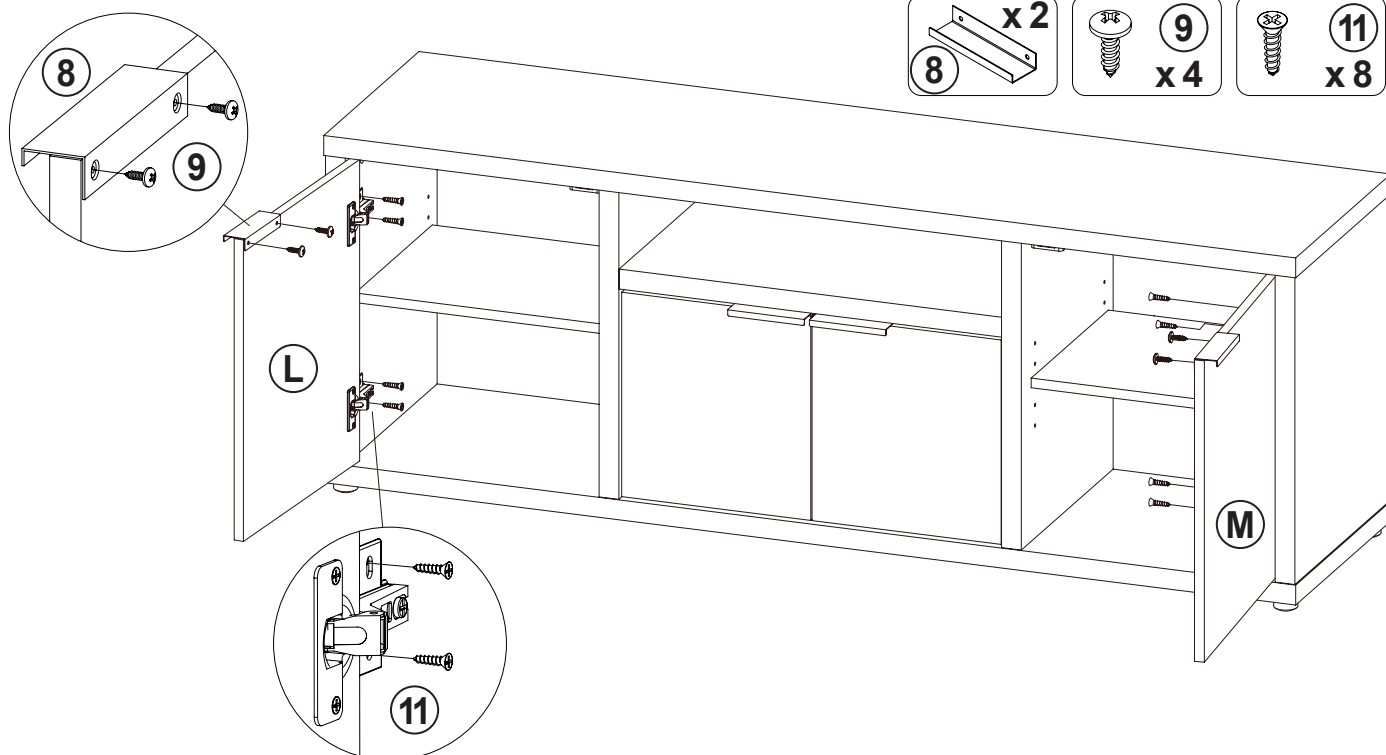



HORIZONTAL BY
SCREW A ADJUSTMENT

LATERAL BY
SCREW B ADJUSTMENT

   
VERTICAL BY
SCREW C ADJUSTMENT

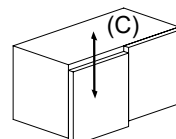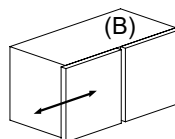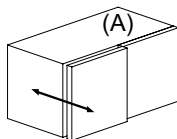

  STEP 14

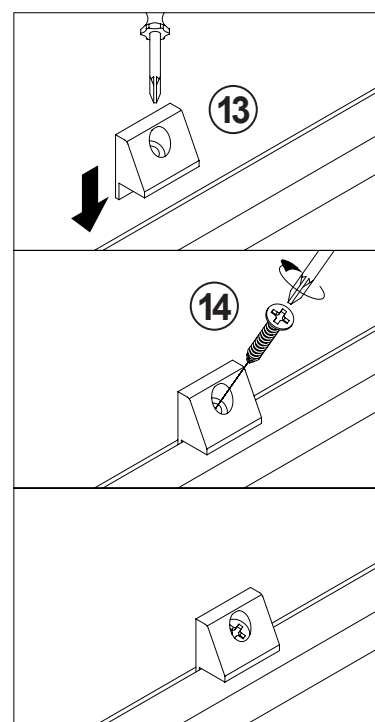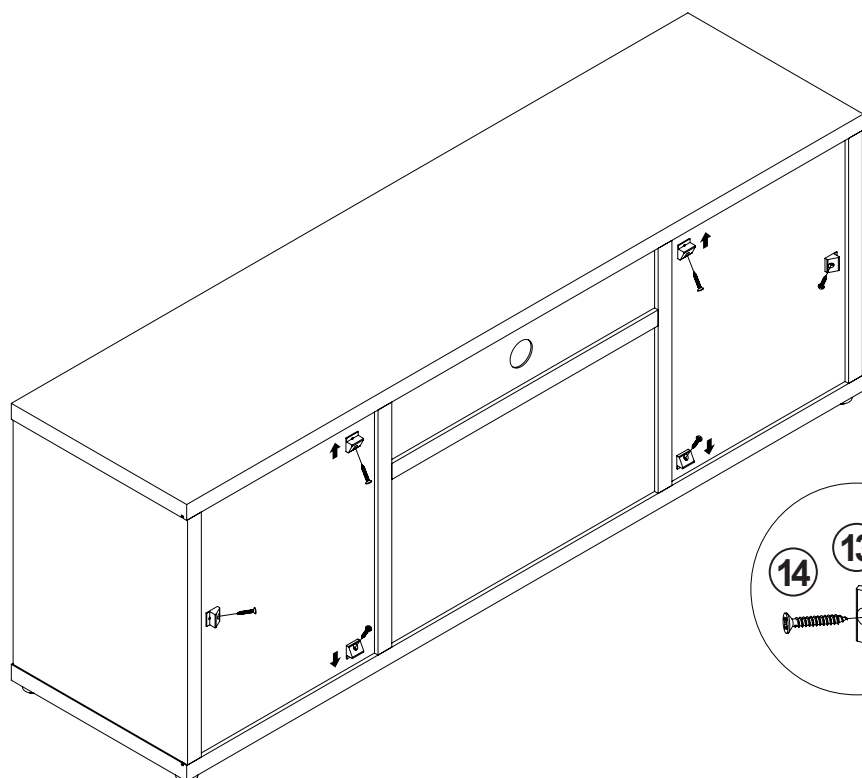

ITEM: 701702

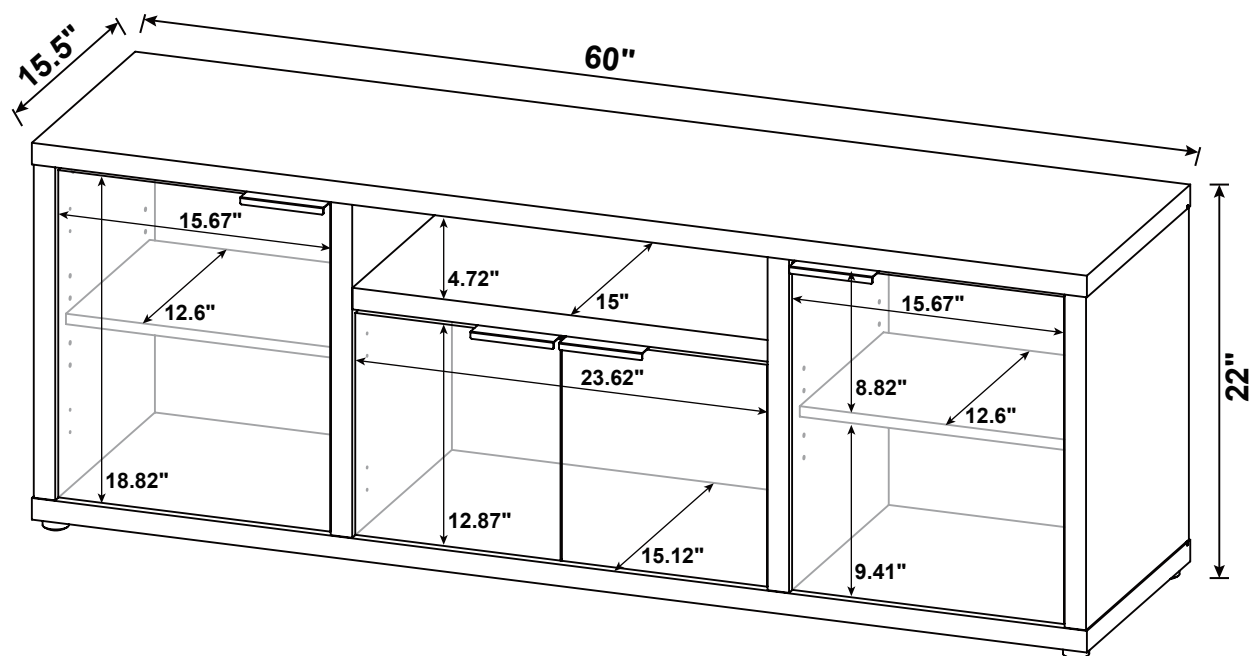 

Note : Dimension tolerance $\pm 5\%$

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

701703
MEDIA TOWER

ITEM:701703



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!











1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

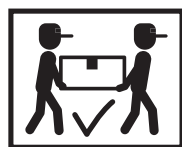

ASSEMBLY TIME

50 MINUTES

          PARTS IDENTIFICATION

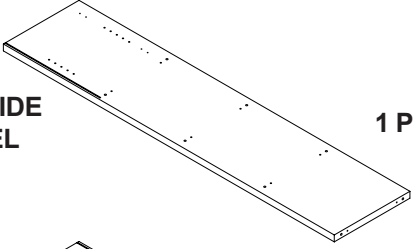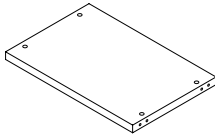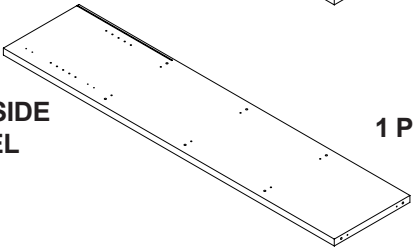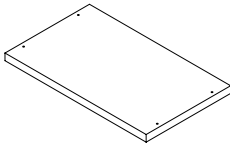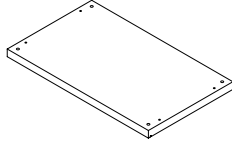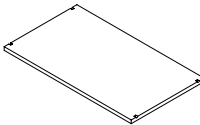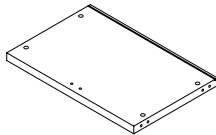 

 
 
 
 

 
 



 
 
 
A	LEFT SIDE PANEL		1 PC	F	UPPER CROSS PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	G	TOP PANEL		1 PC
C	BOTTOM PANEL		1 PC	H	BACK PANEL		2 PCS
D	ADJUSTABLE PANEL		1 PC	I	LEFT DOOR		1 PC
E	LOWER CROSS PANEL		1 PC	J	RIGHT DOOR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701703

HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HANDLE SCREW φ3x15mm BLK		4 PCS
2	WOODEN DOWEL φ8x30mm		20 PCS	10	HINGE φ35mm SR		4 PCS
3	CAM BOLT φ7x35.5mm SR		12 PCS	11	HINGE SCREW φ4x15mm SR		16 PCS
4	CAM LOCK φ15x12mm SR		12 PCS	12	FOOT φ35xH19mm		4 PCS
5	BOLT φ9.5x55mm SR		8 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF φ4.9x8mm SR		4 PCS	14	FIXER SCREW φ3x19mm SR		6 PCS
7	DOOR CATCH		1 PC	15	STICKER φ20mm		2 PCS
8	HANDLE L=120mm BLK		2 PCS				

Z8,Z10,Z12 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 701703

STEP 1




COASTER
FINE FURNITURE

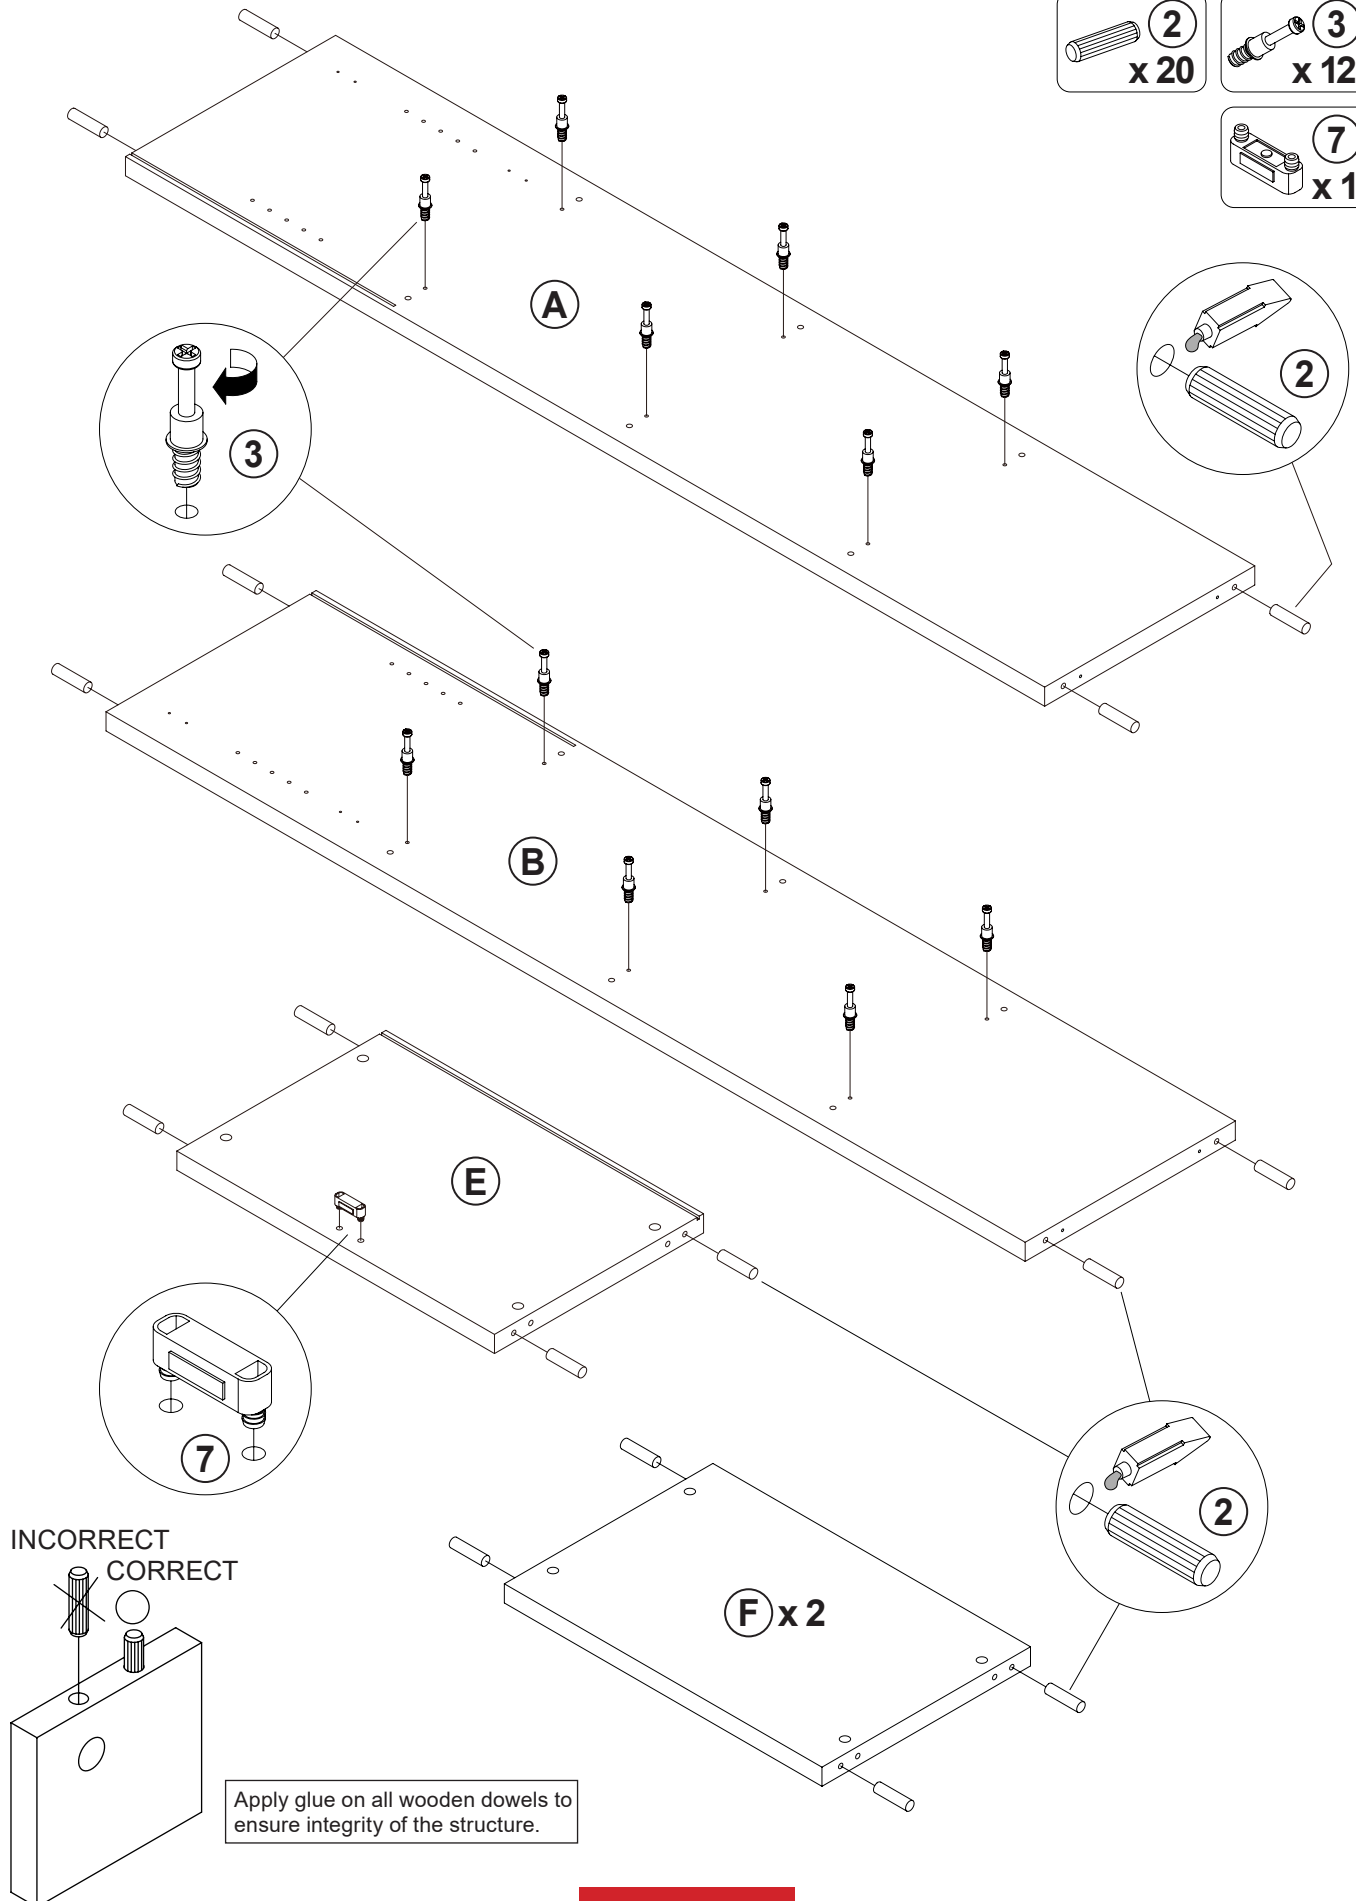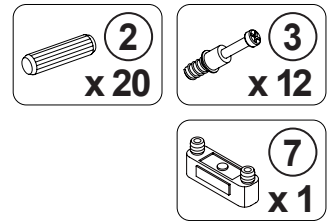


ITEM: 701703

STEP 2

   COASTER
FINE FURNITURE

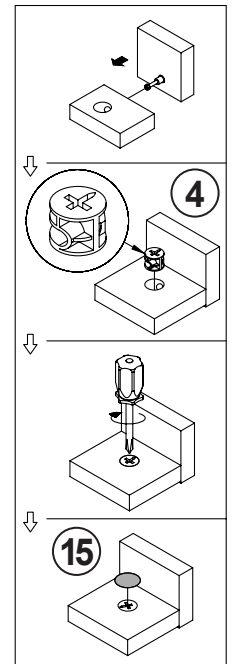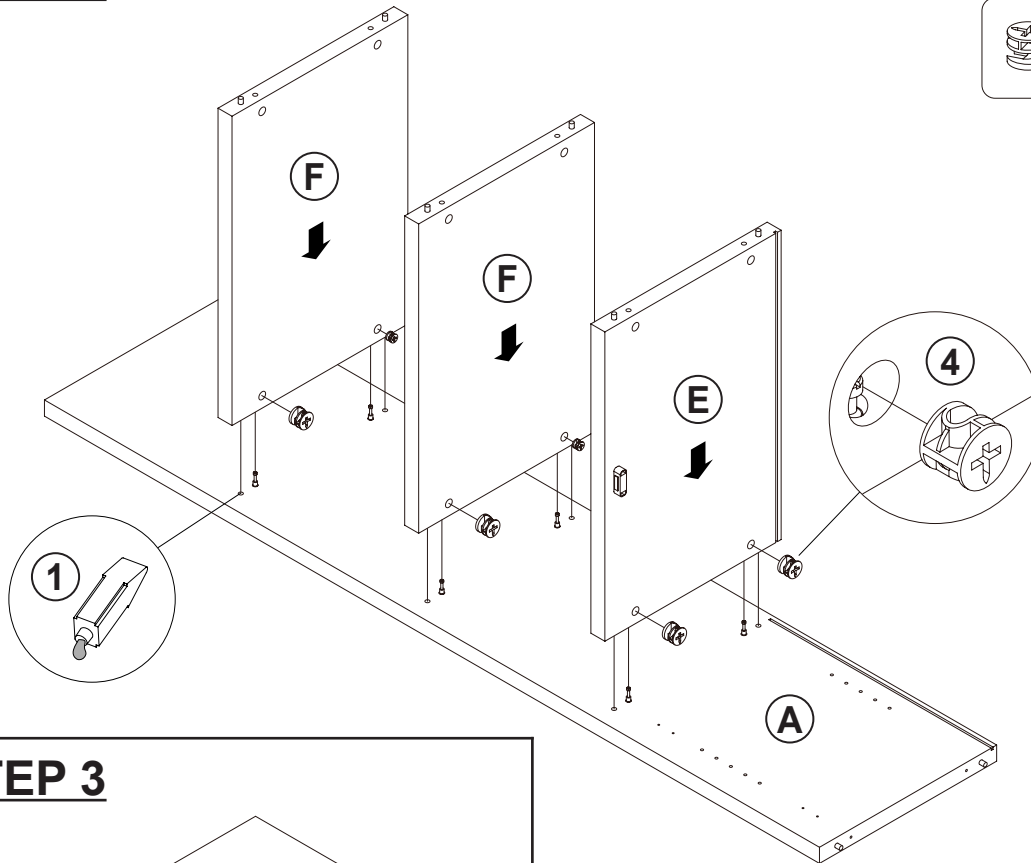

 
STEP 3

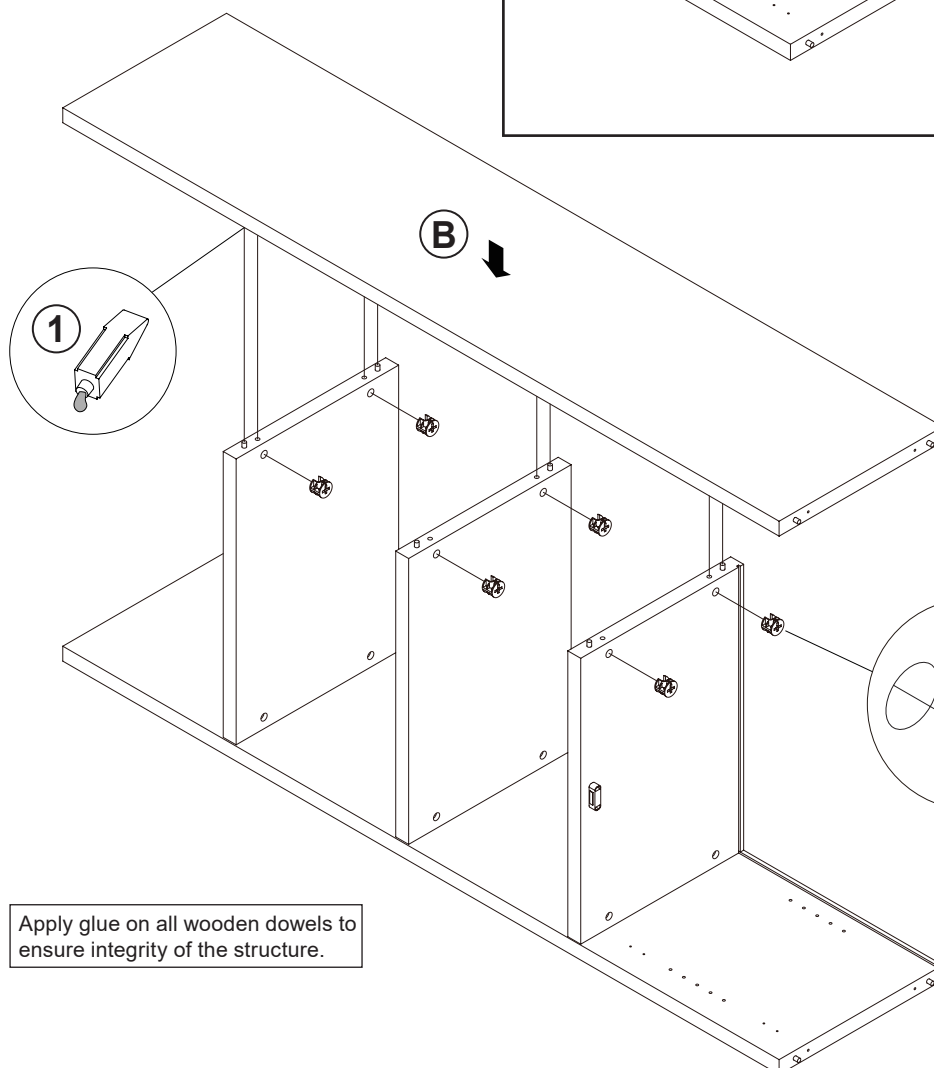

Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **701703**

 STEP 4

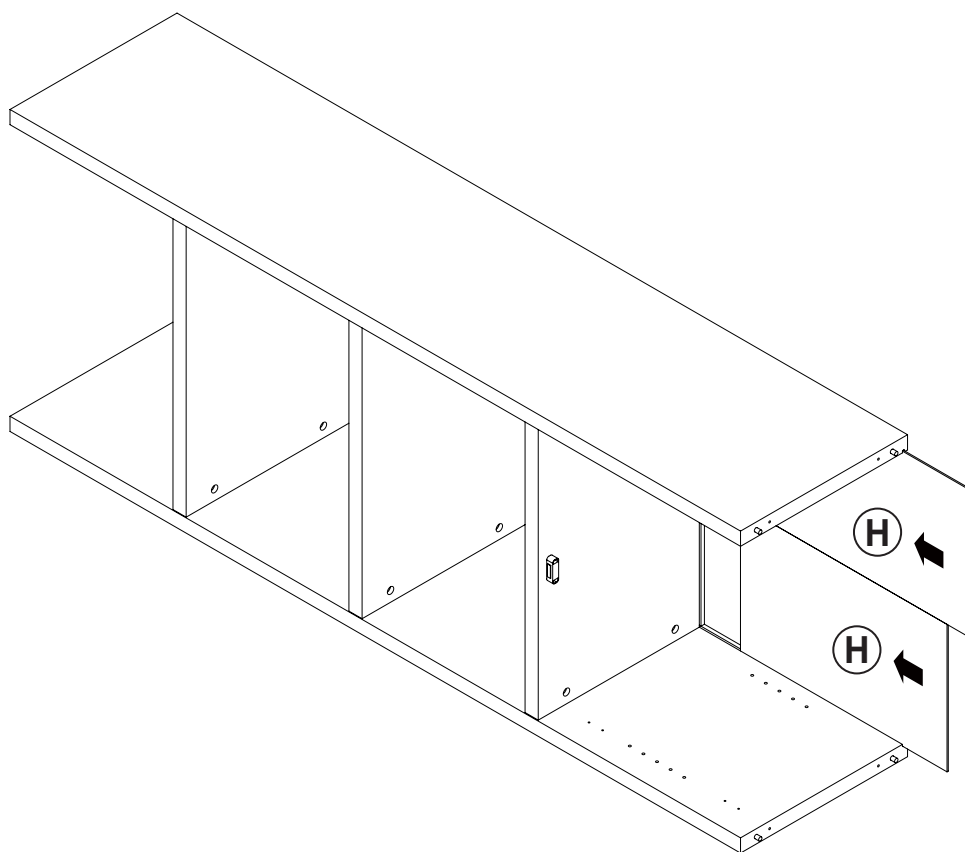

STEP 5


 
5
x 8

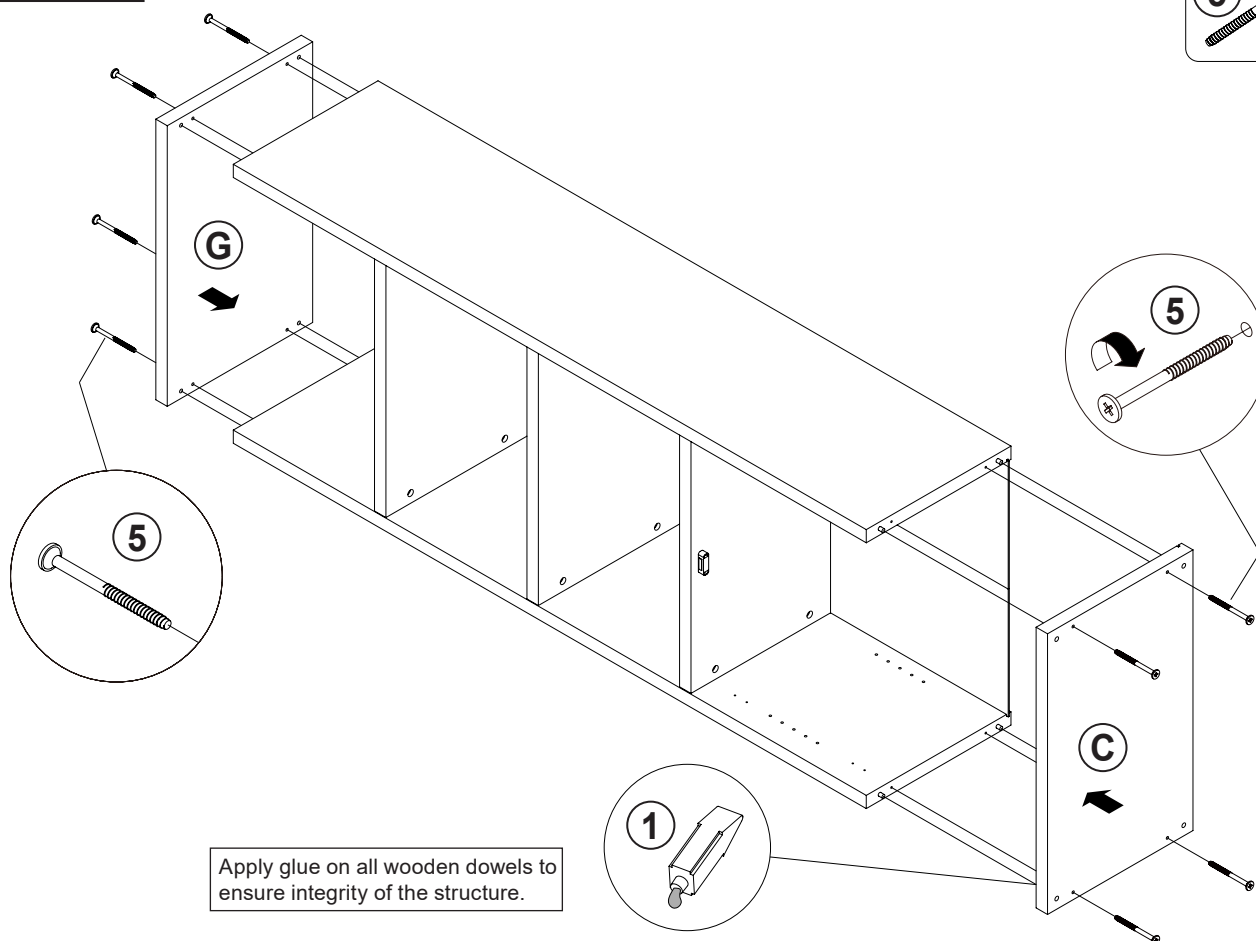



ITEM: **701703**

STEP 6

  COASTER
FINE FURNITURE

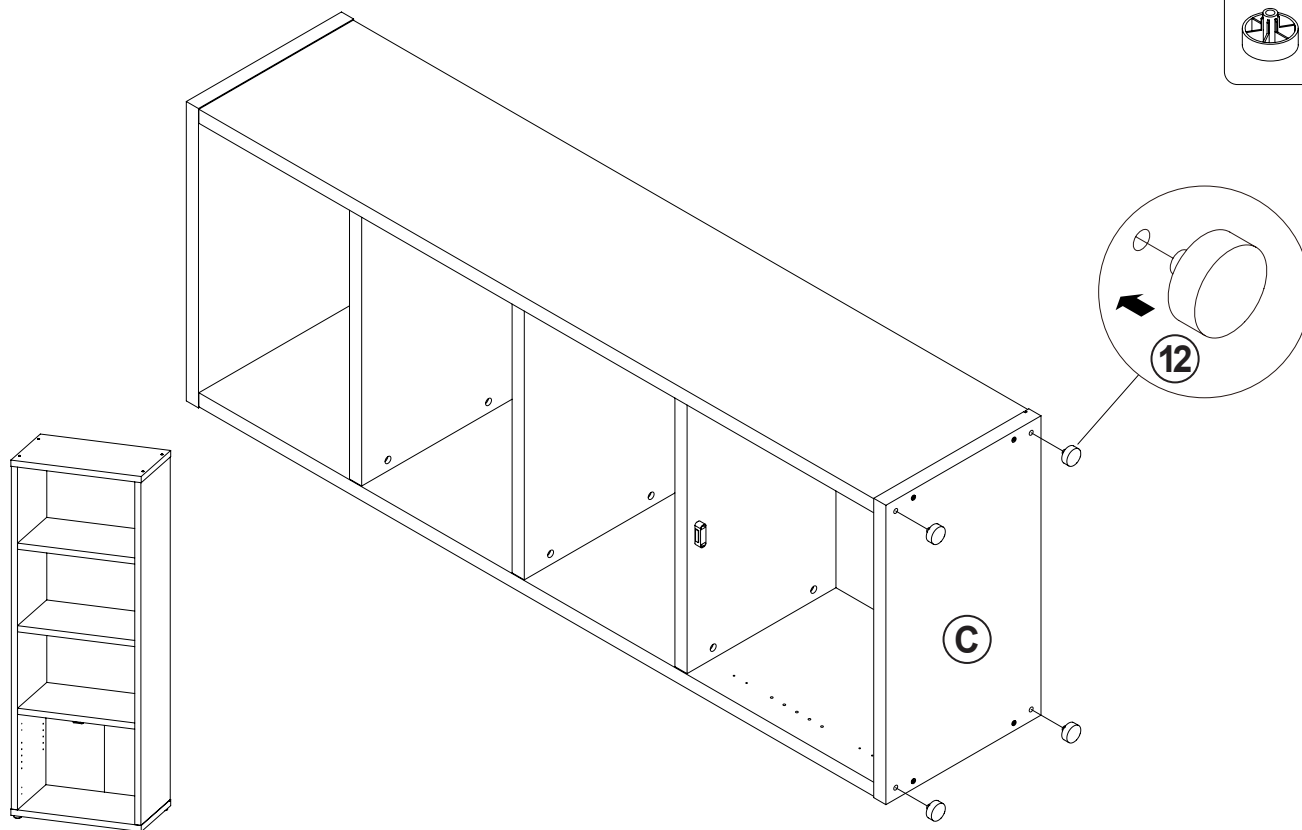

 
 
STEP 7

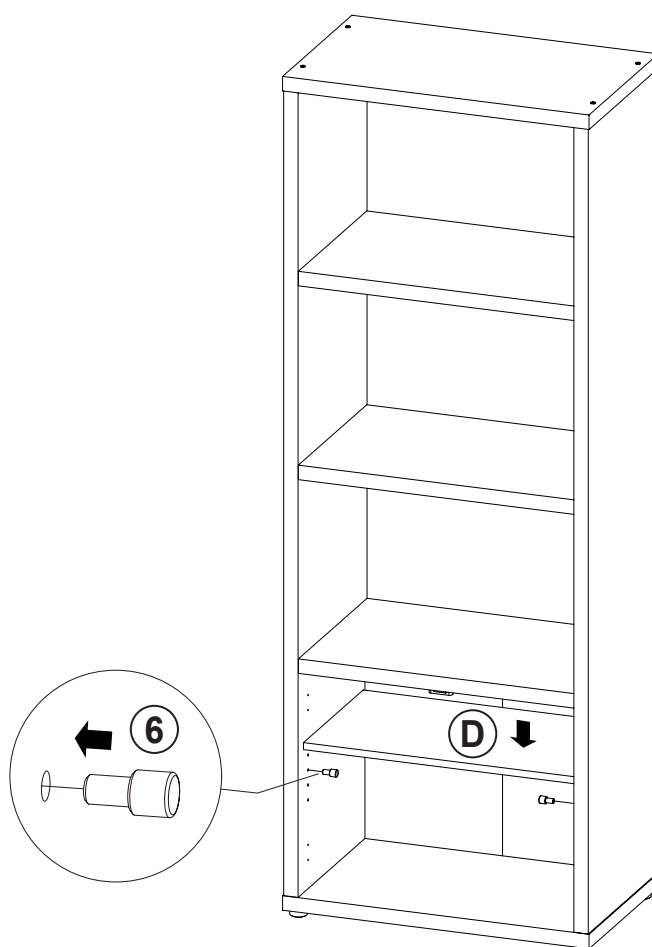



ITEM: 701703

COASTER
FINE FURNITURE

  
STEP 8

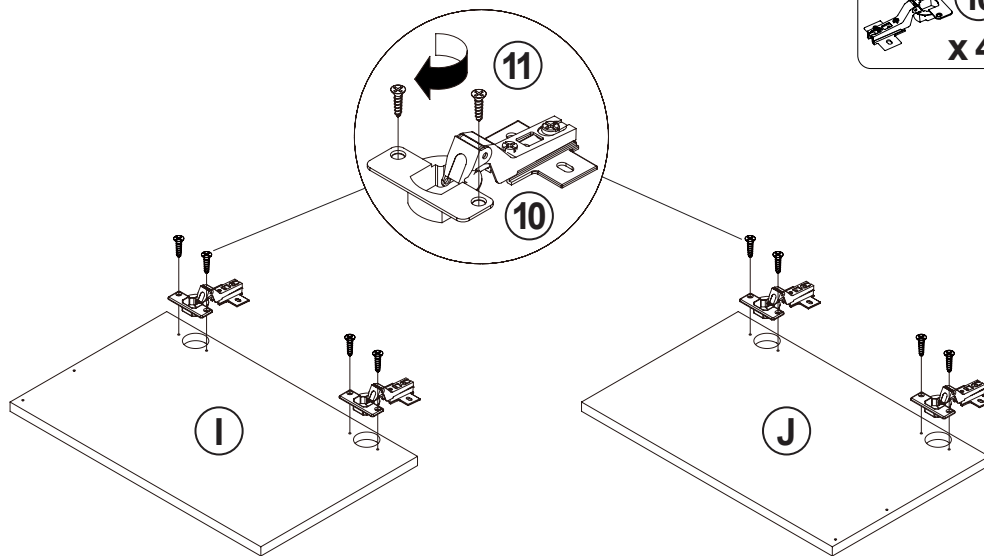

  
STEP 9

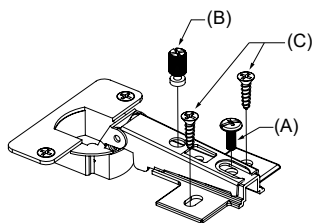



HORIZONTAL BY
SCREW A ADJUSTMENT

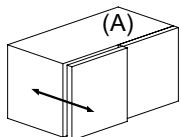 

LATERAL BY
SCREW B ADJUSTMENT

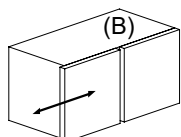 






VERTICAL BY
SCREW C ADJUSTMENT

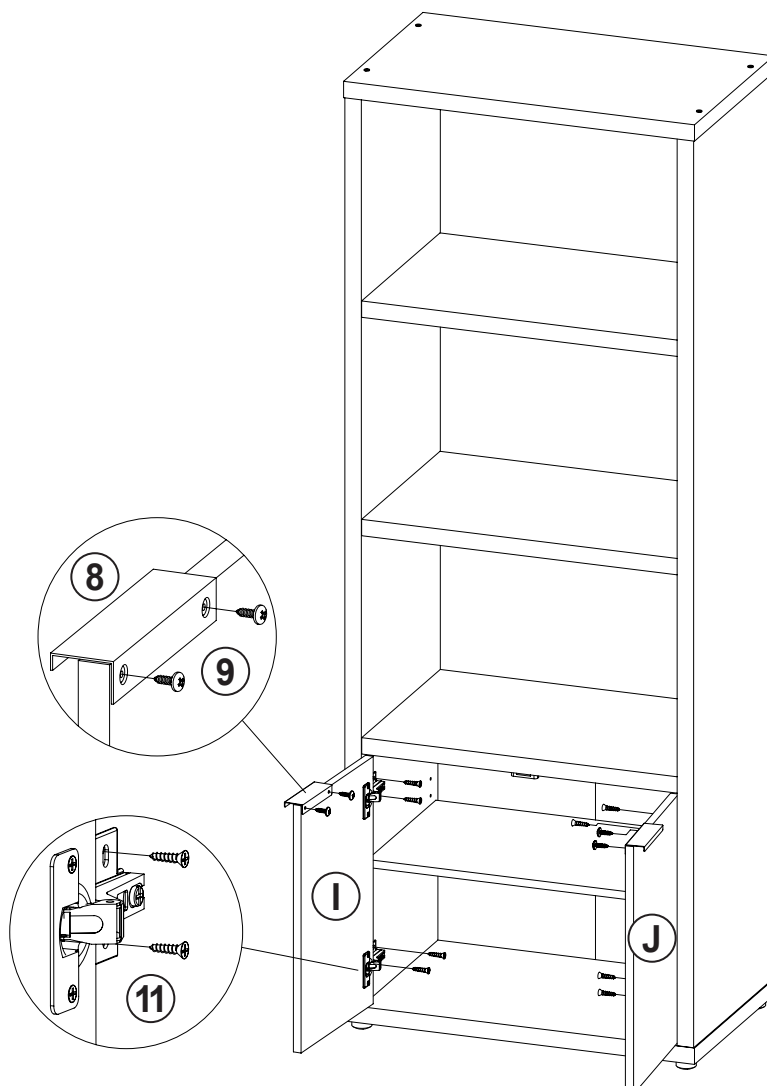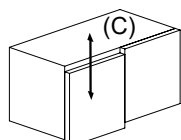  



ITEM: **701703**

STEP 10

     
COASTER
FINE FURNITURE

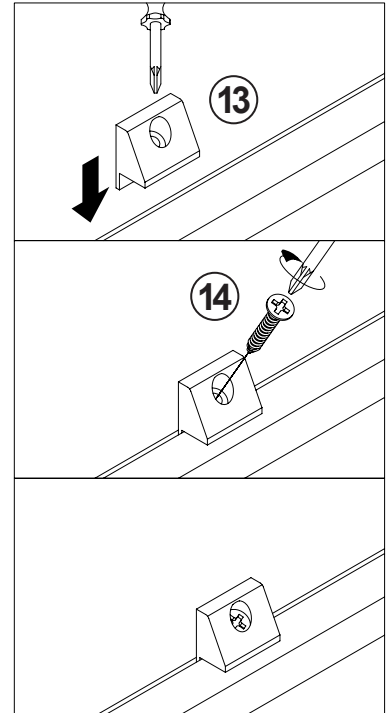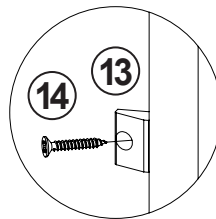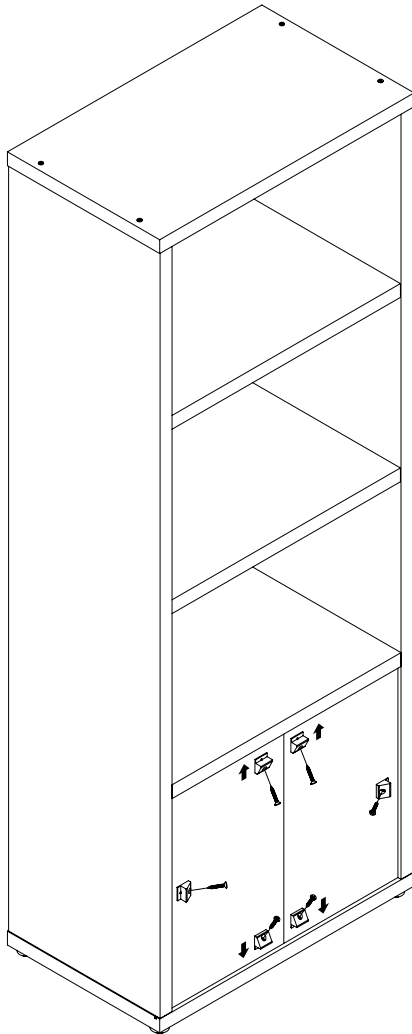

  STEP 11

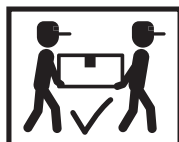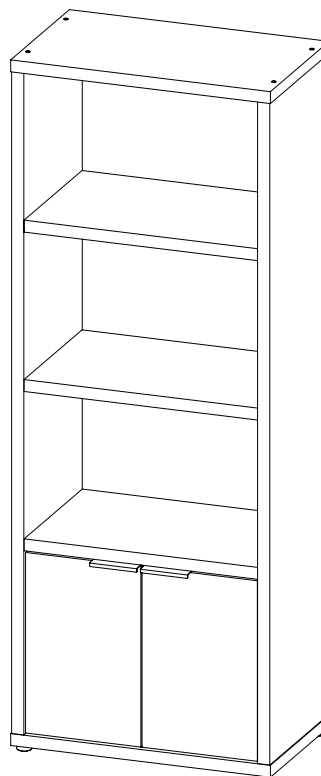

ITEM: 701703

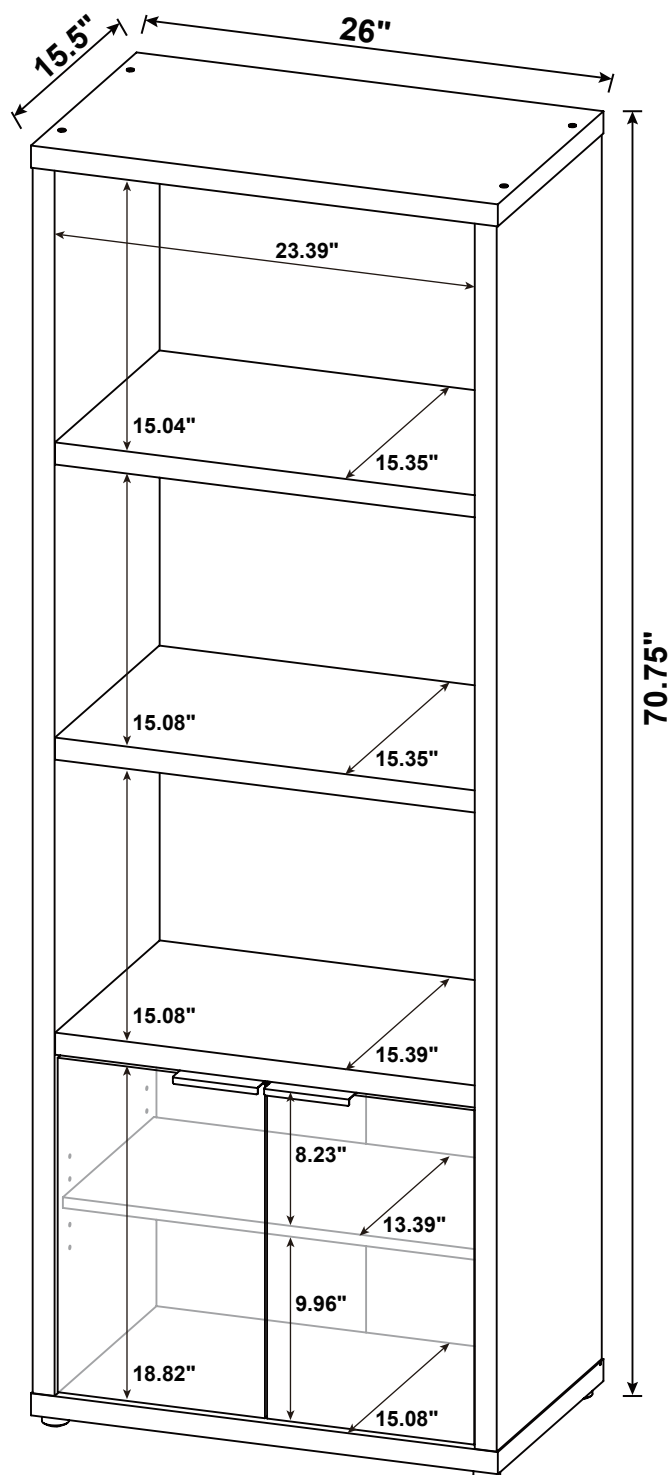 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

