

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

701703
MEDIA TOWER

ITEM:701703

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

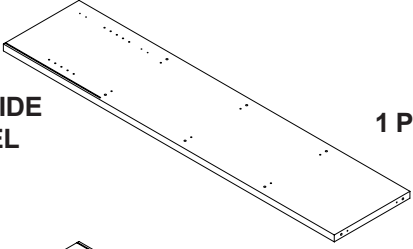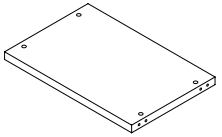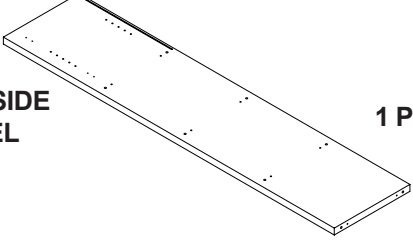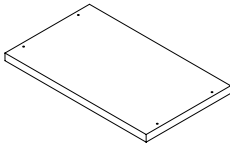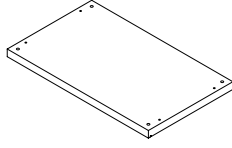 
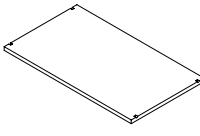 
 
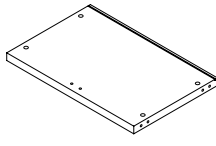 
 


 
 
 
 

 
 
 
A	LEFT SIDE PANEL		1 PC	F	UPPER CROSS PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	G	TOP PANEL		1 PC
C	BOTTOM PANEL		1 PC	H	BACK PANEL		2 PCS
D	ADJUSTABLE PANEL		1 PC	I	LEFT DOOR		1 PC
E	LOWER CROSS PANEL		1 PC	J	RIGHT DOOR		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701703

HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HANDLE SCREW φ3x15mm BLK		4 PCS
2	WOODEN DOWEL φ8x30mm		20 PCS	10	HINGE φ35mm SR		4 PCS
3	CAM BOLT φ7x35.5mm SR		12 PCS	11	HINGE SCREW φ4x15mm SR		16 PCS
4	CAM LOCK φ15x12mm SR		12 PCS	12	FOOT φ35xH19mm		4 PCS
5	BOLT φ9.5x55mm SR		8 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF φ4.9x8mm SR		4 PCS	14	FIXER SCREW φ3x19mm SR		6 PCS
7	DOOR CATCH		1 PC	15	STICKER φ20mm		2 PCS
8	HANDLE L=120mm BLK		2 PCS				

Z8,Z10,Z12 not included in blister packaging.

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 701703

 
STEP 1

COASTER
FINE FURNITURE

2
x 20

3
x 12



7
x 1

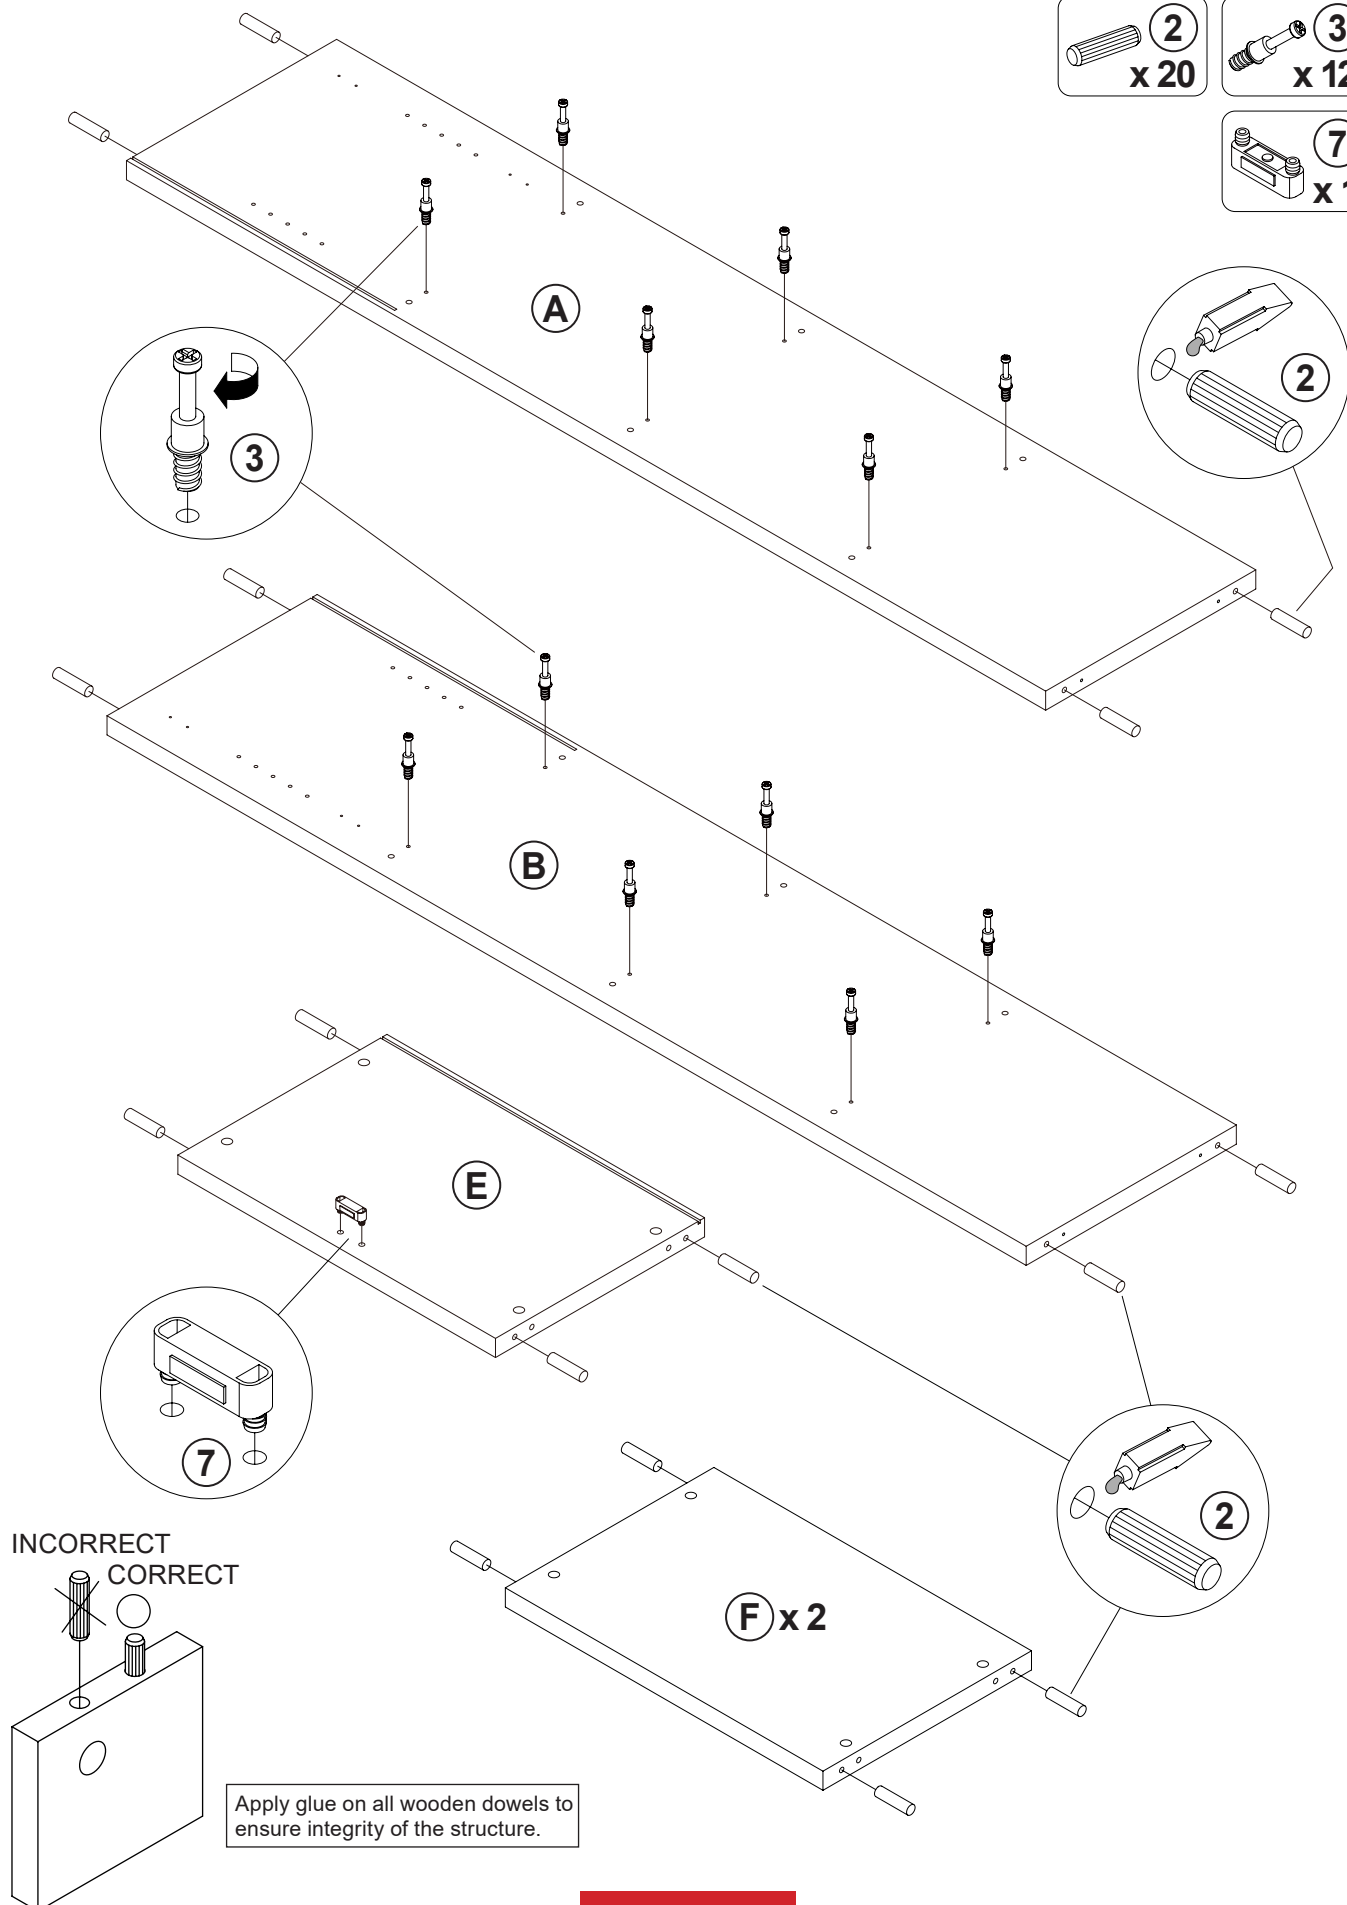


ITEM: 701703

STEP 2

  COASTER
FINE FURNITURE

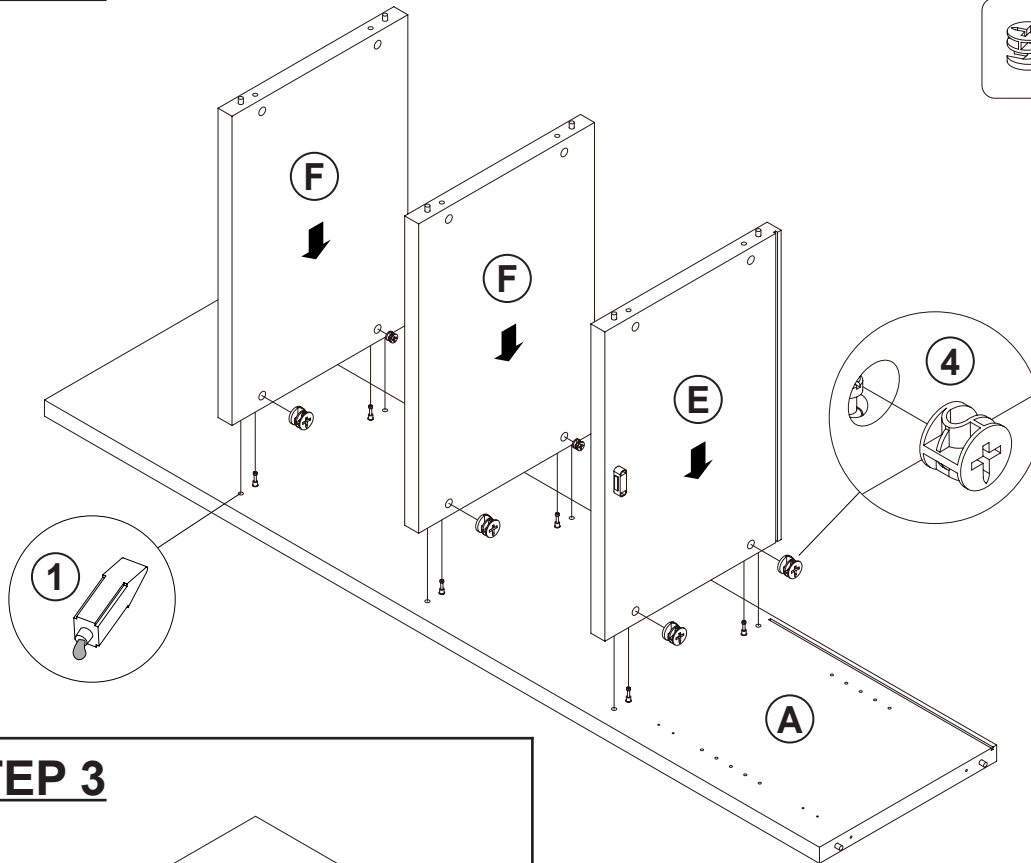


 STEP 3

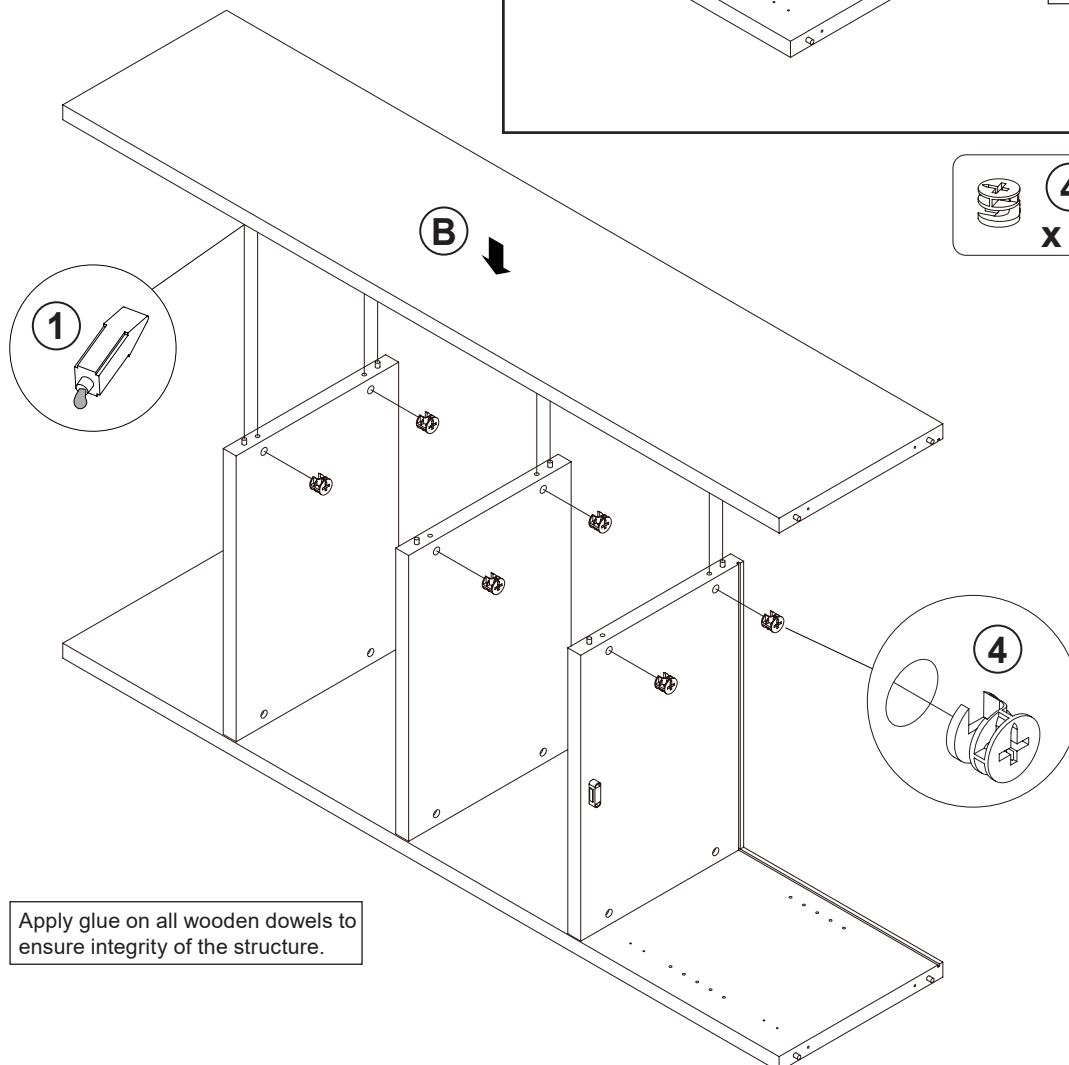


ITEM: **701703**

 STEP 4

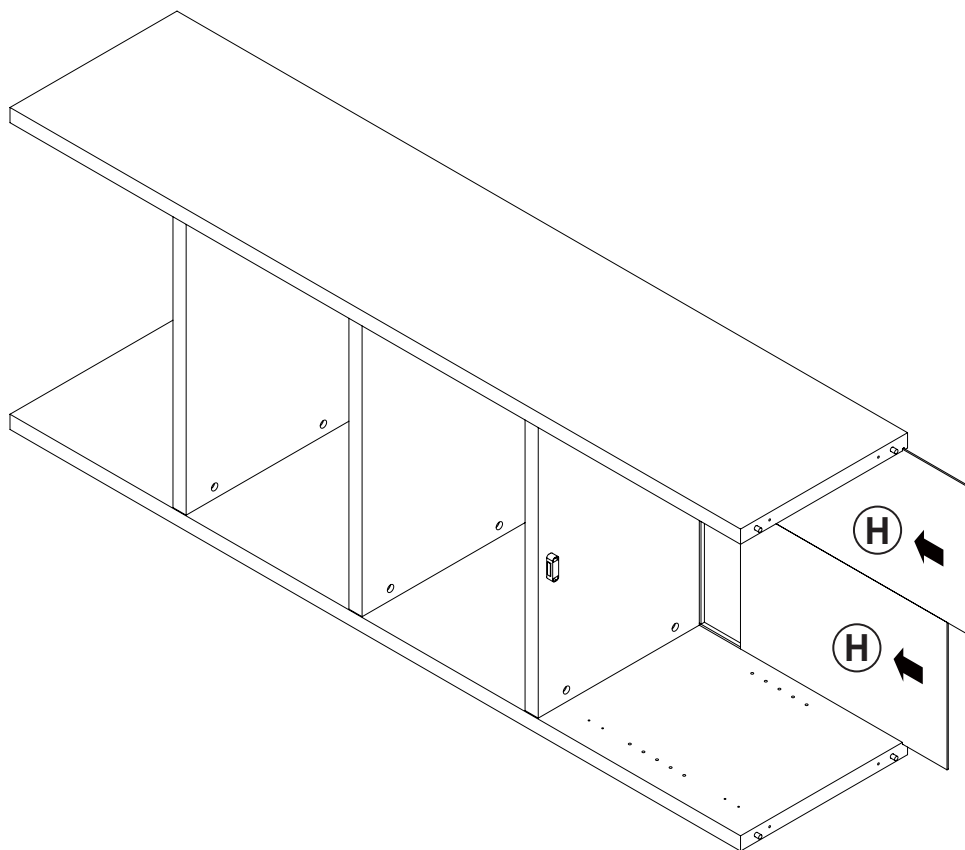

STEP 5


 
5
x 8

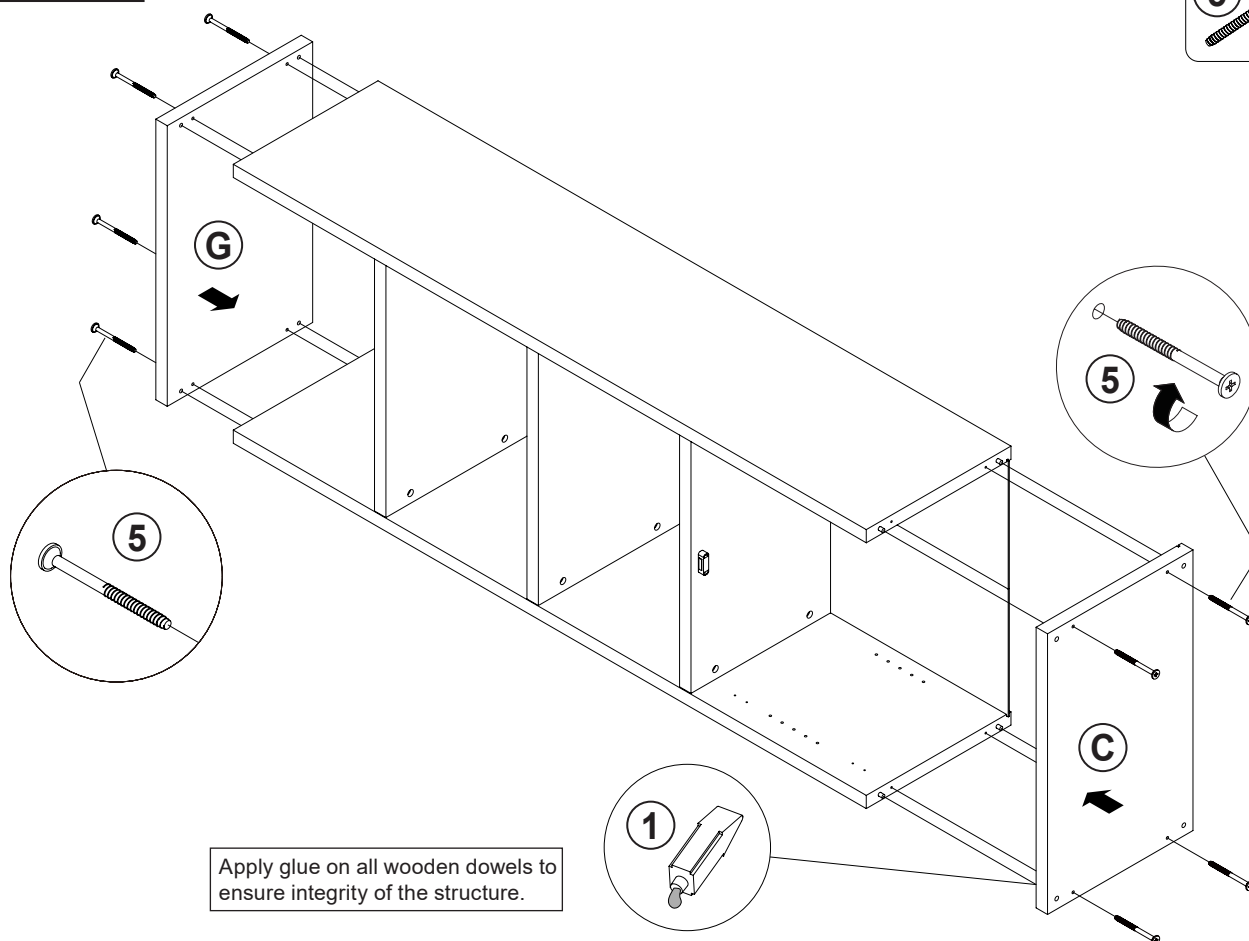



ITEM: **701703**

STEP 6

  COASTER
FINE FURNITURE

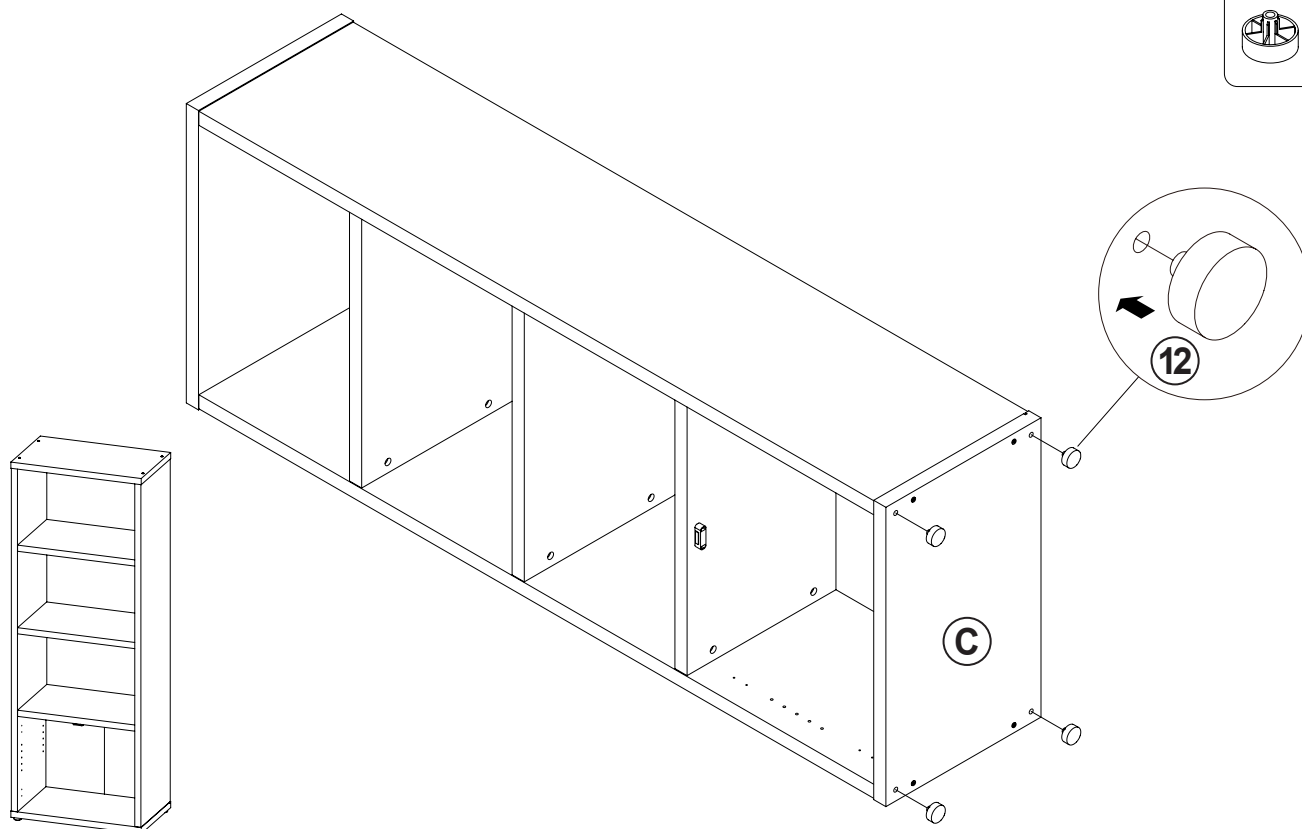

 
 
STEP 7

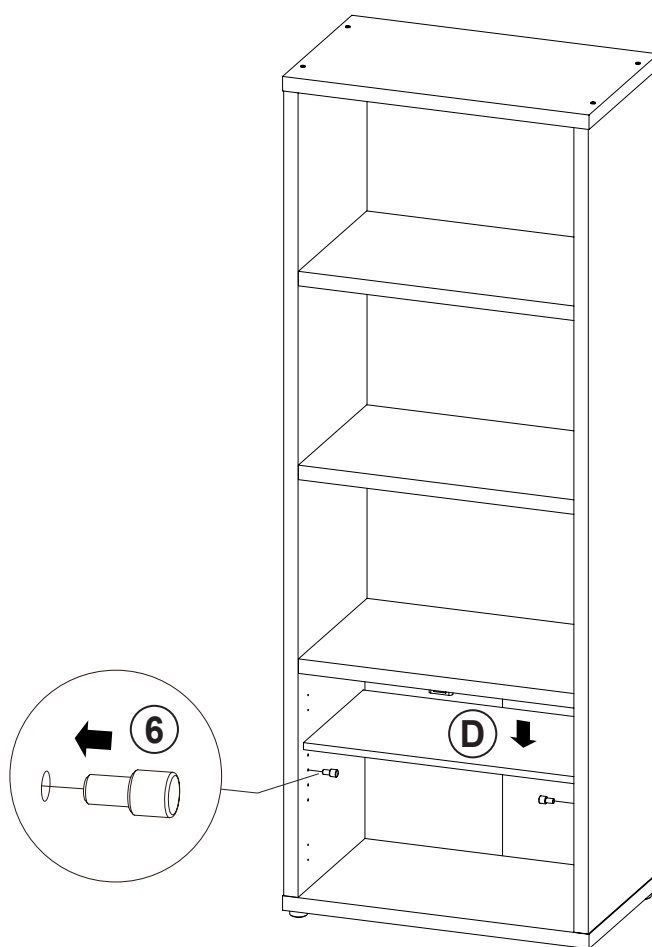





ITEM: 701703

COASTER
FINE FURNITURE

  
STEP 8

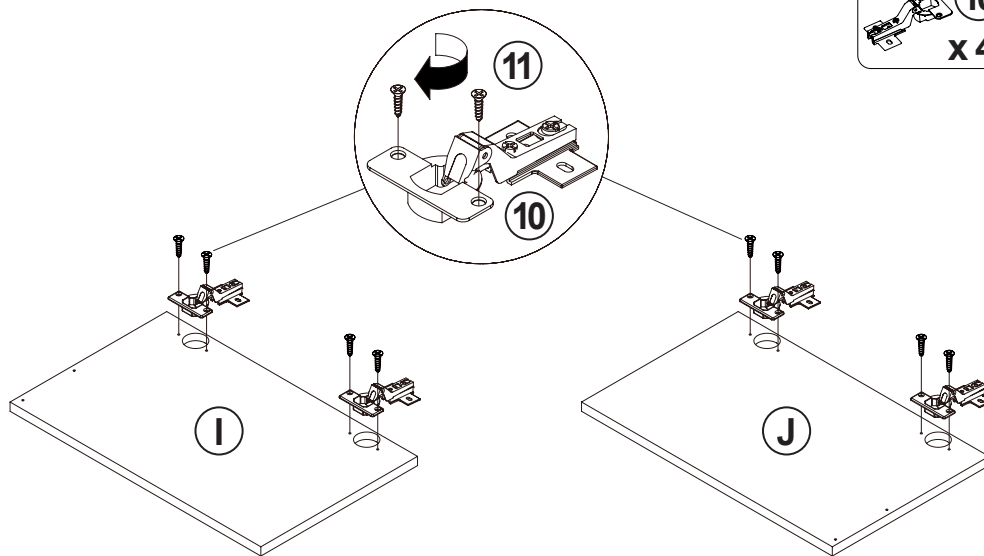

    
STEP 9

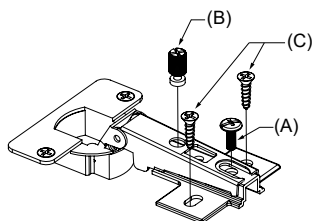





HORIZONTAL BY
SCREW A ADJUSTMENT

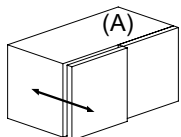 

LATERAL BY
SCREW B ADJUSTMENT

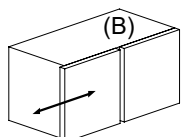 






VERTICAL BY
SCREW C ADJUSTMENT

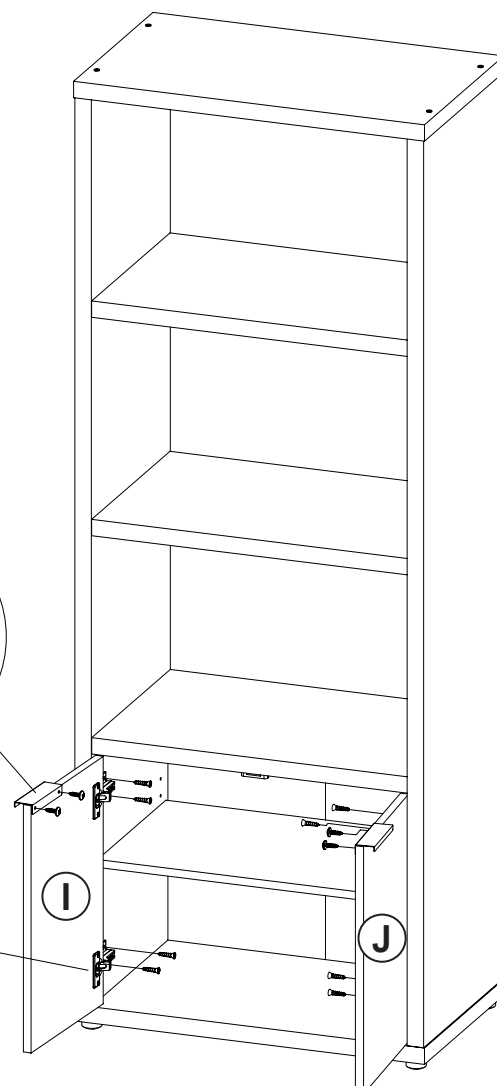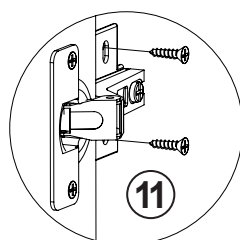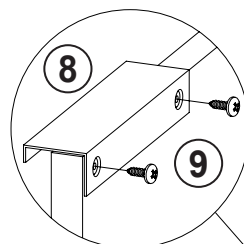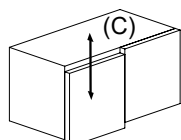    



ITEM: **701703**

STEP 10

     
COASTER
FINE FURNITURE

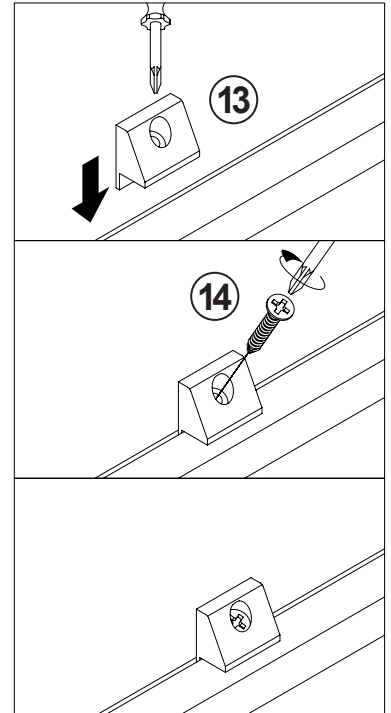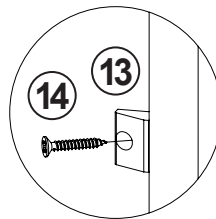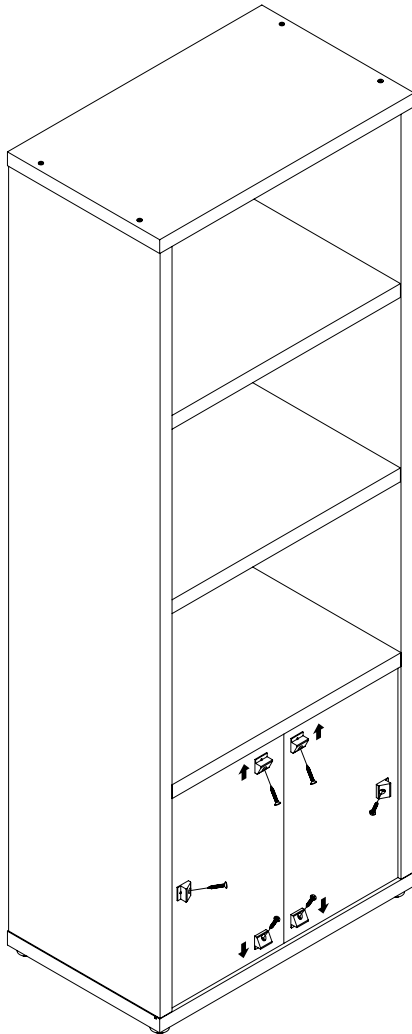

  STEP 11

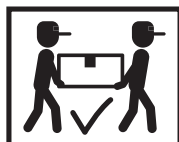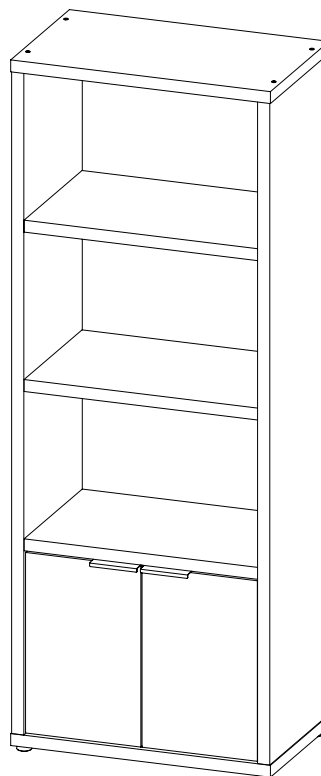

ITEM: 701703

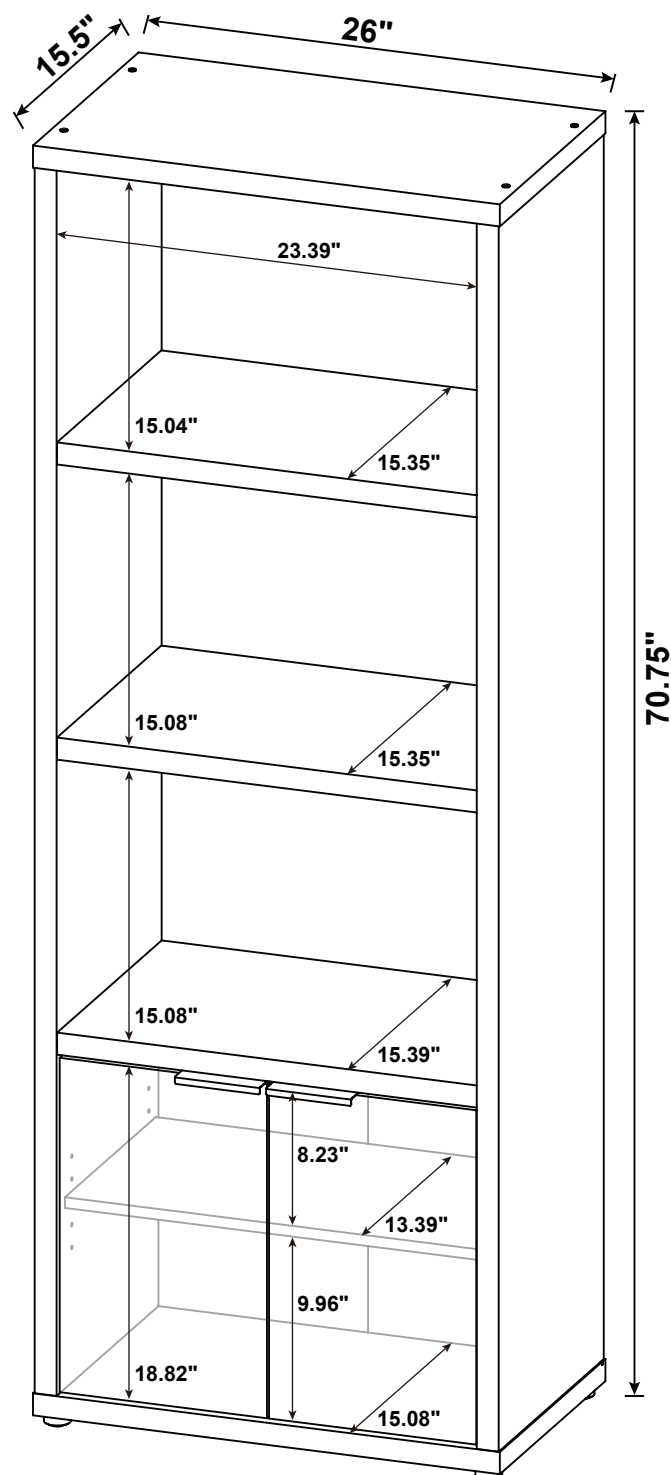 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

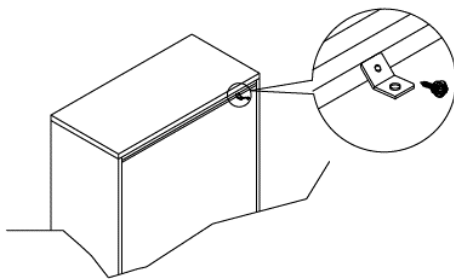

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

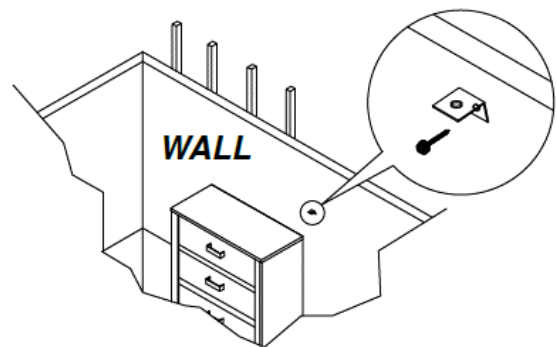

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

