

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

736283
TV CONSOLE

ITEM:736283

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

 
50 MINUTES

MAX TV SIZE : 85"

PARTS IDENTIFICATION

A


LEFT SIDE
PANEL

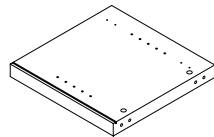

1 PC

B

 
RIGHT SIDE
PANEL

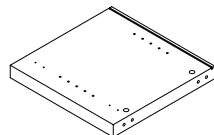

1 PC

C

 
DIVIDER PANEL

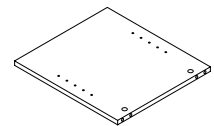

2 PCS

D

 
MIDDLE
DIVIDER PANEL

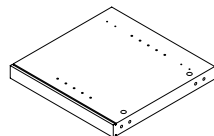

1 PC

E

 
BOTTOM PANEL

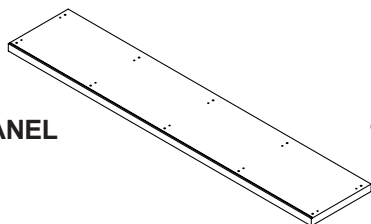

1 PC

F

 
ADJUSTABLE
SHELF

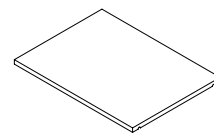

4 PCS

G

 
TOP PANEL

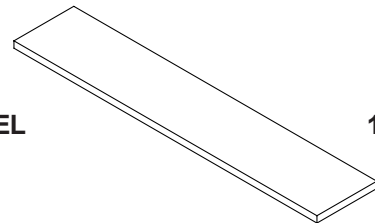

1 PC

H

 
BACK PANEL

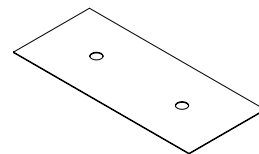

2 PCS

I

 GLASS DOOR

 
 
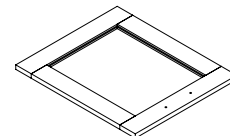 

 
 


 
 

 
 





4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 ITEM: **736283****HARDWARE IDENTIFICATION**

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR		32 PCS
3	CAM BOLT Ø7x35.5mm SR		10 PCS	11	LEG 47mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		10 PCS	12	SUPPORT LEG Ø45mm BLK		1 PC
5	BOLT Ø9.5x55mm SR		10 PCS	13	SCREW Ø4x19mm BLK		8 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	14	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
7	HANDLE L= 120mm BLK		4 PCS	15	ROUND FLOOR PROTECTOR Ø50mm		1 PC
8	HANDLE BOLT Ø4x28mm BLK		8 PCS	16	STICKER Ø20mm		2 PCS

 
Z7,Z8,Z9,Z11,Z12 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 736283

COASTER
FINE FURNITURE

STEP 1

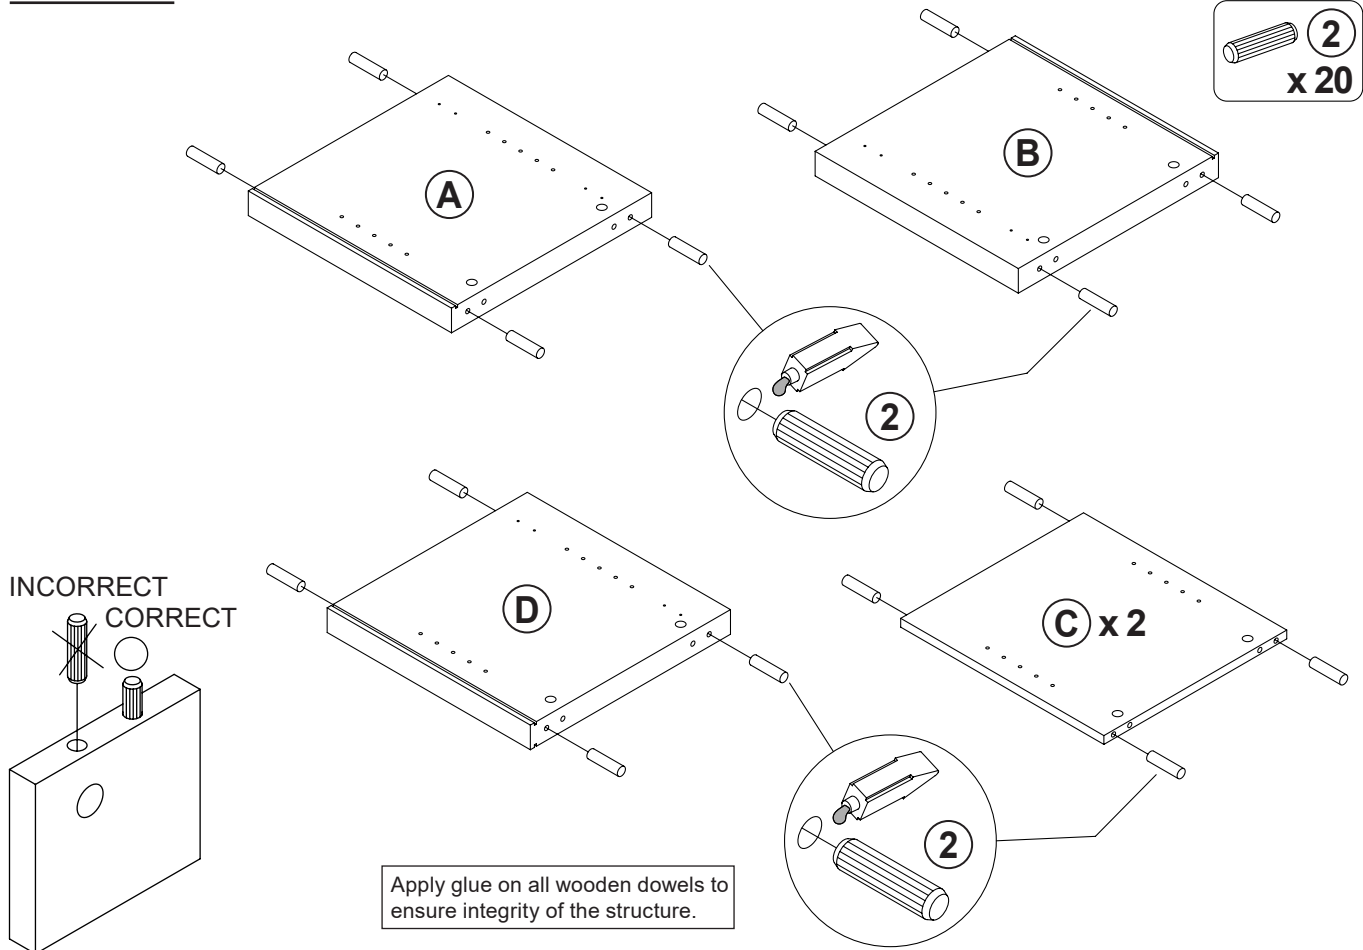

 
STEP 2

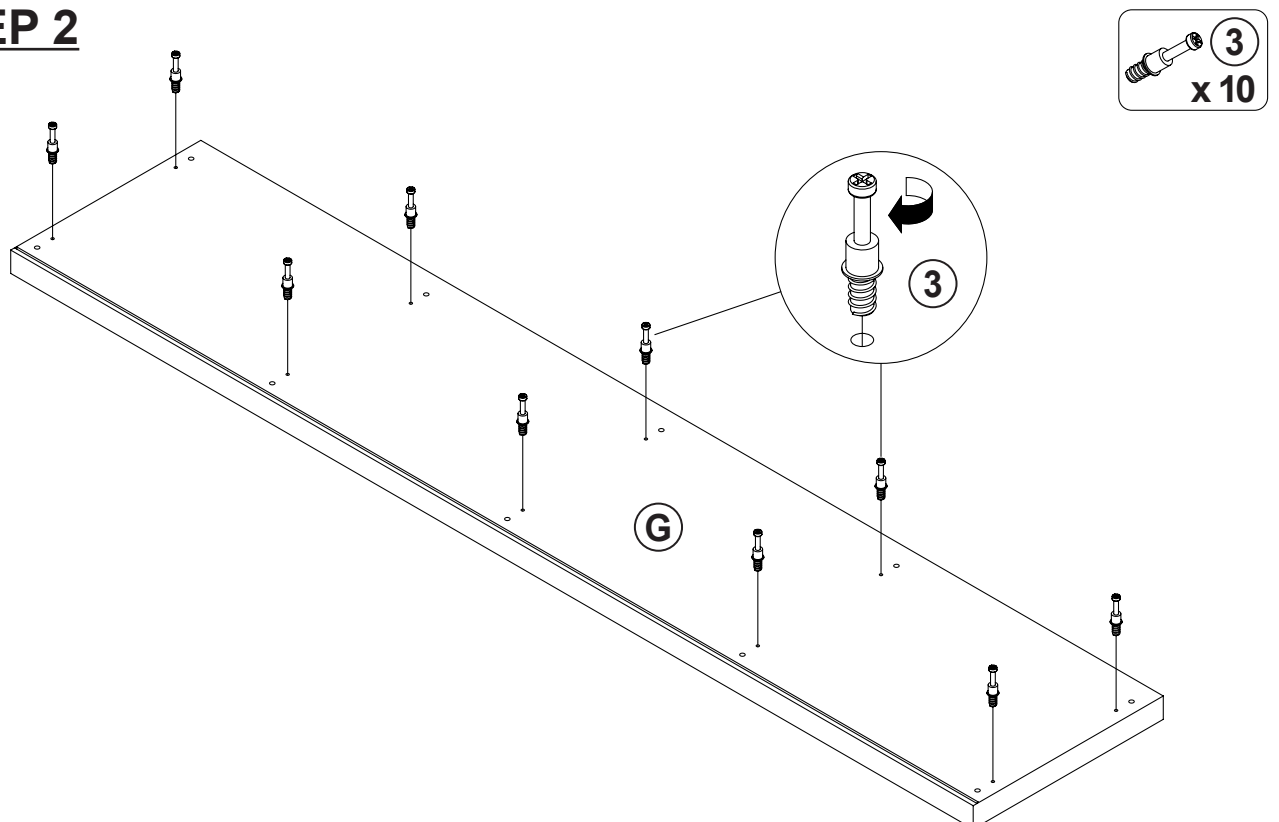


ITEM: **736283**

COASTER
FINE FURNITURE

 STEP 3

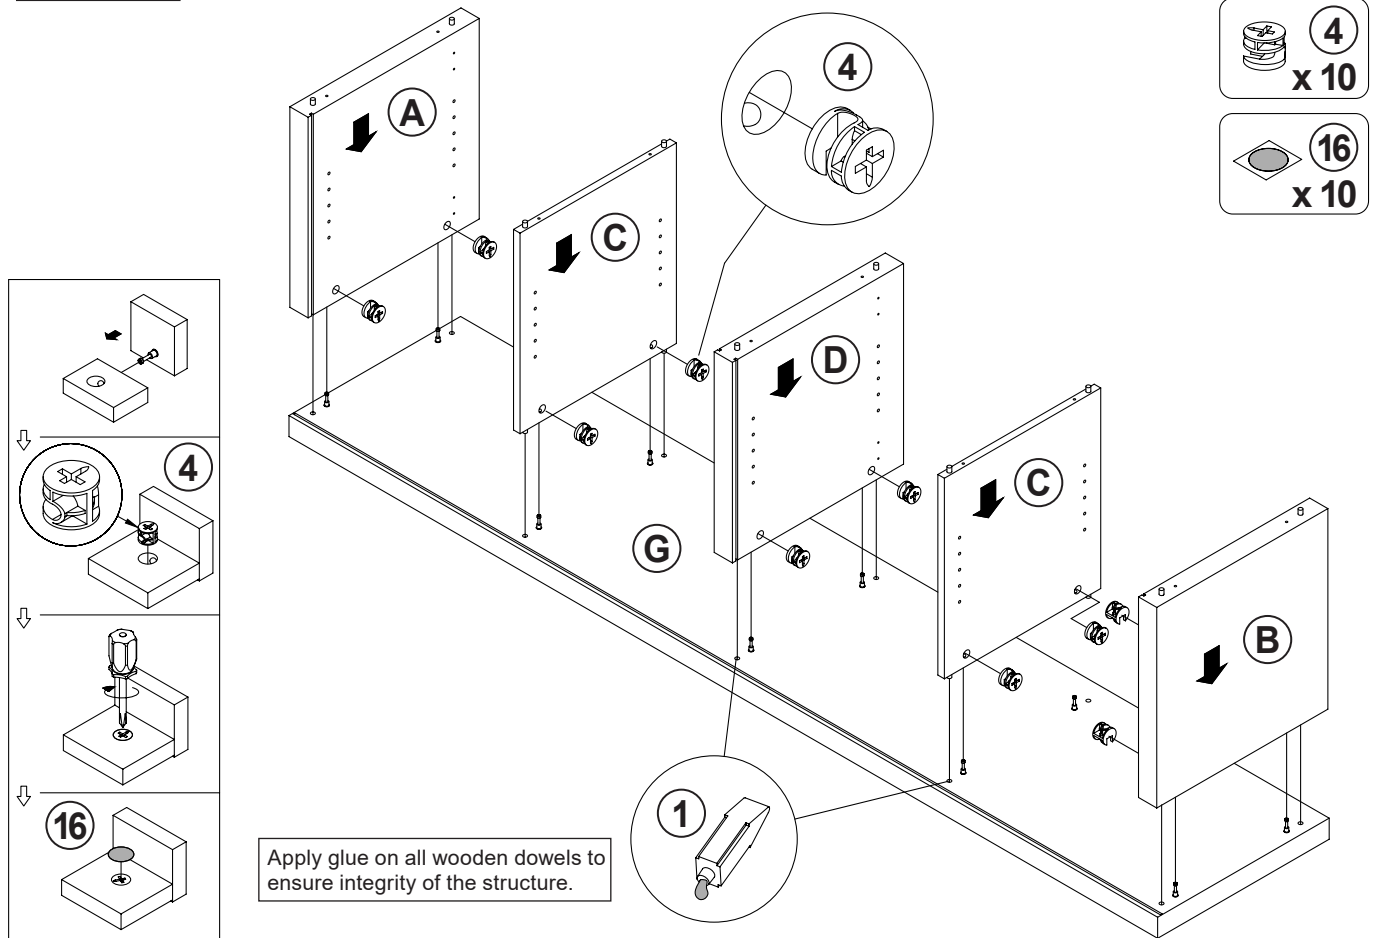

 
STEP 4

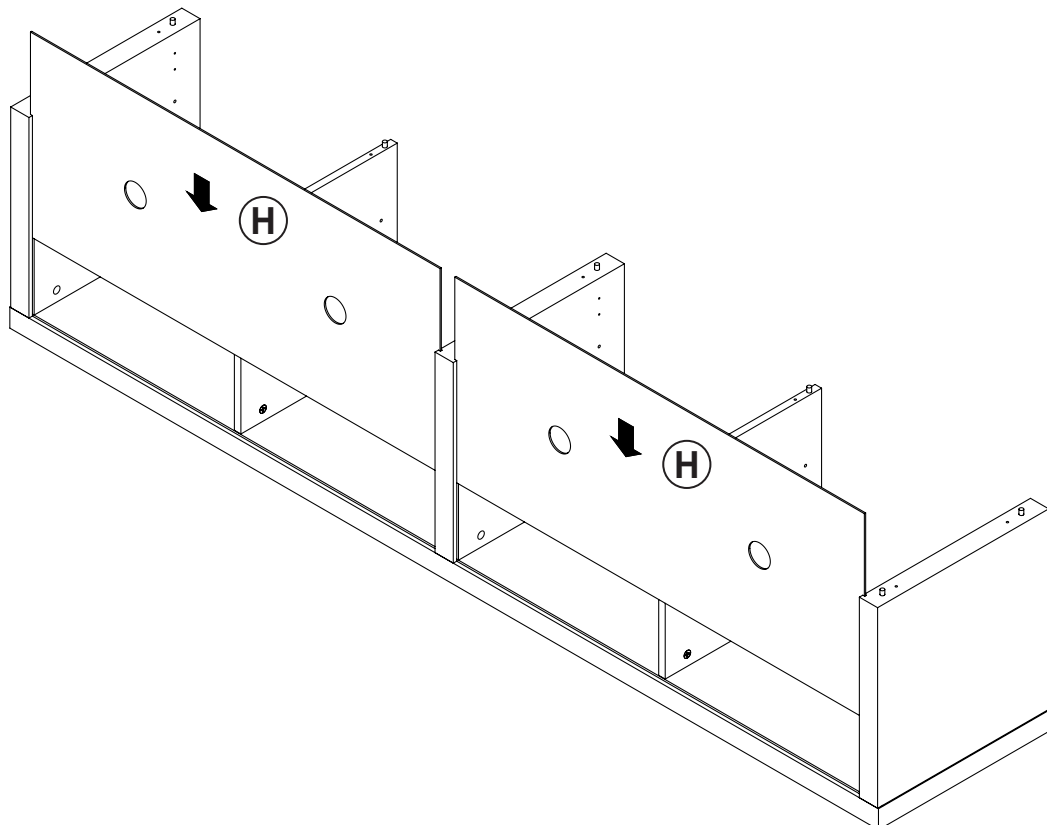


ITEM: 736283

STEP 5




 5  **x 10**

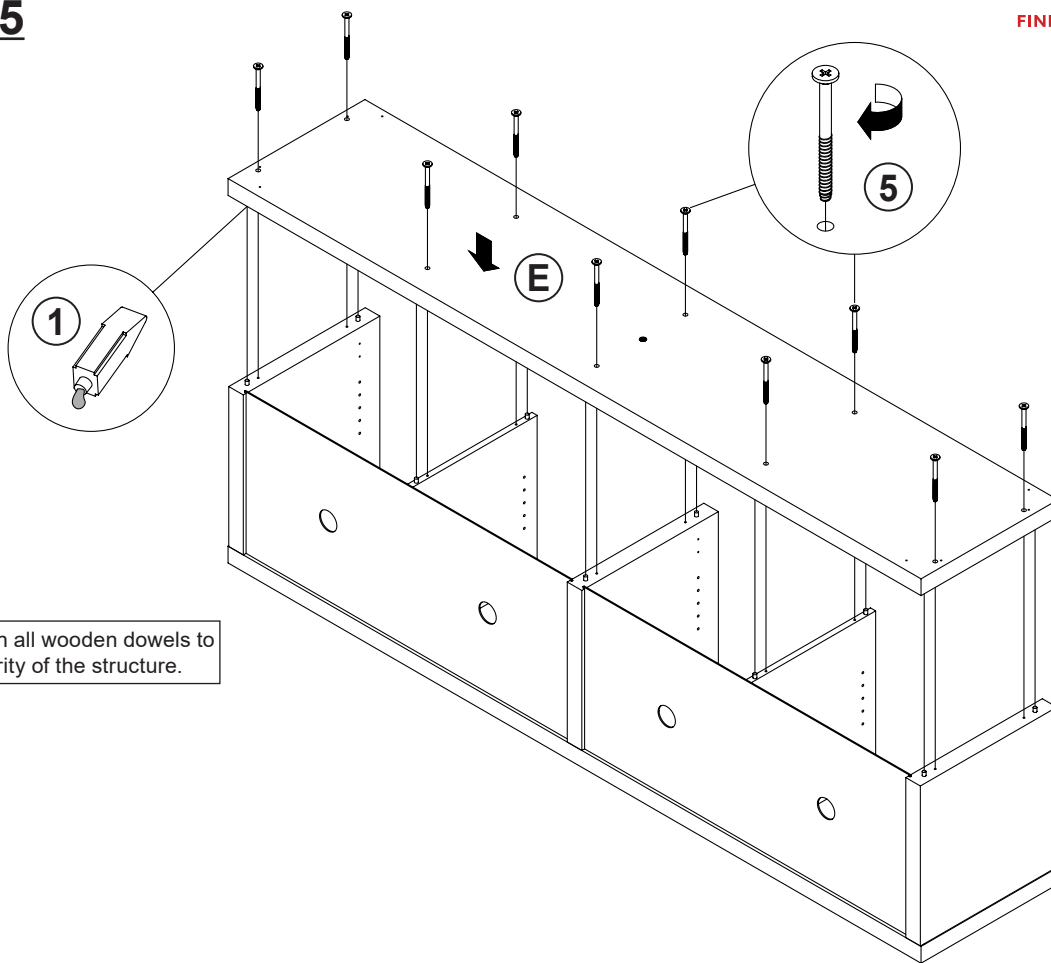

Apply glue on all wooden dowels to ensure integrity of the structure.

 
STEP 6

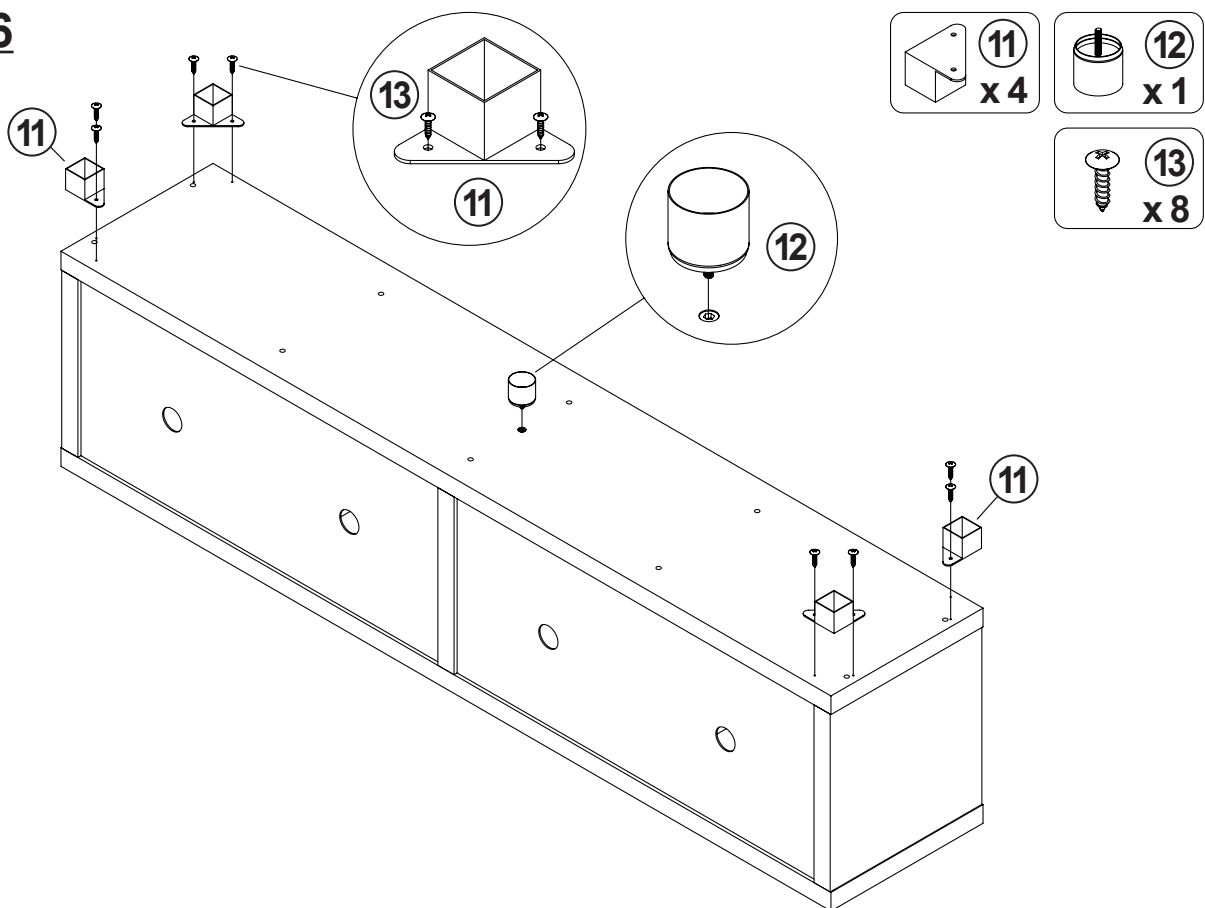



ITEM: **736283**

COASTER
FINE FURNITURE

 STEP 7

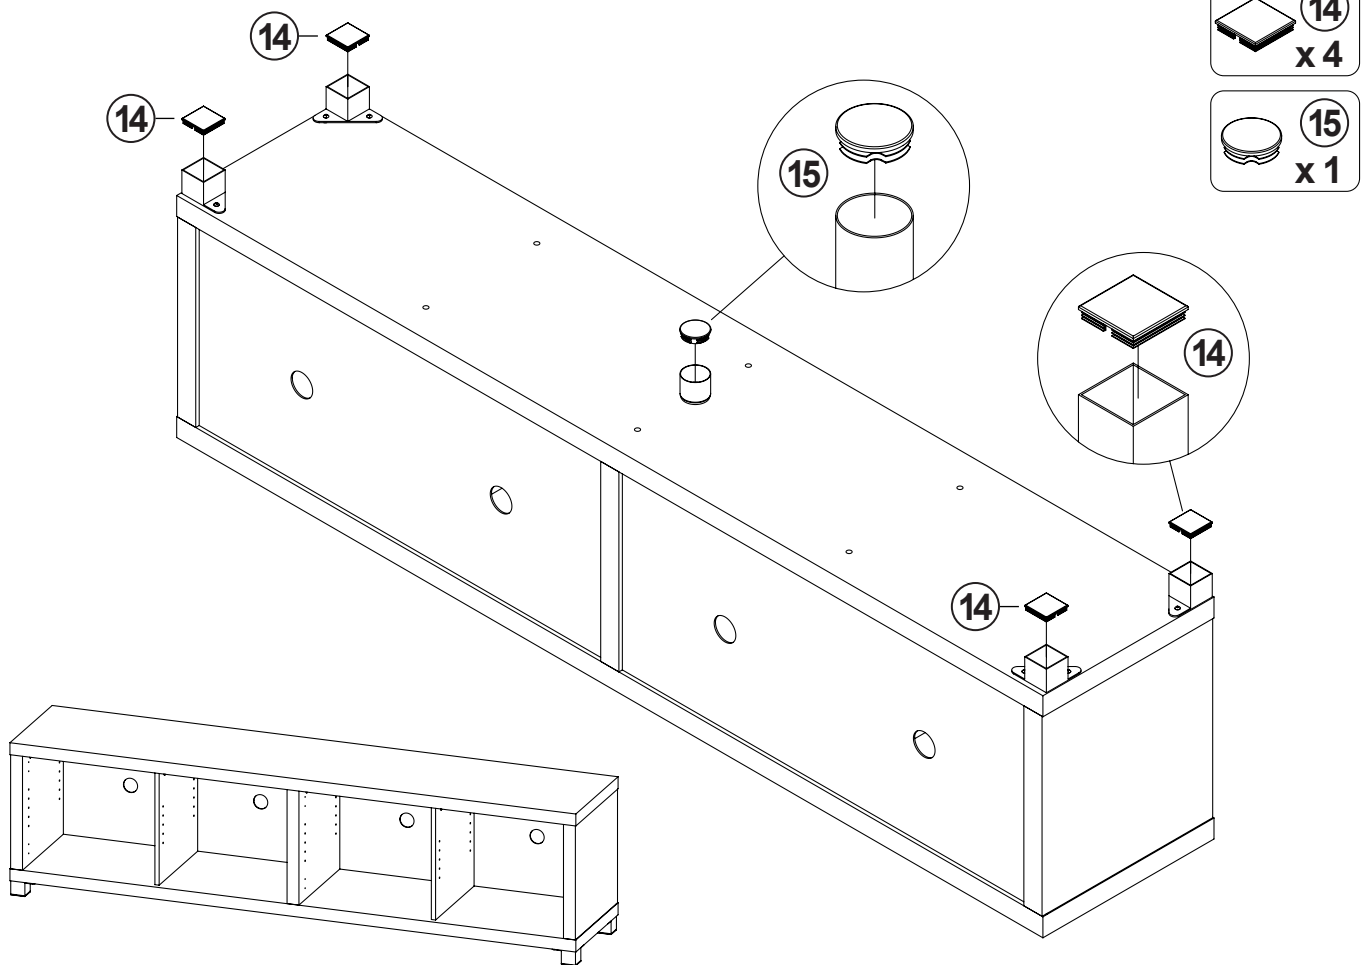


  STEP 8

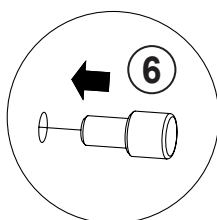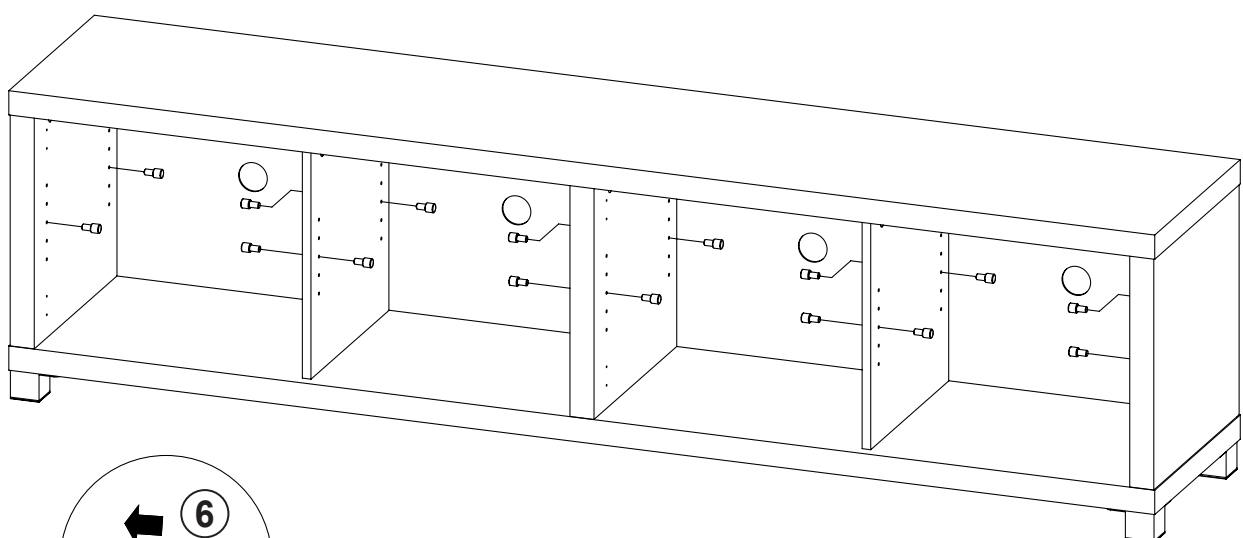


ITEM: **736283**

 STEP 9

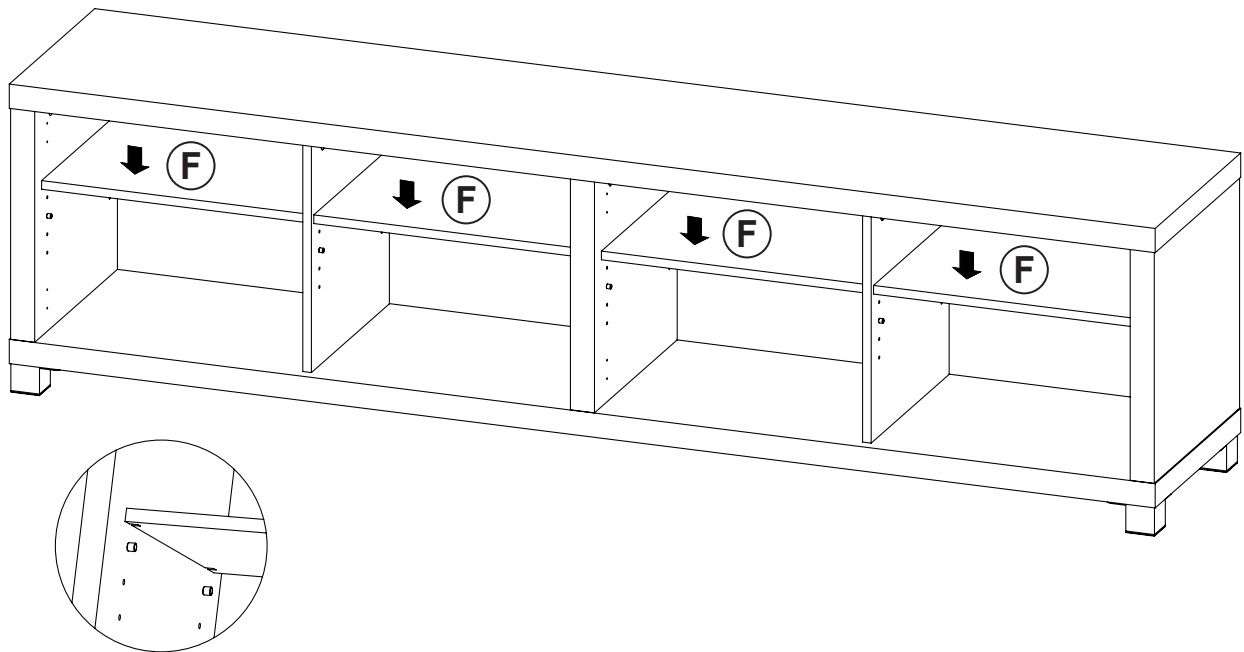

 STEP 10

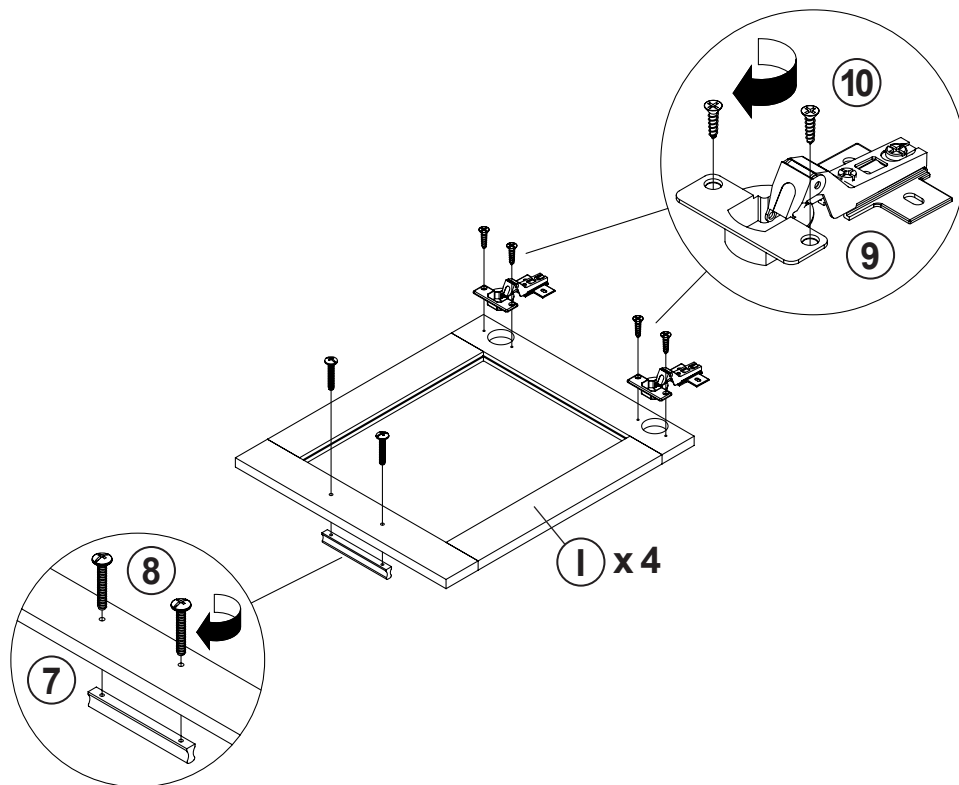

7 x 4

8 x 8

 
 
 
9 x 8

10 x 16




ITEM: 736283

STEP 11



COASTER
FINE FURNITURE

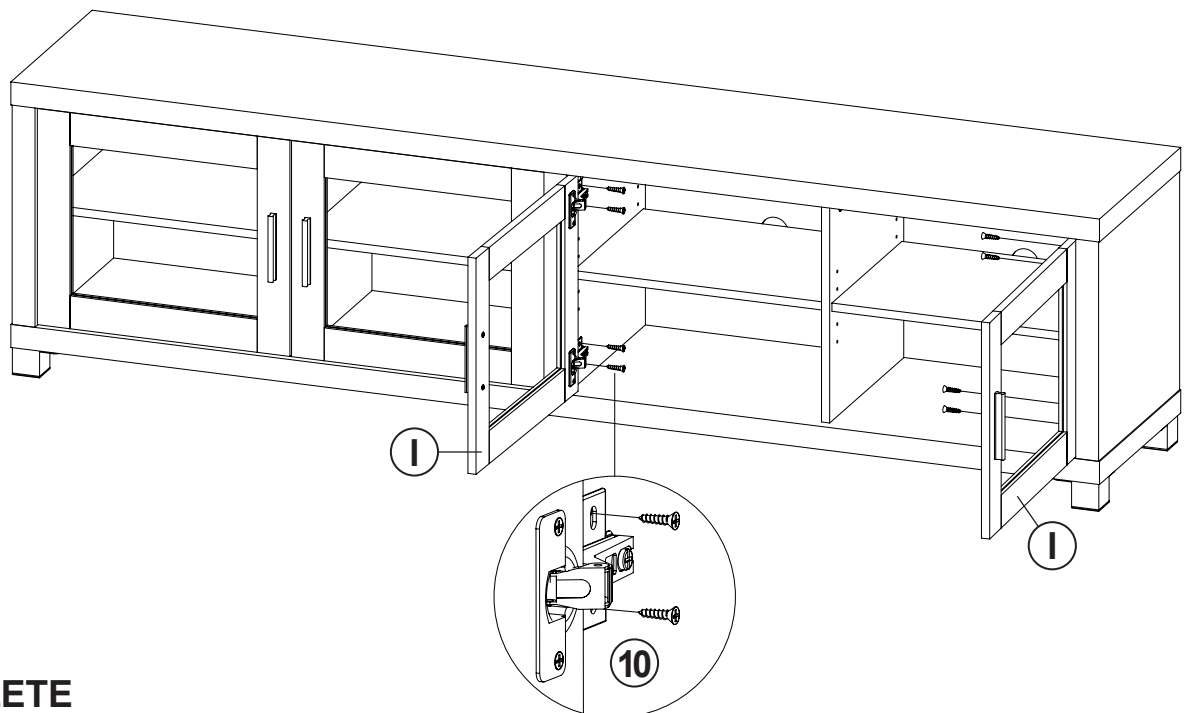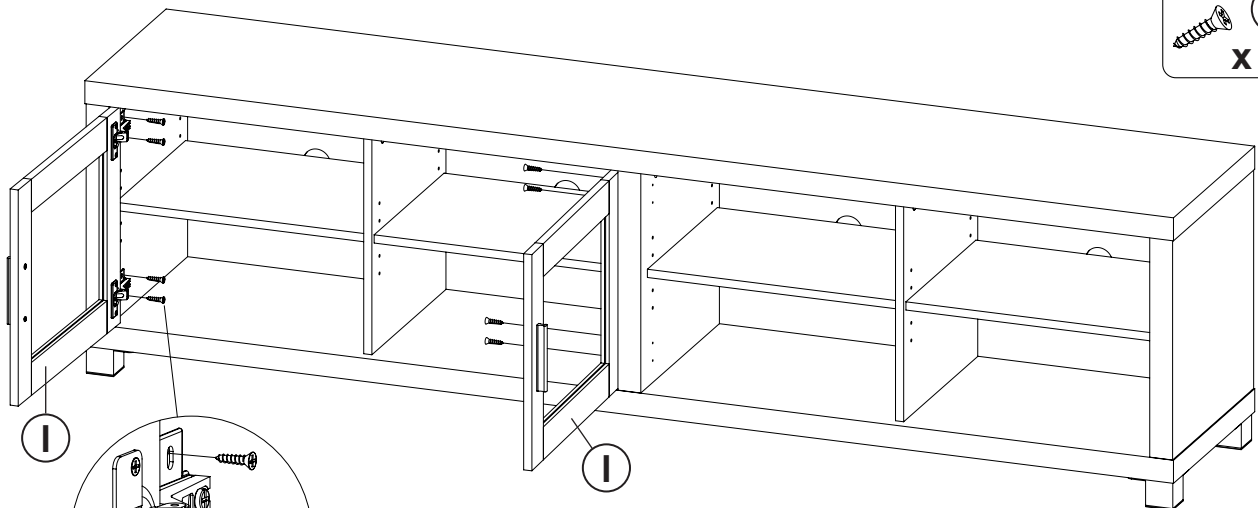

COMPLETE

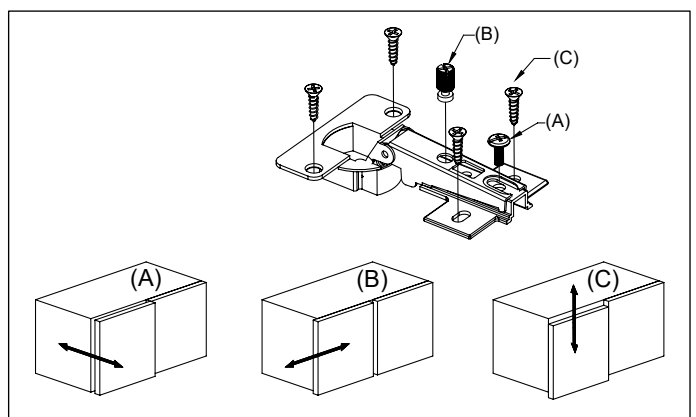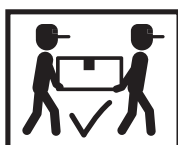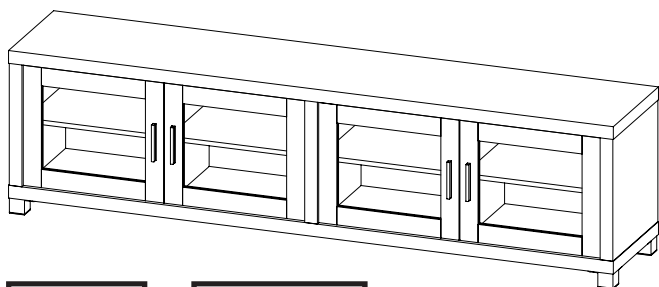   

ITEM: 736283

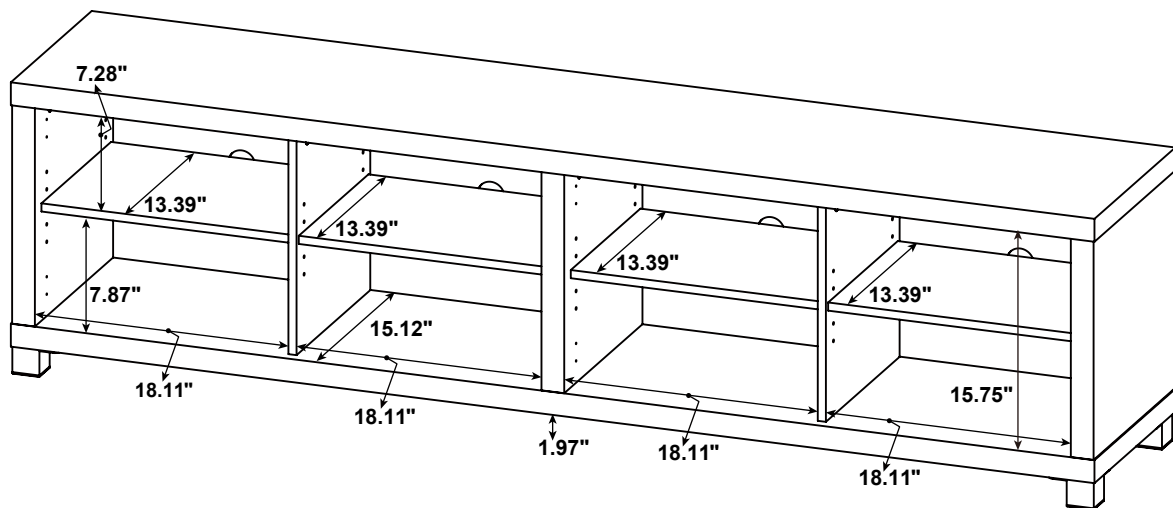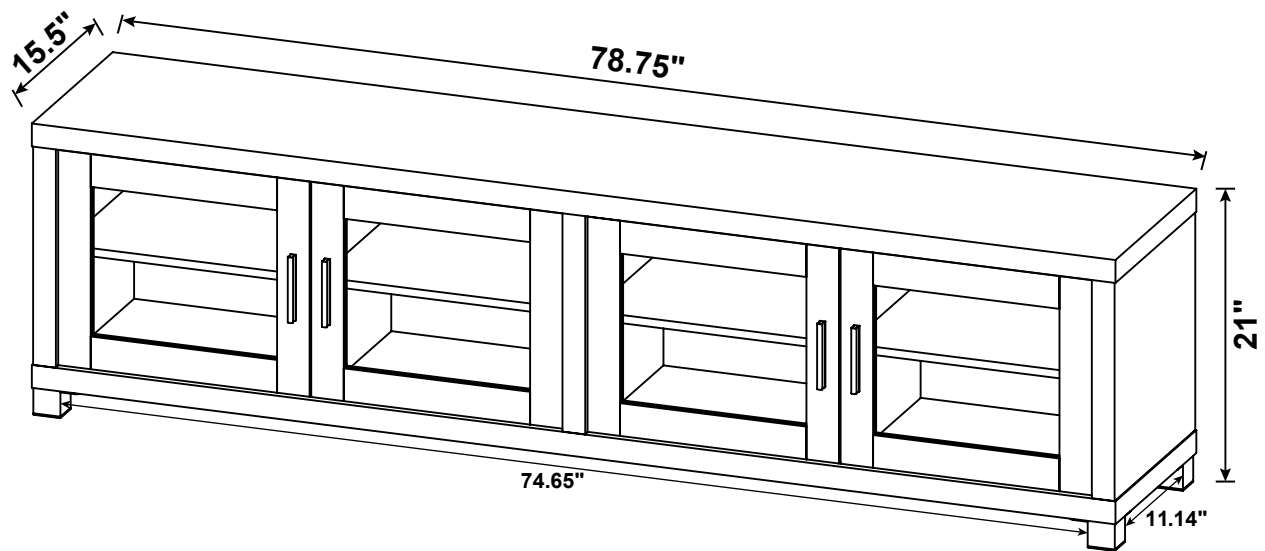  

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

707746
MEDIA TOWER

ITEM:707746

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

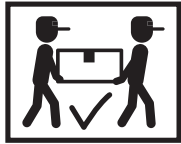


ASSEMBLY TIME


50 MINUTES

PARTS IDENTIFICATION

 
A LEFT SIDE PANEL 1 PC

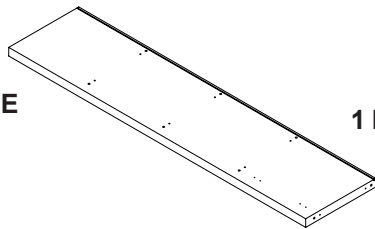


B RIGHT SIDE PANEL 1 PC

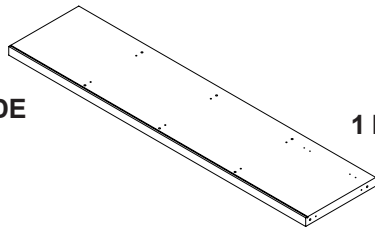 


C BOTTOM PANEL 1 PC

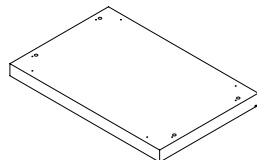 


D LOWER CROSS PANEL 1 PC

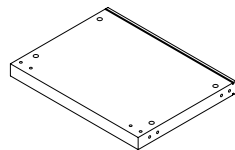 


E UPPER CROSS PANEL 2 PCS

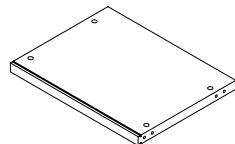 


F TOP PANEL 1 PC

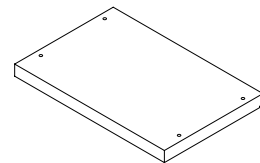 


G UPPER BACK PANEL 3 PCS

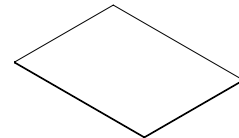 

H LOWER BACK PANEL 1 PC

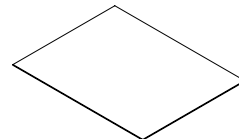 

I DOOR 1 PC

  
 
 
 
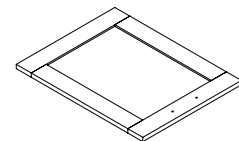 



 
 
 
 
 





NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:707746

 HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	11	LEG 47mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		12 PCS	12	SCREW Ø4x19mm BLK		8 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	13	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
6	DOOR CATCH		1 PC	14	FIXER		6 PCS
7	HANDLE L= 120mm BLK		1 PC	15	FIXER SCREW Ø3x19mm SR		6 PCS
8	HANDLE BOLT Ø4x28mm BLK		2 PCS	16	STICKER Ø20mm		2 PCS

Z7,Z8,Z9,Z11 not included in blister packaging.

 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 707746

STEP 1





COASTER
FINE FURNITURE

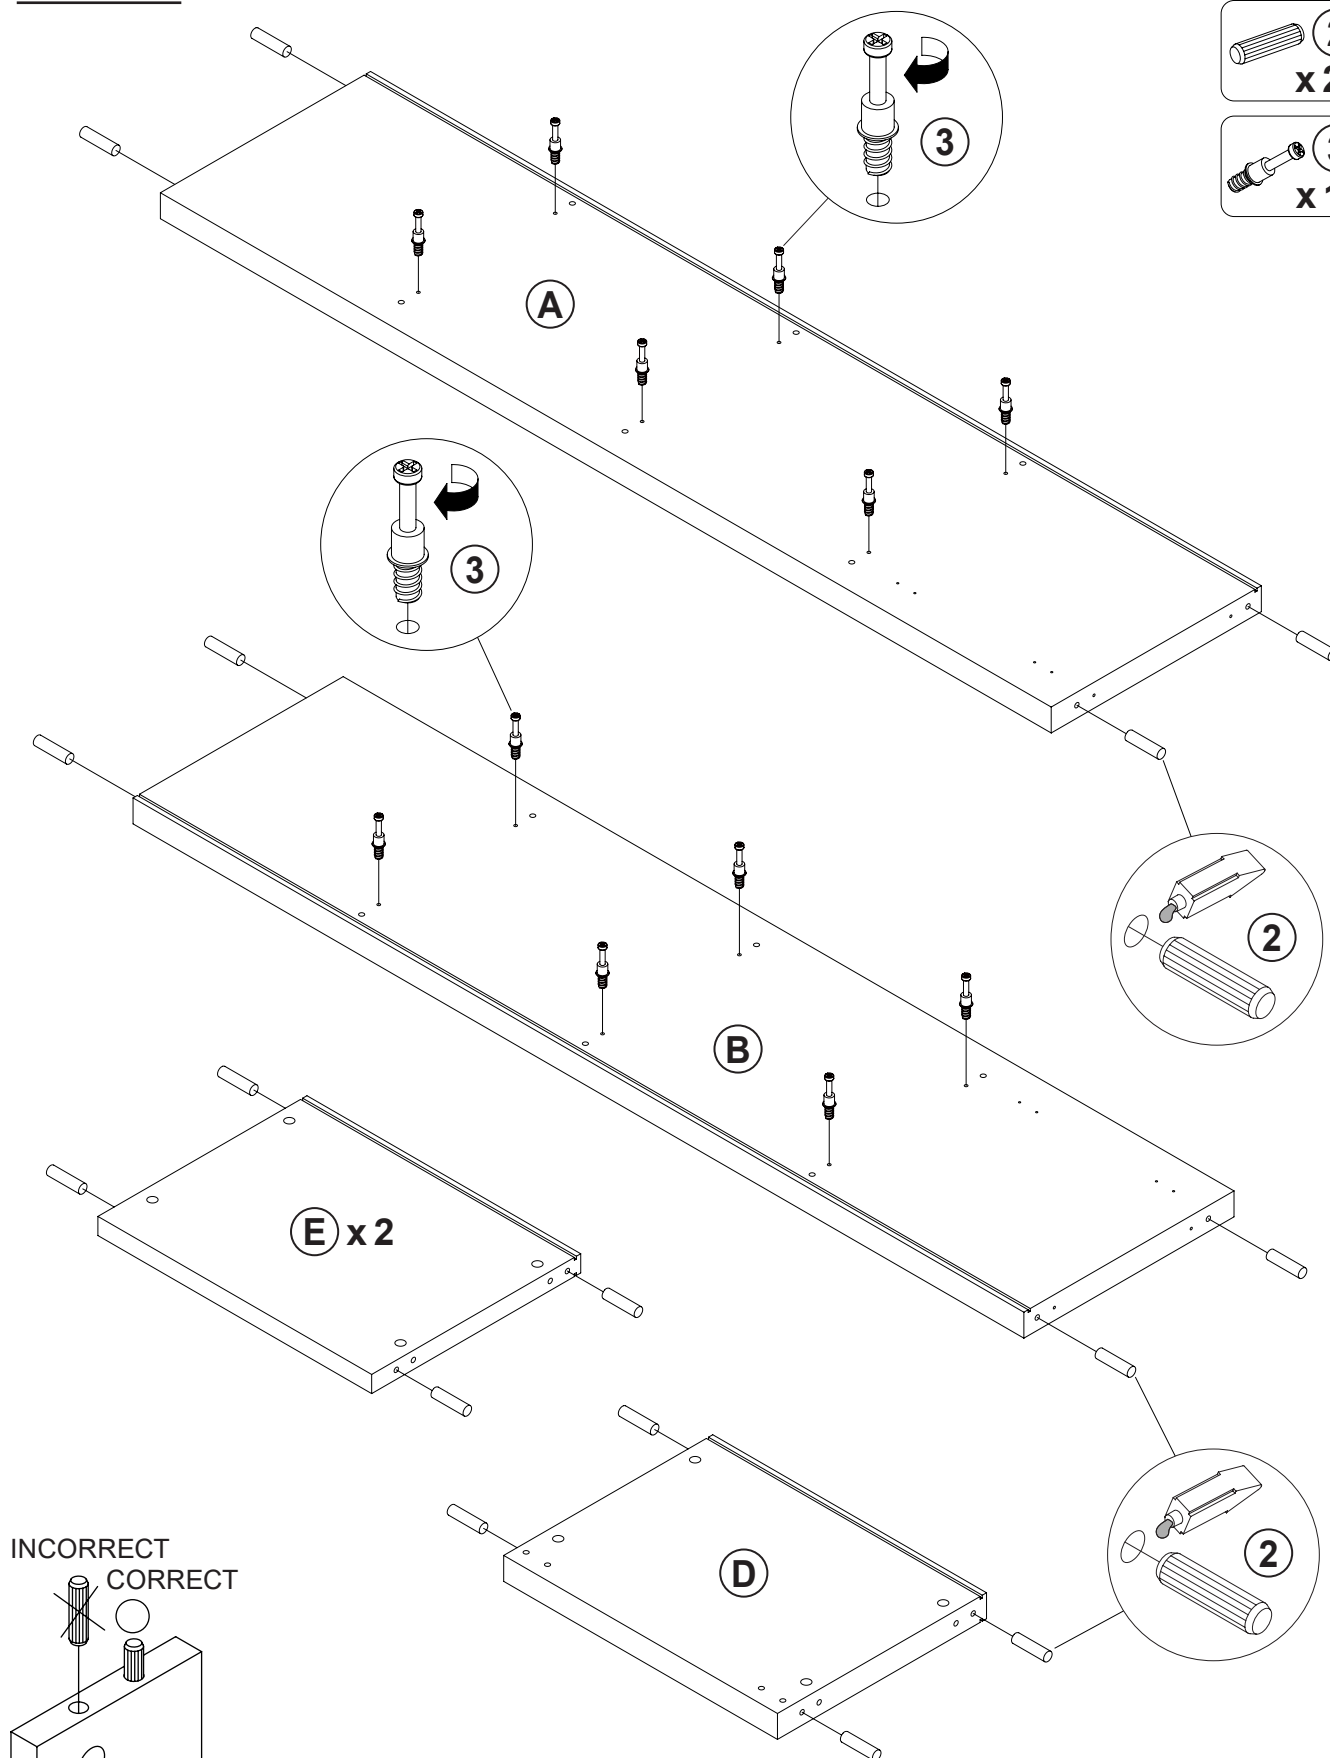


ITEM: **707746**

STEP 2

    COASTER
FINE FURNITURE

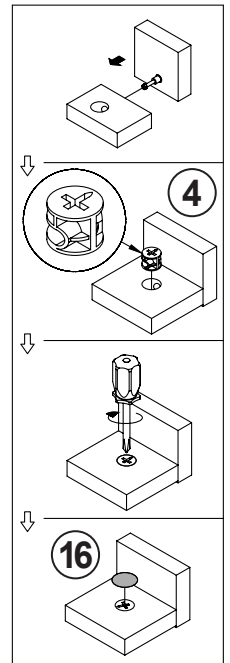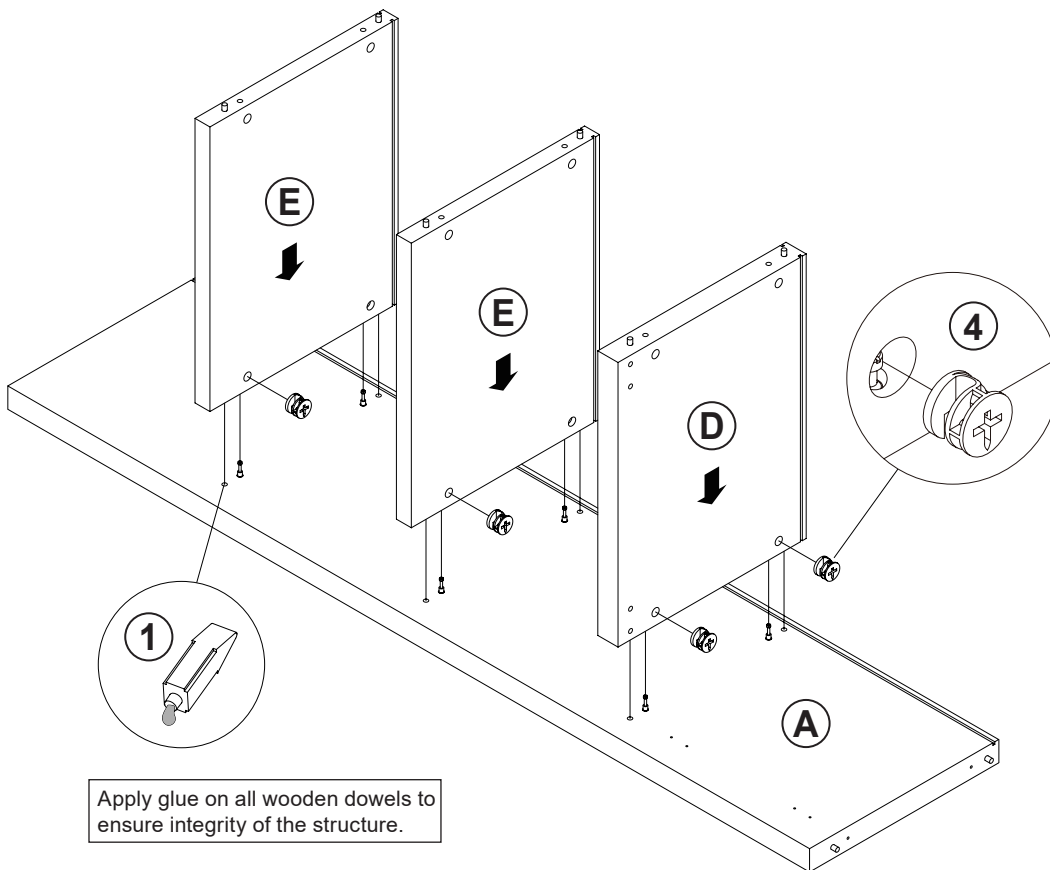


 
STEP 3

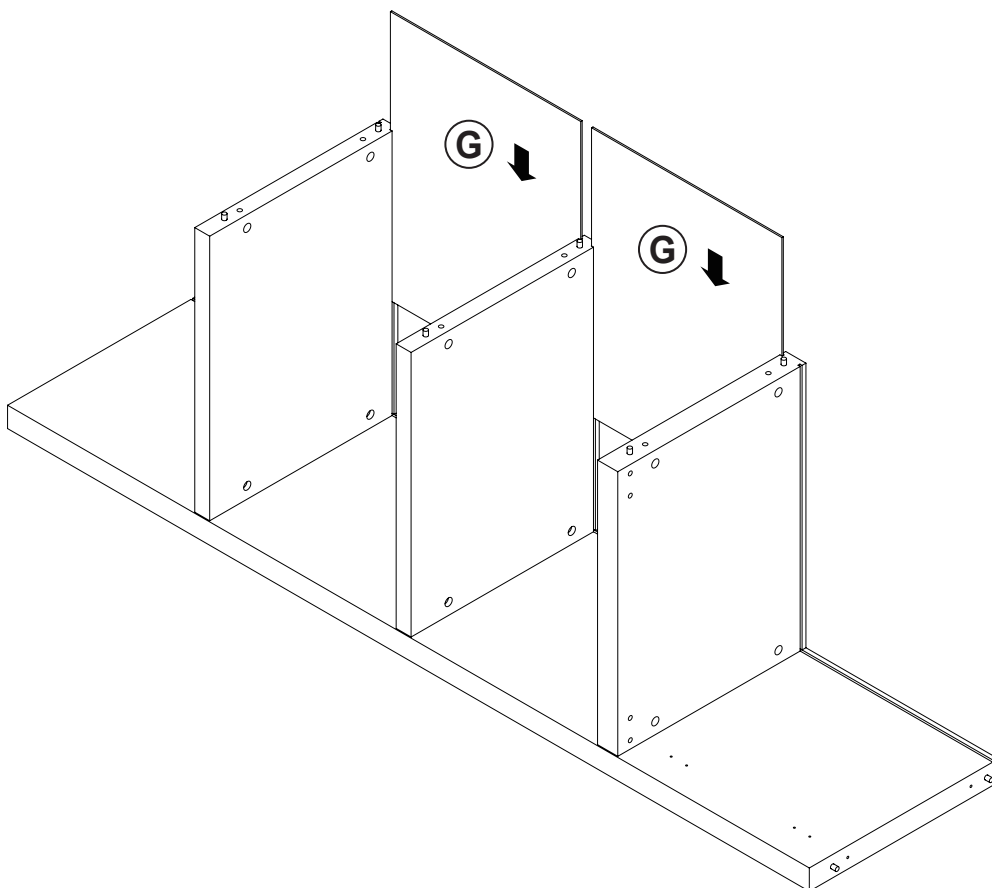


ITEM: **707746**

COASTER
FINE FURNITURE

  STEP 4

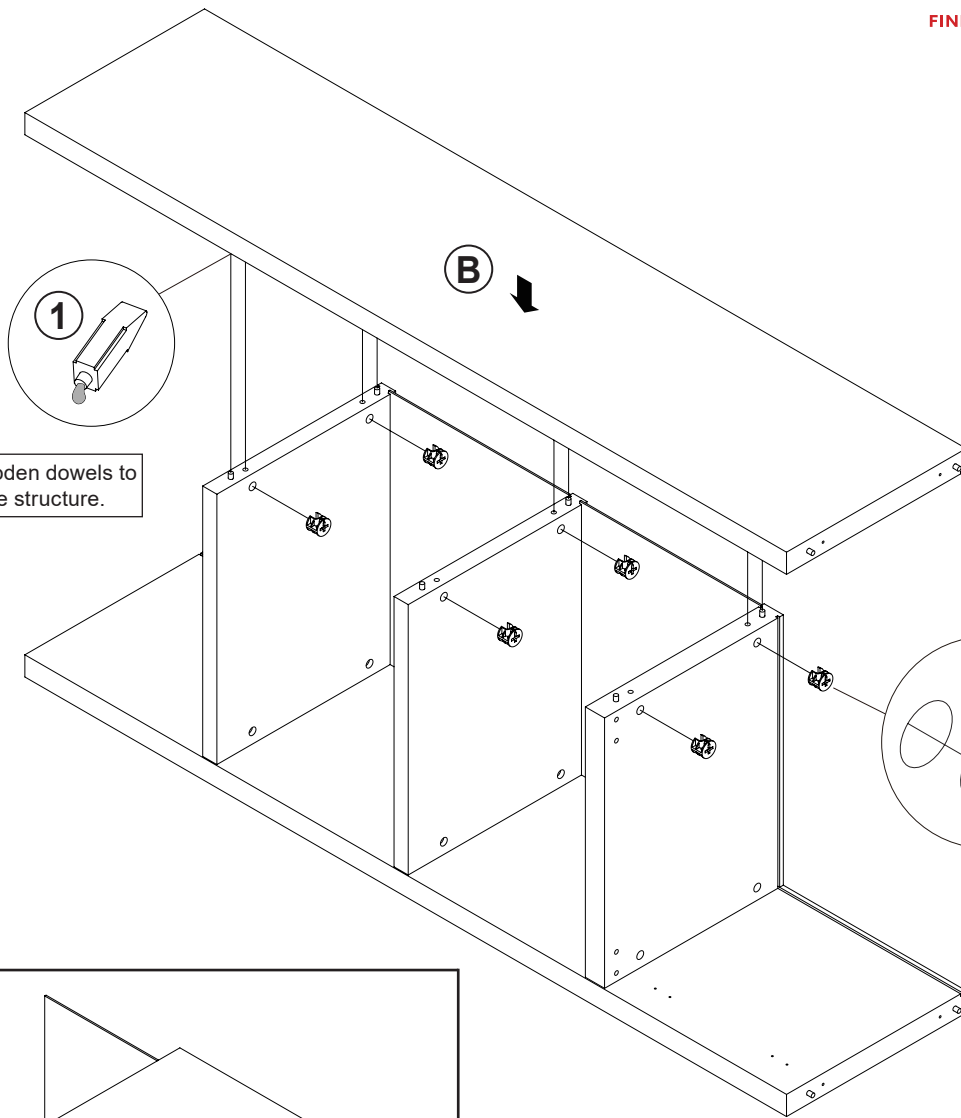

 
STEP 5

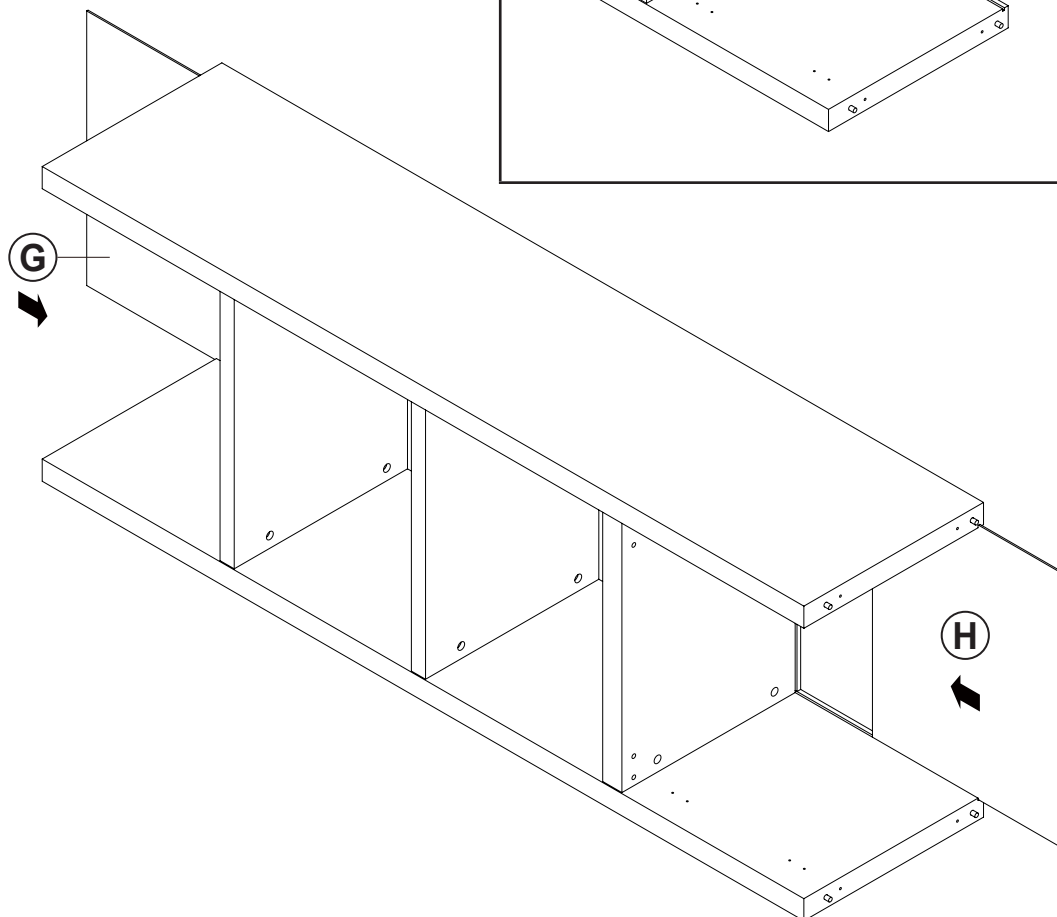


ITEM: **707746**


STEP 6



 5  **x 8**

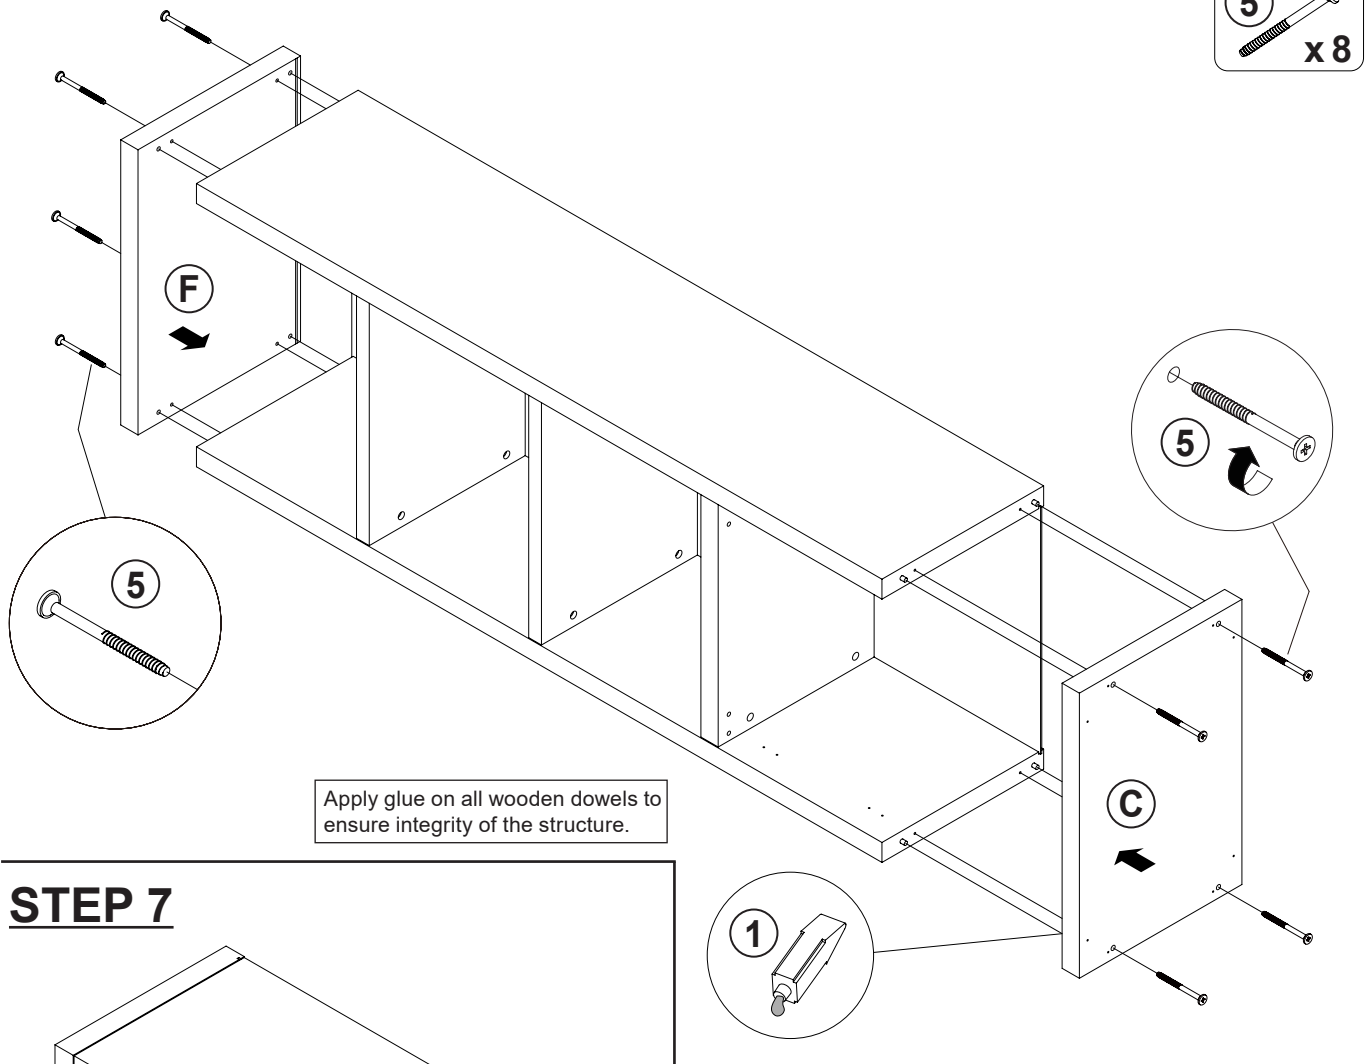


 
STEP 7

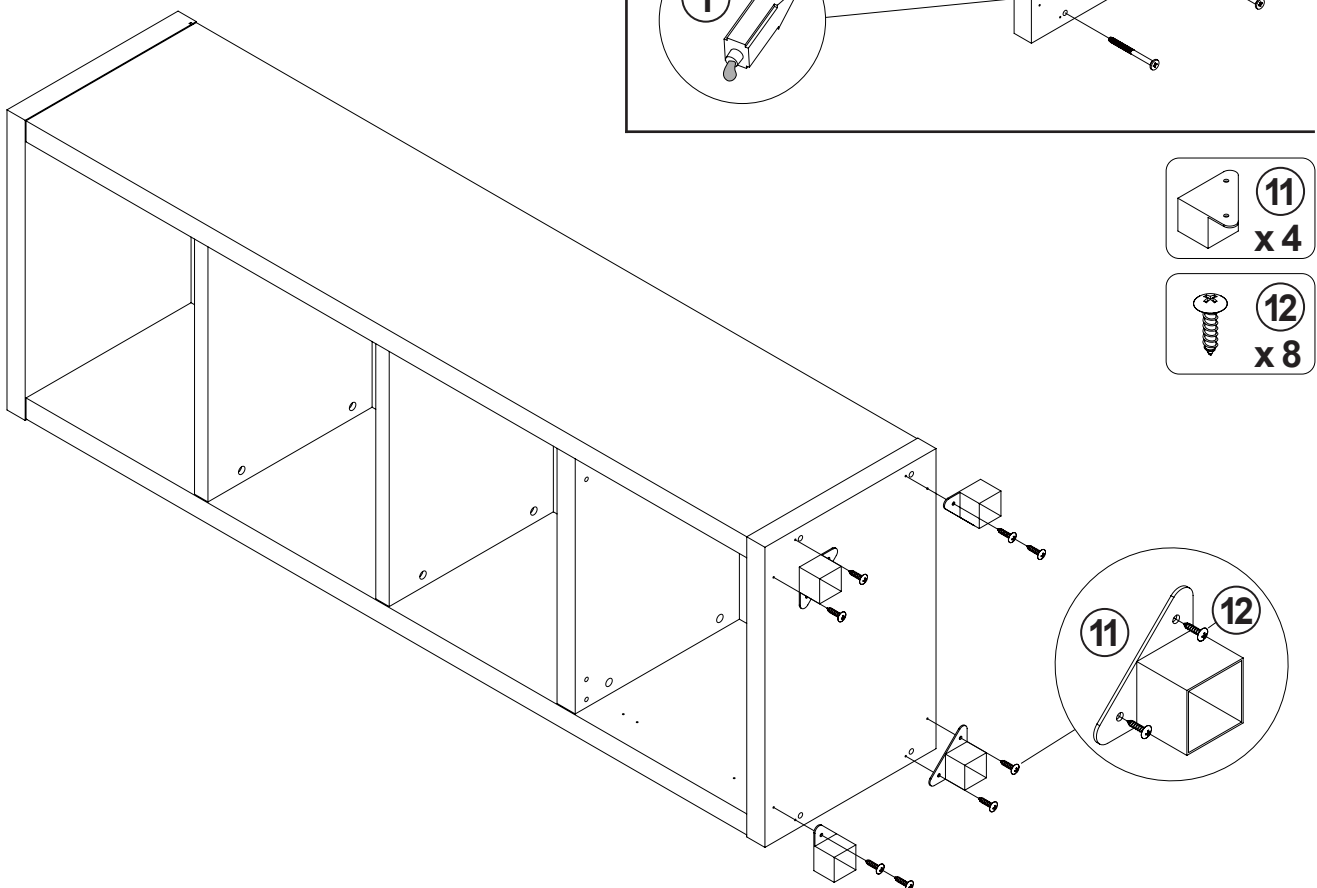




ITEM: **707746**

COASTER
FINE FURNITURE

  STEP 8

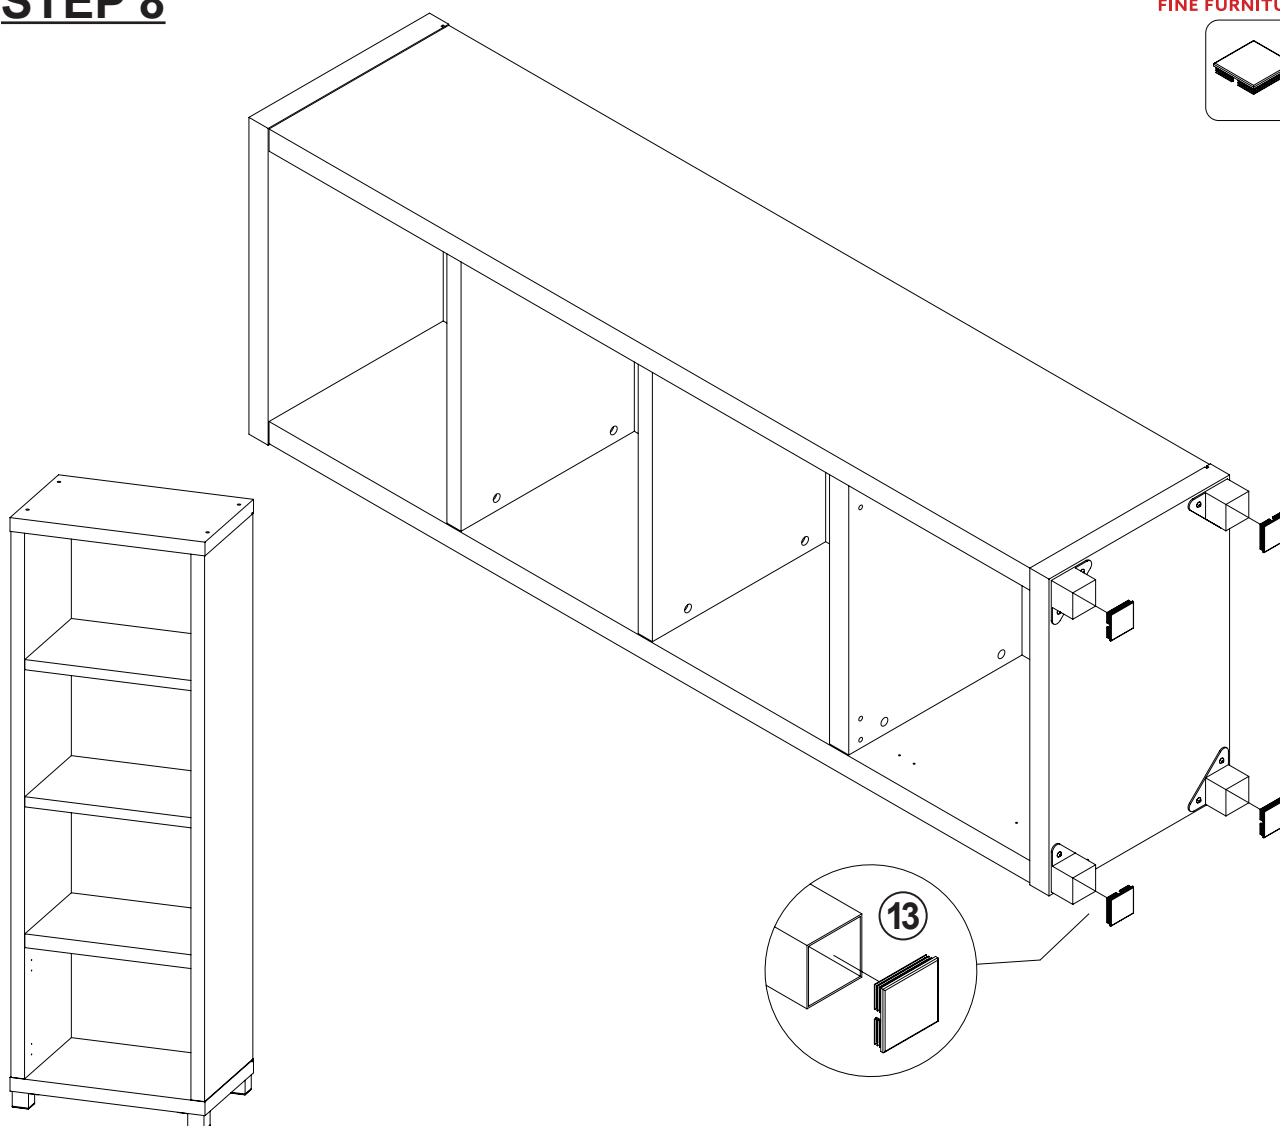

   STEP 9

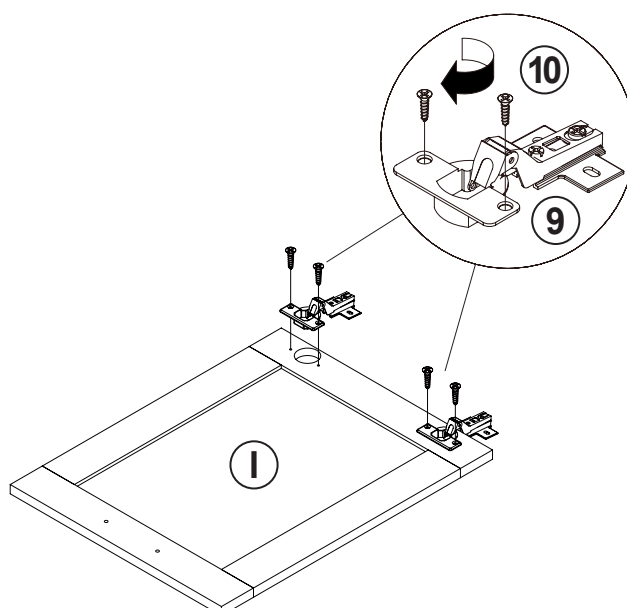




ITEM: **707746**



COASTER
FINE FURNITURE

STEP 10

   LEFT

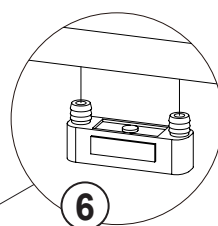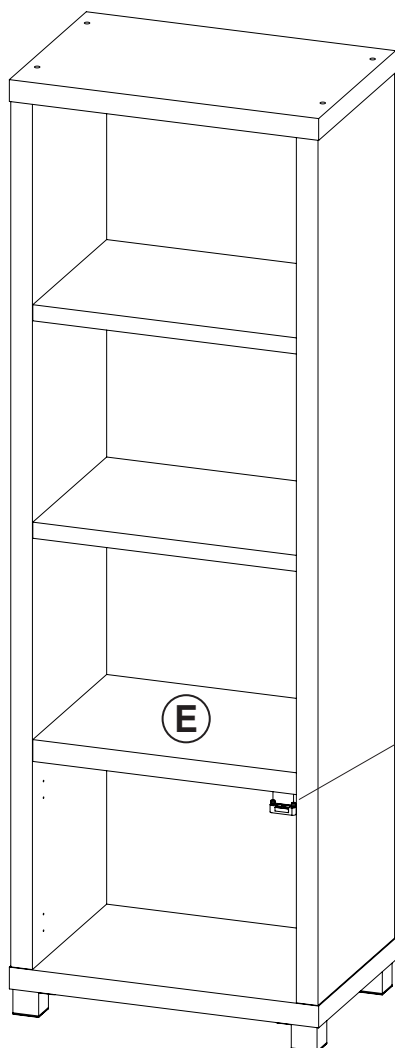




RIGHT

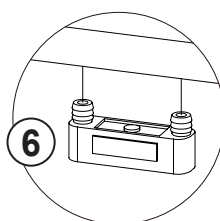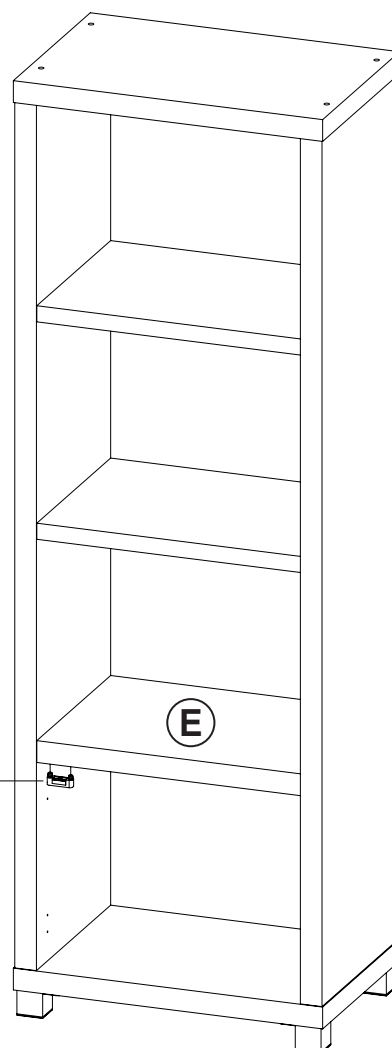  


ITEM: **707746**

STEP 11

   
COASTER
FINE FURNITURE

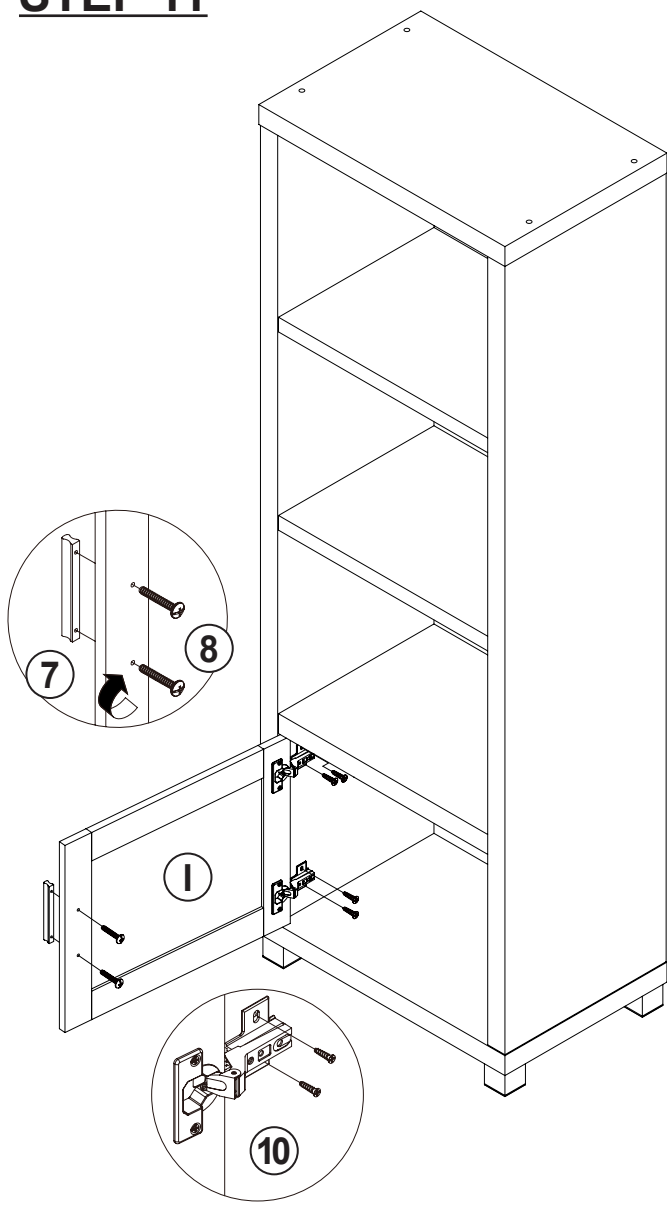


RIGHT

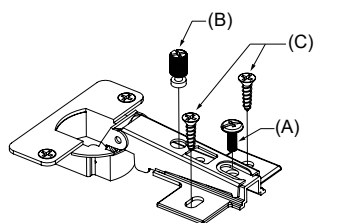 



HORIZONTAL BY
SCREW A ADJUSTMENT

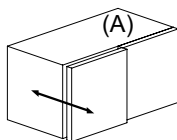 

LATERAL BY
SCREW B ADJUSTMENT

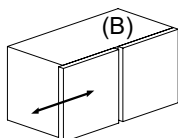 






VERTICAL BY
SCREW C ADJUSTMENT

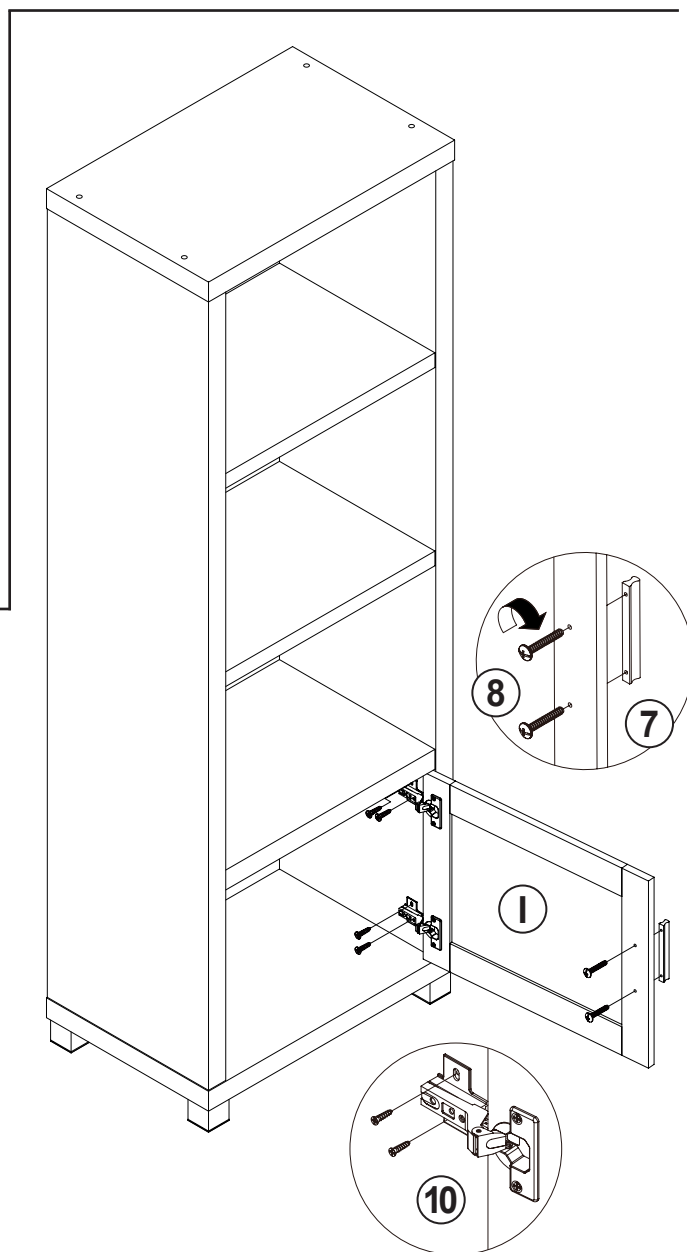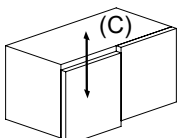  

ITEM: **707746**



STEP 12

     COASTER
FINE FURNITURE

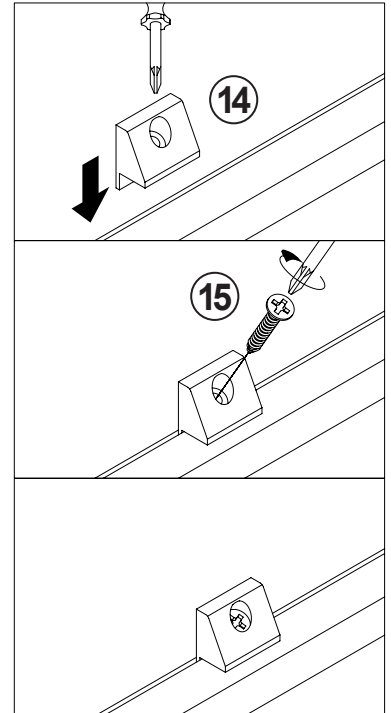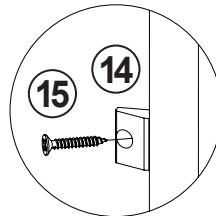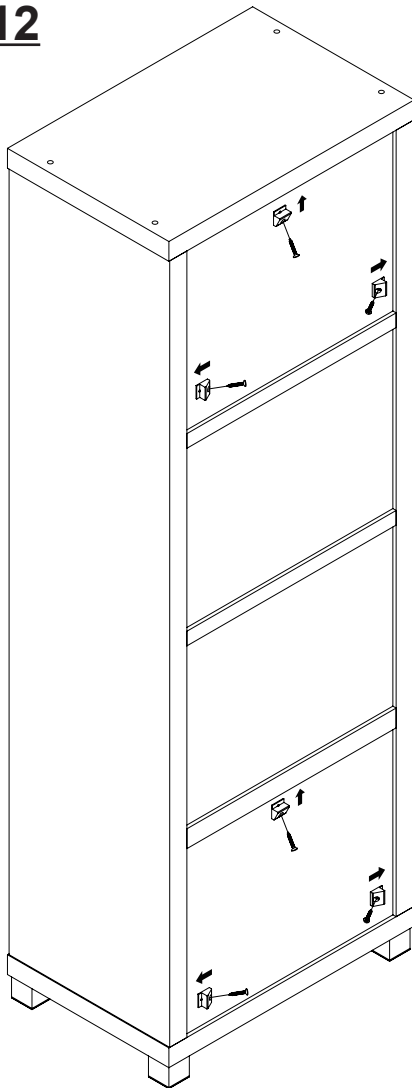


STEP 13

  COMPLETE

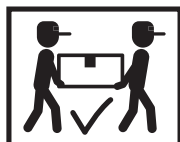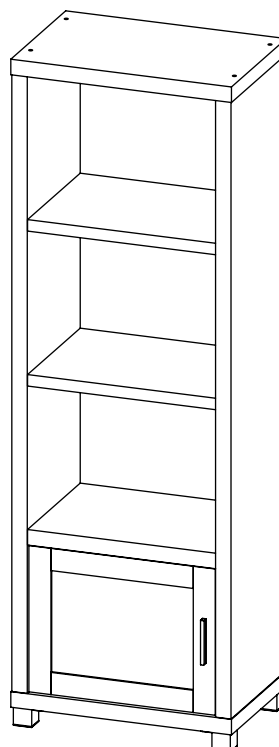

ITEM: 707746

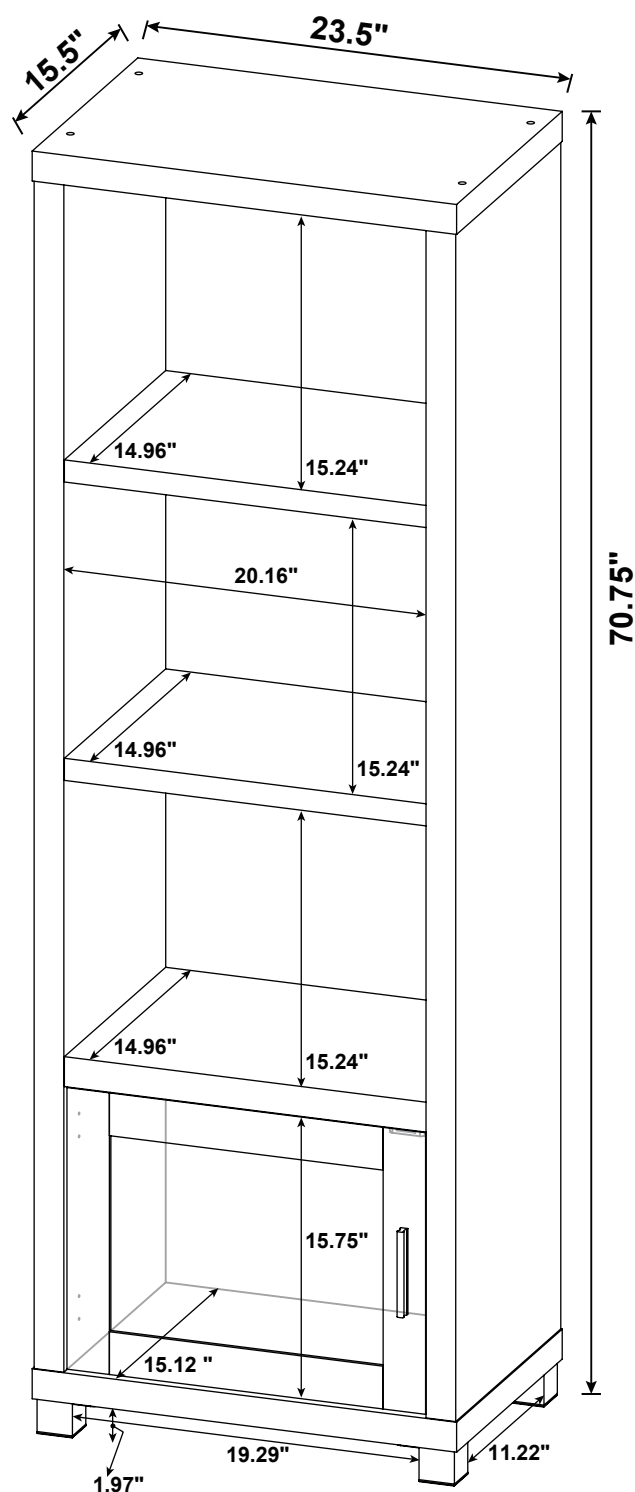 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

