

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

704254
MEDIA TOWER

ITEM:704254



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!











1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

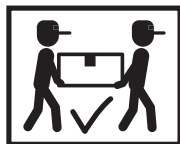

ASSEMBLY TIME

          50 MINUTES

 
 
 
 
 


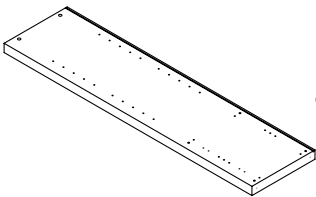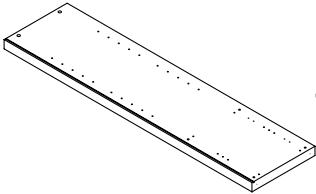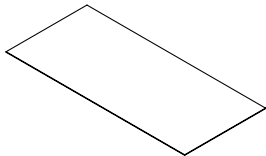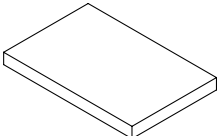 



 
PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	F	ADJUSTABLE SHELF		1 PC
B	RIGHT SIDE PANEL		1 PC	G	UPPER BACK PANEL		1 PC
C	BOTTOM PANEL		1 PC	H	LOWER BACK PANEL		1 PC
D	CROSS PANEL		1 PC	I	DOOR		1 PC
E	TOP PANEL		1 PC	J	GLASS		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704254****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	7	GLASS PIN Ø5x23mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		12 PCS	8	HINGE Ø35mm SR		2 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	9	HINGE SCREW Ø4x15mm SR		8 PCS
4	CAM LOCK Ø15x12mm SR		12 PCS	10	FIXER		3 PCS
5	PLASTIC FEET Ø15mm		4 PCS	11	FIXER SCREW Ø 3x19mm SR		3 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS	12	STICKER Ø20mm		2 PCS

 
 
 
 
 
Z8 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704254**

STEP 1

COASTER
FINE FURNITURE

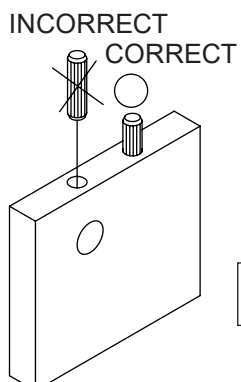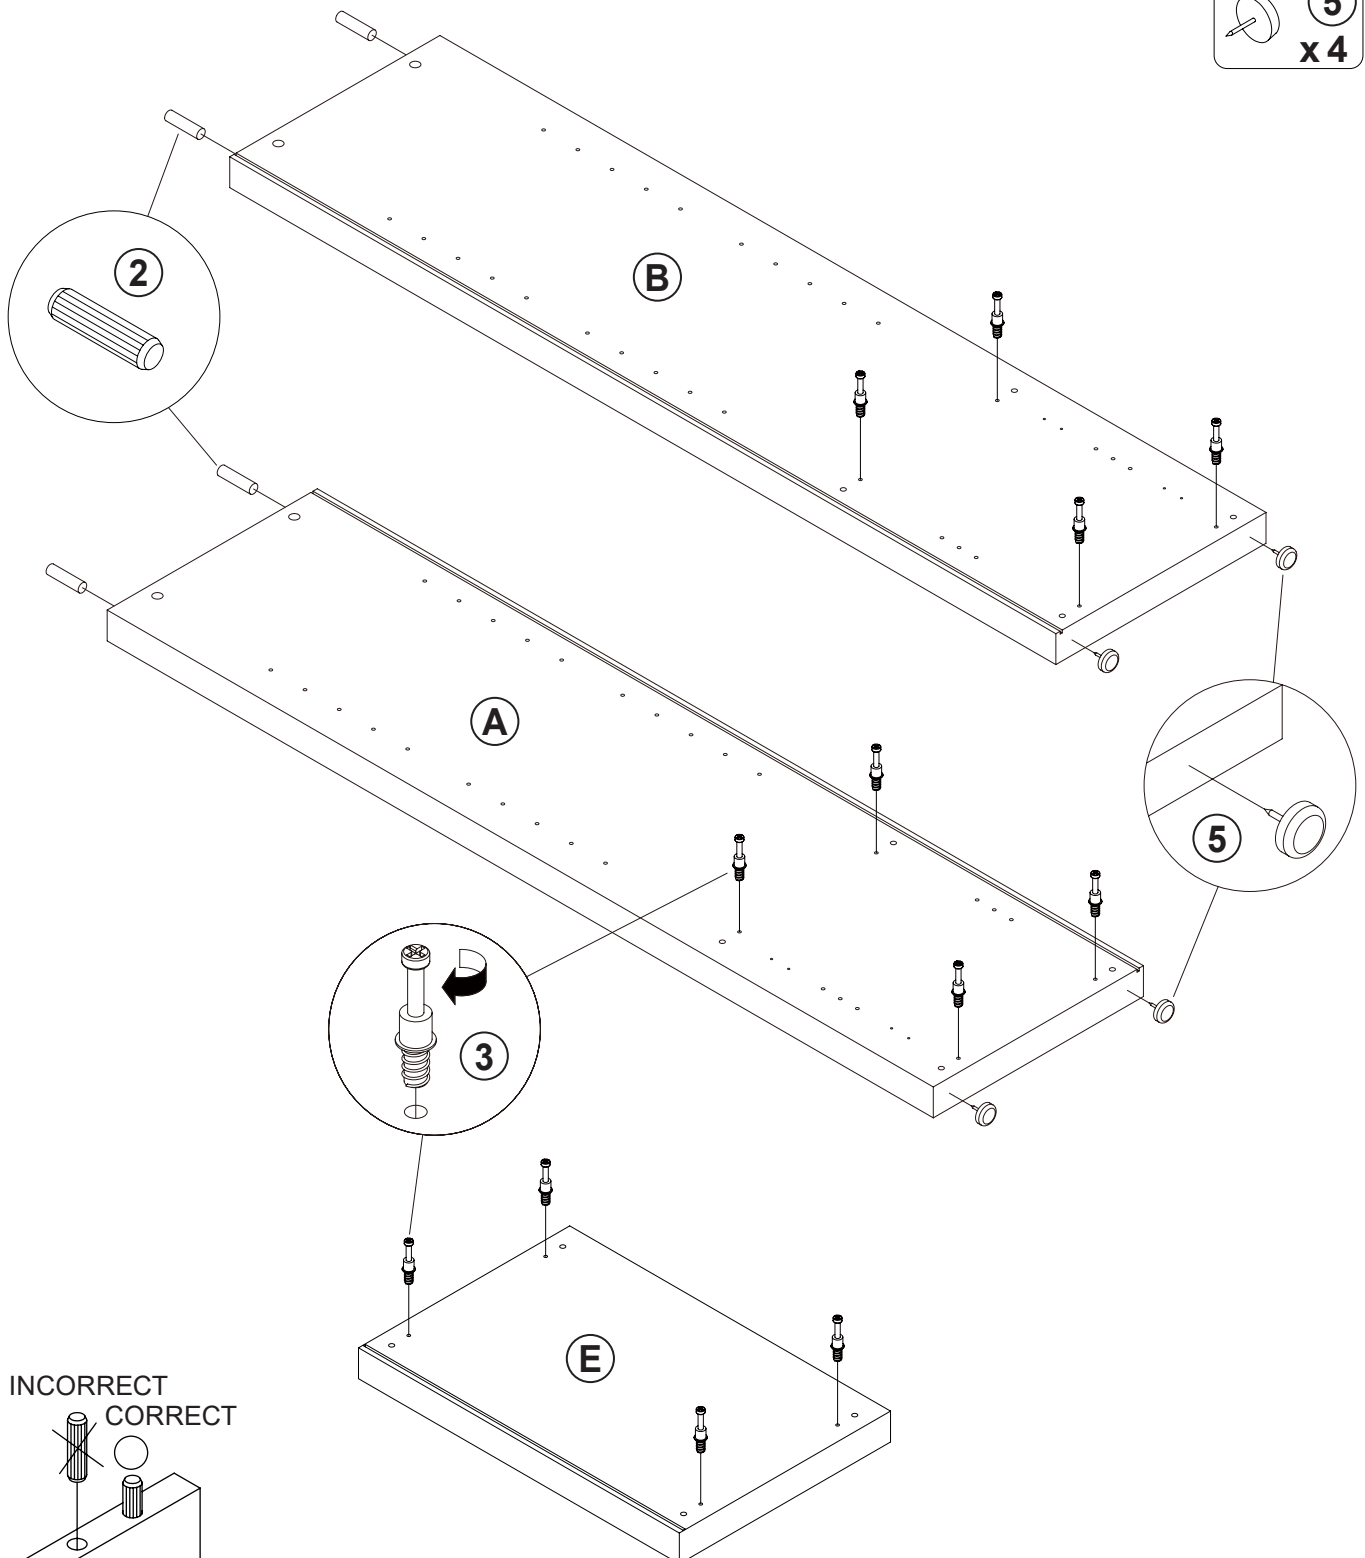



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: 704254





STEP 2

  COASTER
FINE FURNITURE

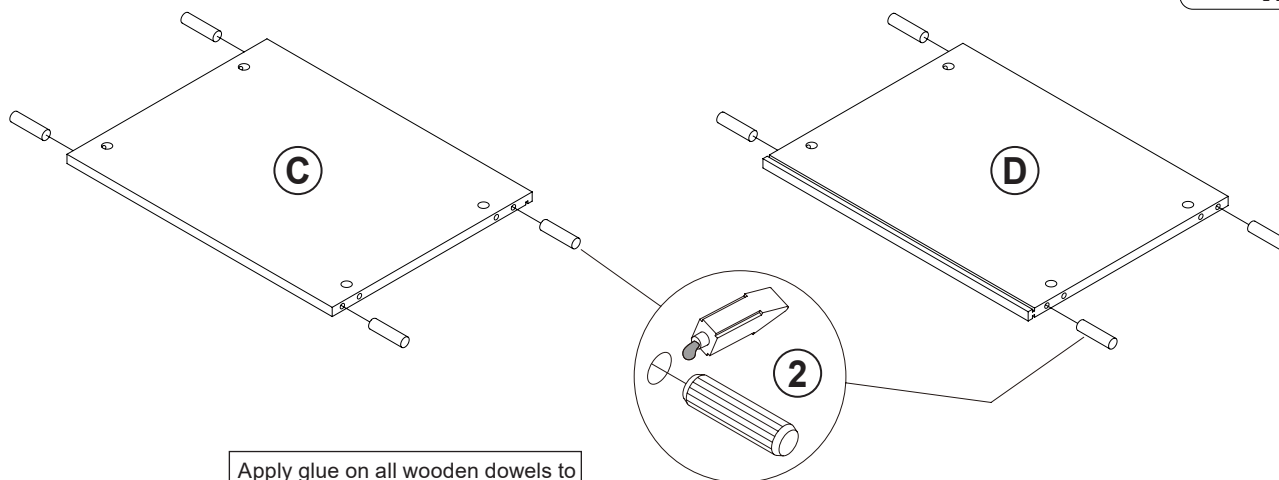

Apply glue on all wooden dowels to ensure integrity of the structure.

   
 
STEP 3

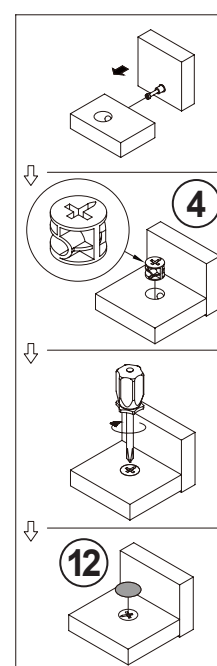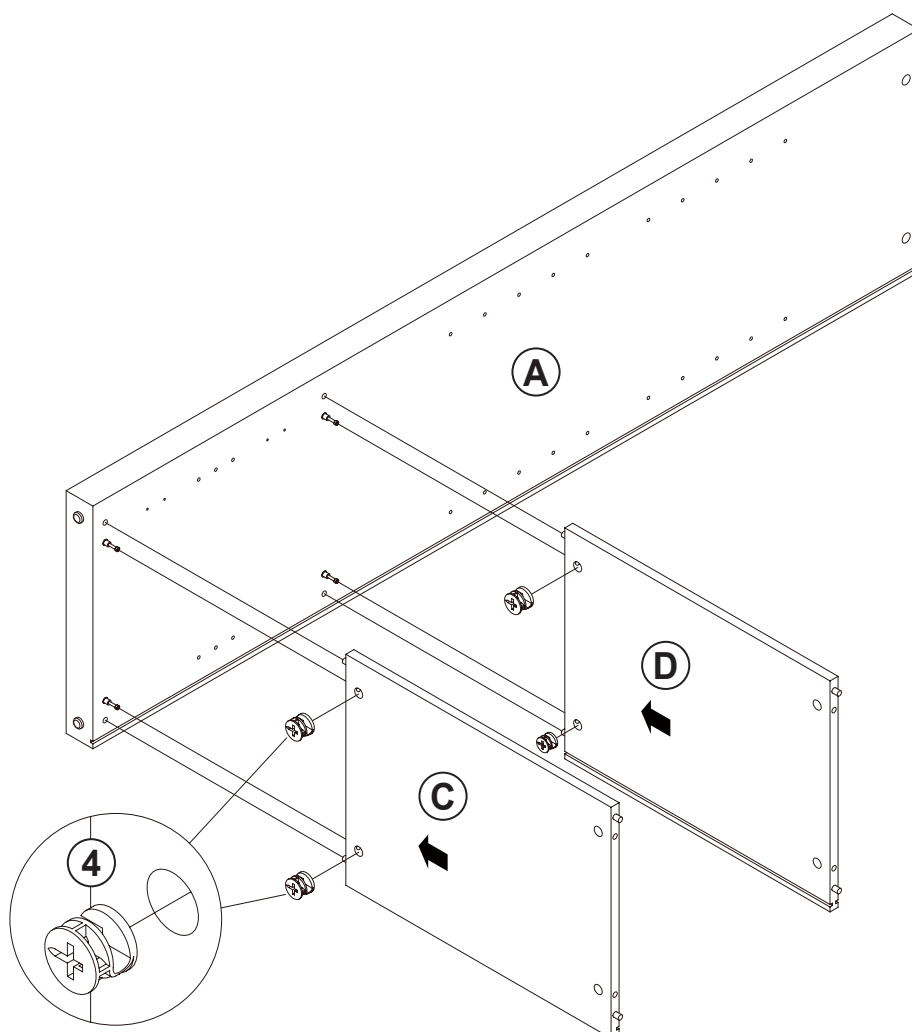


ITEM: **704254**

STEP 4

  COASTER
FINE FURNITURE

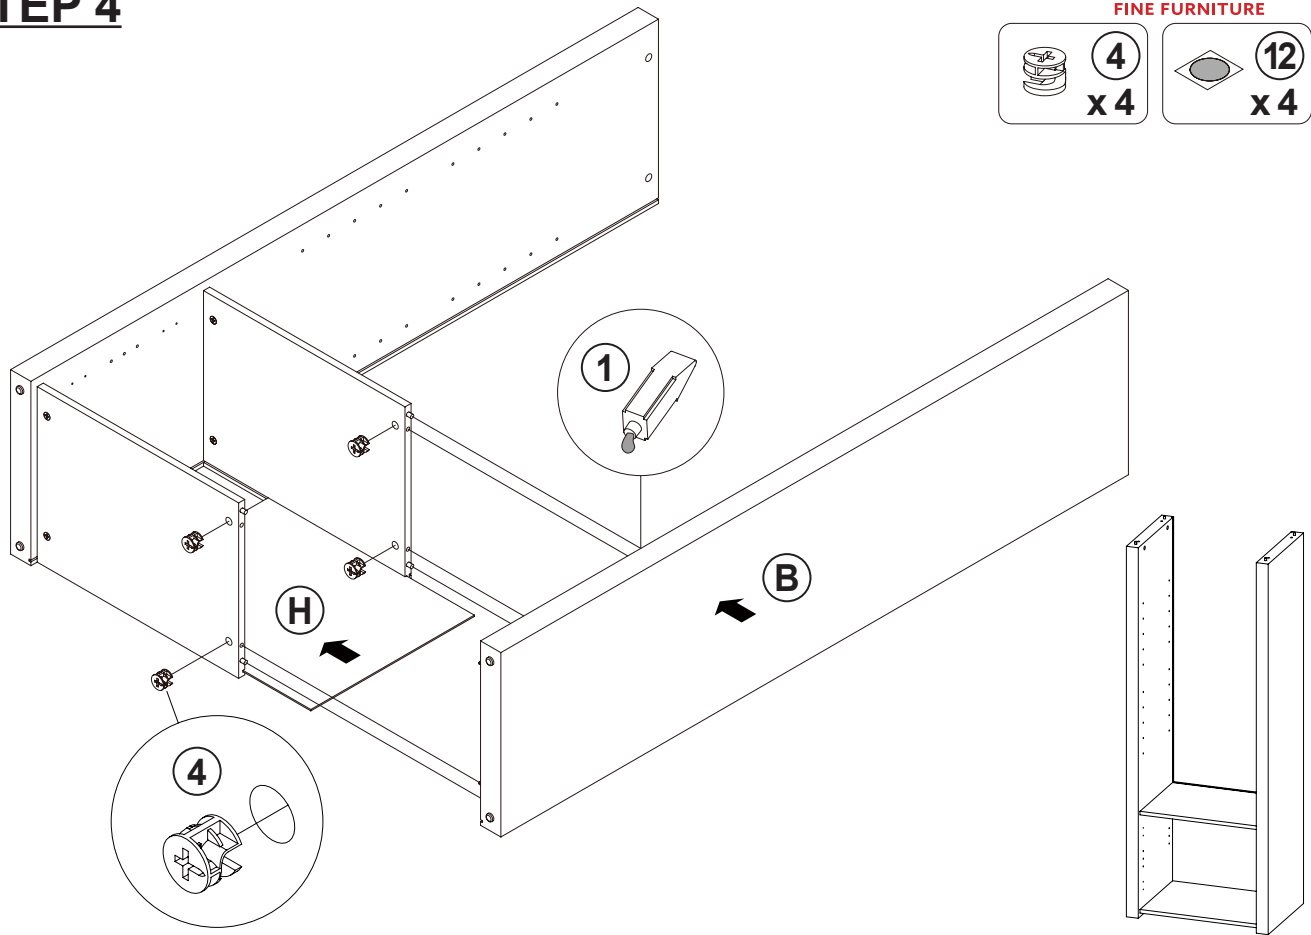

 
STEP 5

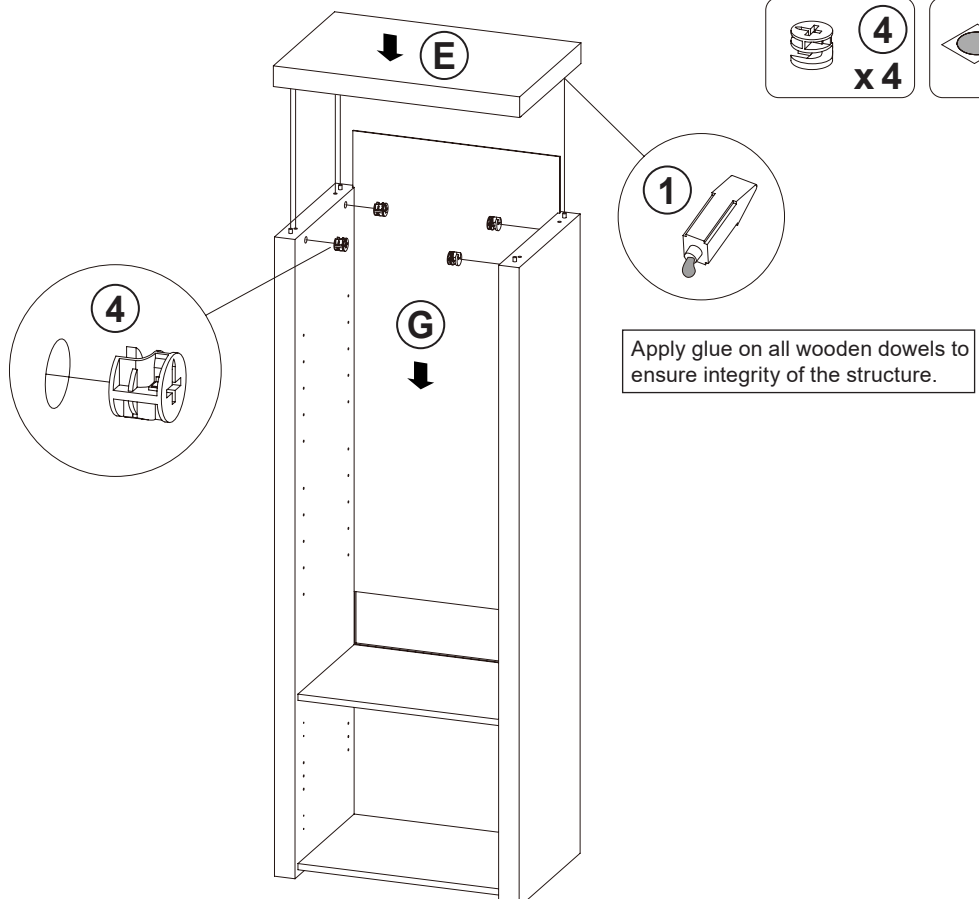


ITEM: **704254**

STEP 6

 COASTER
FINE FURNITURE

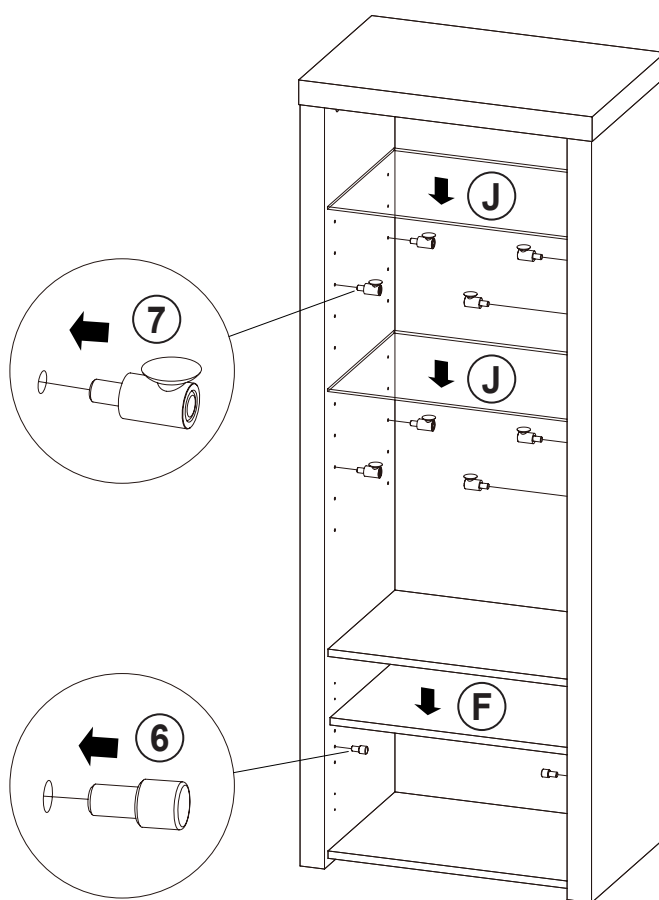

 STEP 7

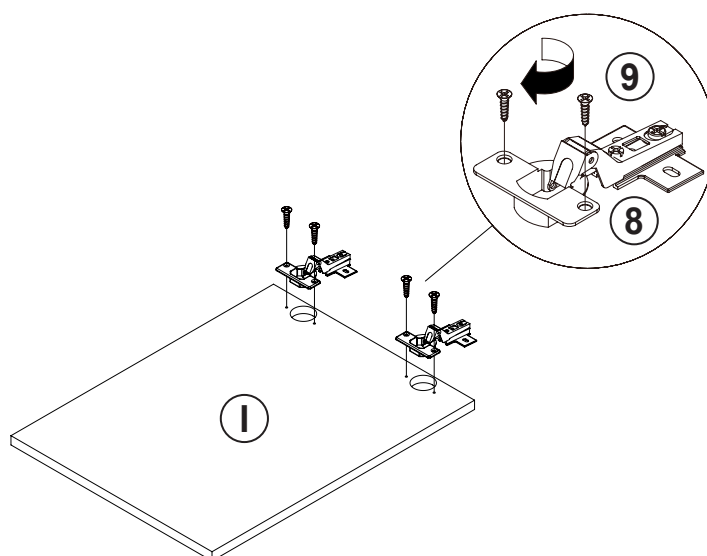


ITEM: **704254**


COASTER
FINE FURNITURE

STEP 8

 
LEFT

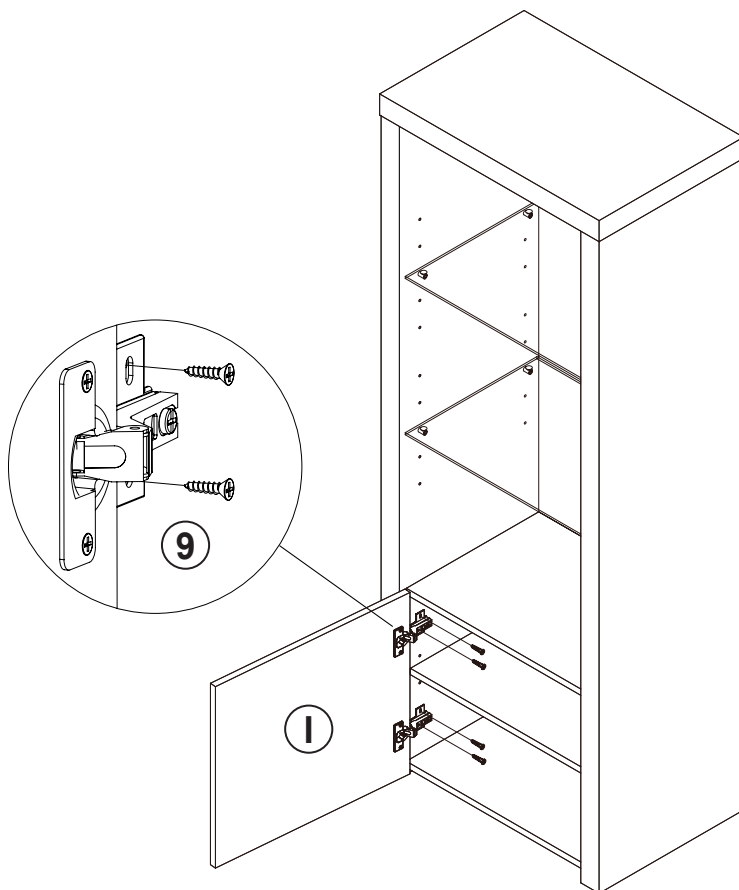


RIGHT

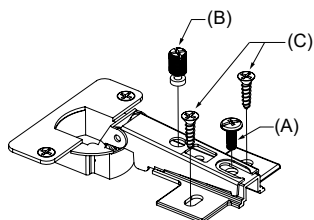 



HORIZONTAL BY
SCREW A ADJUSTMENT

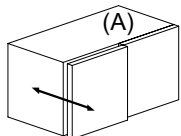 

LATERAL BY
SCREW B ADJUSTMENT

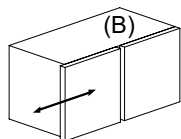 



VERTICAL BY
SCREW C ADJUSTMENT

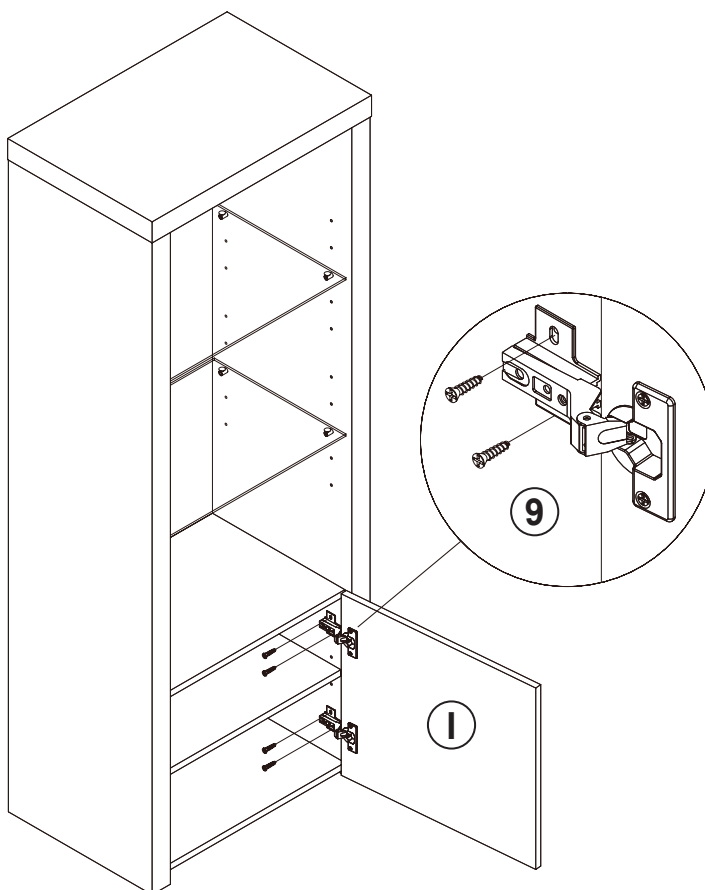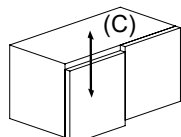  




ITEM: **704254**

STEP 9

  
COASTER
FINE FURNITURE

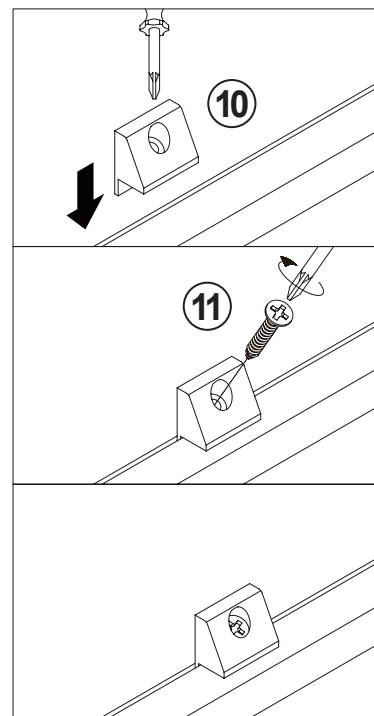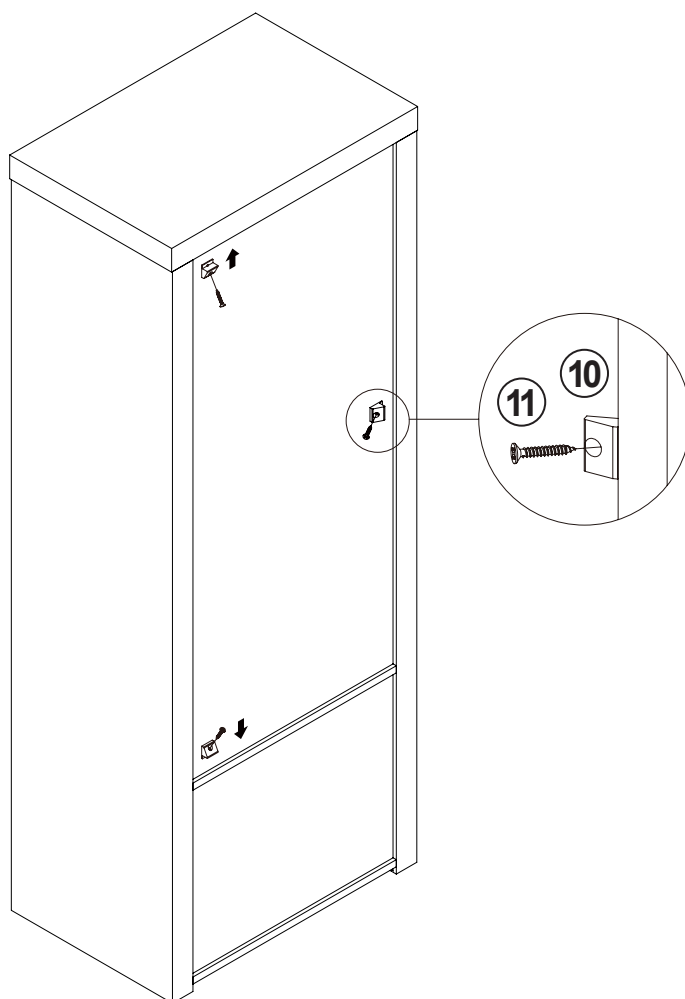

   STEP 10
COMPLETE

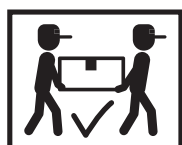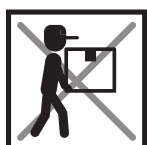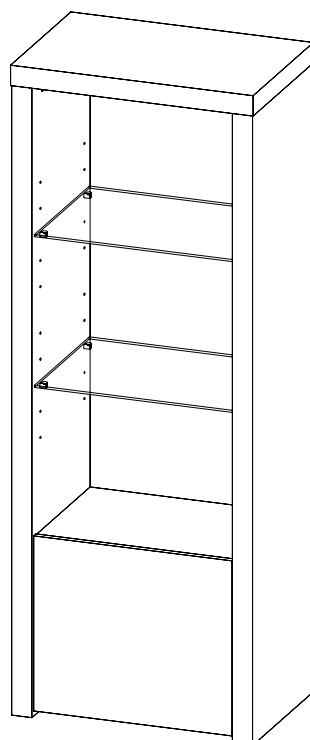

ITEM: 704254

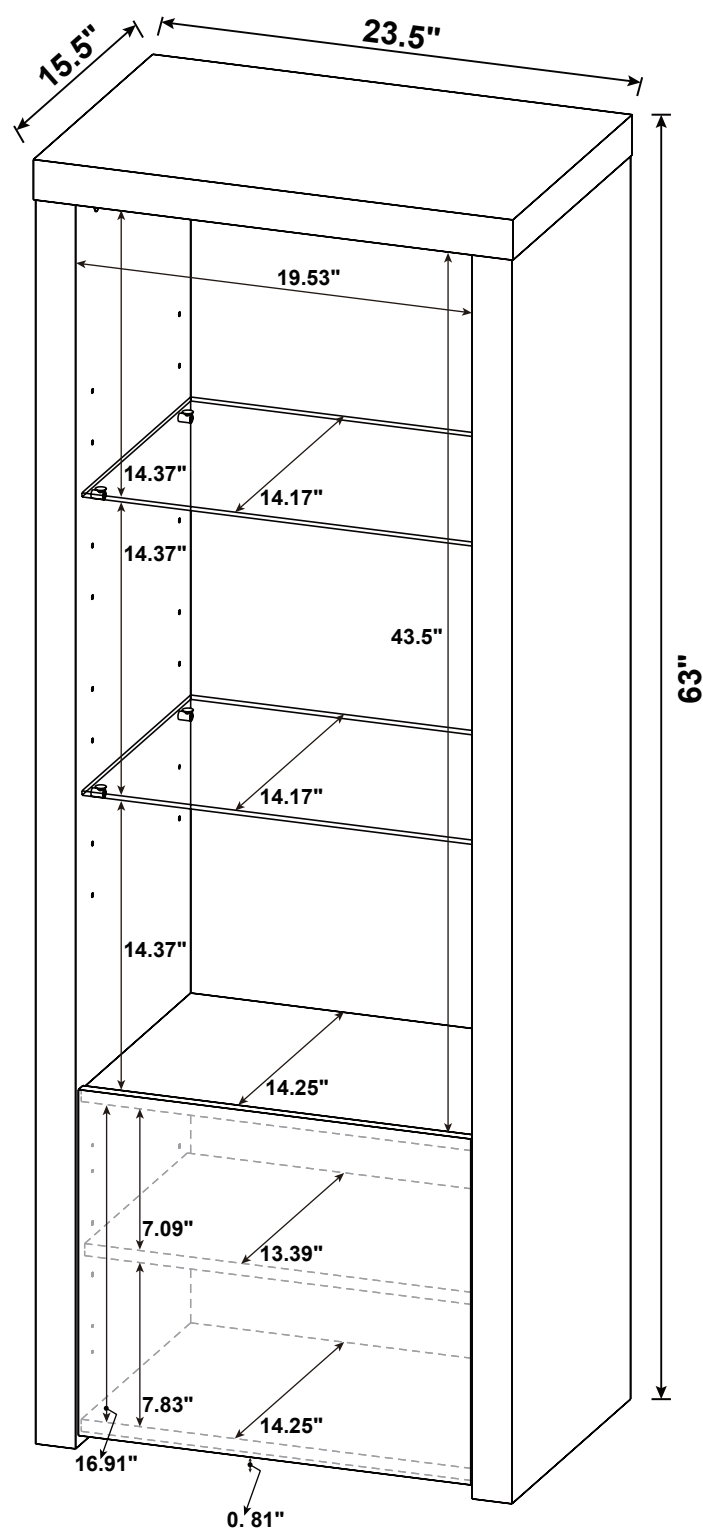 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

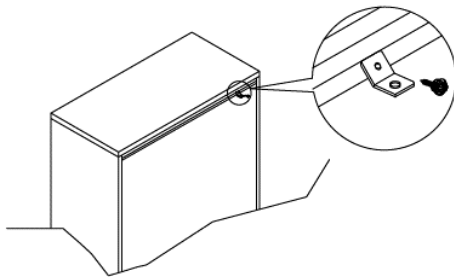

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

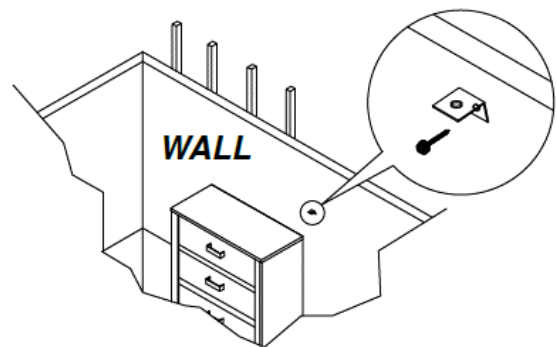

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

