

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**704251**  
**TV CONSOLE**

# ITEM:704251



## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

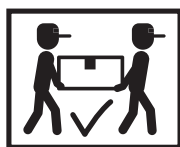


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 75"


## PARTS IDENTIFICATION

 A LEFT SIDE  
PANEL

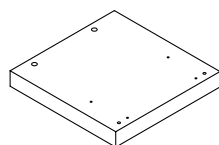


1 PC

 B LEFT DIVIDER  
PANEL




1 PC

 C MIDDLE DIVIDER  
PANEL




1 PC

 D RIGHT DIVIDER  
PANEL




1 PC

 E UPPER DIVIDER  
PANEL




2 PCS

 F BOTTOM PANEL

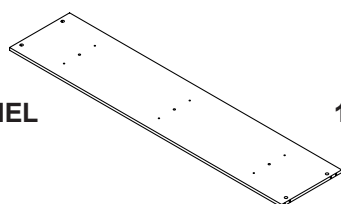


1 PC

 G CROSS PANEL

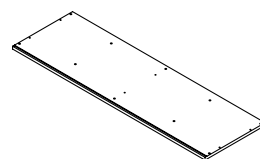


1 PC

 H TOP PANEL

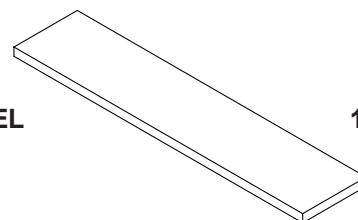


1 PC

 I BACK PANEL

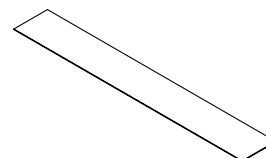


1 PC

 J LEFT DRAWER  
FRONT PANEL

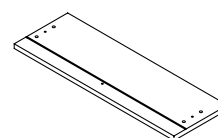


1 PC

 K RIGHT DRAWER  
FRONT PANEL

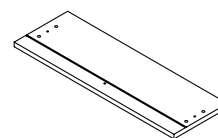

1 PC






 
L DRAWER  
BACK PANEL



2 PCS

### NOTE:

      Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

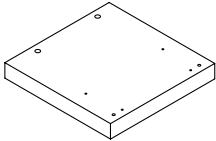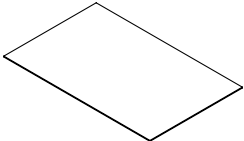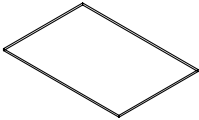 

 
 
 
 



 

 
M	DRAWER LEFT SIDE PANEL		2 PCS	P	DRAWER BOTTOM SUPPORT		2 PCS
N	DRAWER RIGHT SIDE PANEL		2 PCS	Q	RIGHT SIDE PANEL		1 PC
O	DRAWER BOTTOM PANEL		2 PCS	R	GLASS		2 PCS

**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:704251

**HARDWARE IDENTIFICATION**

 
<b>Z</b>							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	PLASTIC FEET Ø15mm		4 PCS
2	WOODEN DOWEL Ø8x30mm		36 PCS	8	GLASS PIN Ø5x23mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		24 PCS	9	GLIDES L=350mm SR		2 SET
4	CAM LOCK Ø15x12mm SR		24 PCS	10	GLIDES BOLT Ø6x13mm SR		24 PCS
5	SCREW Ø4.5x42mm SR		10 PCS	11	FOOT Ø35xH19mm		3 PCS
6	SCREW Ø 4.5x42mm SR		10 PCS	12	STICKER Ø20mm		4 PCS

**Z9,Z11 not included in blister packaging.****NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704251**

## STEP 1

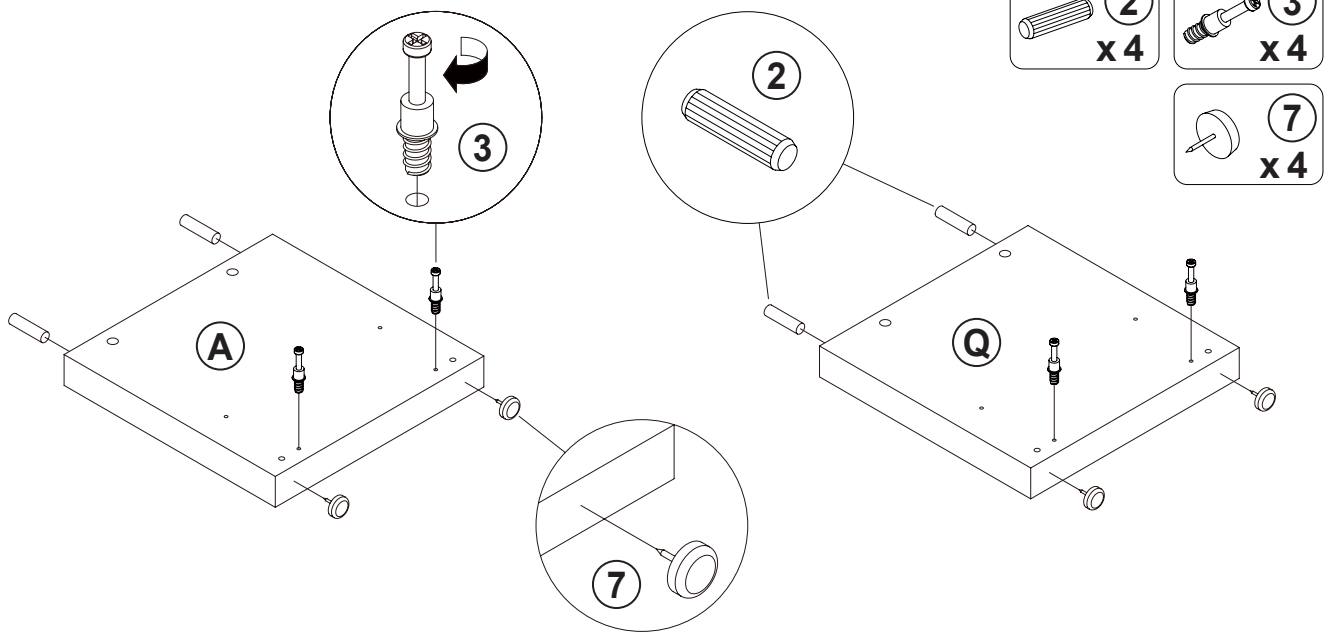


## STEP 2

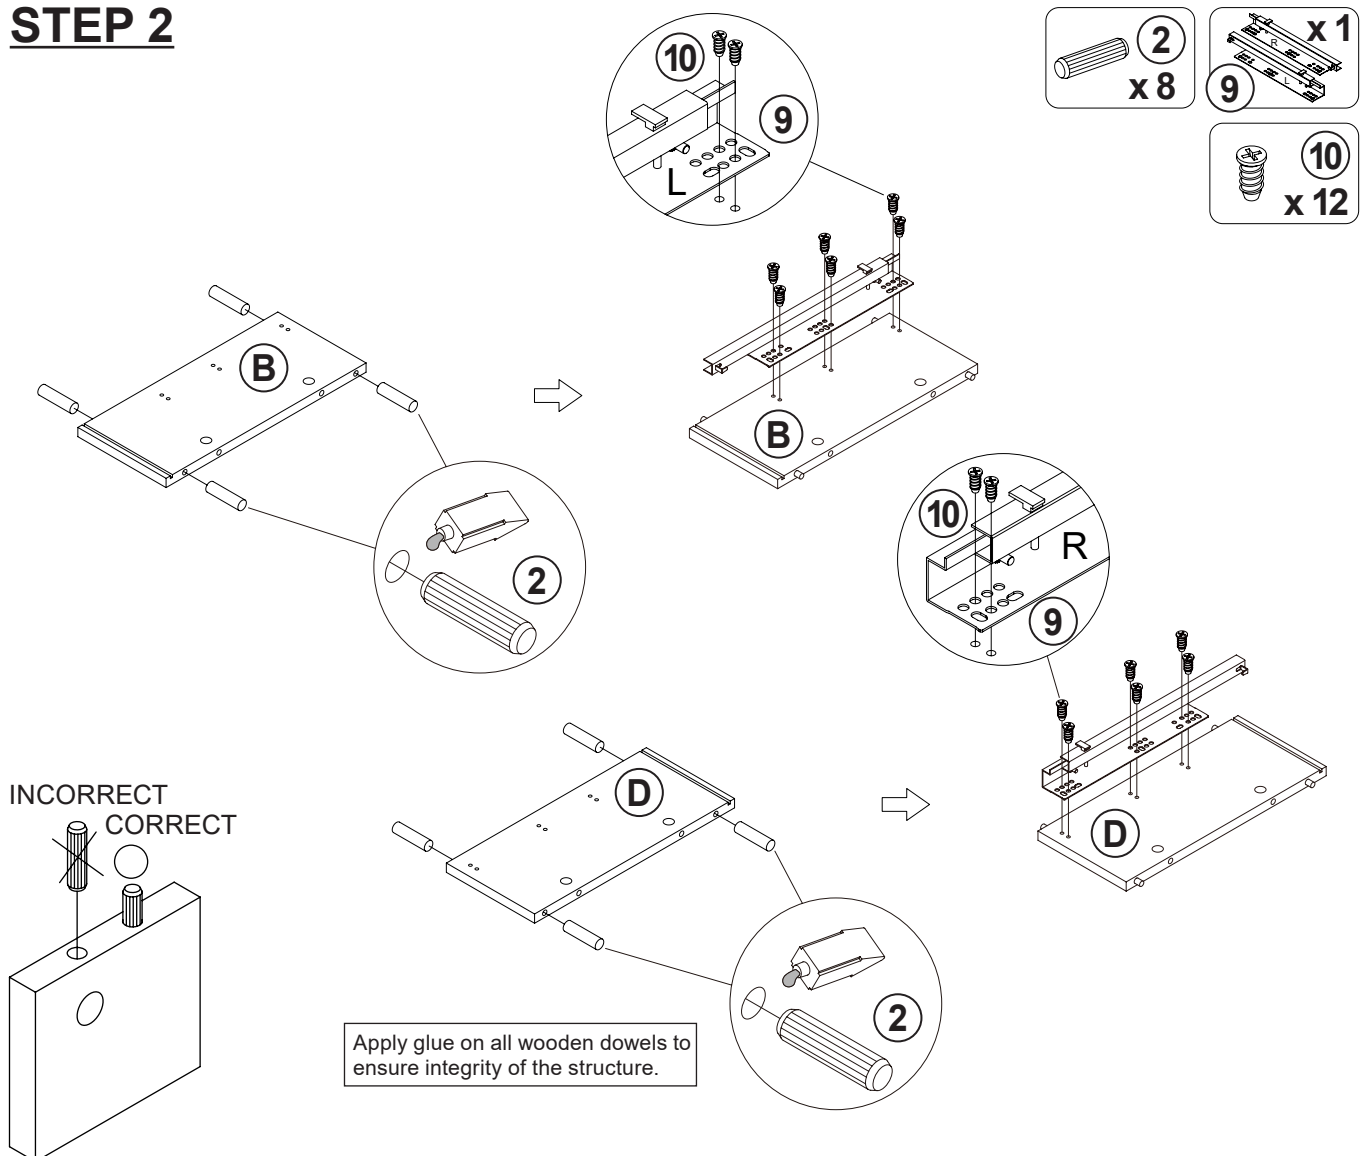 


ITEM: **704251**


### STEP 3

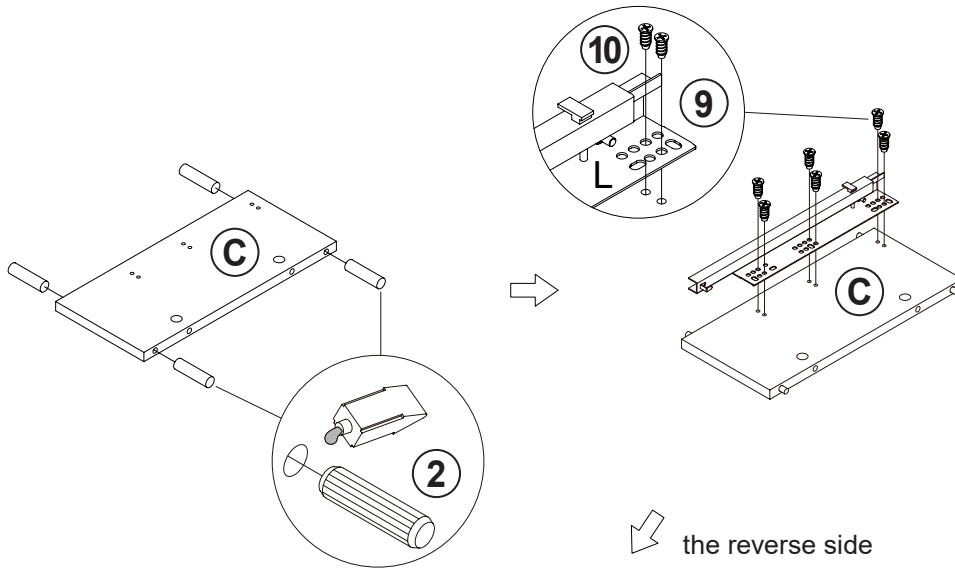 

 Apply glue on all wooden dowels to ensure integrity of the structure.

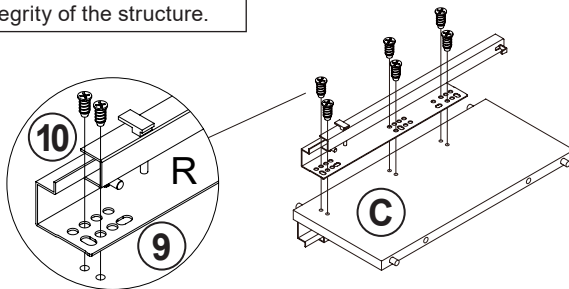



## STEP 4

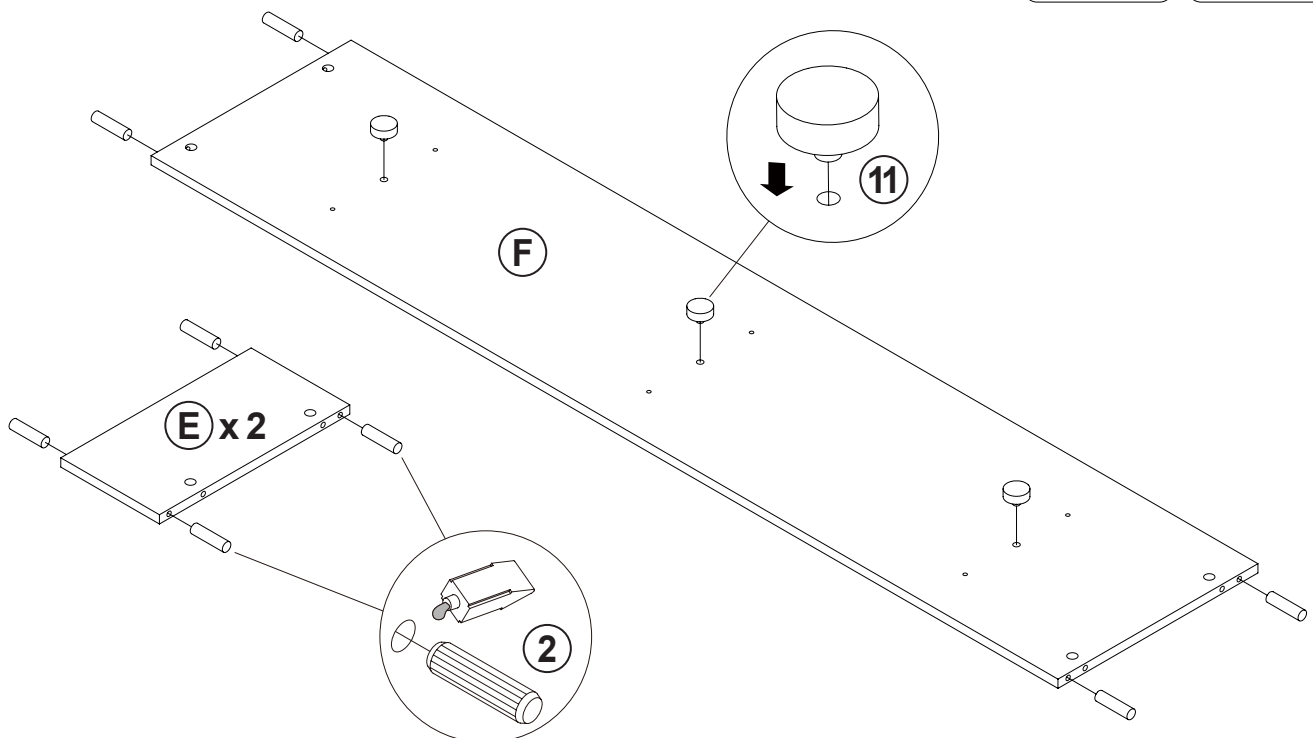 



ITEM: 704251

## STEP 5

  **COASTER**  
FINE FURNITURE

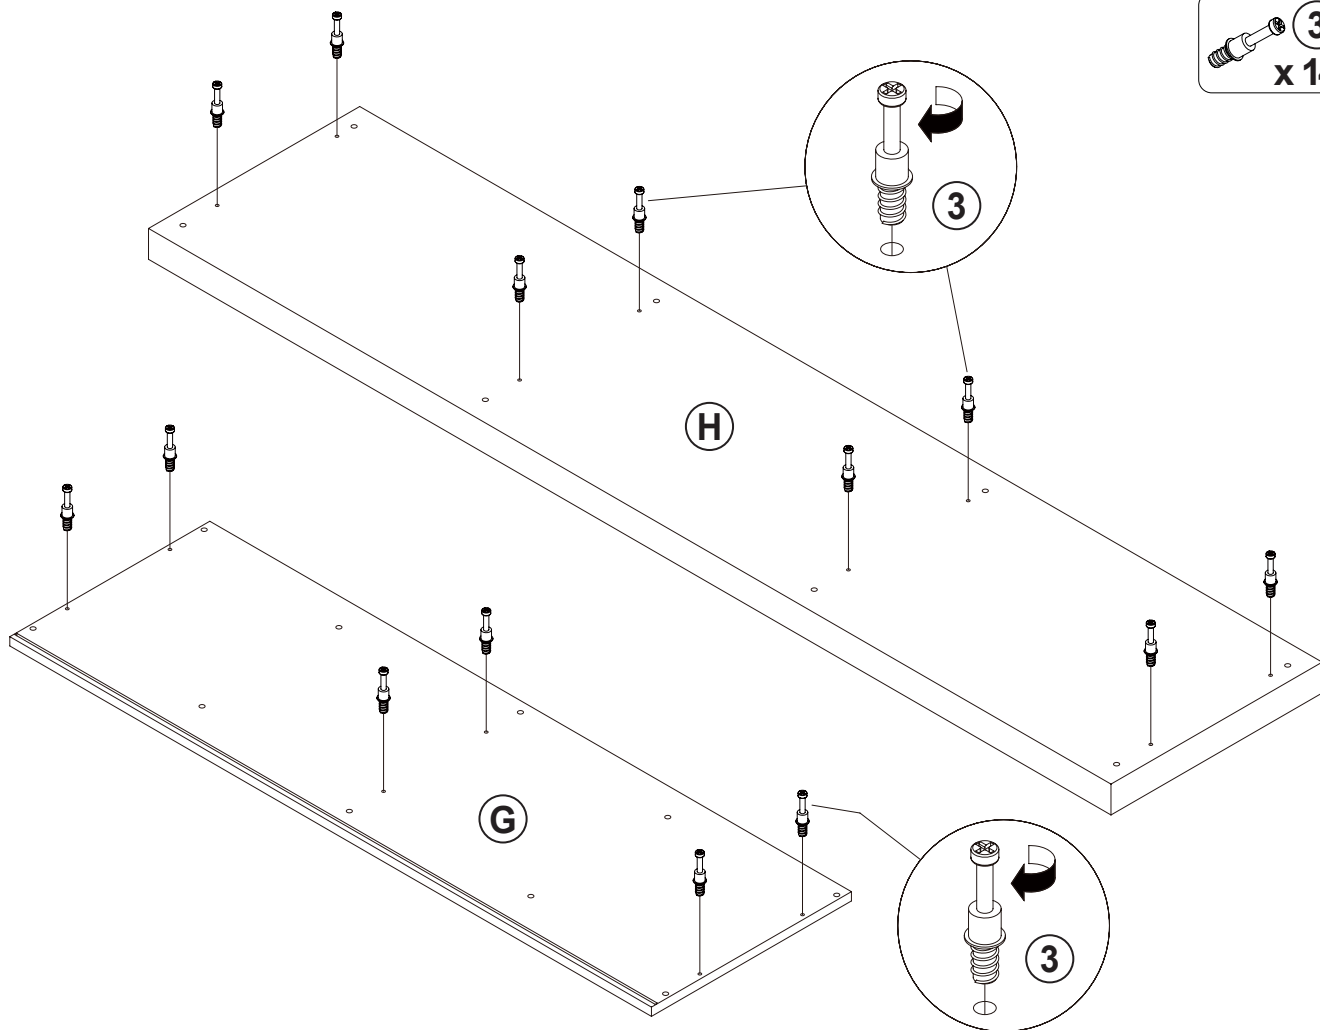

## STEP 6

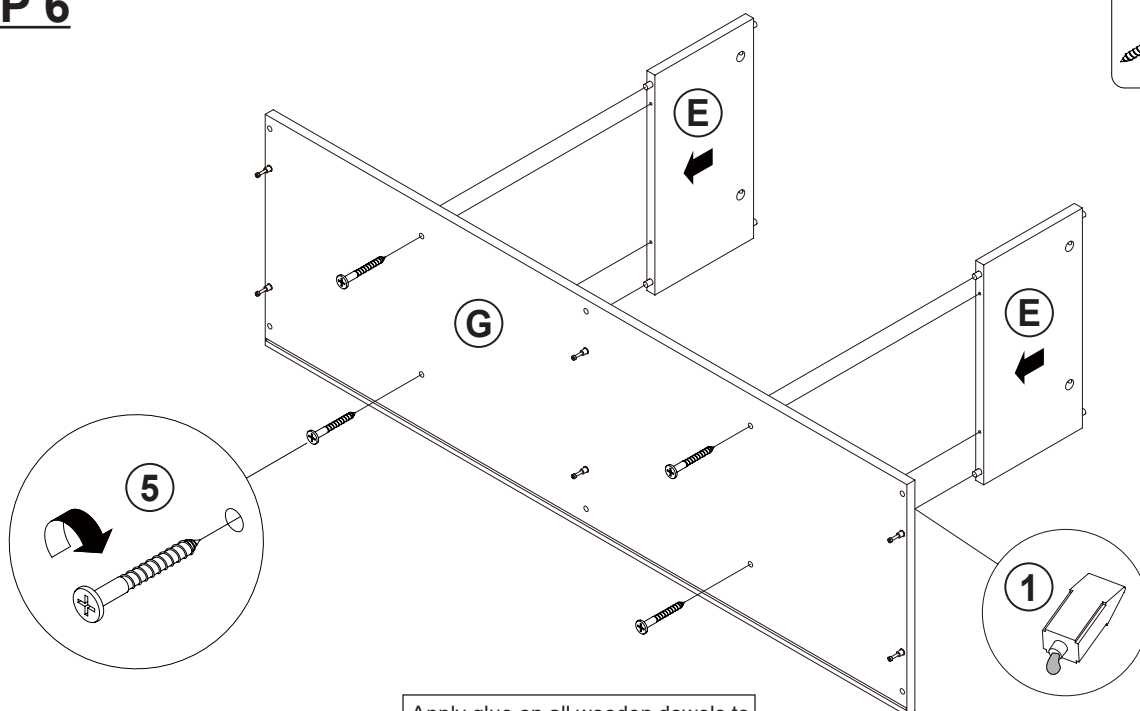 
 


Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: 704251

## STEP 7

  **COASTER**  
FINE FURNITURE

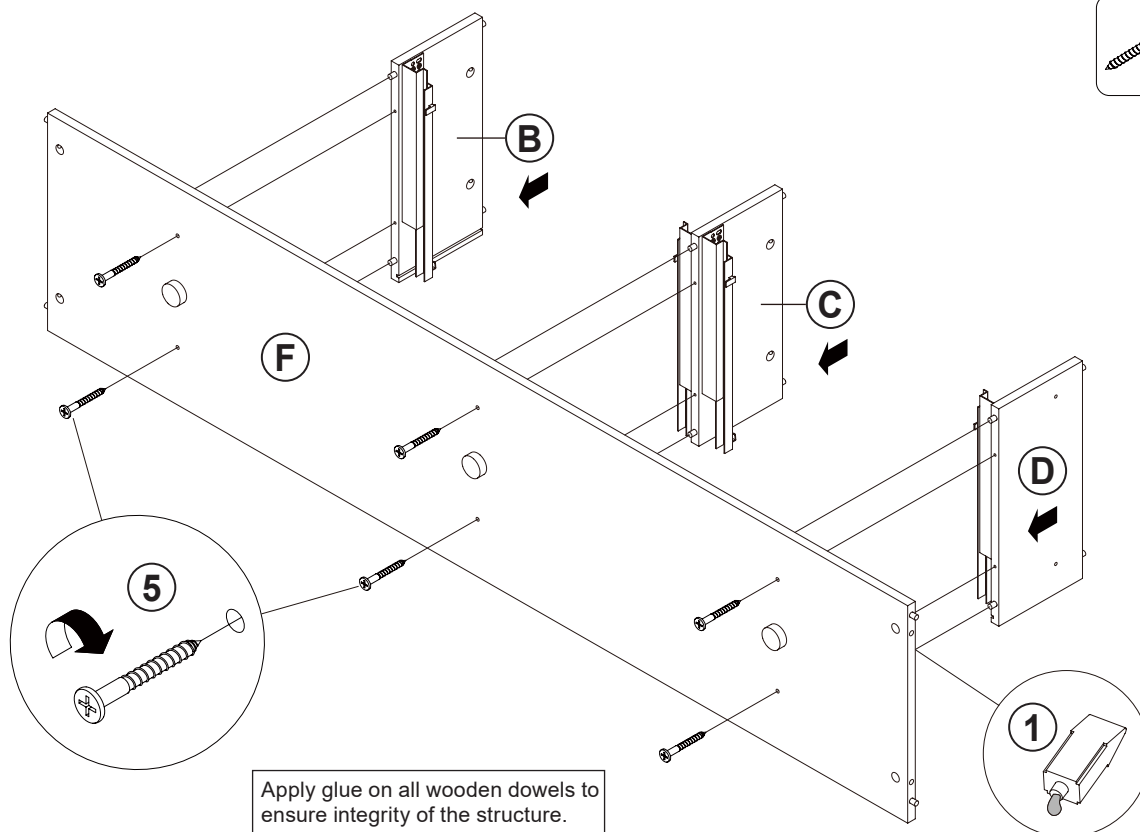

## STEP 8

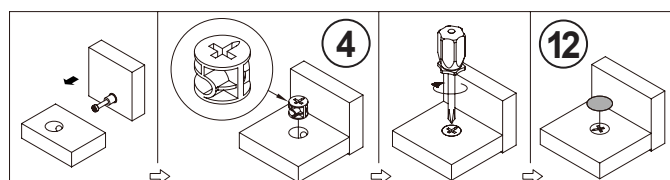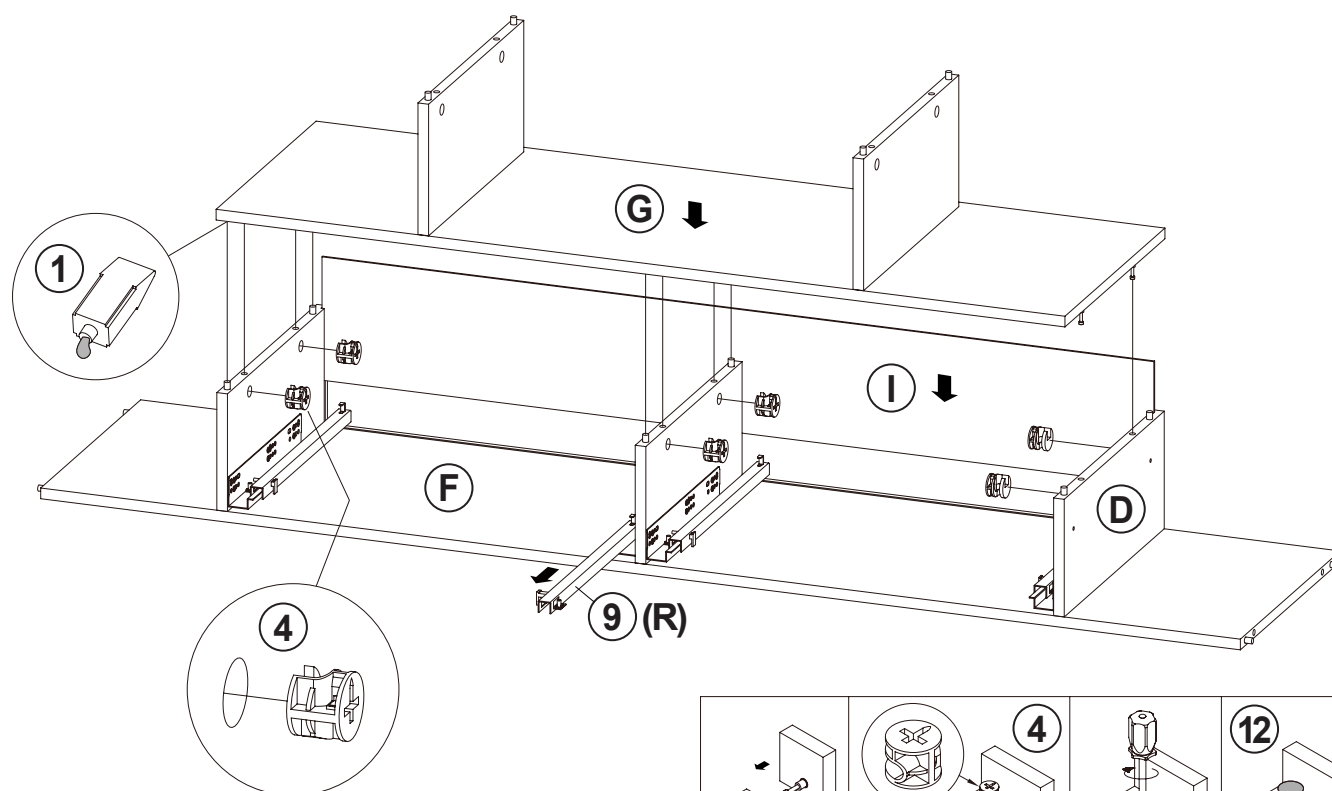   





ITEM: 704251

**COASTER**  
FINE FURNITURE

**STEP 9**

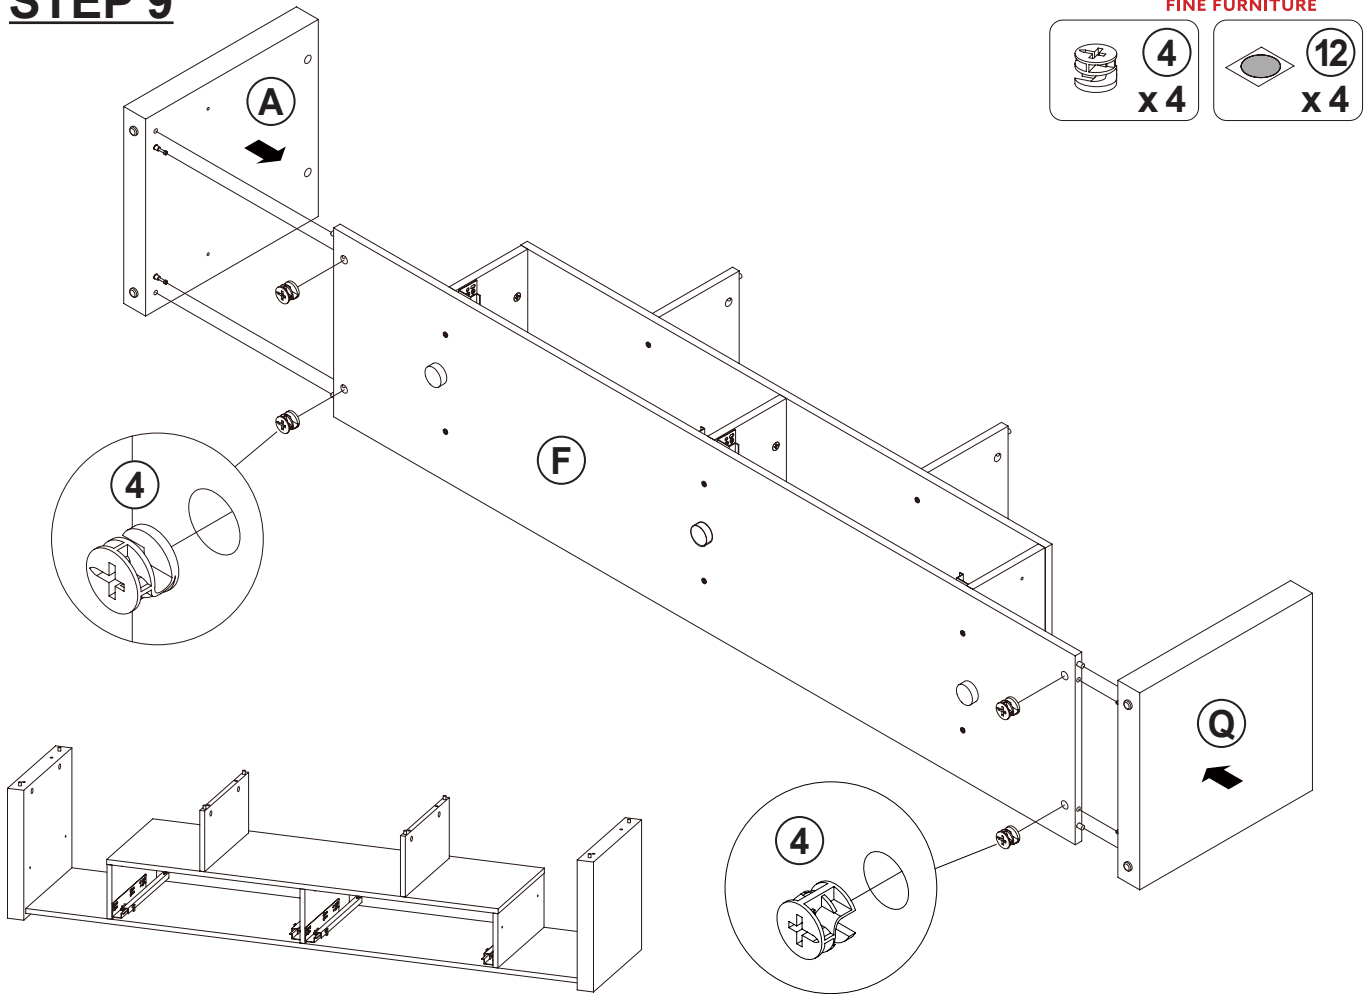 


**STEP 10**

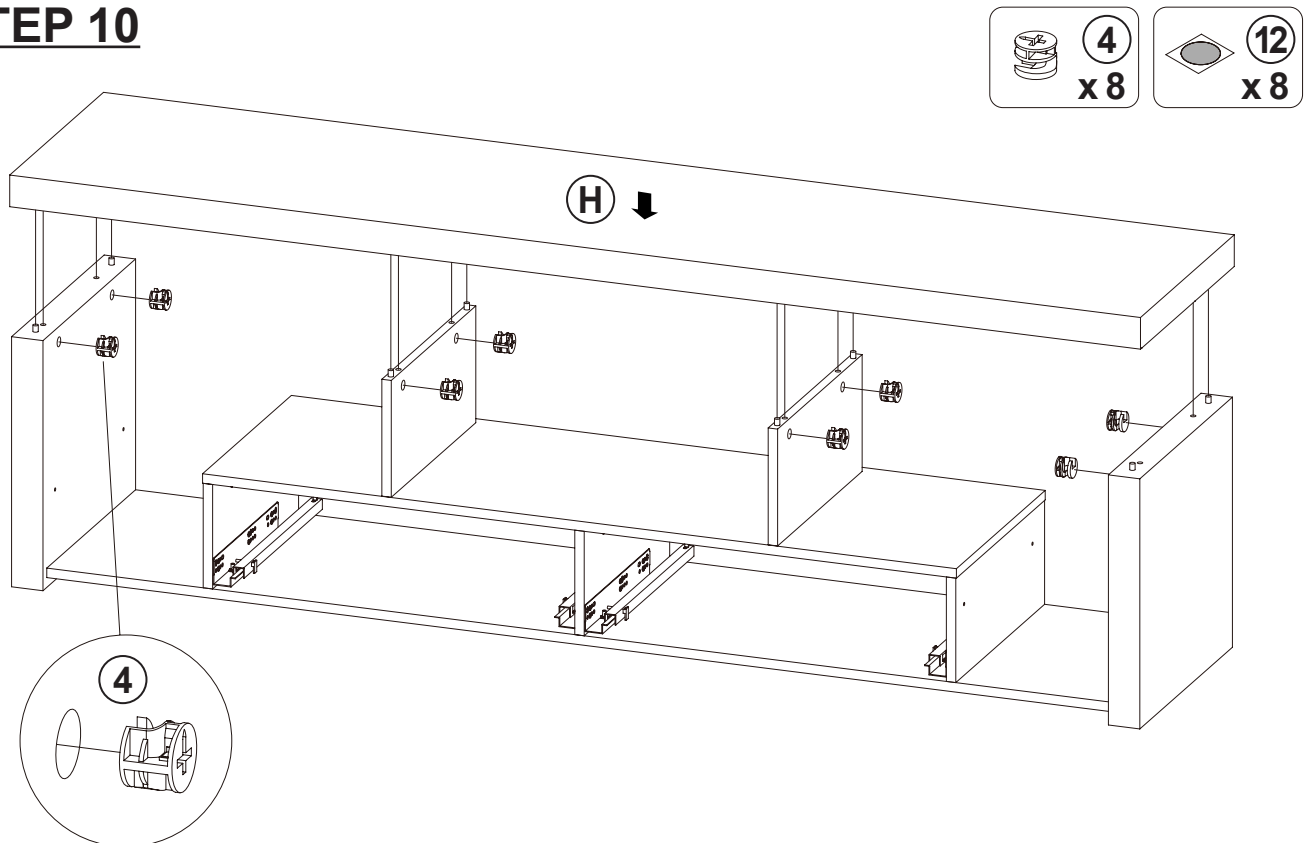 


ITEM: 704251

**COASTER**  
FINE FURNITURE


## STEP 11

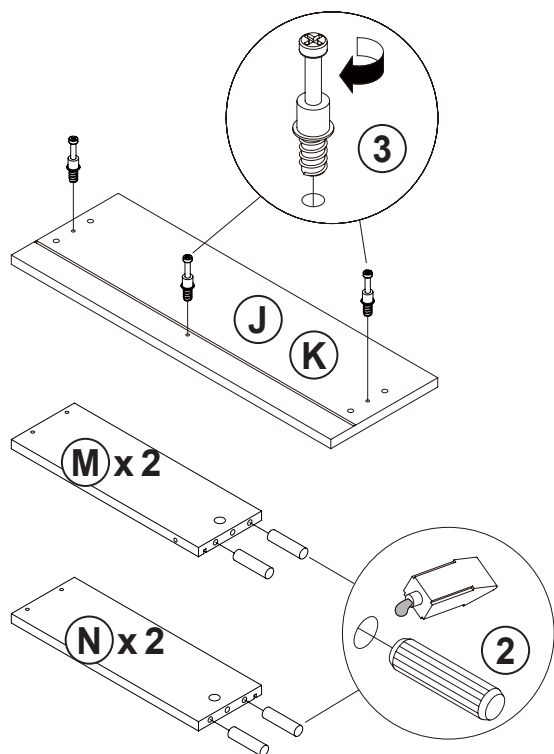 



## STEP 12

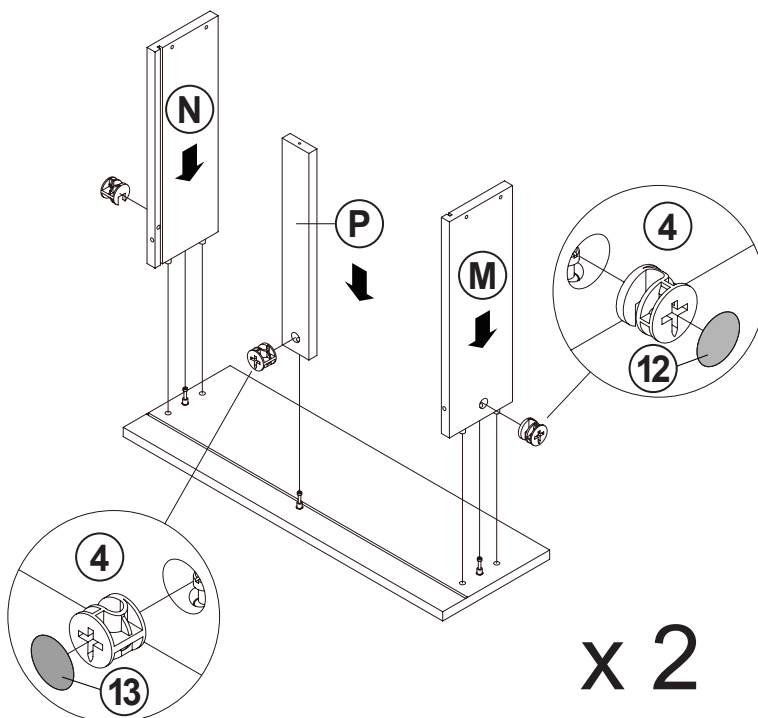 

## STEP 13

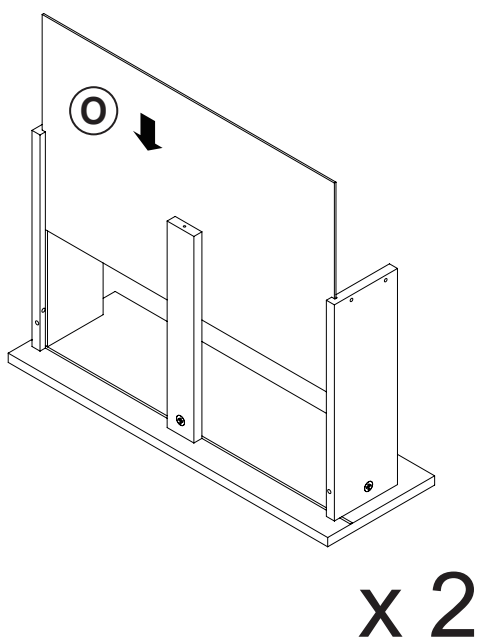 



## STEP 14

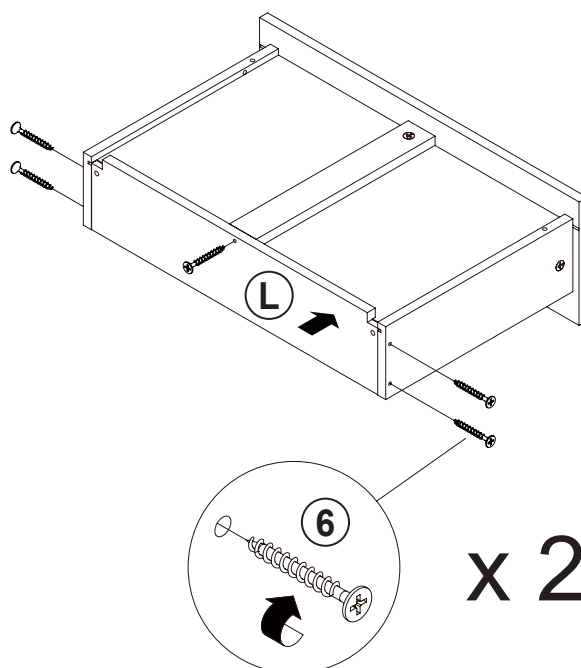  







ITEM: **704251**

**COASTER**  
FINE FURNITURE



**STEP 15**

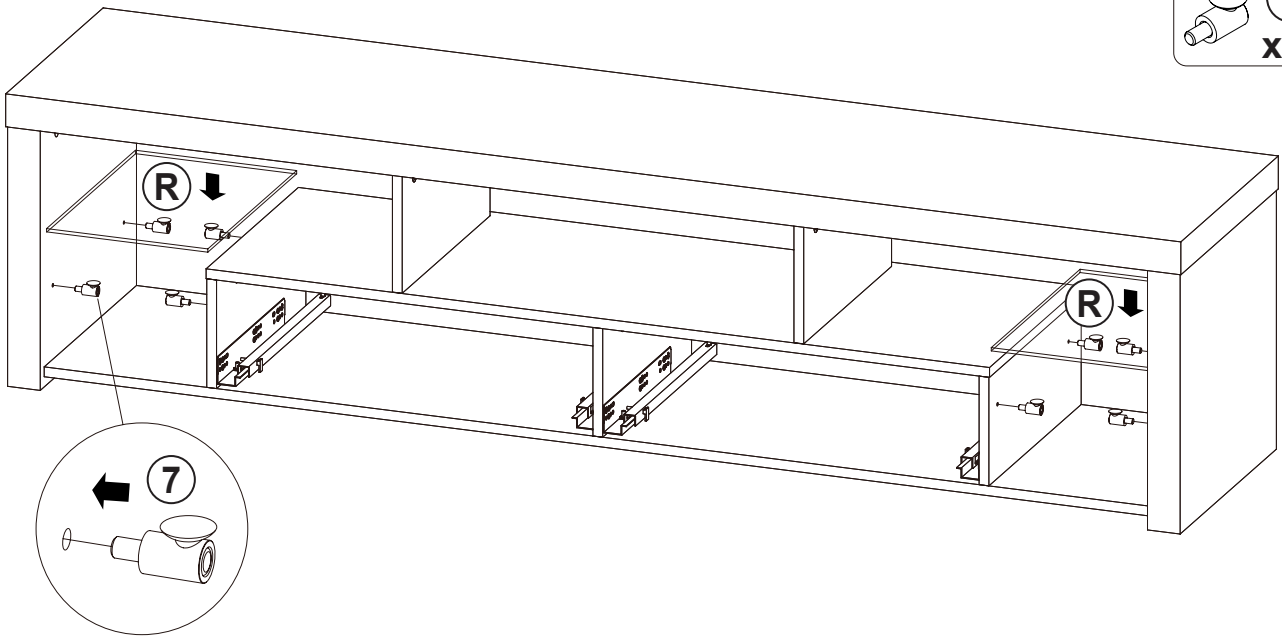  

**STEP 16**

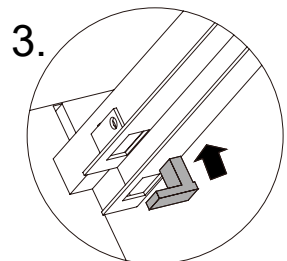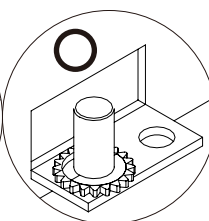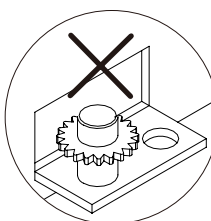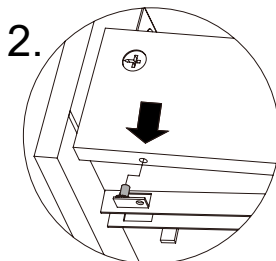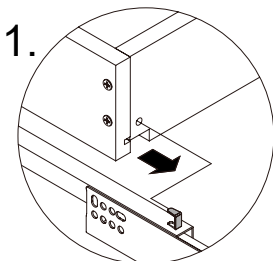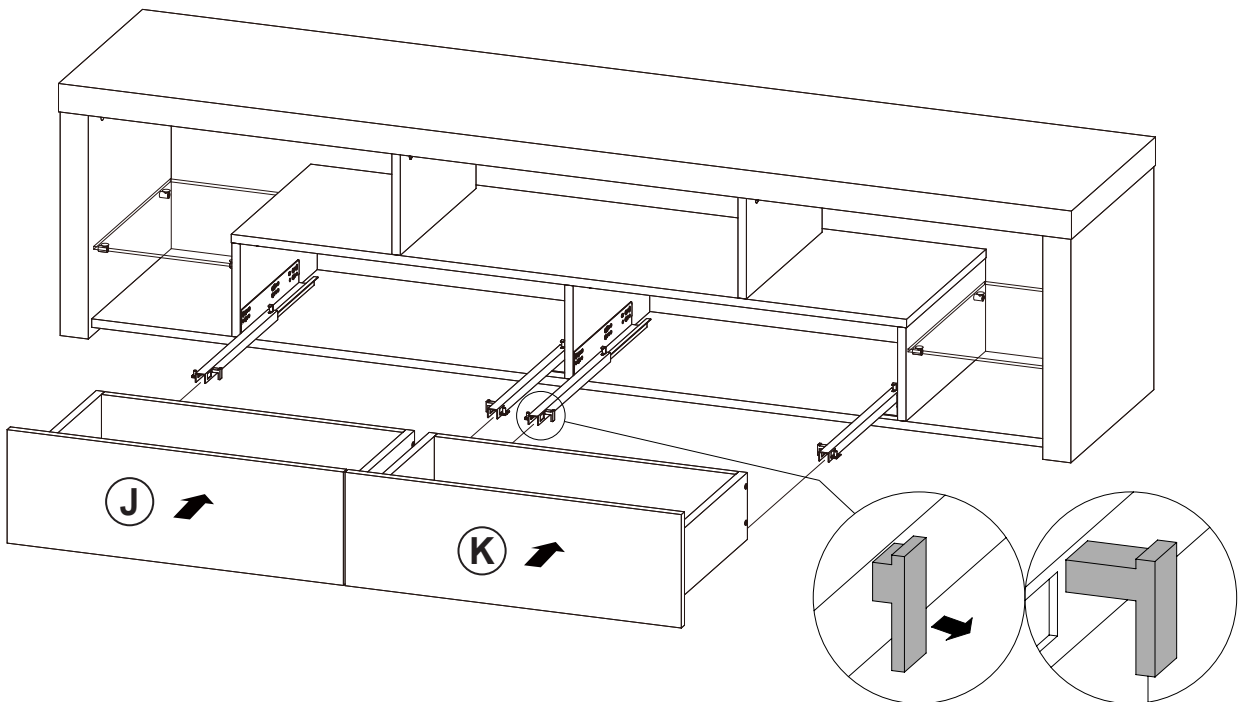      

ITEM: 704251

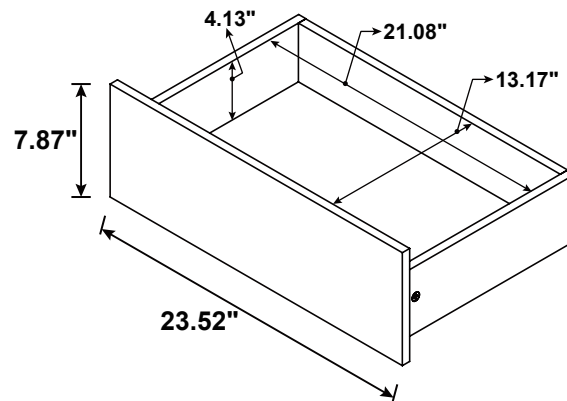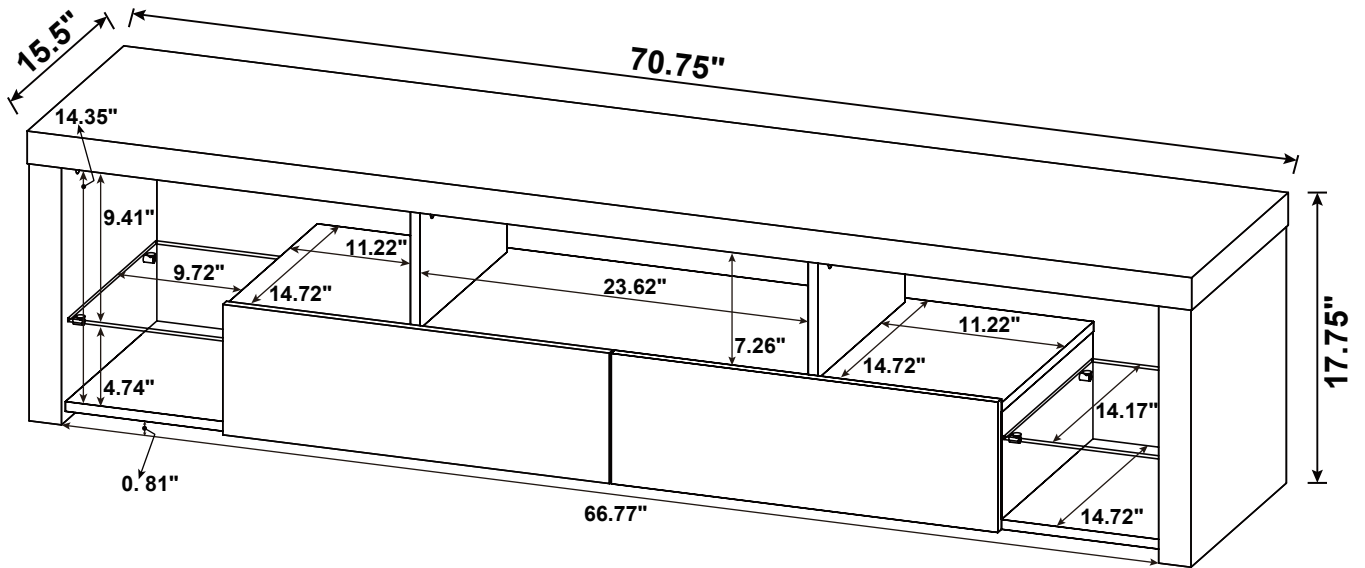  

**Note :** Dimension tolerance  $\pm 5\%$

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**704254**  
**MEDIA TOWER**

# ITEM:704254



## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!











1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

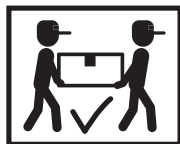

ASSEMBLY TIME

          50 MINUTES

 
 
 
 
 


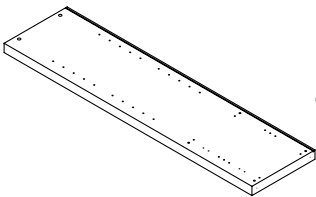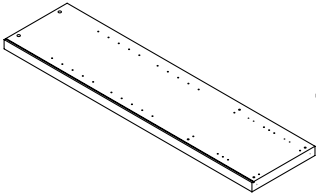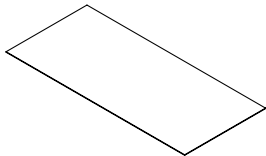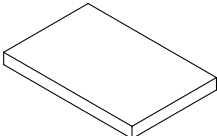 



 
## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	F	ADJUSTABLE SHELF		1 PC
B	RIGHT SIDE PANEL		1 PC	G	UPPER BACK PANEL		1 PC
C	BOTTOM PANEL		1 PC	H	LOWER BACK PANEL		1 PC
D	CROSS PANEL		1 PC	I	DOOR		1 PC
E	TOP PANEL		1 PC	J	GLASS		2 PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704254****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	7	GLASS PIN Ø5x23mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		12 PCS	8	HINGE Ø35mm SR		2 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	9	HINGE SCREW Ø4x15mm SR		8 PCS
4	CAM LOCK Ø15x12mm SR		12 PCS	10	FIXER		3 PCS
5	PLASTIC FEET Ø15mm		4 PCS	11	FIXER SCREW Ø 3x19mm SR		3 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		4 PCS	12	STICKER Ø20mm		2 PCS

 
 
 
 
**Z8 not included in blister packaging.****NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704254**

**STEP 1**

**COASTER**  
FINE FURNITURE

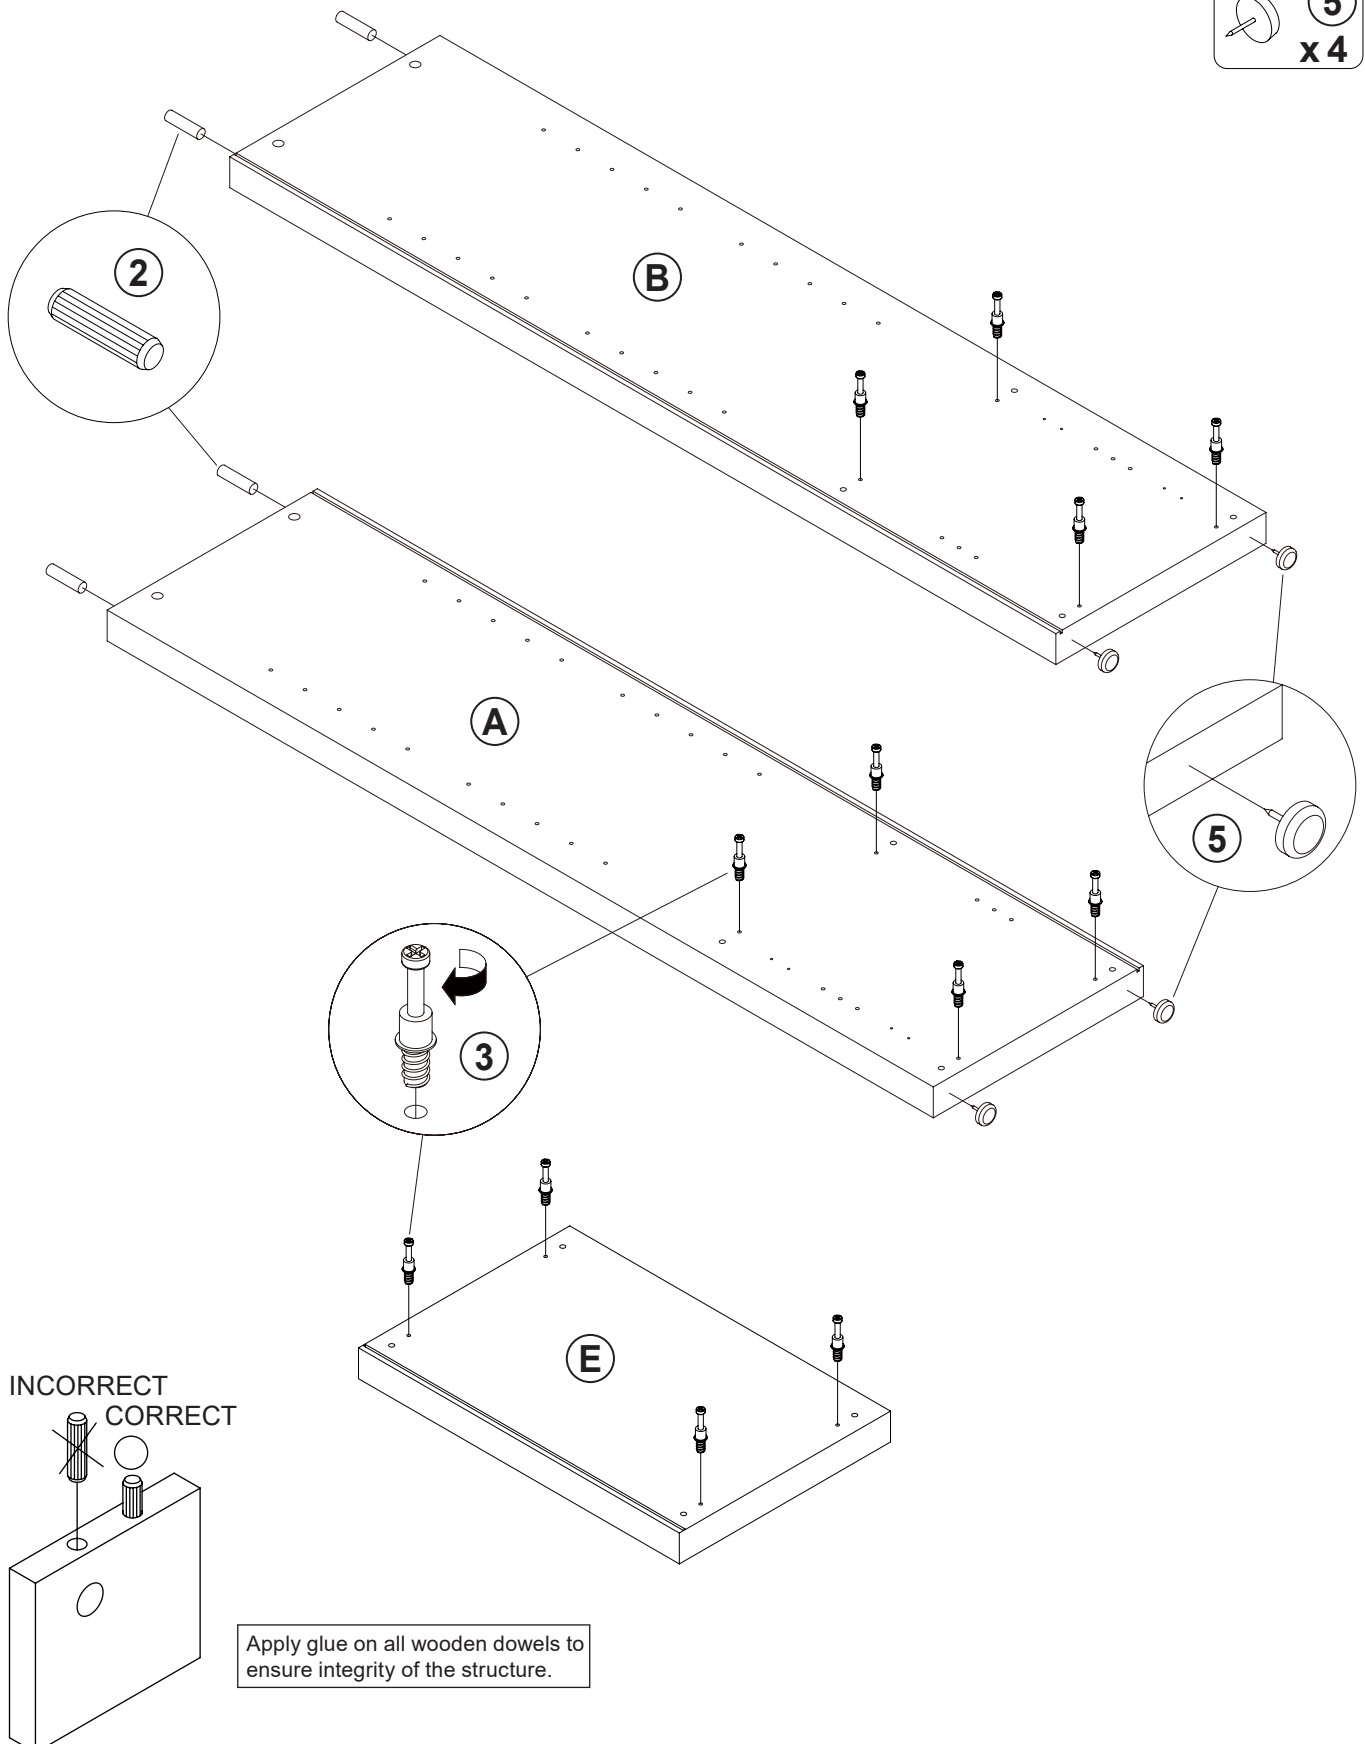









ITEM: 704254

## STEP 2

  **COASTER**  
FINE FURNITURE

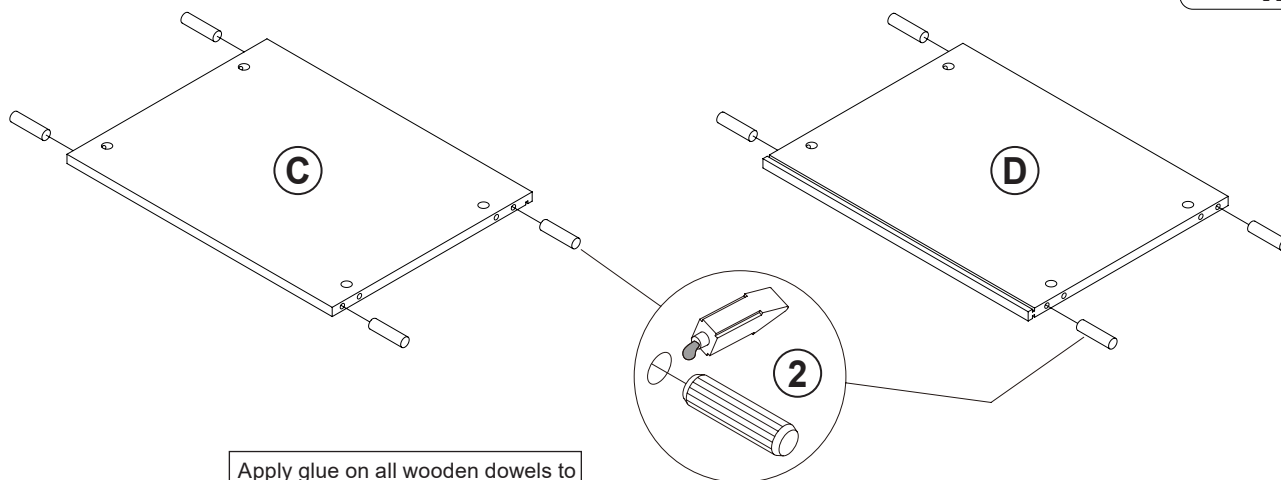



## STEP 3

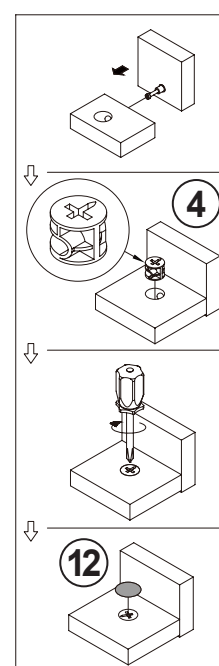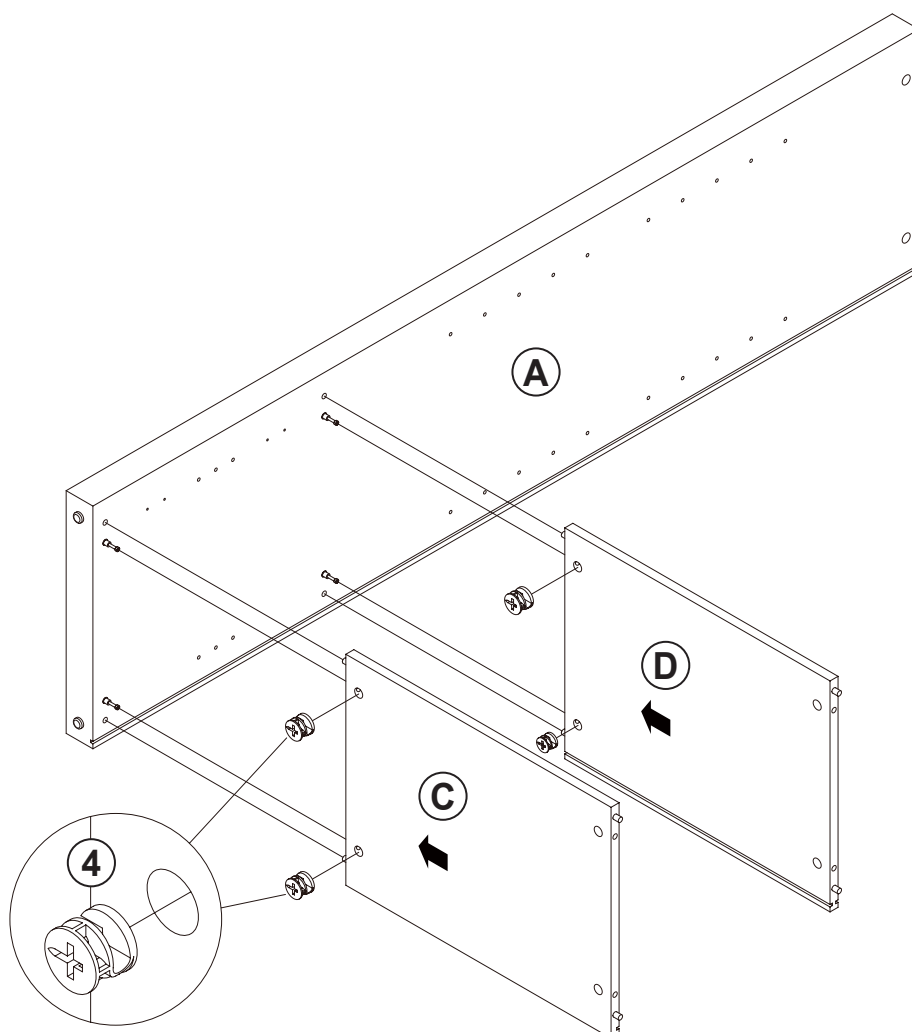    


ITEM: **704254**

## **STEP 4**

  **COASTER**  
FINE FURNITURE

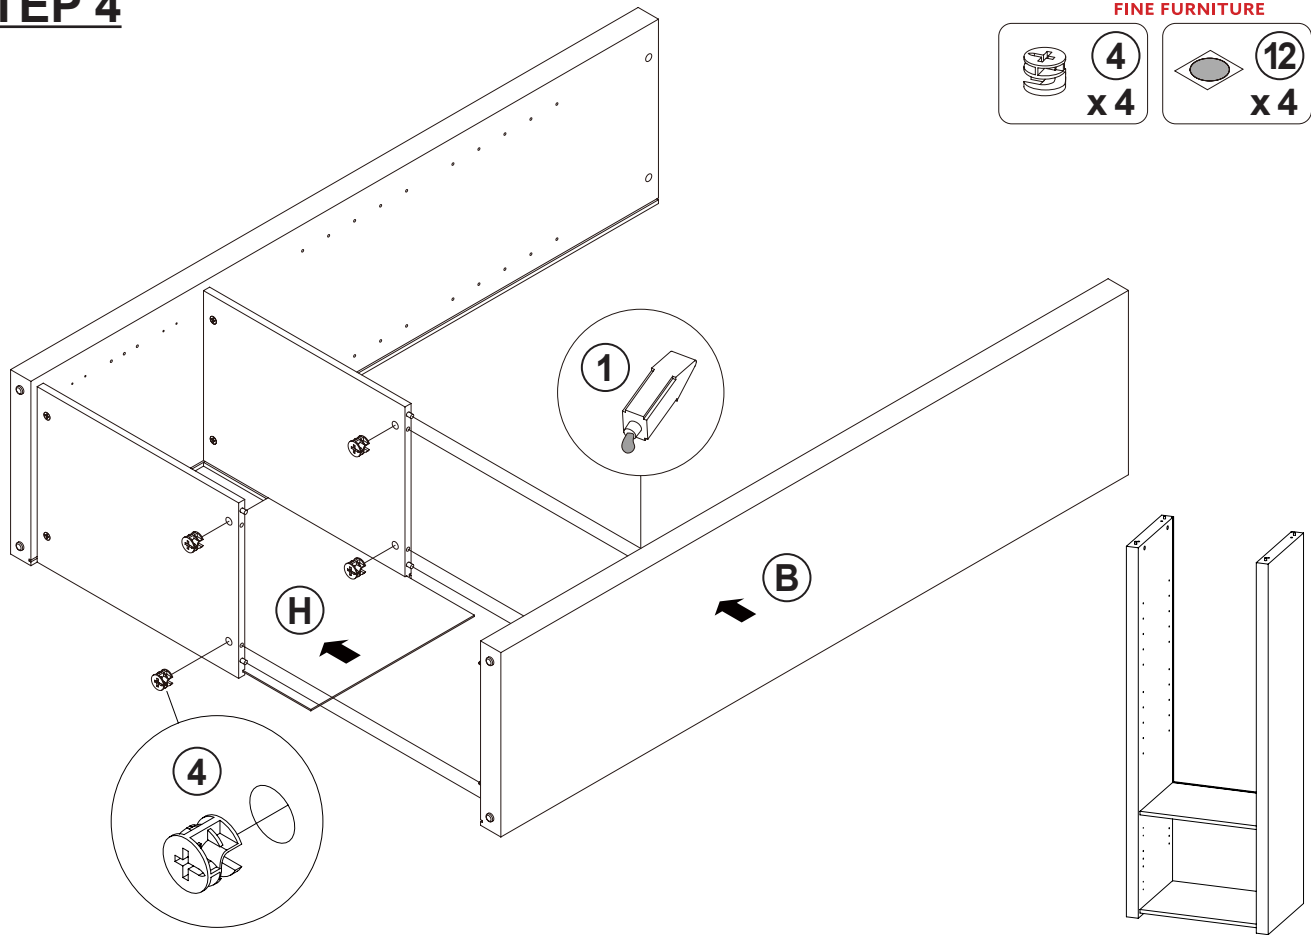

## **STEP 5**

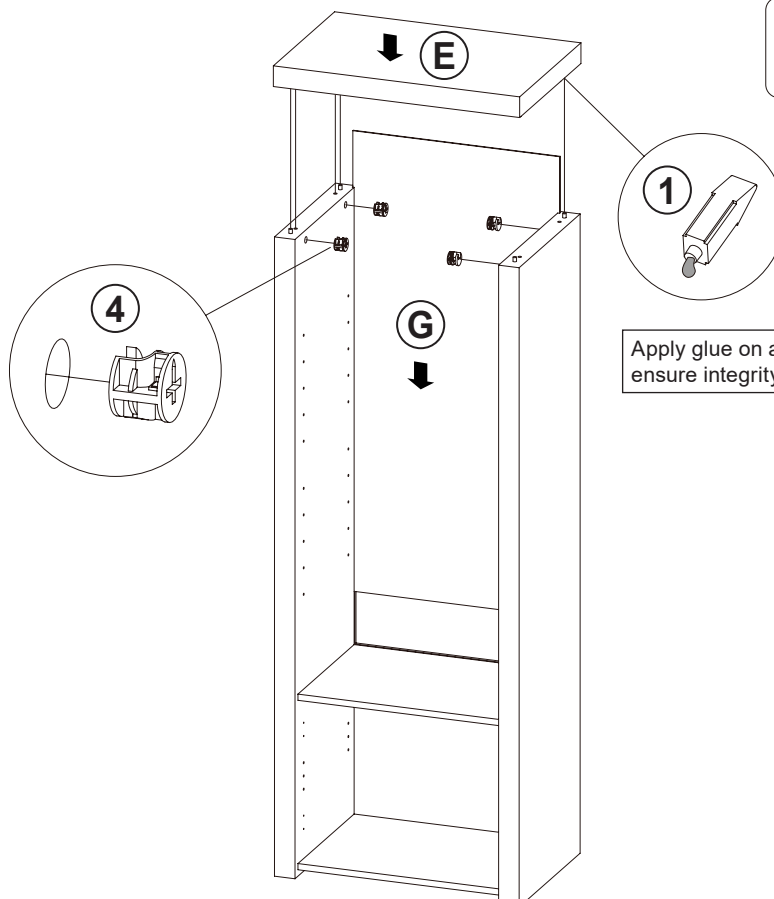 


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **704254**

**STEP 6**

 **COASTER**  
FINE FURNITURE

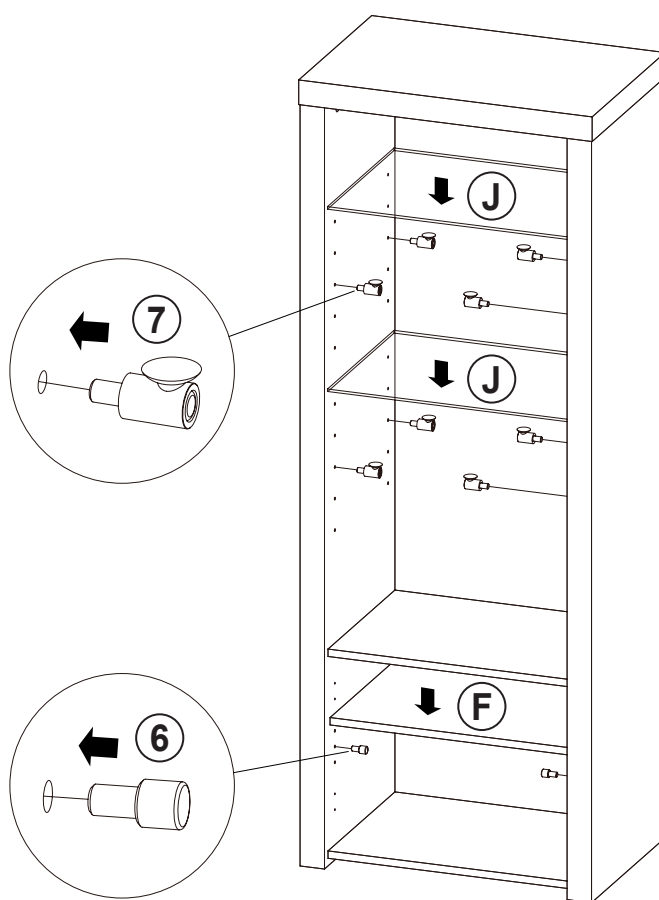

**STEP 7**

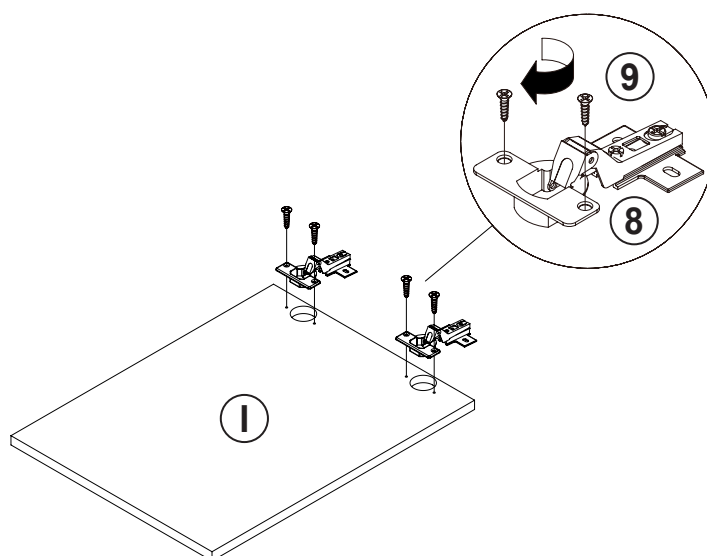 


ITEM: **704254**


**COASTER**  
FINE FURNITURE

**STEP 8**

 
**LEFT**

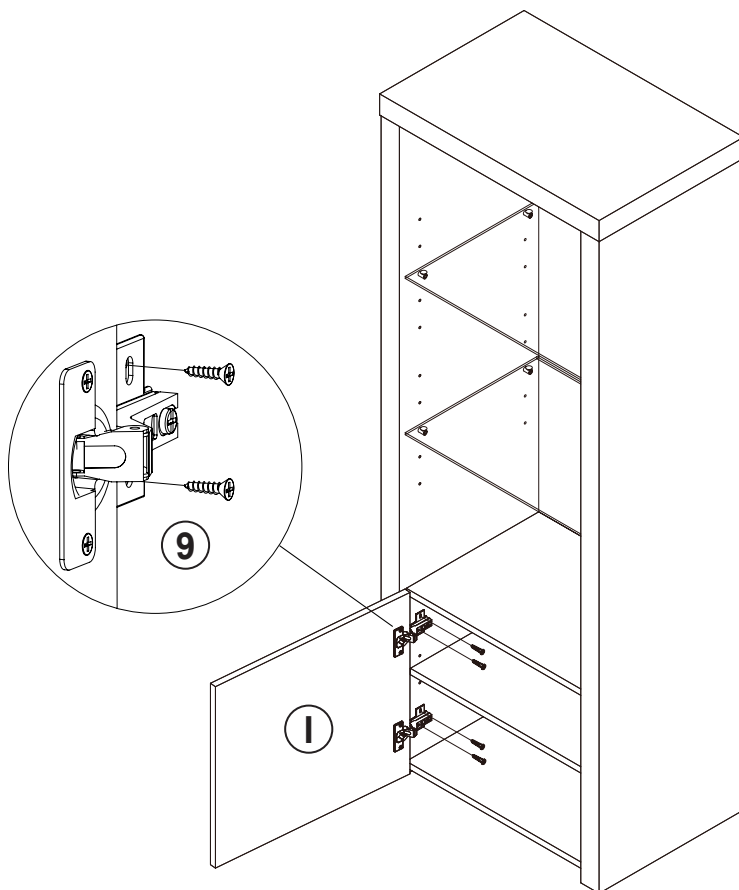


**RIGHT**

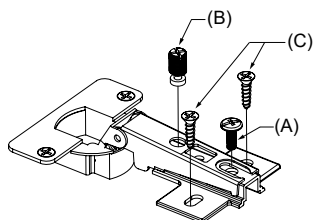 



HORIZONTAL BY  
SCREW A ADJUSTMENT

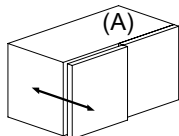 

LATERAL BY  
SCREW B ADJUSTMENT

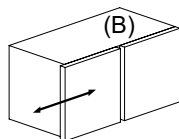 




VERTICAL BY  
SCREW C ADJUSTMENT

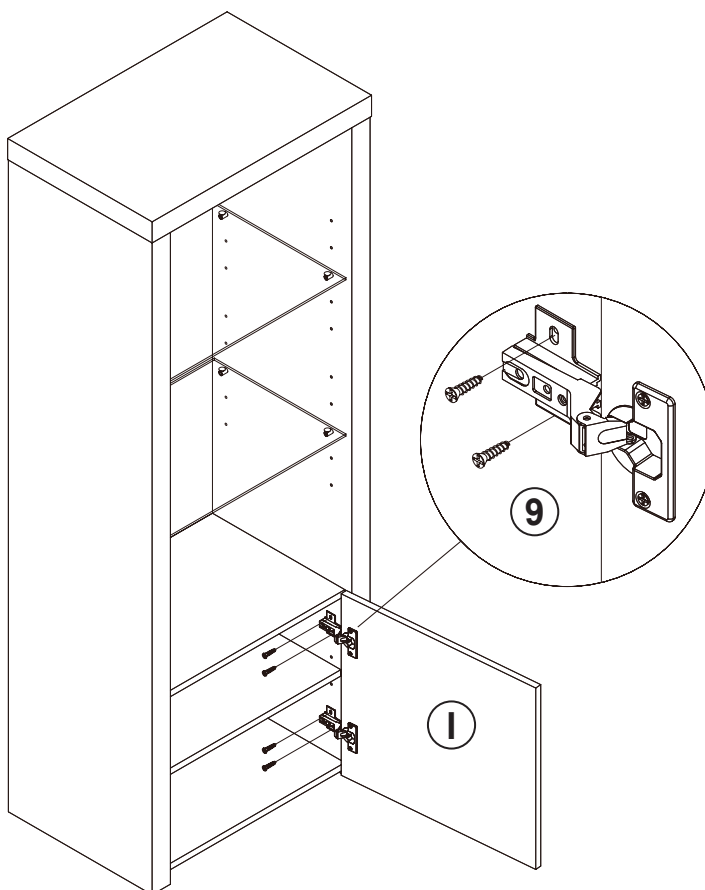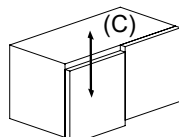  




ITEM: **704254**

**STEP 9**

   
**COASTER**  
FINE FURNITURE

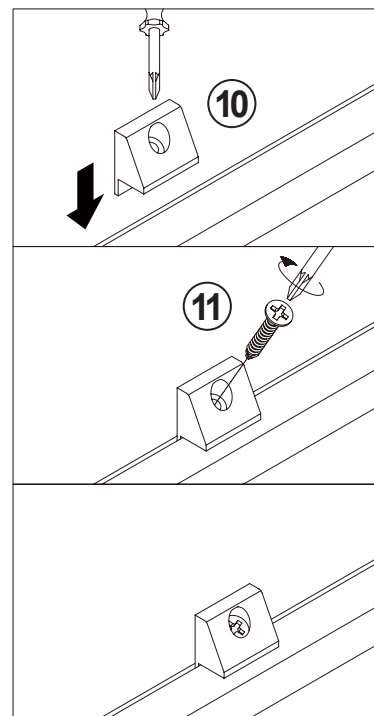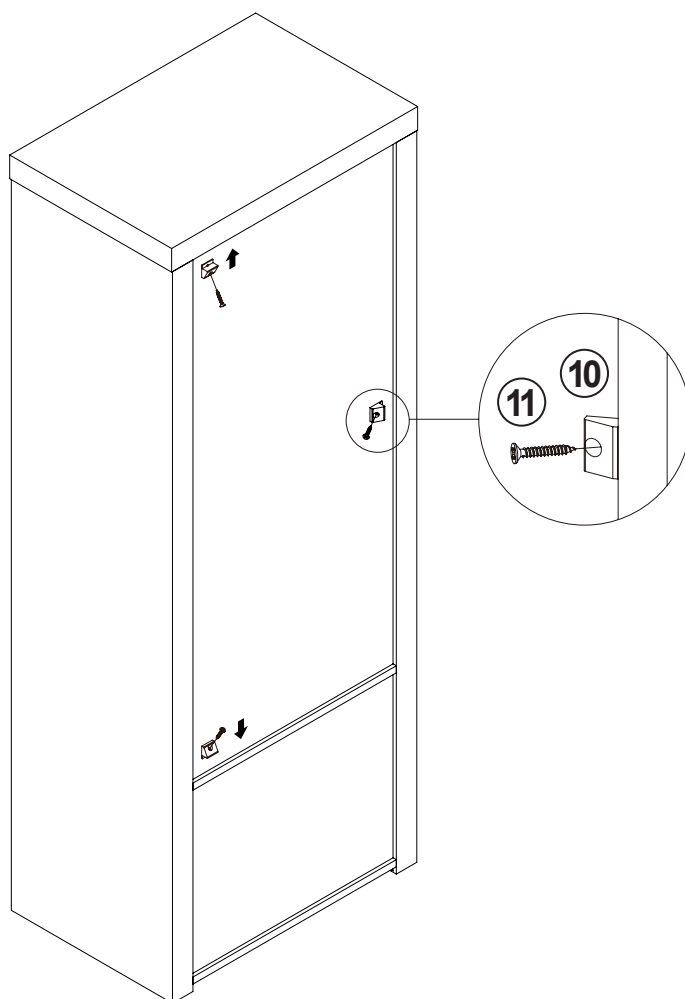

**STEP 10**  
**COMPLETE**

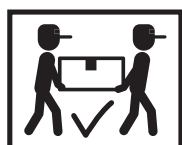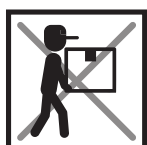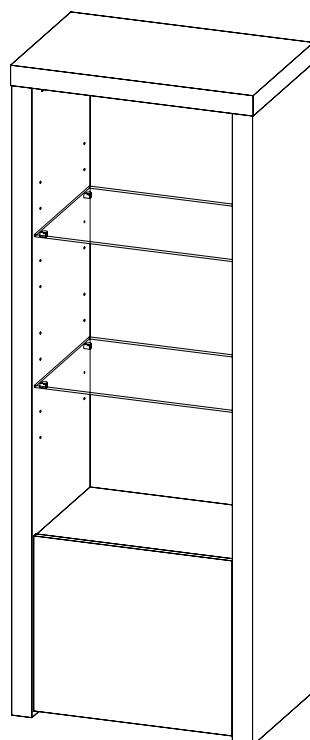   

ITEM: 704254

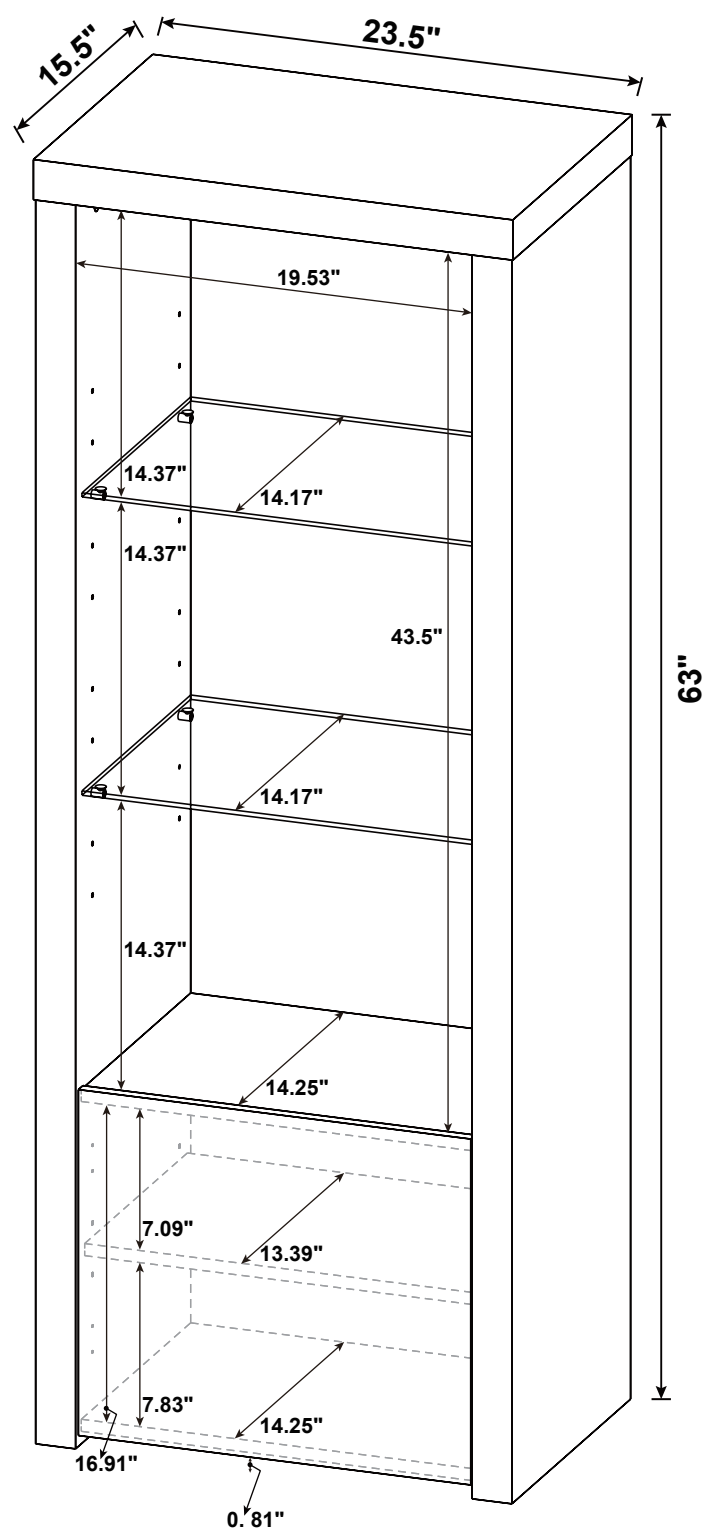 

**Note :** Dimension tolerance  $\pm 5\%$

# ANTI-TIPPING INSTALLMENT INSTRUCTIONS

## FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture  
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

**(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)**

