 
 
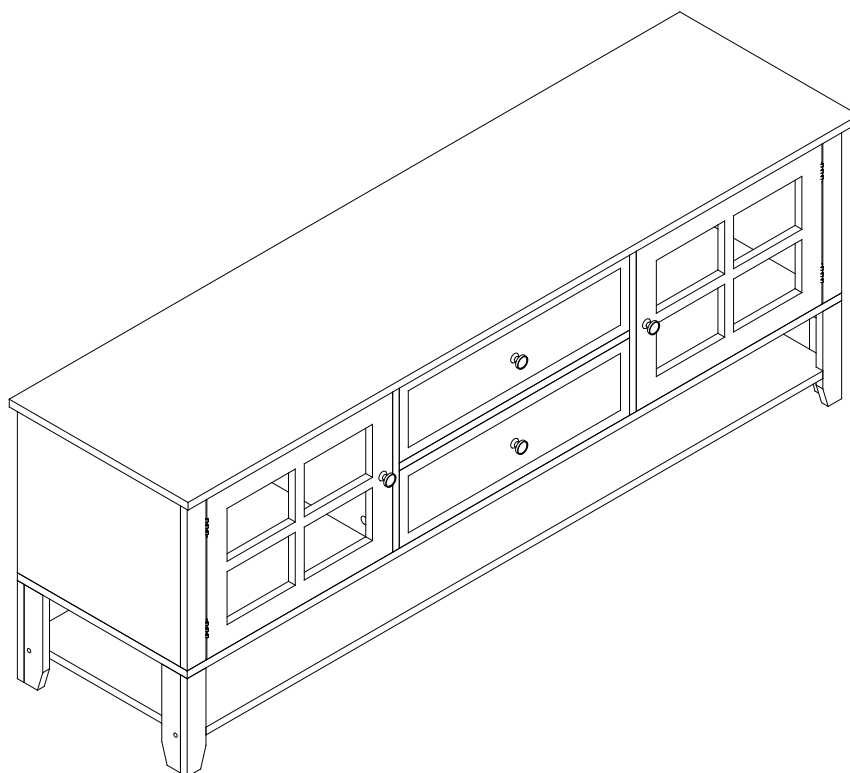 
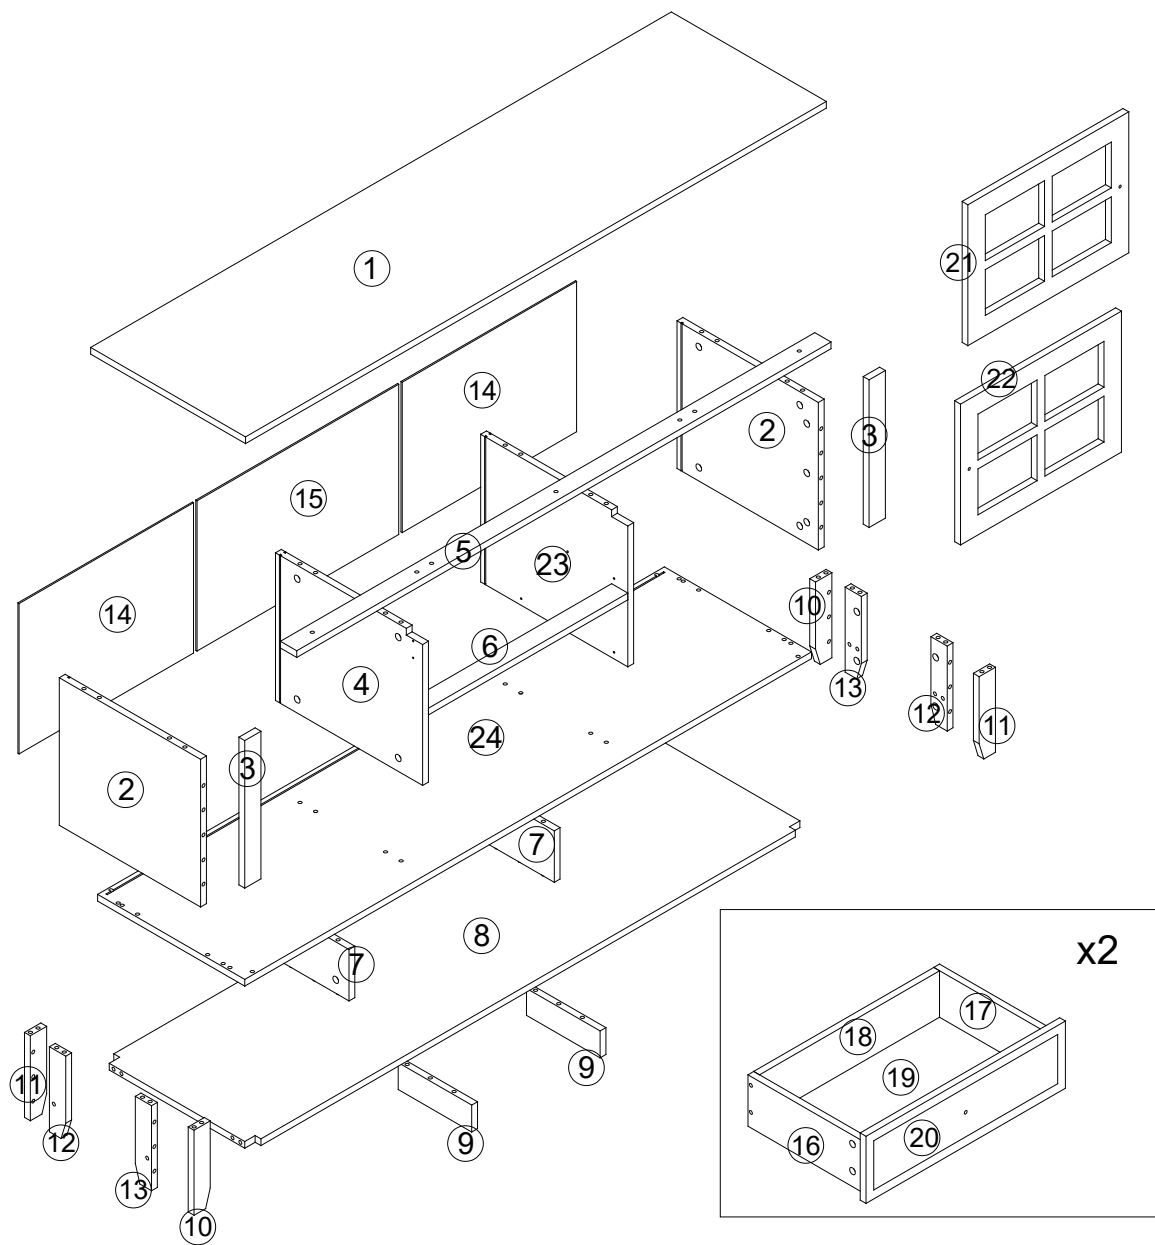 
 
 
 
 
 
 
 


TV STAND


USER MANUAL






						
A x 44	B x 44	6x30 C x 52	4x35 D x 24	E x 12	3.5x12 F x 42	4x22 G x 5
						
H x 4	I x 2	J x 2	3x14 K x 4	L x 4	M x 4	4x40 N x 4
						
O x 4	6x20 P x 2	Q x 1	CL x 2	CR x 2	DL x 2	DR x 2

 STEP 1

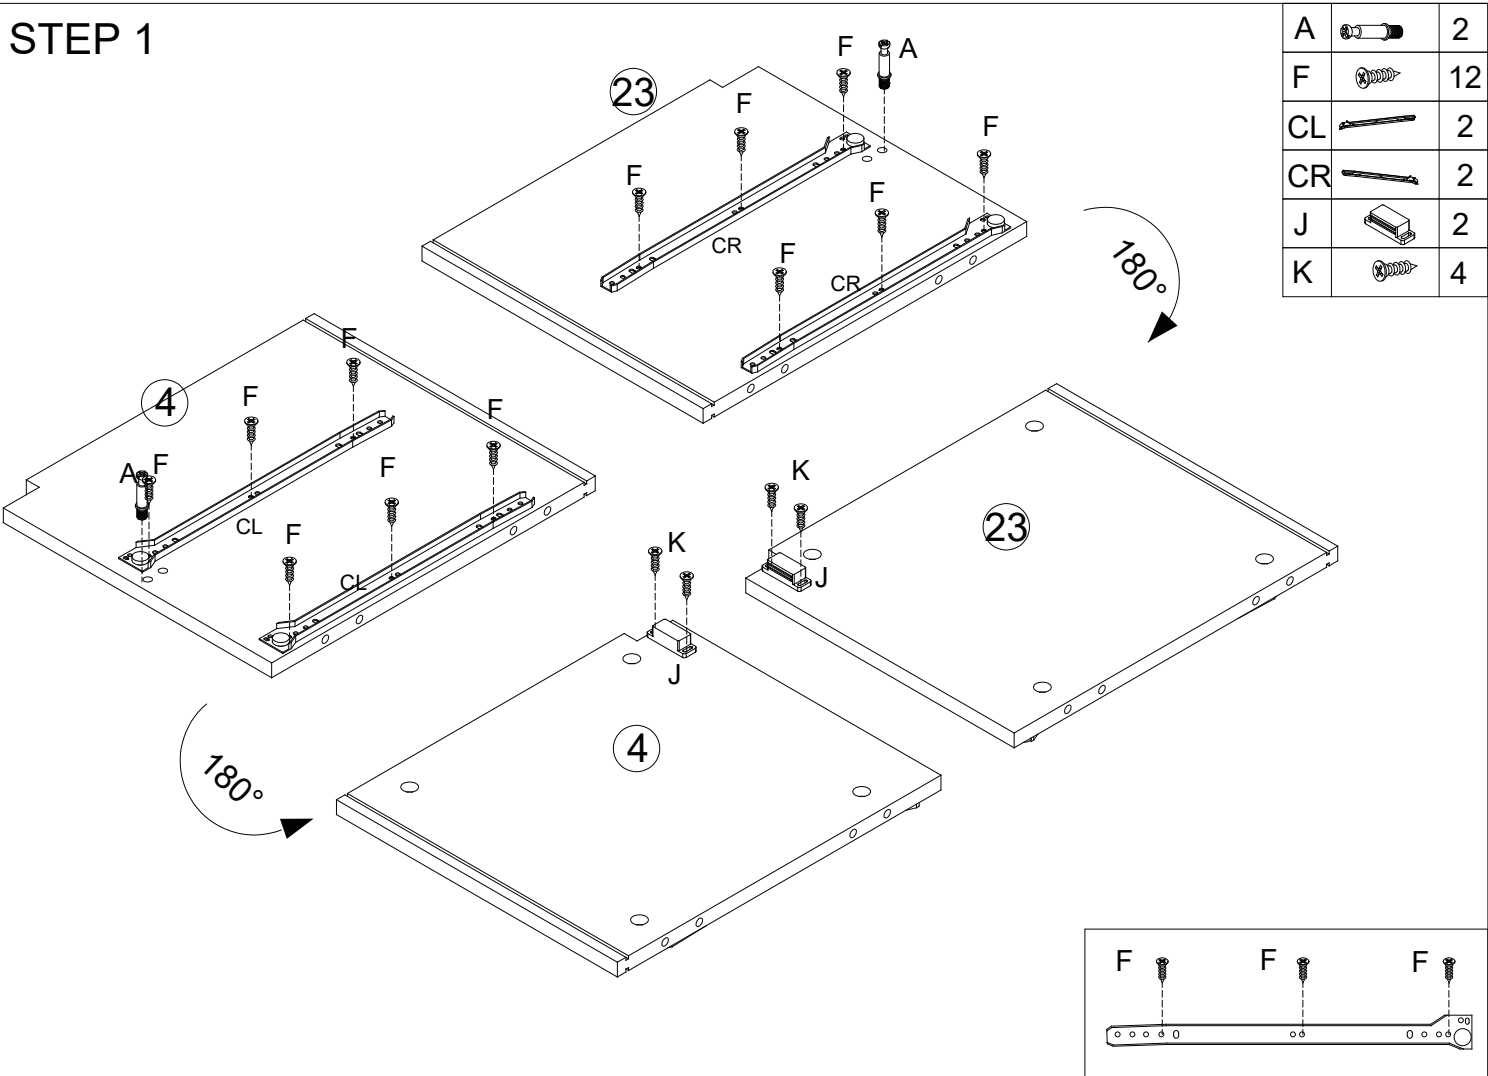


 STEP 2

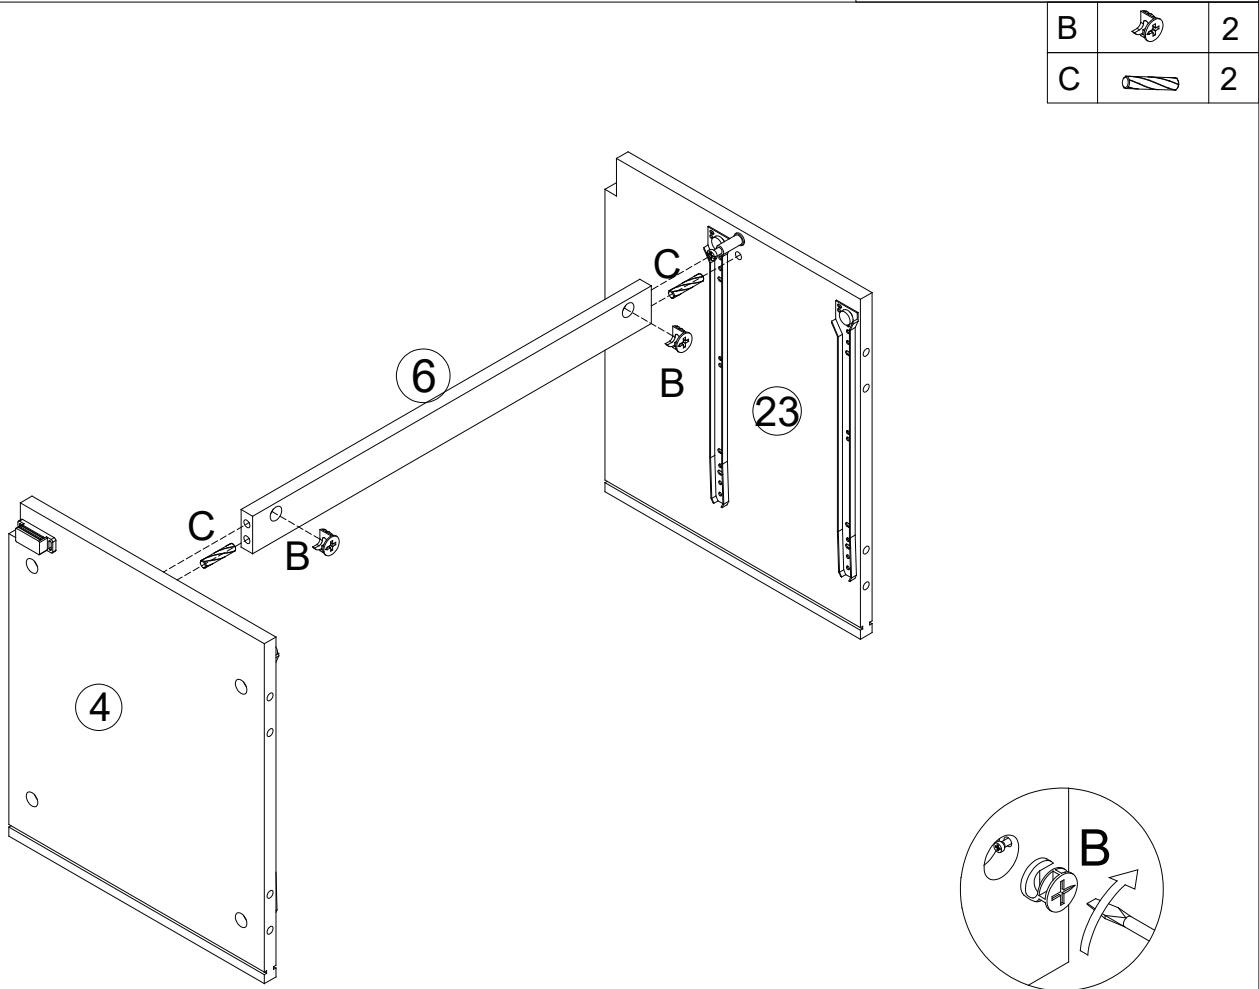


STEP 3

A		8
B		8
C		4

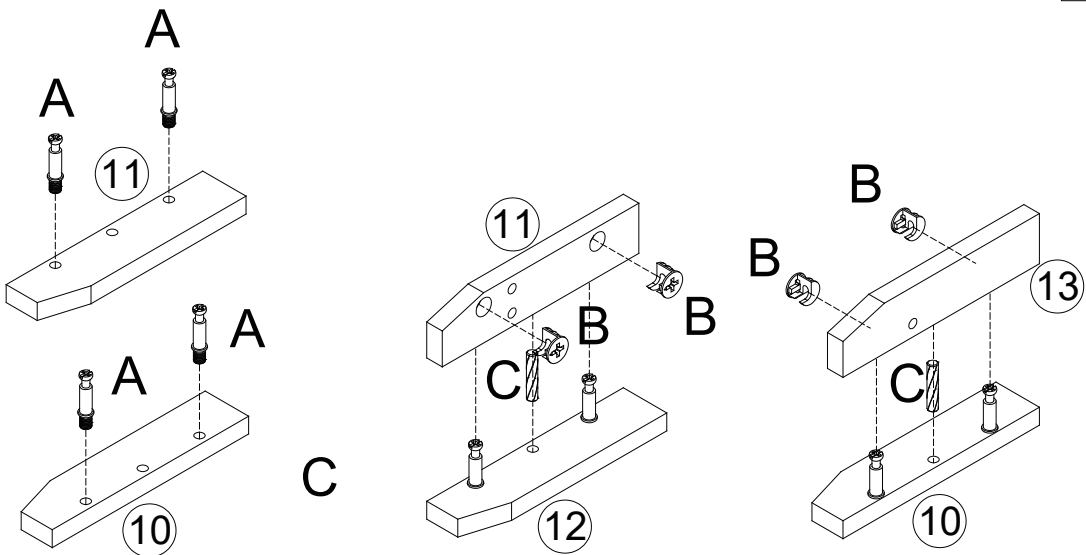 


STEP 4

A		4
D		4
C		2

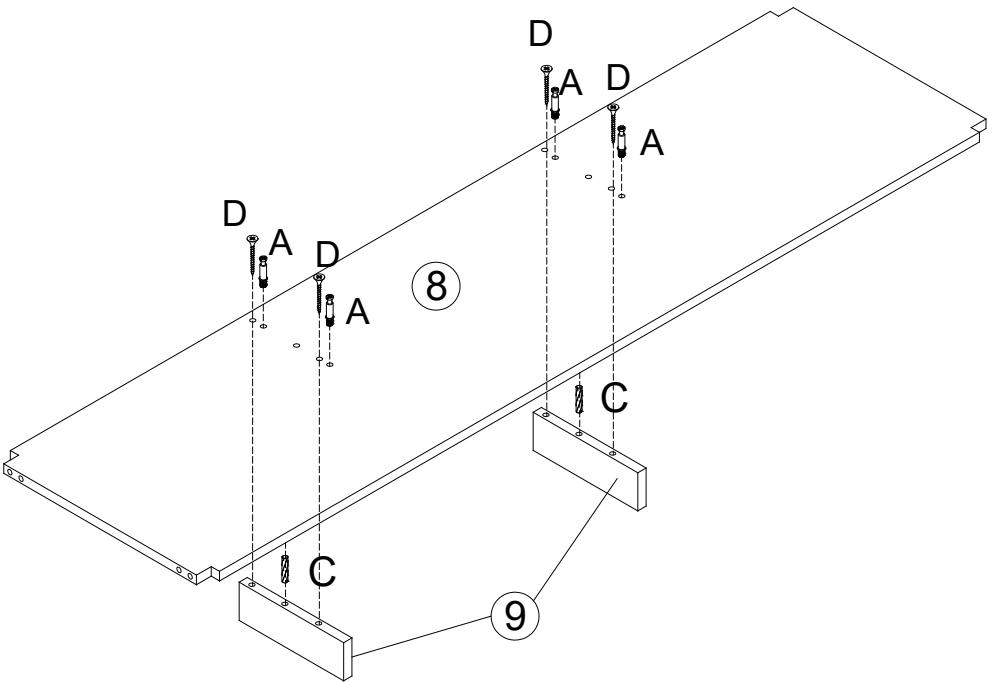 



STEP 5

B		4
C		2

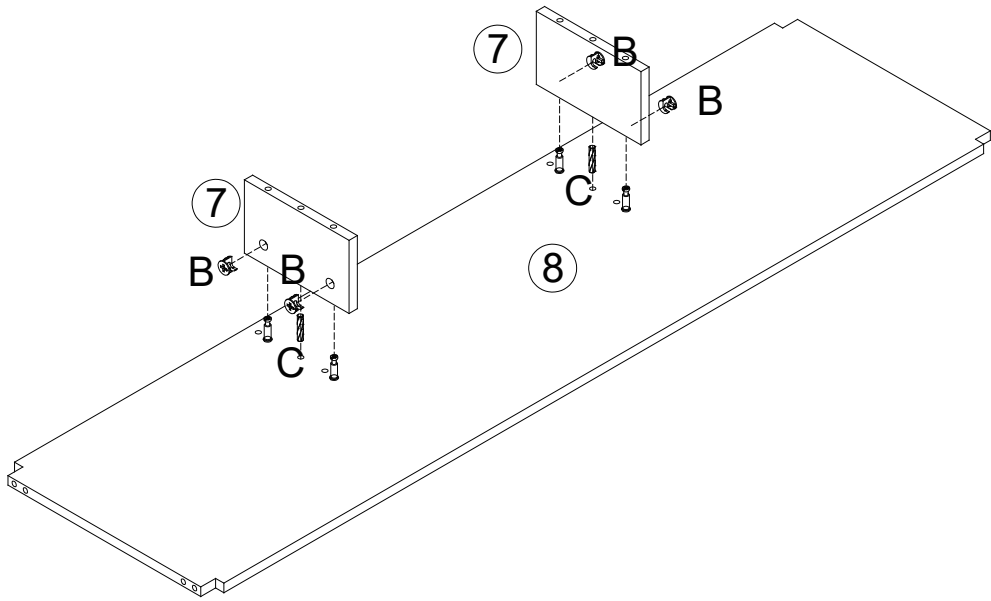 


STEP 6

O		4
C		4
N		4

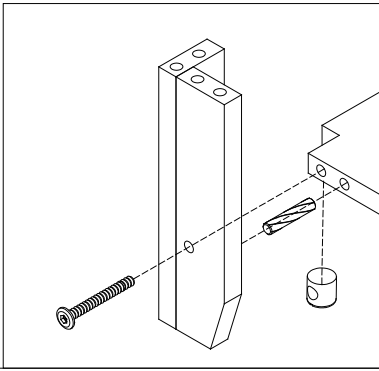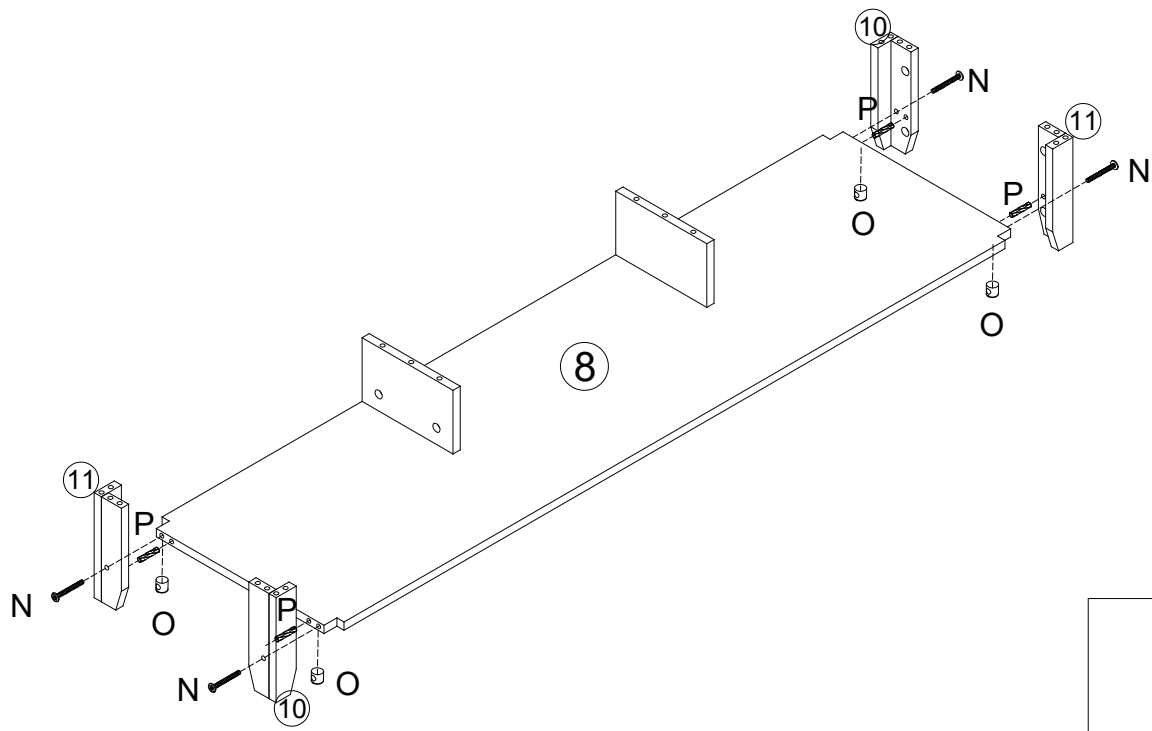  



STEP 7

D		12
C		10

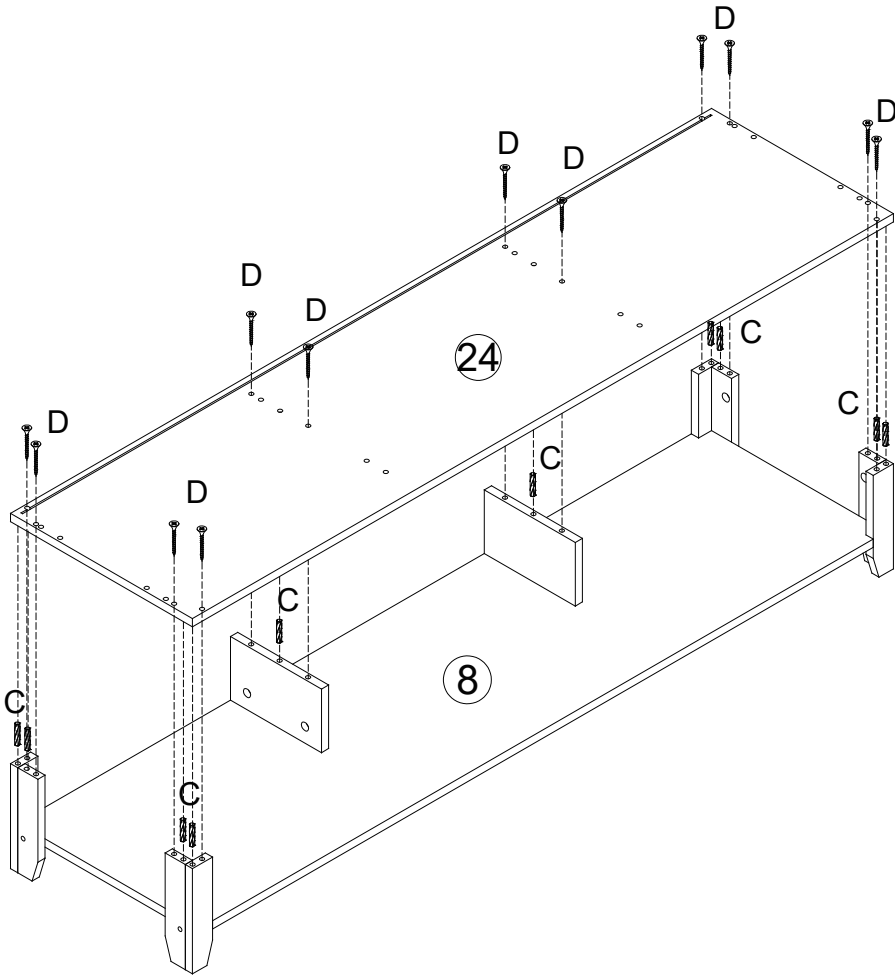 


STEP 8

A		8
---	---	---

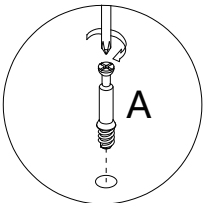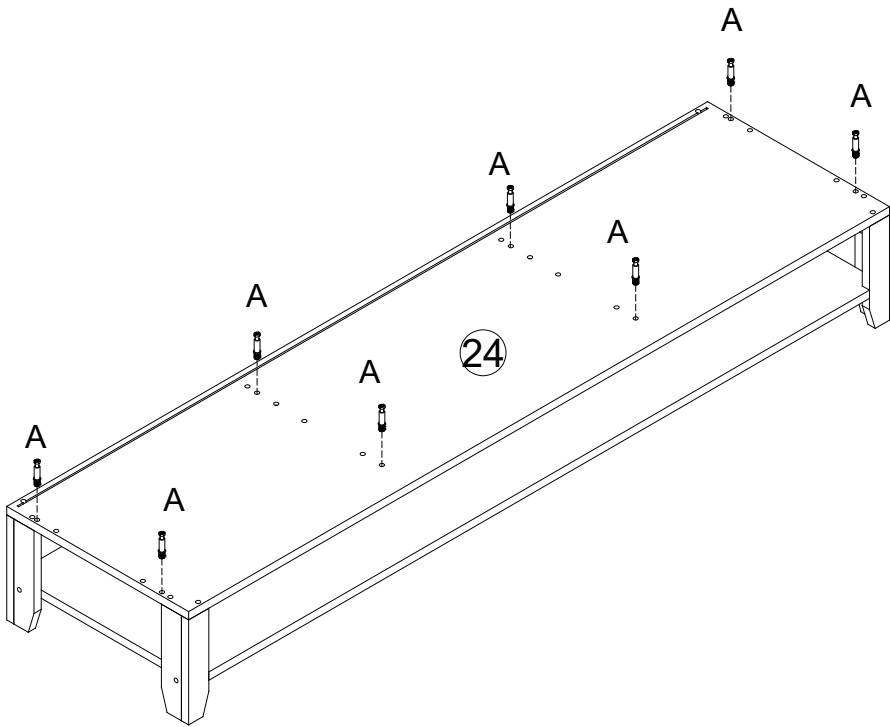  

STEP 9


A		6
B		6
C		4
F		8
H		4

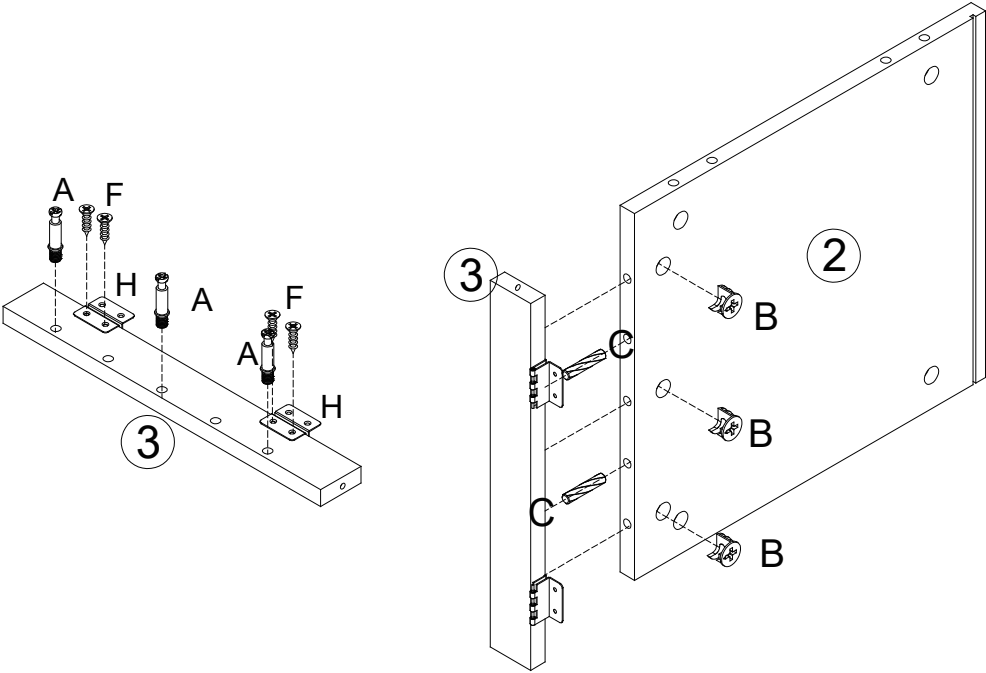 

x2


STEP 10

B		8
C		10

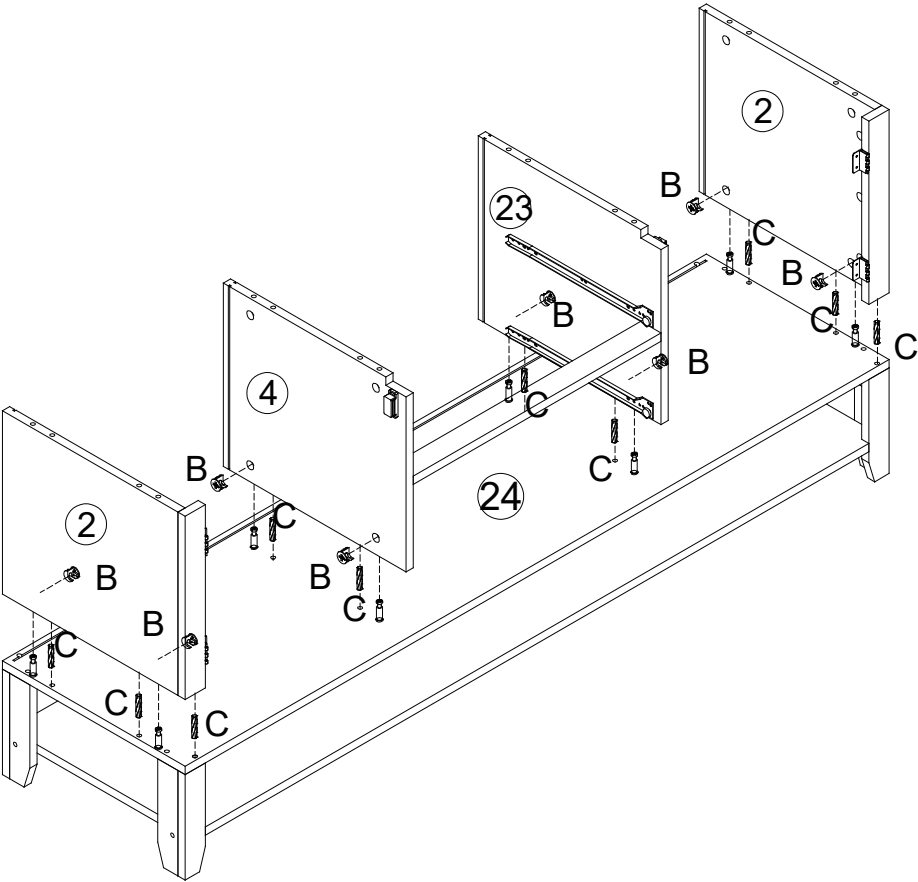 


STEP 11

A		8
G		5
P		2

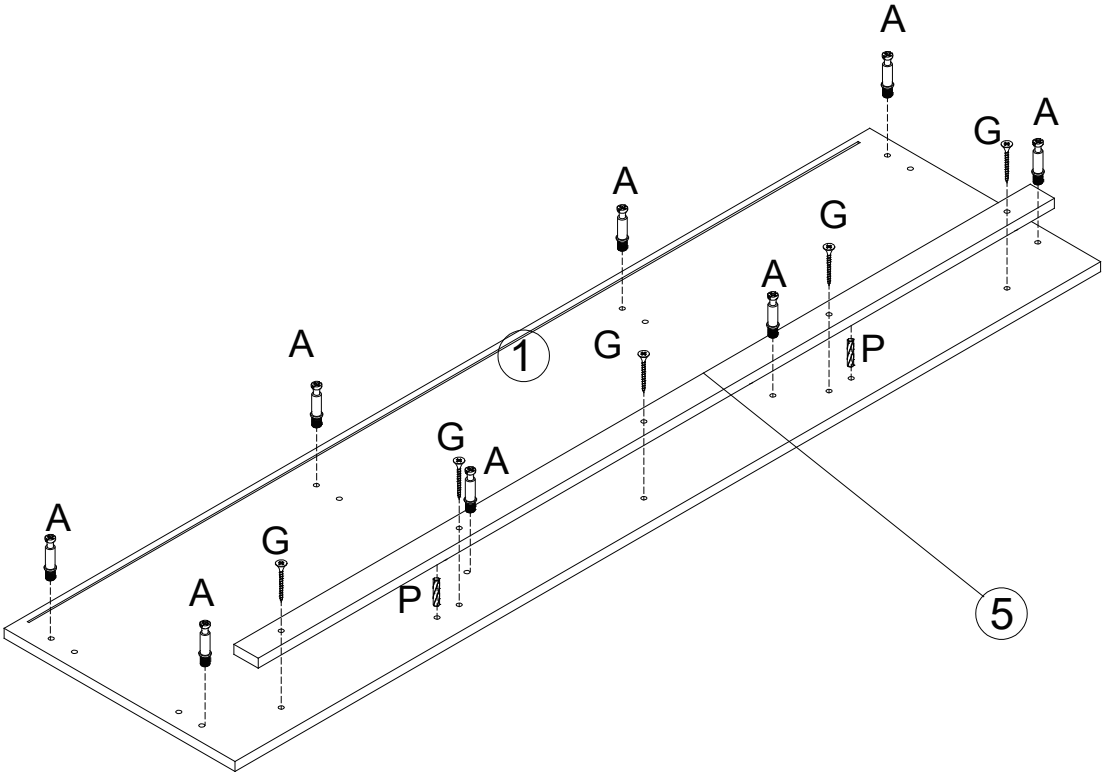 


STEP 12


B		8
C		10

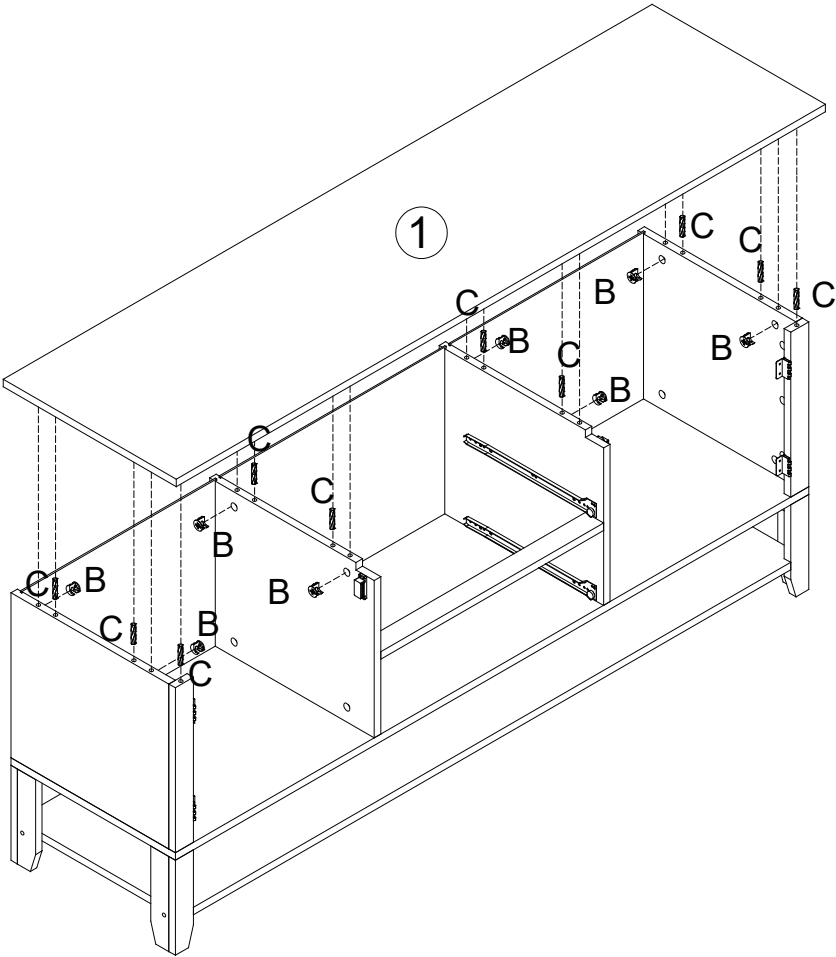 

 STEP 13

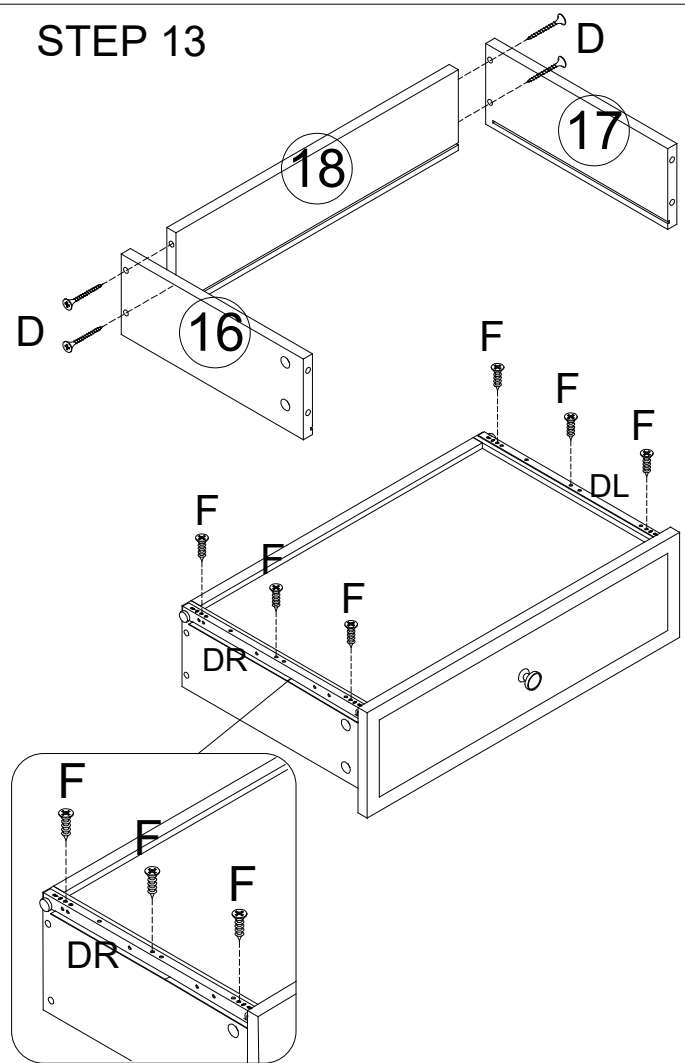



F		12	A		8
L		2	B		8
M		2	C		4
			D		8
			DL		2
			DR		2

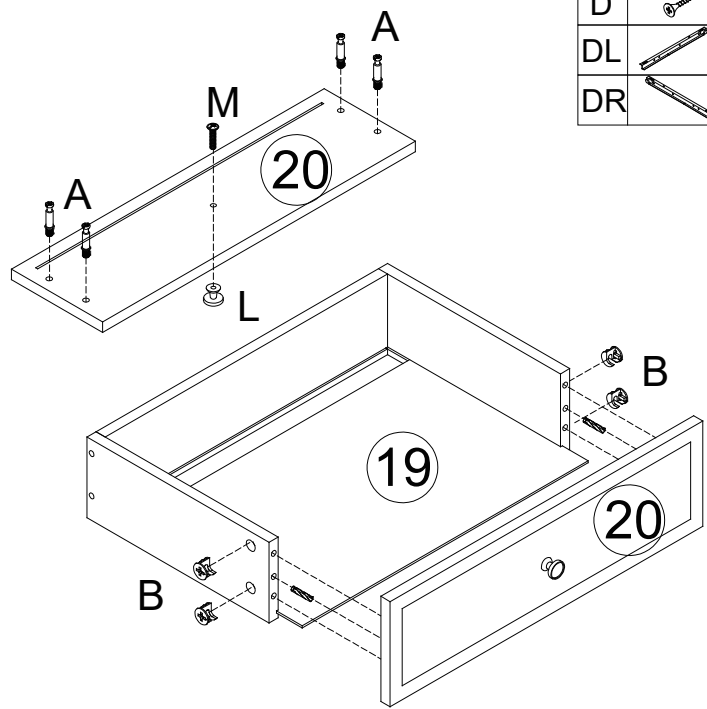 


x2

STEP 14

F		2
I		2
L		2
M		2

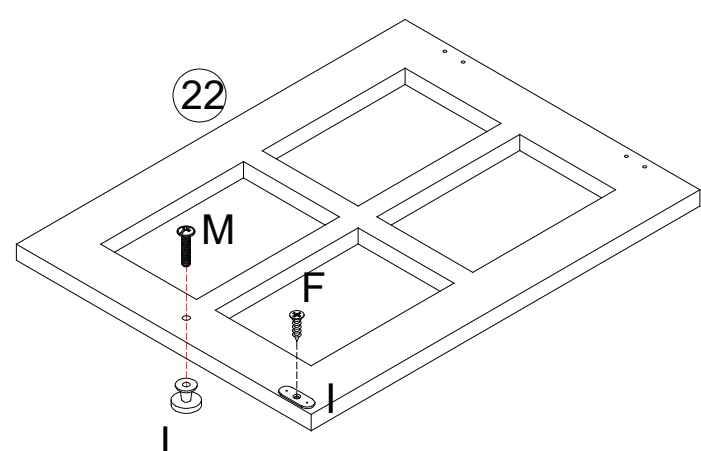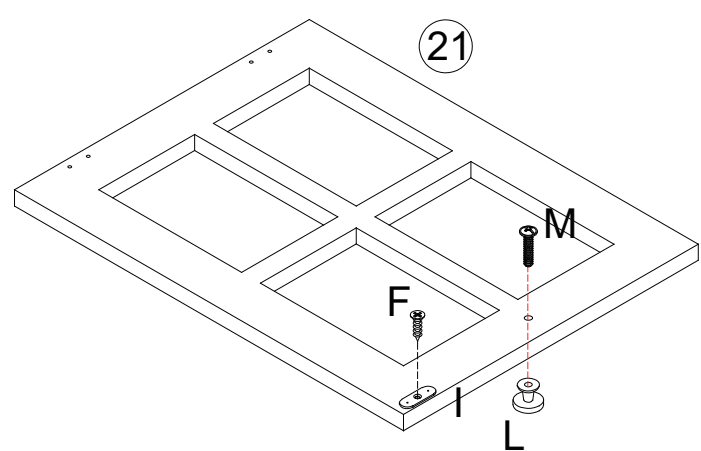  

 STEP 15

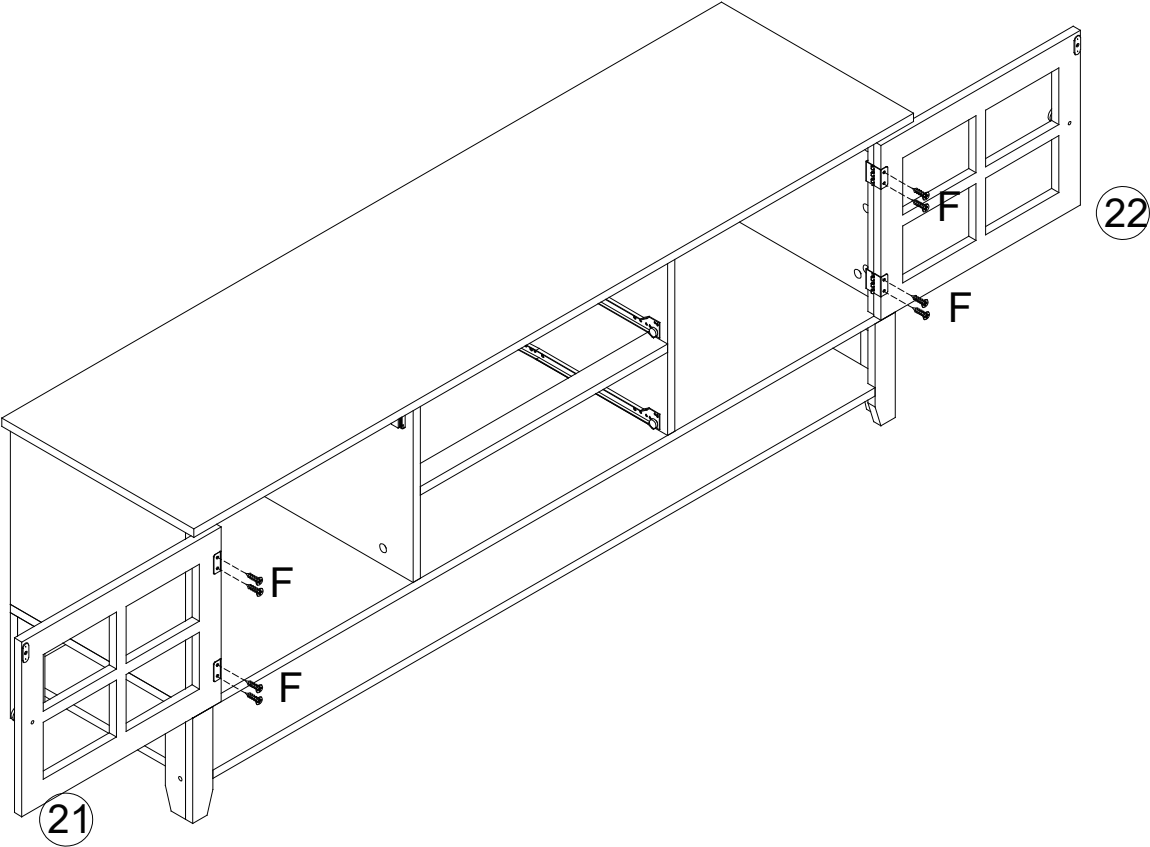

STEP 16

