
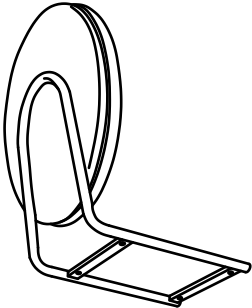


ITEM NAME/NOM D'ITEM:ODESSA DINING CHAIR
ITEM #/NO. ITEM:109804

PARTS LIST/LISTE DES PIÈCES			
(1)	(2)	(3)	(4)
			A  M6×20mm ×2
			B  M6×30mm ×6
			C  M6 ×8
			D  M6 ×4
			E  M5 ×1

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

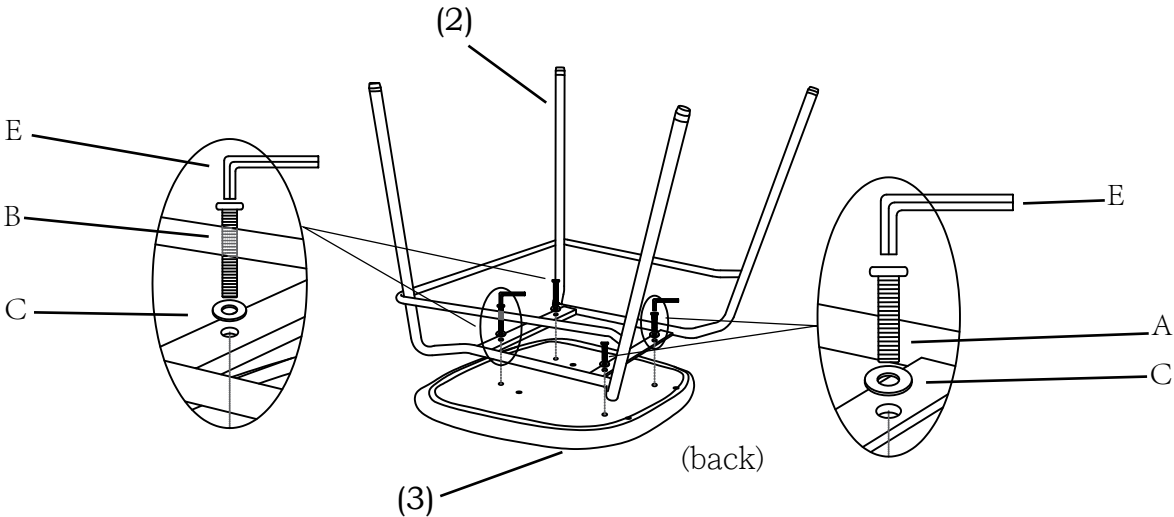


(2)

(3)

(back)

II

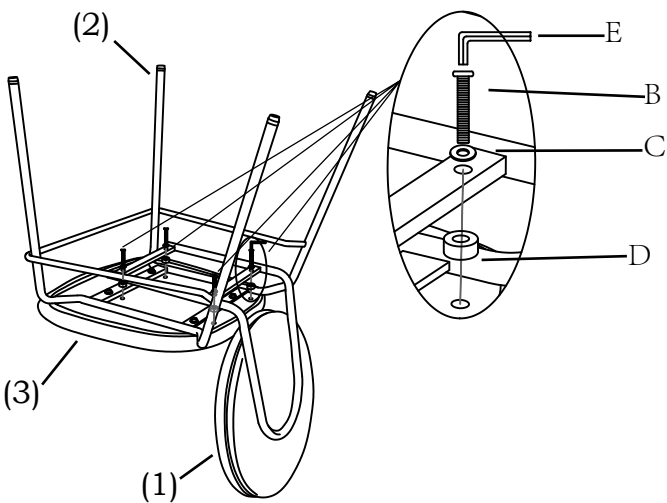


(2)

(3)

(1)

III

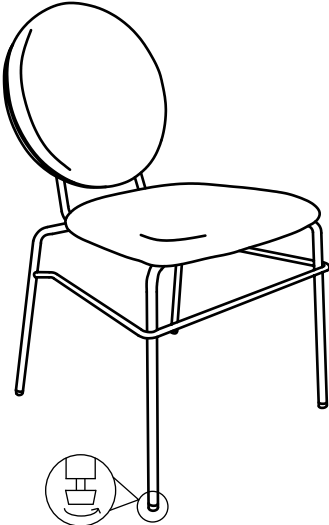

Please use the attached adjustable footglides to level the chair on uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler: USA, Canada and Mexico: (866)-798-6663