
ASSEMBLY INSTRUCTIONS

TEAK ROUND COFFEE TABLE WITH SHELF IT-170708T

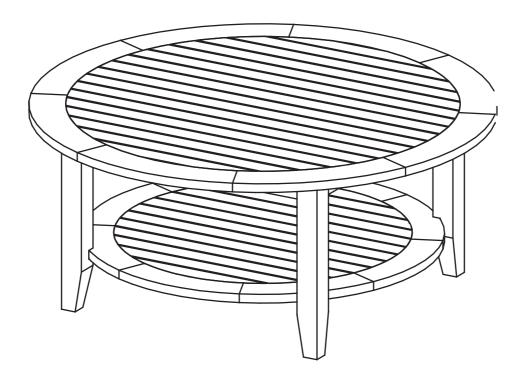



Scan me for assembly video A gift is waiting for you!

Customer Service Information

Please email us at info@cambridge-casual.com for assembly tips, report damage, or request parts.

For faster response, please write down item number, code for missing parts, attach the purchase receipt and picture of damaged parts.

Toll free number: 1-888-287-4275 from 9:00am to 5:00pm CST (Monday to Friday)

 
GENERAL INFORMATION & TIPS

- 1. Please read the assembly instructions prior to assembling the Table.
- 2. To avoid damage, assemble the Table on a non-abrasive surface such as carpet.
- 3. Make sure all nuts and screws tightly fastened before the Table is used.
- 4. This Table is not for commercial use.


Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening nuts and screws.

TOOLS REQUIRED

- 1. 8" Philips screwdriver (Not provided).
 - For tightening all screws.



- For tightening all nuts

 




PARTS AND HARDWARE LIST


A. Table top	B. Leg	C. Shelf	D. 1 1/4" Screw
			4) —minim
Qty:1Pc	Qty: 4 Pcs	Qty:1Pc	Qty: 4 Pcs + 1
E. Washer	F. Spring washer	G. Nut	
Qty: 4 Pcs + 1	Qty: 4 Pcs + 1	Qty: 4 Pcs + 1	

STEP 1

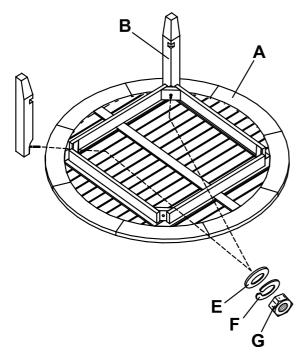


- Put the table top (A) face down on clean flat surface.
- Attach 2 pcs legs (B) to the table top (A) and secure each leg with washers (E), spring washers (F) and nuts (G).
- Do not fully tighten all nuts yet.

STEP 2

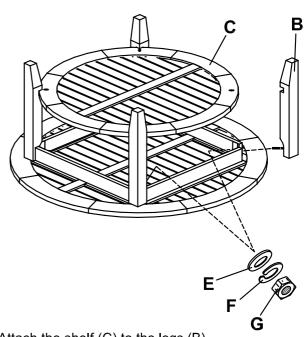


- Attach the shelf (C) to the legs (B).
- Attach the other legs (B) into the table top (A) and shelf (C), as diagram shown.
- secure the legs (B) to table top (A) with washers (E), spring washers (F) and nuts (G).

Do not rully lighter all riuts yet

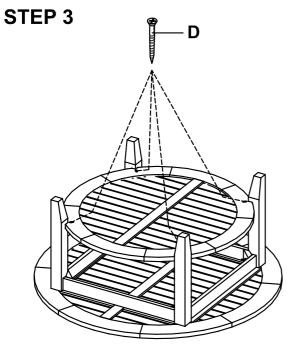

- Secure the shelf (C) with 1 1/4" screws (D)
- Make sure all parts are correctly connected and tighten all nuts and screws completely using wrench and screwdriver.

STEP 4

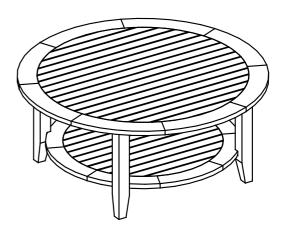

- Next, upright the table.
- THE TABLE IS NOW READY FOR USE.

ASSEMBLY INSTRUCTIONS

LOUNGE CHAIR WITH CUSHION IT-120812





Scan me for assembly video A gift is waiting for you!

Customer Service Information

Please email us at info@cambridge-casual.com for assembly tips, report damage, or request parts.

For faster response, please write down item number, code for missing parts,

attach the purchase receipt and picture of damaged parts.

GENERAL INFORMATION & TIPS

- 1. Please read the assembly instructions prior to assembling the chair.
- 2. To avoid damage, assemble the chair on a non-abrasive surface such as carpet.
- 3. Make sure all bolts tightly fastened before the chair is used.
- 4. This chair is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.


TOOLS REQUIRED


- 1. 8" Philips screwdriver (Not provided).
 - For tightening all bolts and screws.



PARTS AND HARDWARE LIST


A. Back support	B. Seat	C1. Right leg frame	C2. Left Leg frame
QTY: 1 pc	QTY: 1 pc	QTY: 1 pc	QTY: 1 pc
D1. Right arm rest	D2. Left arm rest	E. 1 3/4" Bolt	F. 1 1/4" Screw
		()	D ENNE
QTY: 1 pc	QTY: 1 pc	QTY: 10+1 pcs	QTY: 4+1 pcs
G. Spring washer	H. Washer	I. Glue	
QTY: 8+1 pcs	QTY: 8+1 pcs	QTY: 1 pc	

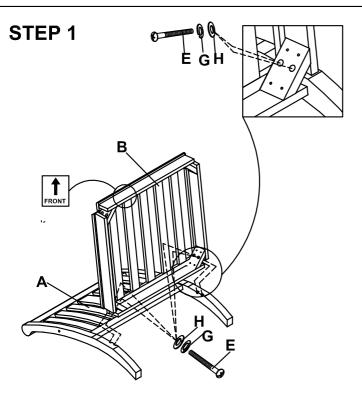

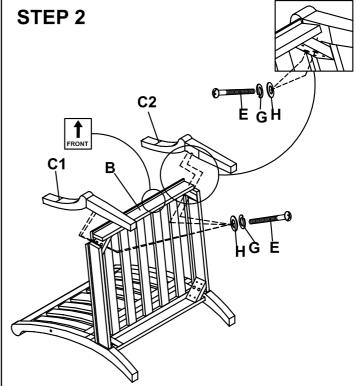


- Attach the seat (B) to back support (A), position as shown.
 Please insert the washers (H), spring washers (G), and 1 3/4" bolts (E) by hand to the holes, position as shown. Adjust the bolts to the right position before screwing. ** Do not fully tighten all bolts yet.
- Attach the leg frames (C1&C2) onto the seat (B), position as shown.
- Please insert the washers (H), spring washers (G) and 1 3/4" bolts (E) by hand to the holes, position as shown. Adjust the bolts to the right position before screwing.

 ** Do not fully tighten all bolts yet.

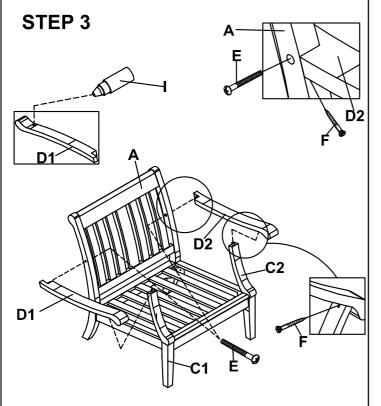

STEP 4

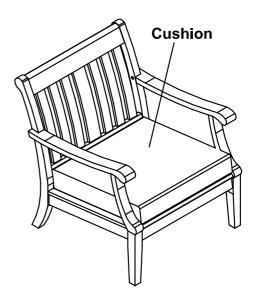


- Stand the chair upright.
- Pour small amount of glue (I) into the holes of the arms (D1&D2), position
- Attach the arms (D1&D2) to the back support (A) and to legs (C1&C2). Secure with 1 3/4" bolts (E) and 1 1/4" screws (F), position as shown. Tighten the bolts and screws using screwdriver.

Install the cushion on the chair.

THE CHAIR IS NOW READY FOR USE.

ASSEMBLY INSTRUCTIONS DAY BED WITH CUSHION

IT-071460

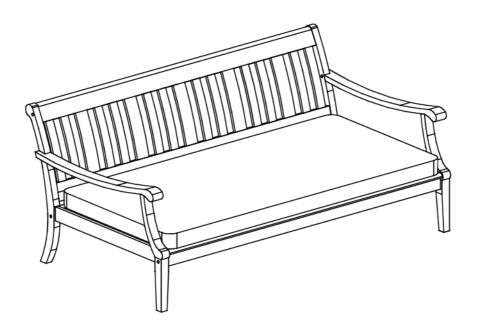

CUSTOMER SERVICE INFORMATION

Please email us at info@cambridge-casual.com for assembly tips, report damage, or request parts.

For faster response, please write down item number, code for missing parts, attach the purchase receipt and picture of damaged parts.

 
GENERAL INFORMATION & TIPS

- 1. Please read the assembly instructions prior to assembling the bench.
- 2. To avoid damage, assemble the bench on a non-abrasive surface such as carpet.
- 3. Make sure all bolts tightly fastened before the bench is used.
- 4. This bench is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

TOOLS REQUIRED

- 1. 8" Philips screwdriver (Not provided).
 - For tightening all bolts.
- 2. Rubber Mallet (Not provided).
 - For tapping in the wooden caps.







PARTS AND HARDWARE LIST

A1. Right side frame	A2. Left side frame	B. Back support	C. Seat
QTY: 1 pc	QTY: 1 pc	QTY: 1 pc	QTY: 1 pc
D. 1 1/4" Bolt	E. 1 1/2" Bolt	F. Wooden cap	
QTY: 4 pcs + 1	QTY: 2 pcs +1	QTY: 6 pcs + 1	

STEP 1

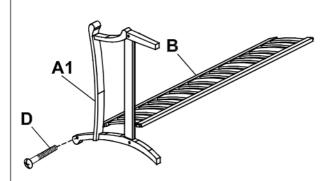


STEP 2

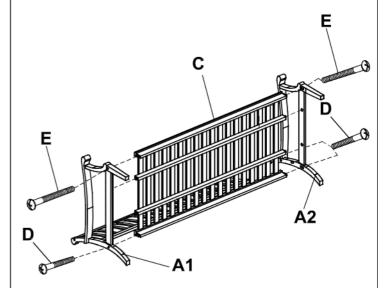

- Attach back (B) into corresponding of right leg (A1).
- Secure with 1 1/4" bolt (D) using phillips screwdriver, not provided.
- Attach seat tenons (C) into matching holes of right leg (A1) and then attach left leg (A2) to pre- assembled.
- Secure front seat with 1 1/2" bolts (E) and back seat with 1 1/4" bolts (D).

STEP 3

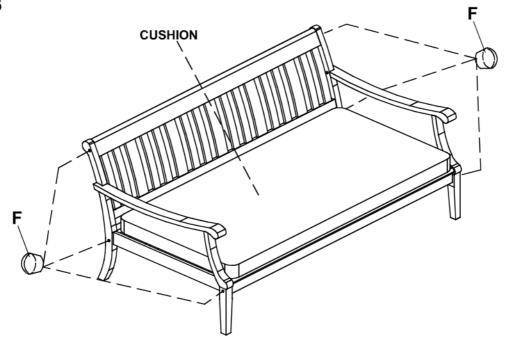

- Turn the chair upright, side up.
- Make sure all parts are connected and tighten all bolts completely using screwdriver.
- Tap in wooden caps (F) to cover bolt heads using rubber mallet.
- Install the cushions as shown.

THE BENCH NOW READY FOR USE.

MAINTENANCE

Wood is a living material that continues to respond to climate condition even after being made into a piece of furniture.

After assembly rub the furniture with soft rag to remove any residual dust. Wood is a natural material whose appearance will change when left outdoors. This product has been treated prior to leaving the factory. To clean, use mild soap and warm water. Do not use abrasive material, cleansers or bleach products, Dry thoroughly with soft cloth,

Even though this piece of furniture is extremely durable and long lasting, to prolong life we recommend bringing it indoors during freezing temperatures. Place it at a shaded area and do not leave it in standing water or on wet ground.

Do not put hot items directly on furniture surface.

Do not store furniture in areas that have central heating or cooling vents to prevent excessive drying of the wood. This will decrease the furniture's longevity.

Do not write on furniture without a padded barrier to protect the surface.

In order to maintain the product's durability, please read carefully.

Do not leave your furniture in puddles of water or on wet ground.

Cover your furniture during winter months or move into covered storage, if in wet climates.

The manufacturer supports protection of the world's forest resources and is diligent is sourcing legally harvested wood.

Thank you

The manufacturer

1 year Limited Warranty

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

• 1 year limited frame warranty Frames are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and sub-freezing temperatures is not covered. (Do NOT allow water to accumulate inside frame)

Finish

The finish is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.

• Fabric

Fabrics / cushions are warranted against separation at the seams and fading under normal usage and exposure conditions for a period of 1 year. Mildew and fading or discoloration resulting from exposure to the elements, chemicals, or from spills is not covered. (Please refer to care and maintenance for proper cleaning instructions)

Warranty Exclusions: Furniture used for commercial, contractor or any non-residential purposes, clearance items, display models or items purchased "as is", freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly, straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures. Also excluded: loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranty item be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. For quality control purposes and verification, we reserve the right to request photography of the damage item(s). The terms of this warranty are subject to change without notice.