


Wine Sideboard Cabinet

Applicable Item NO.: H0106

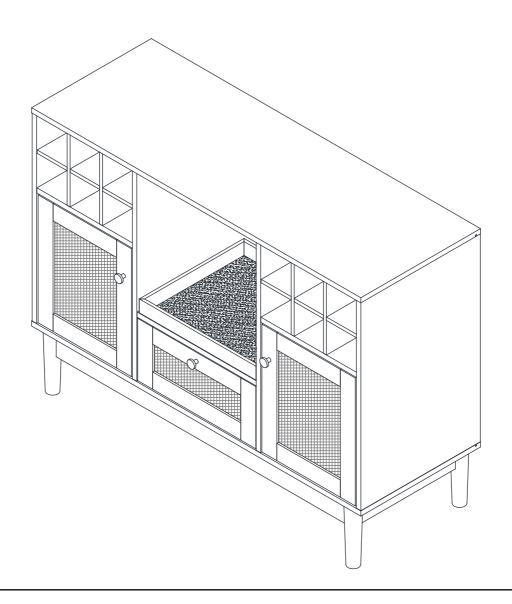

2 HOURS
ASSEMBLY TIME

2 PEOPLE REQUIRED FOR ASSEMBLY

2 x 1 m

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT.

SAFETY ADVICE

- Keep the product away from fire and inflammable objects.
- Do not stand on the product or use the product as a stepladder.
- Do not overload, otherwise it will cause risk of injury and/or damage to the product.
- Never allow kids to climb on or lean against the product. The product comes with an anti-tip wall anchor. Do fix the anti-tip device to avoid potential injury.
- Check that the product is stably built before use and make sure the product stands on a solid and level surface.

CARE ADVICE

- Wipe with soft dry cloth.
- Never allow any sharp objects to touch the surface. It will damage the finish of the product.
- Never allow any kind of liquid to remain on the surface. Water penetration will cause damage to the wood material.
- Please periodically check all fittings and re-tighten as necessary.

ASSEMBLY ADVICE

- Ensure that you have sufficient space and people to assemble the product safely.
- Please check that all parts are present before you start the assembly. A Philips head screwdriver (not included) is required for the assembly.
- Please assemble the product on a protected surface (packaging box, or mat, etc) to avoid any damage.
- During assembly, do not tighten bolts/screws completely until all bolts/screws are lined up and inserted into holes; do not over-tighten screws and bolts to avoid stripping; do not use power tools.
- Please check that the product is well and stably built before usage.

KEEP ALL SAFETY ADVICE AND SAVE THIS INSTRUCTIONS FOR FUTURE REFERENCE

Guarantee From Anmytek

We offer 12-month warranty for all our products from the date of original purchase.

Statement:

The product is well-packed with strengthened box and protective foam. Each panel is separately wrapped with soft protective foam, while the hardware is included in a single box. An instructions manual should be included in the box as well. Well protected though, damage happens sometimes.

To successfully assemble the item and enjoy your cozy furniture, please kindly check the parts and accessories according to the packing list in the next two pages.


If there are any parts missing, damaged or defective, please feel free to contact us for support via the following email. You can contact us for support at any time. Usually we will respond to you within 24 hours.

Email: service@anmytek.com

The information required for a better support from us:
Order Number:
Part Number needed to replace:
Shipping Information (Name, Address, Contact Number):
Picture of the damaged/defective parts (If possible):

Note: If the instructions manual is missing pages, there is a QR Code printed on the packaging box where you can scan and download the electrical instructions for reference. If error happens, contact us via email directly.

Producd Diagram

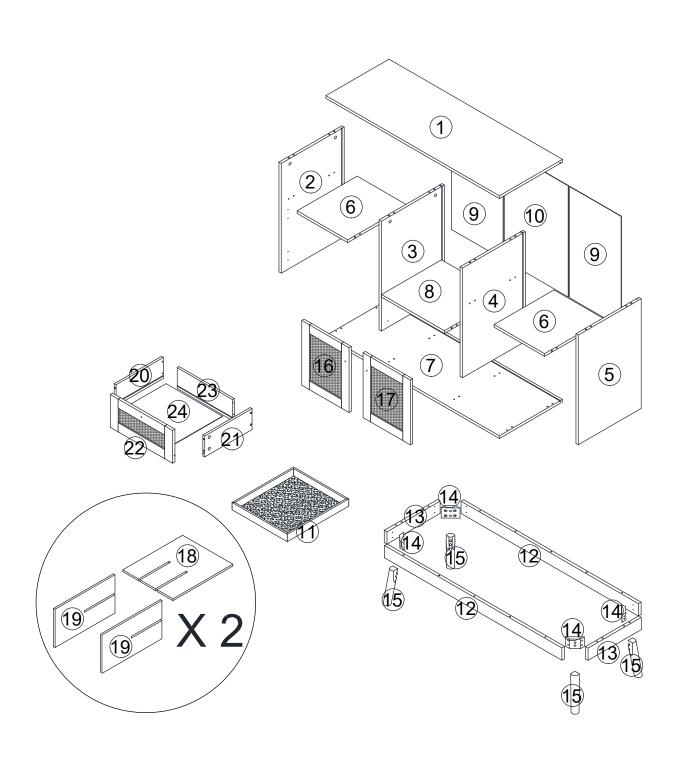


After-sales Support


If there are any parts missing, damaged or defective, please feel free to contact us for support via the following email. Information required is listed on Page 3.


Email: service@anmytek.com


Hardware List										
А		В		С		D				
24 PCS	M6x35	24 PCS	Ø15x10	36 PCS	ø6x30	18 PCS	M4x40			
E	(56)	F		G		Н	TOTAL			
16 PCS	M3x14	16 PCS	M3x12	16 PCS	W M4x14	2 PCS	M4x12			
l		J	(<u>6</u>)	K		L				
2 PCS		2 PCS		12 PCS		3PCS	M4x20			
М		N		0		Р				
4 PCS		4 PCS		3 PCS		2 PCS	M4x35			
Q	<u>a</u>	R	CHILD	S	/7	Т				
2 PCS		2 PCS		3 PCS		4 PCS				
U		V		W		Χ				
8 PCS		8 PCS	M6x50	16 PCS	M4x25	4 PCS	M4x30			
Υ		Z		Z		Z	6			
1 PC		1 PC	CL 300MM	1 PC	CR 300MM	1 PC	DL 300MM			
Z										
1 PC	DR 300MM									


Parts List										
1-1 PC	2-1 PC	3-1 PC	4-1 PC	5-1 PC	6-2 PCS					
7-1 PC	8-1 PC	9-2 PCS	10-1 PC	11-1 PC	12-2 PCS					
13-2 PCS	2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	15-4 PCS	16-1 PC	17-1 PC	18-2 PCS					
19-4 PCS	20-1 PC	21-1 PC	22-1 PC	23-1 PC	24-1 PC					

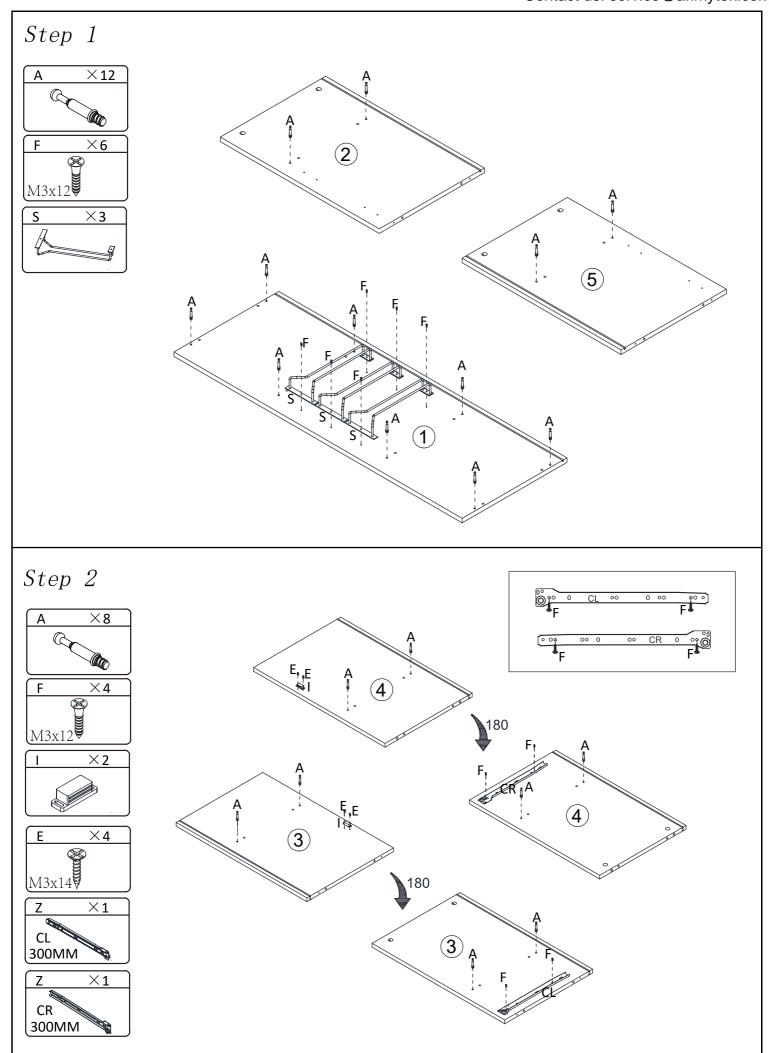


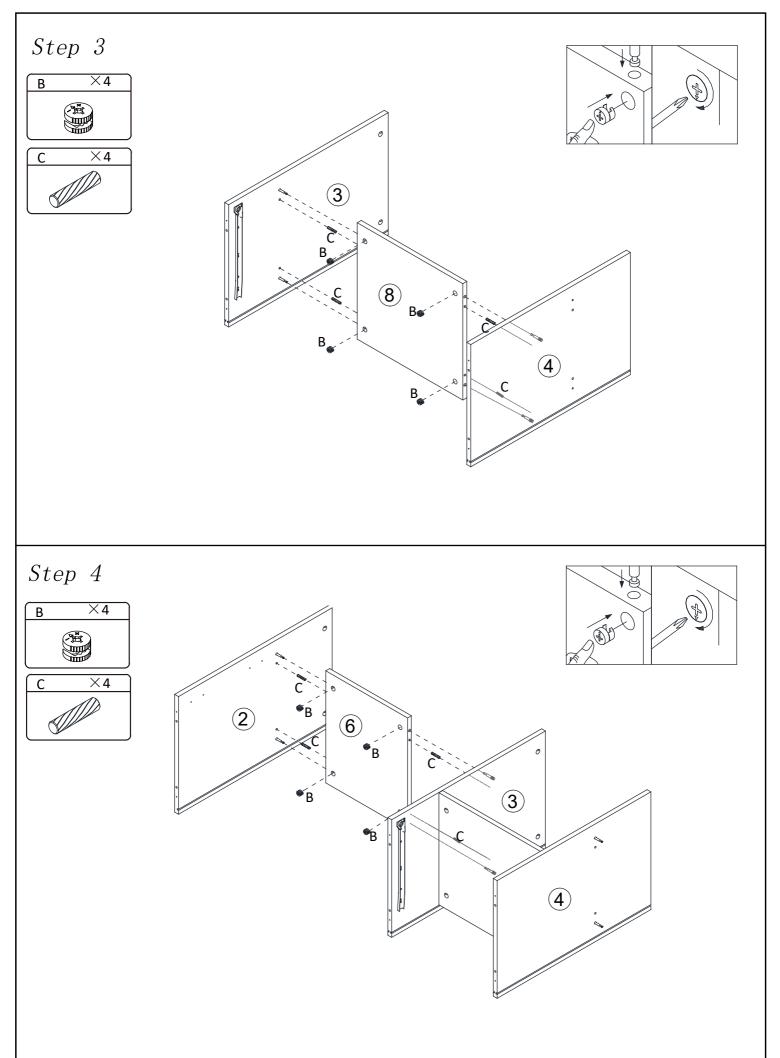


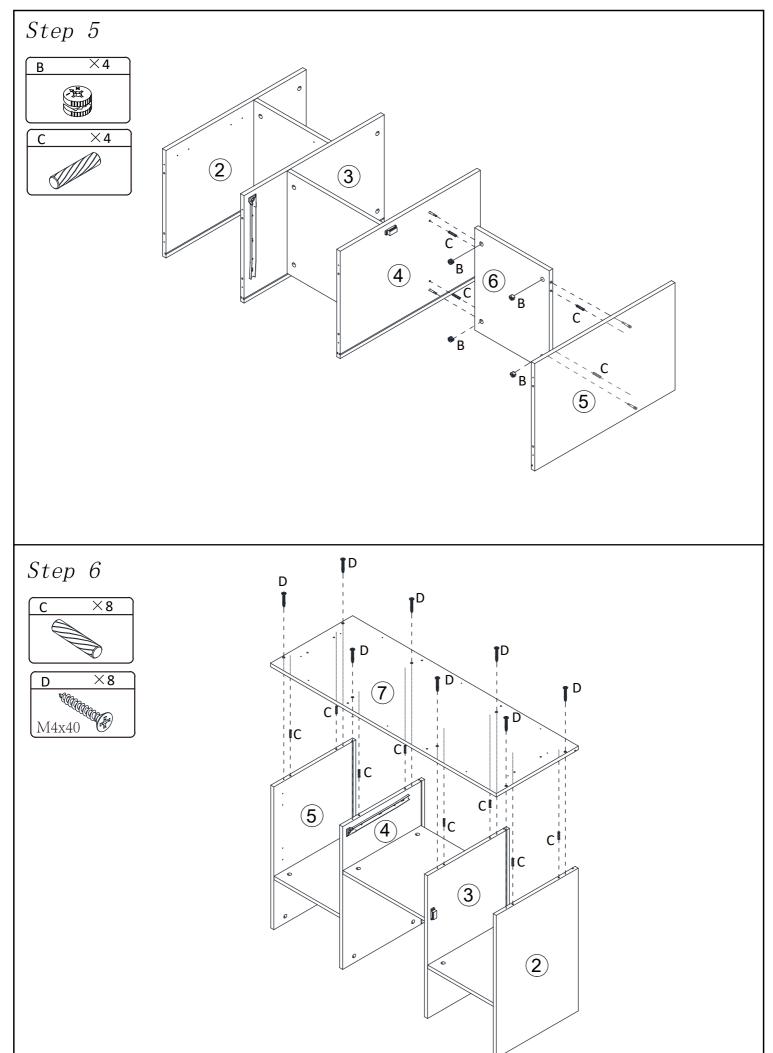


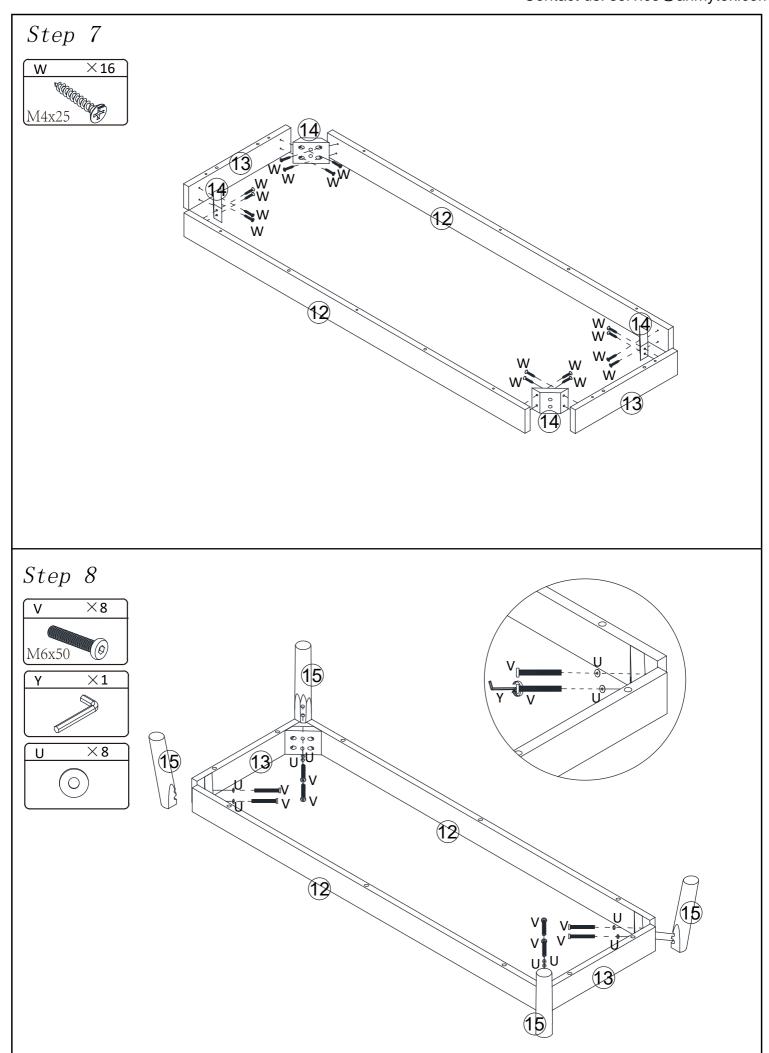


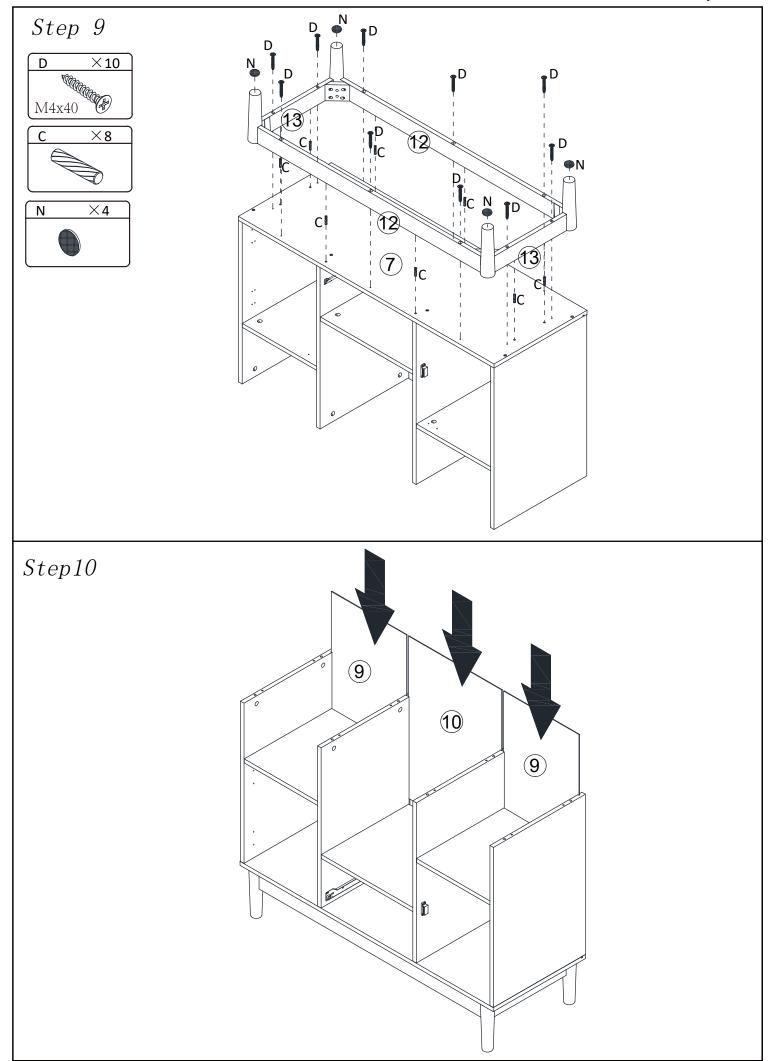


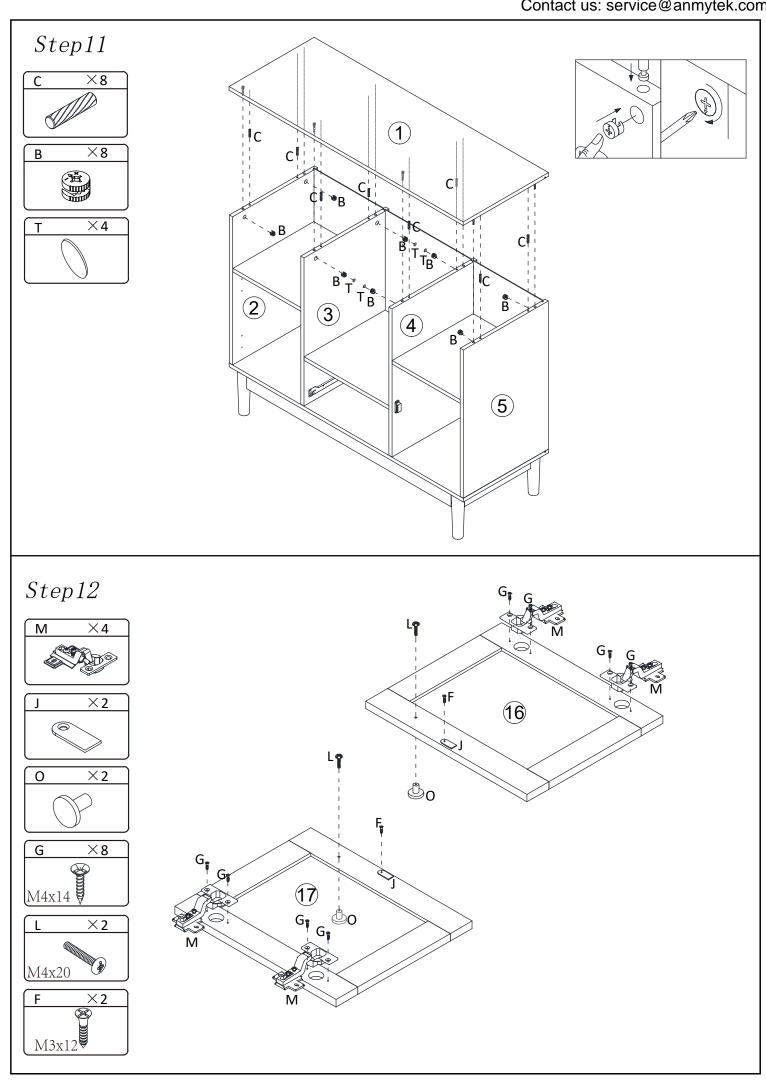


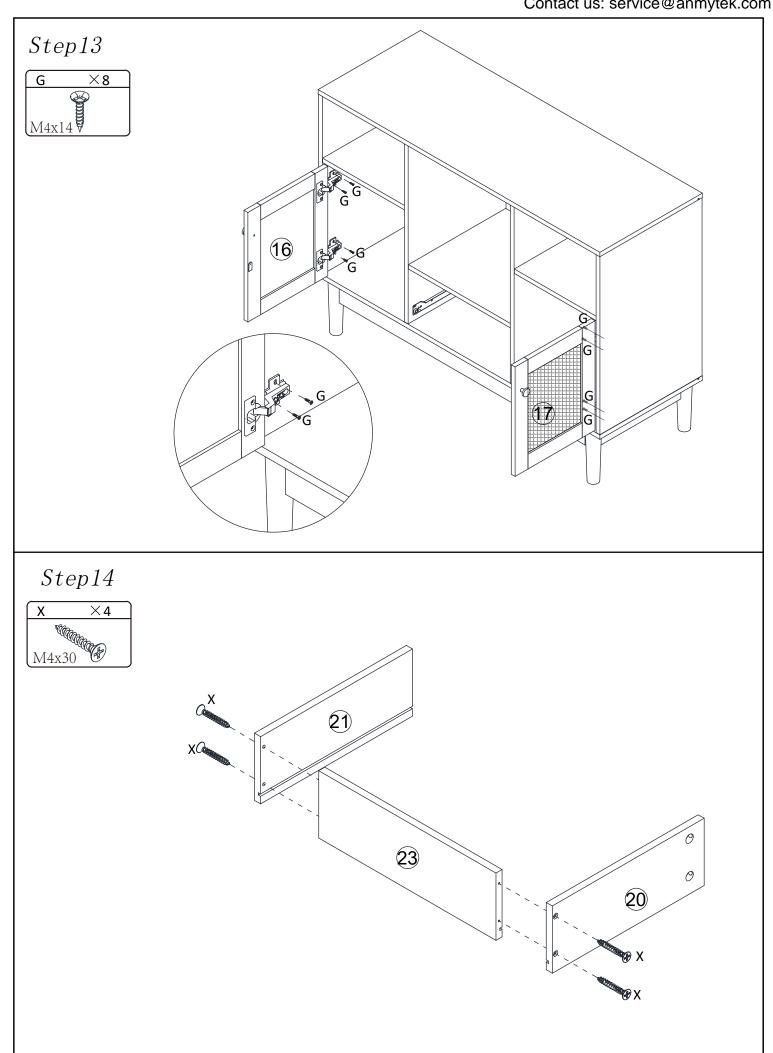


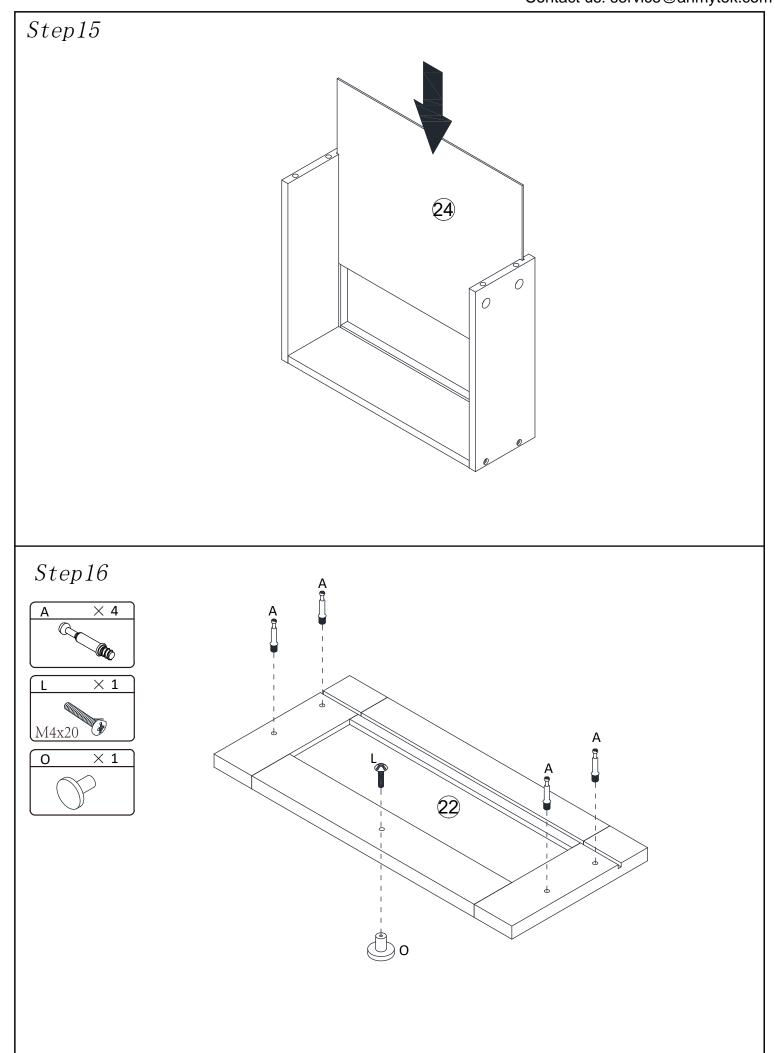


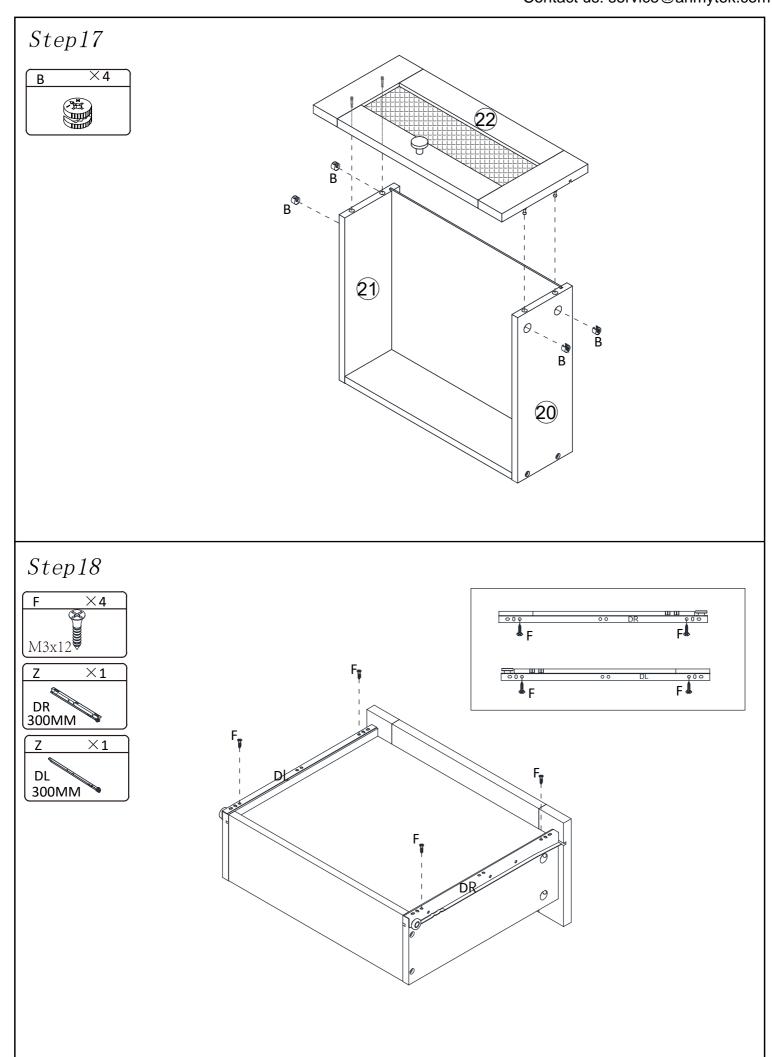

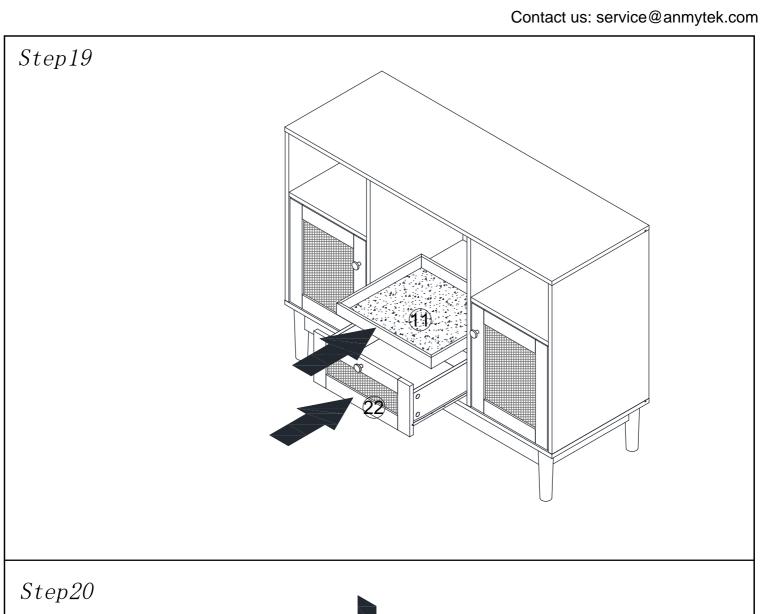


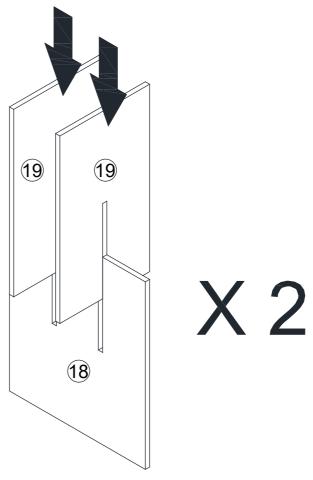

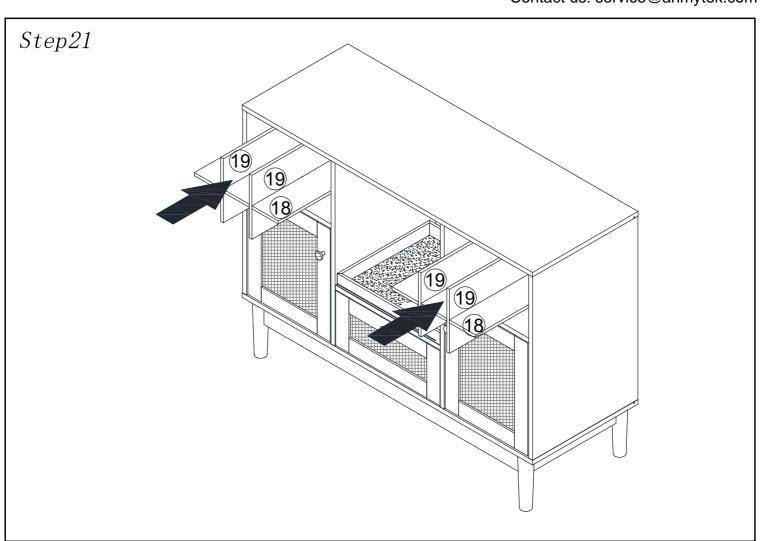

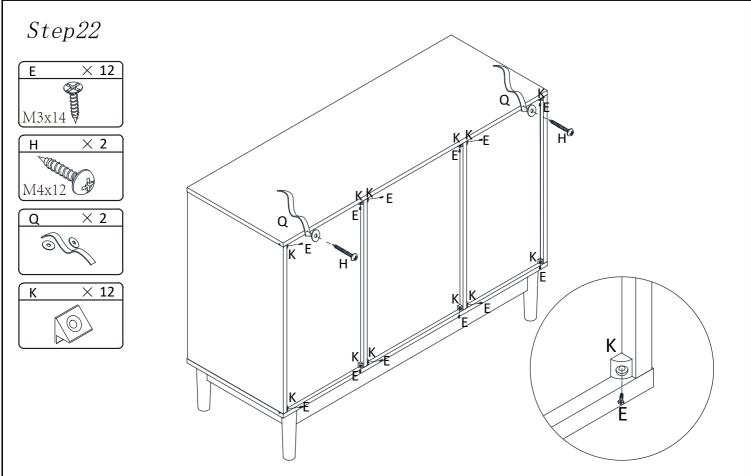


Kindly note: This is a very important step that can not be skipped. Please follow the step to screw the plastic pieces into the corner of the back panel tightly. If you forget to fix these pieces, it may result in the instability of the whole item.

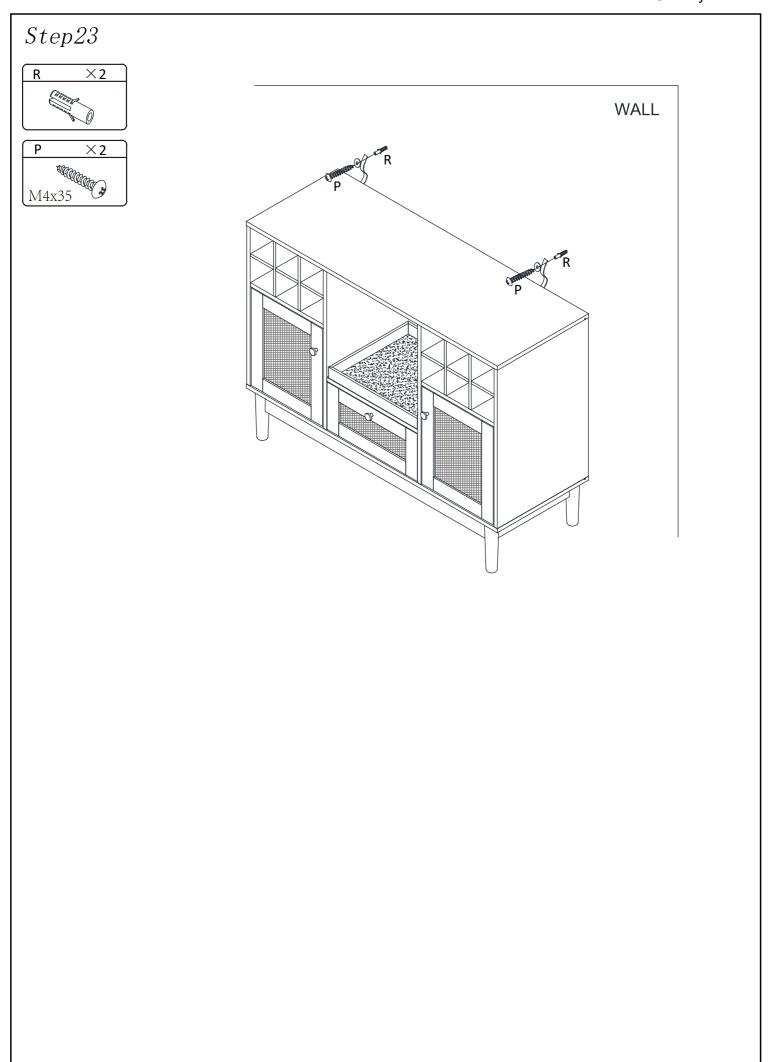

How to adjust the door if it is uneven/off?


Tips 1: If the door is too low or too high, how to adjust it?

Find the height screws shown as below. Loosen those four screws of the hinges, then lift up or lower the door to the suitable height, and tighten all screws finally.

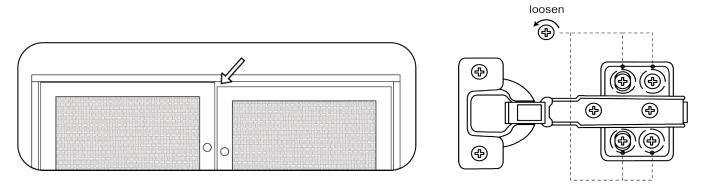

Tips 2: If the gap between two doors is too large or too narrow, or even the door can not close, how to fix it?

Find the screws shown as below. Take the left door for example. If the gap is too large, loosen the screw towards left until the gap is adjusted well. Contrarily, if the gap is too narrow causing the door can not be closed, tighten the screw towards right to the correct place.

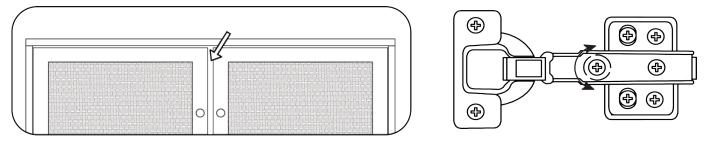

Tips 3: If the depth of the door is too deep or too shallow, how to adjust it?

Find the screw as shown below. If the depth of the door is too deep, loosen the screw of both hinges towards left on a single door, push the door in and out to the correct place, then tighten the screws.

