

Product Assembly Instructions

DINING CHAIR

PART LIST



 
A : BACKREST

x1




B : CUSHION SEAT

x1




C : SIDE LEG (L & R)

 x2



D : FRONT RAIL

 x1



E : BACK RAIL

x1

HARDWARE LIST



F : JCBC SCREW M6 x 25mm

x4



G : JCBC SCREW M6 x 50MM

x4



H : SPRING WASHER 1/4"

x8



I : PAN HEAD WOOD SCREW M5 X 32mm

x6



J : WOOD DOWEL DIA 8 x 25mm

x2



K : WOOD DOWEL DIA 8 x 35mm

x8



L : WOOD BUTTON 14.5MM

 
 
x4




M : ALLEN KEY M4 (BALL SHAPE)

x1


STEP 1

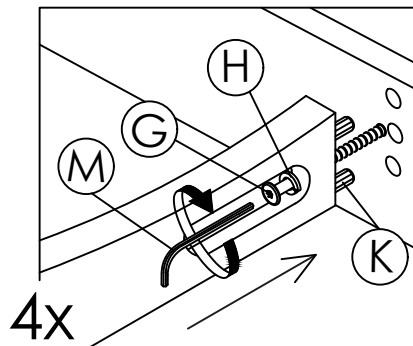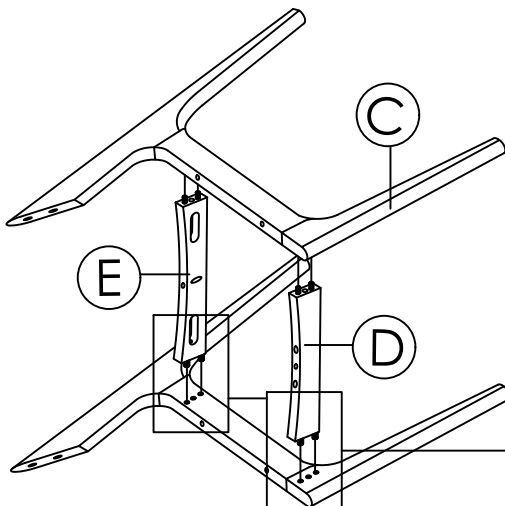

 
STEP 2

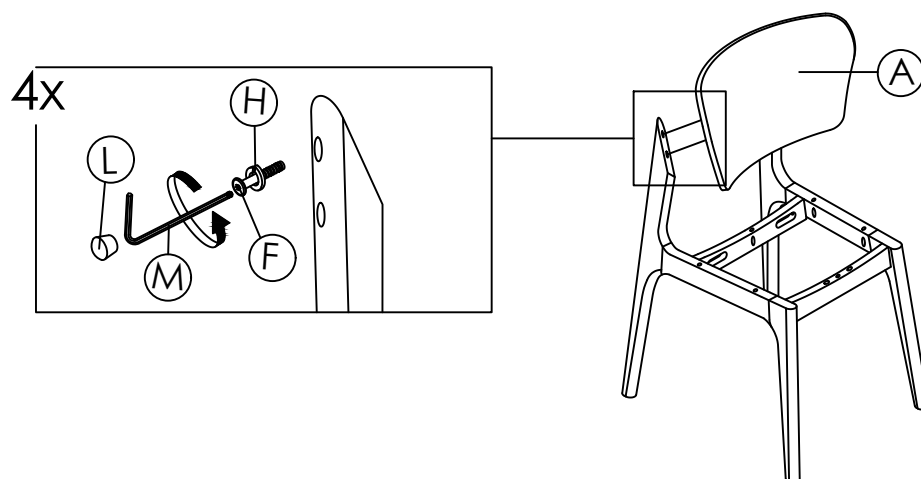

 STEP 3

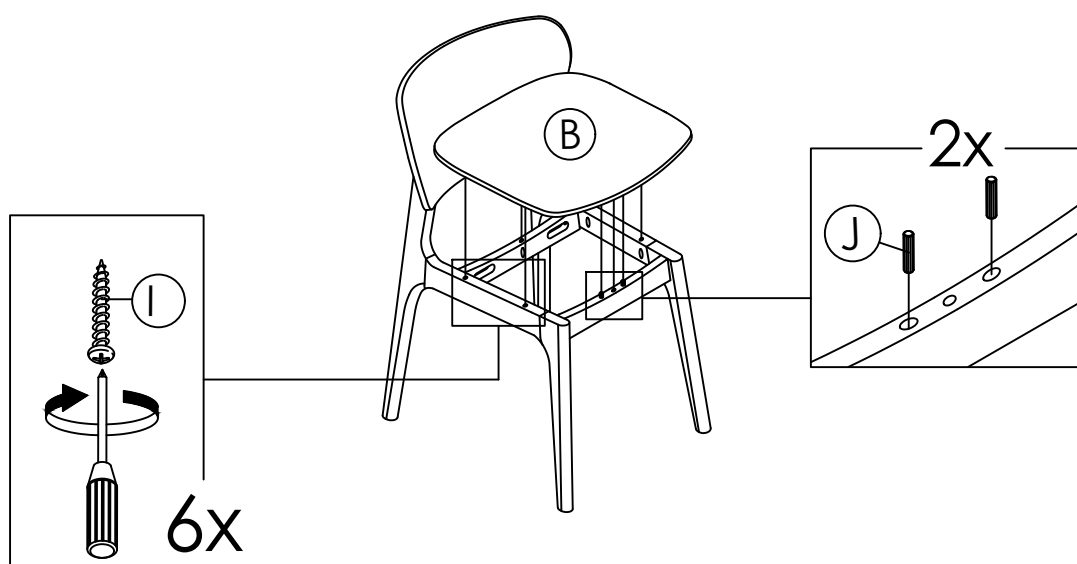


 
STEP 4

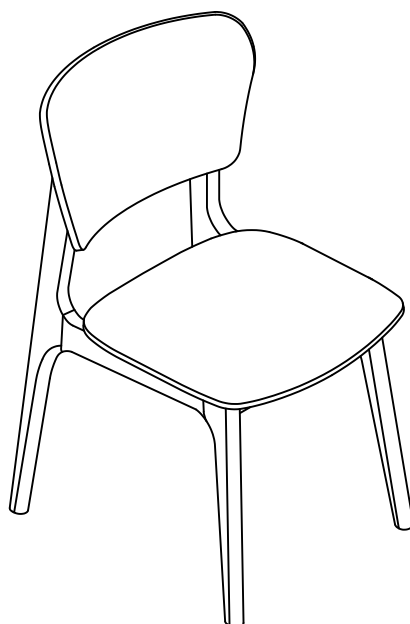

Product Assembly Instructions

KALIA TABLE

  
PART LIST

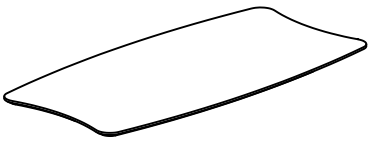		
A : TABLE TOP x1	B : TABLE LEG x4	


HARDWARE LIST

		
C : JCBB SCREW M8 x 80MM x8	D : JCBB SCREW M8 x 60MM x4	E: SPRING WASHER 5/16" x12
		
F: FLAT WASHER 5/16" x8	G: ALLEN KEY M5 x1	

 STEP 1

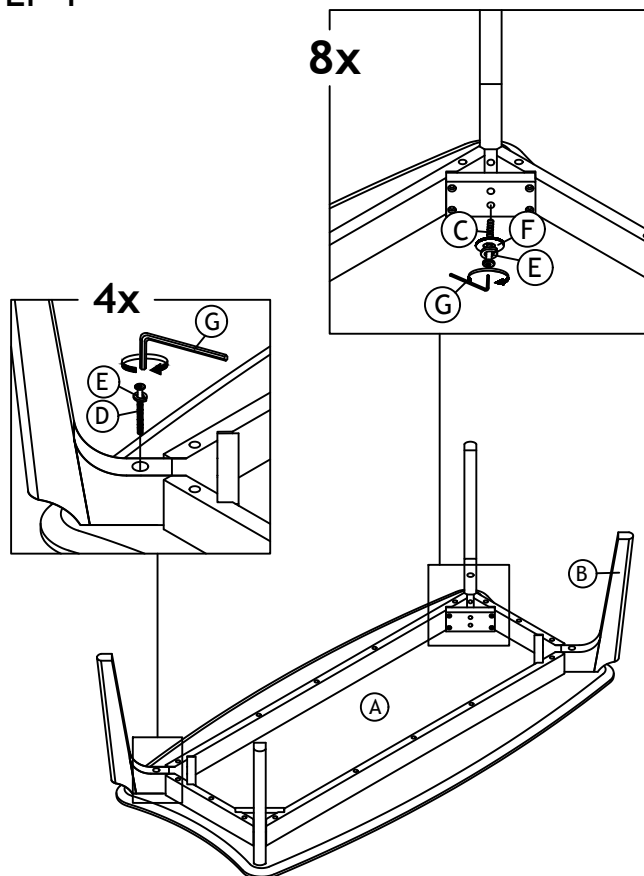

 STEP 2

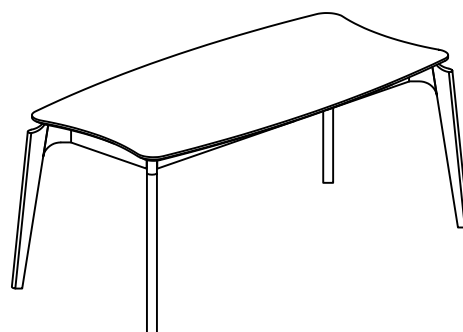

COMPLETED ASSEMBLY