 


Product Assembly Instructions

 
CHANELL DINING CHAIR

PART LIST

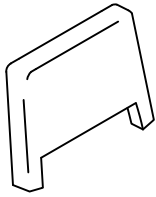


A : BACKREST

x1

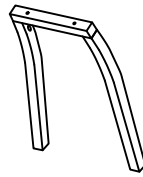


B : BACK LEG

 x1

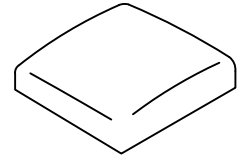

C : SEAT CUSHION

 x1



D : FRONT LEG (L & R)

x2

HARDWARE LIST



E : JCBC SCREW M6 x 45mm

x12



F : SPRING WASHER 1/4"

x12



G : FLAT WASHER 1/4"

 
 
x8




H : M4 ALLEN KEY (BALL SHAPE) LONG

x1


STEP 1

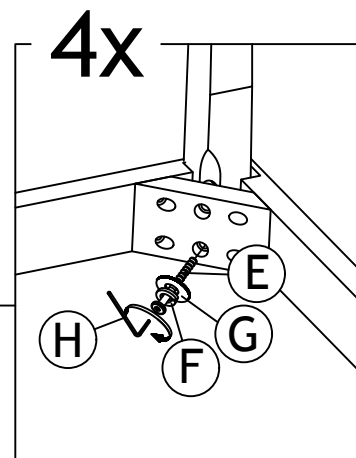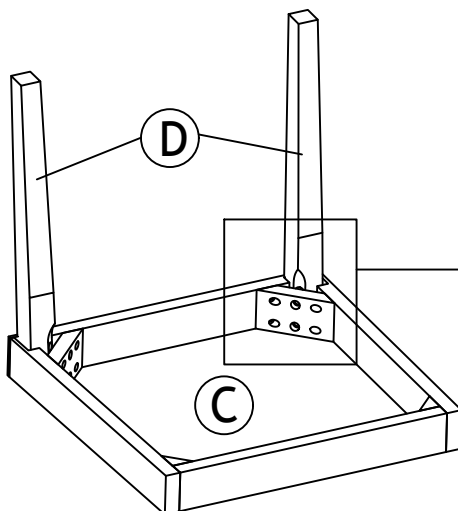

 
STEP 2

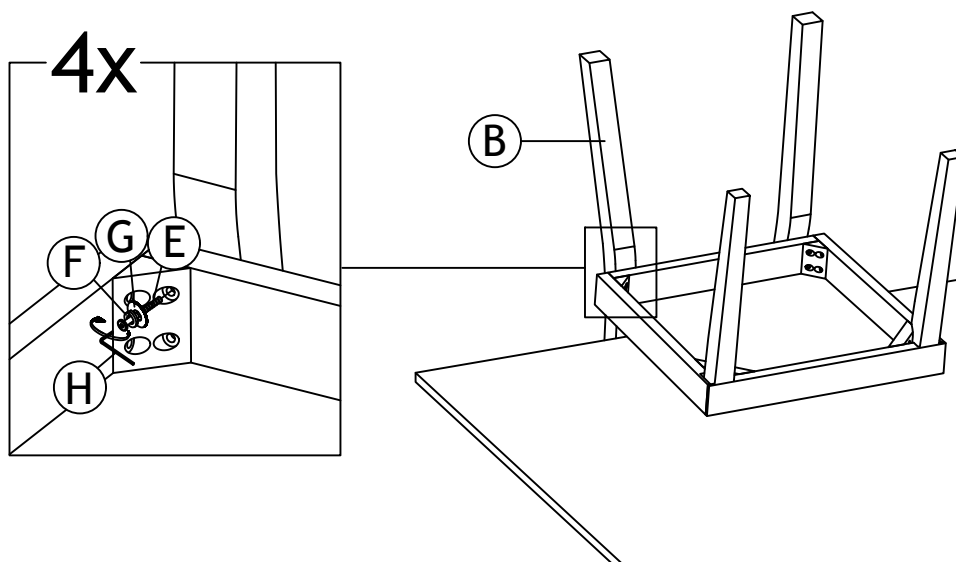

 STEP 3

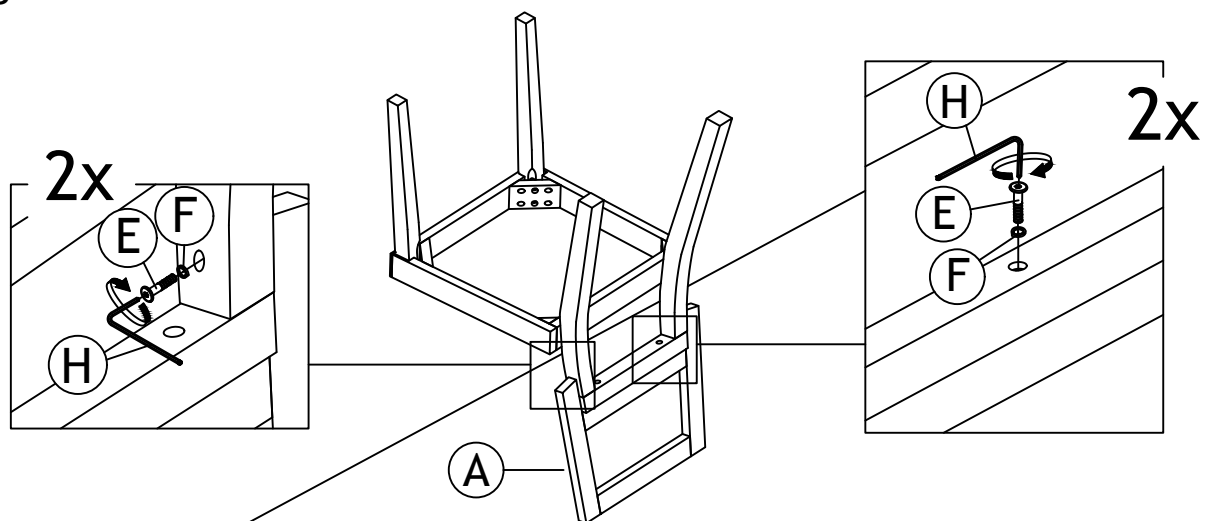


 
STEP 4

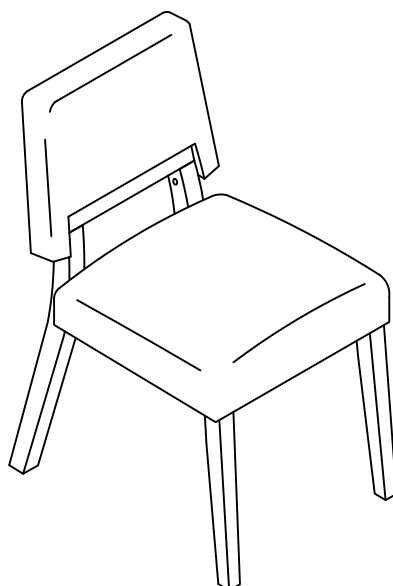

Product Assembly Instructions

CHANNELL DINING TABLE

  
PART LIST

		
A : TABLE TOP x1	B : TABLE LEG (L) x2	C : TABLE LEG (R) x2
		
D : TABLE LEG STRETCHER x2	E : TABLE LEG SUPPORT RAIL x2	


HARDWARE LIST

		
F : JCBC SCREW M6 x 50mm x8	G : JCBC SCREW M6 x 25mm x4	H : SPRING WASHER 1/4" x12
		
I : FLAT WASHER 1/4" x8	J : PAN HEAD SCREW M5 x 32MM x4	K : ALLEN KEY M4 x1

 
STEP 1

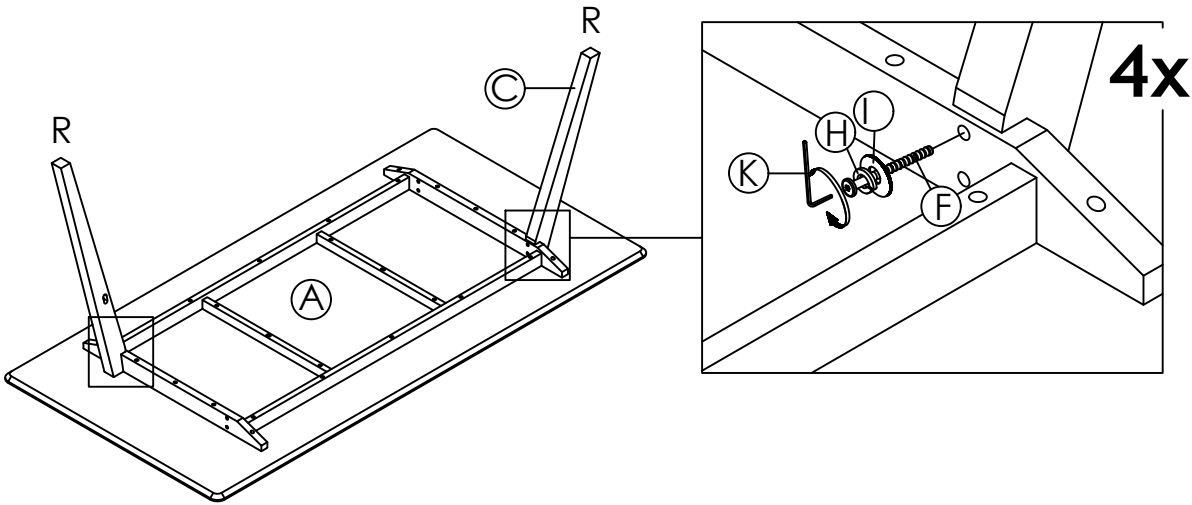

 STEP 2

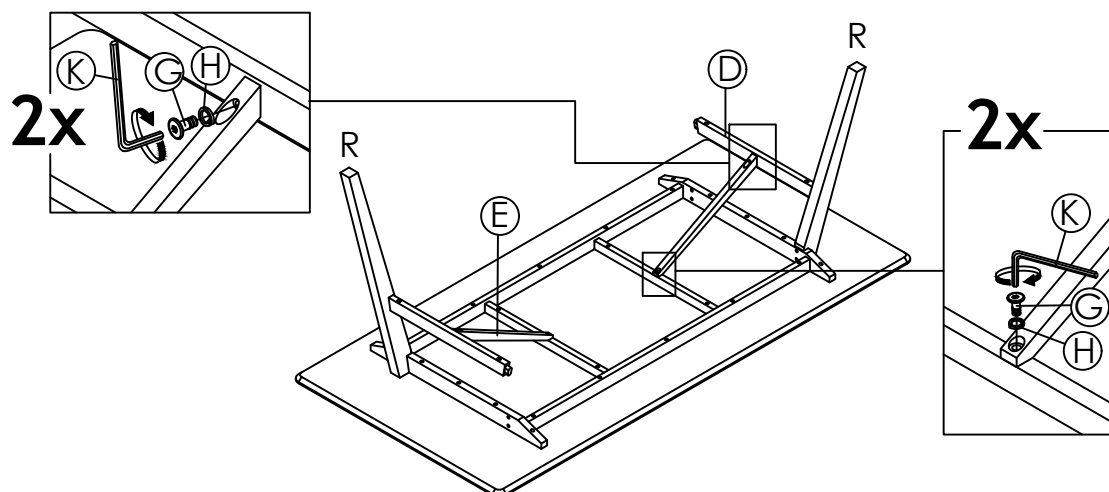

 STEP 3

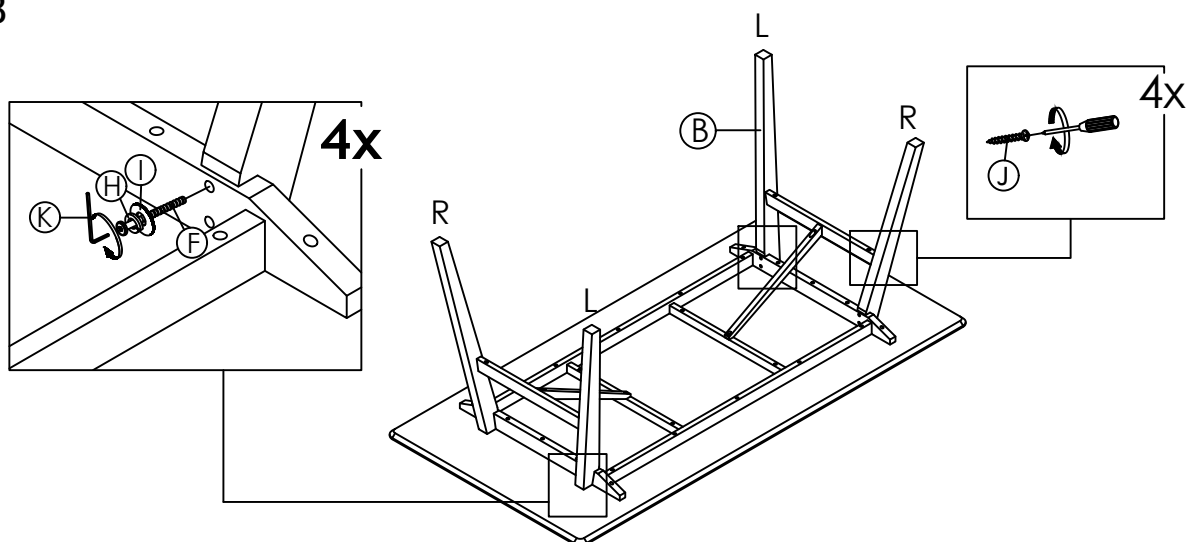

STEP 4

