


ASSEMBLY INSTRUCTION

PRIVACY SCREEN

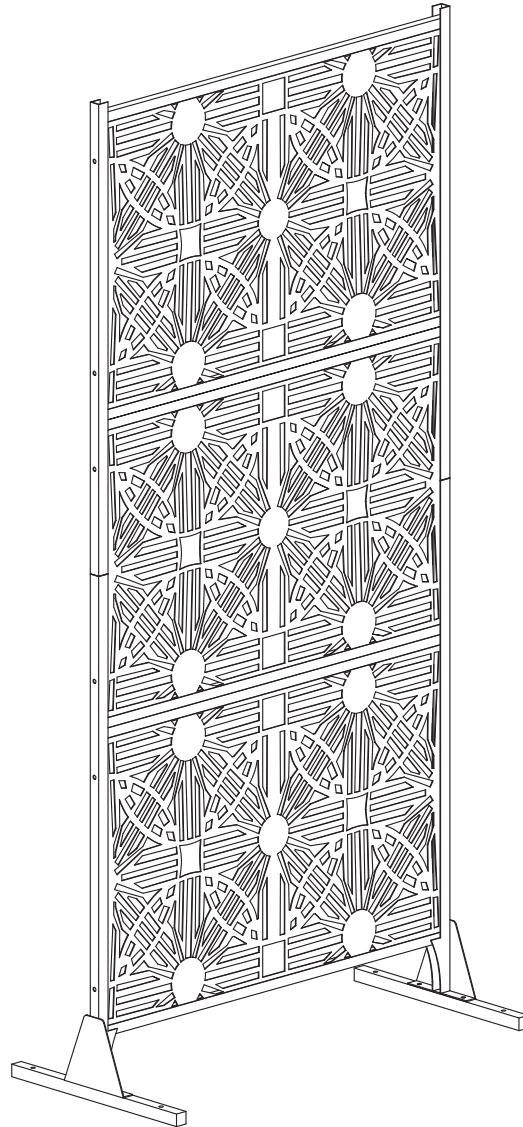

Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.

Get social with us and discover more about our products, tips and exclusive discounts!


 
 

 




PRE-ASSEMBLY INSTRUCTIONS:

WARNING! DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT.

- Please read through this instruction before beginning assembly.
- Two adults for assembly are recommended.
- Wearing gloves (not included) during assembly is recommended.
- Don't assemble the privacy screen on a Hard Surface.
- If the privacy screen will be used in a strong wind area, we highly recommend using four Hex-Head Sleeve Anchors to securely fasten the privacy screen to solid ground.
- Do not fully tighten the bolts until all of them have been inserted and hand tightened.
- Panel may fit tightly and may require a rubber mallet (not included) to nudge the panel into place.
- Check for any loose screws and tighten them before use.

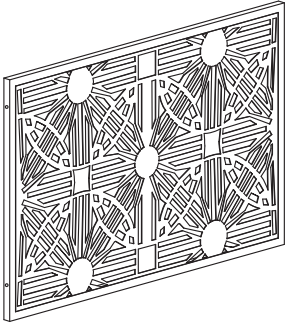
PARTS AND COMPONENTS

<p>Screen Panel (A)</p>  <p>Qty: 3</p>	<p>Stand Foot (B)</p>  <p>Qty: 2</p>	<p>Bottom Long Stand Riser Bar (C)</p>  <p>Qty: 2</p>	<p>Top Short Stand Riser Bar (D)</p>  <p>Qty: 2</p>
<p>Bolts (E)</p>  <p>Qty: 16</p>	<p>Allen Key (F)</p>  <p>Qty: 1</p>	<p>Ground Stakes(G)</p>  <p>Qty: 4</p>	


ASSEMBLY INSTRUCTION

PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE DISCARDING THE PACKAGING, PLEASE DOUBLE-CHECK THE CONTENTS TO ENSURE YOU HAVEN'T ACCIDENTALLY DISCARDED ANY PARTS NECESSARY FOR ASSEMBLE.

STEP 1 Attach Bottom Long Stand Riser Bar (C) to Stand Foot (B) using Bolts (E). Use 2 bolts for each side. Make sure to tighten securely with the Allen Key (F).

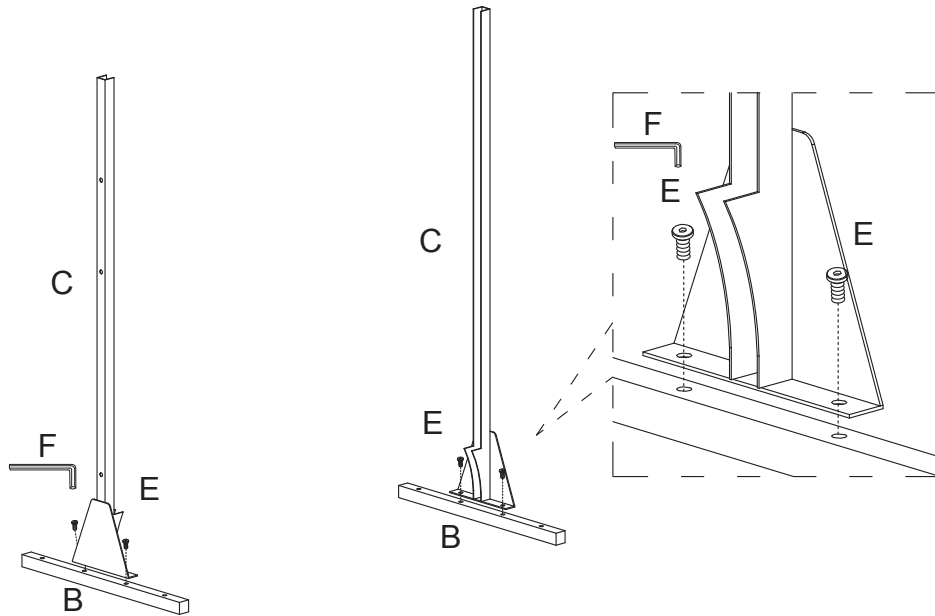

STEP 2 Slide the first Screen Panel (A) into the channel of the two assembled Bottom Long Stand Riser Bars (C), secure it using 2 Bolts (E) from each side with the Allen Key (F).

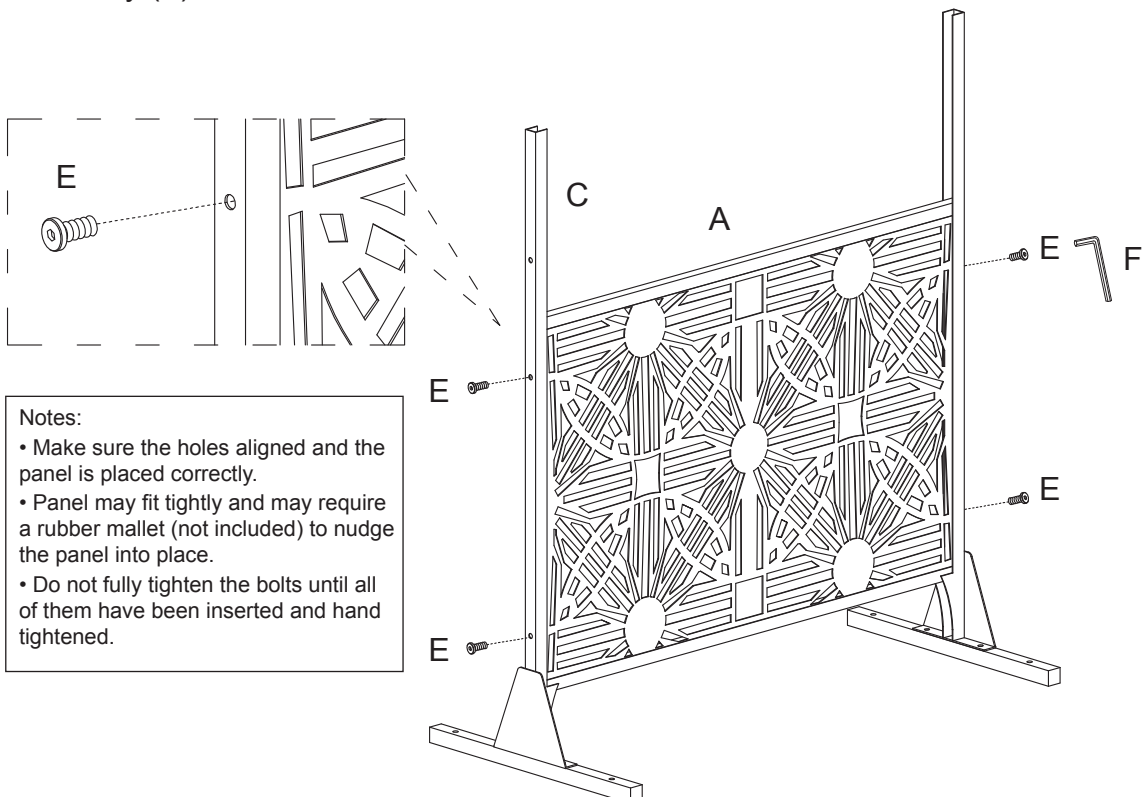


STEP 3


Slide the second Screen Panel (A) into the channel of the two assembled Bottom Long Stand Riser Bars (C), positioning it above the first screen panel. Secure it using 1 Bolt (E) from each side with the Allen Key (F). You now have the assembled part 1.

Notes:

- Make sure the holes aligned and the panel is placed correctly.
- Panel may fit tightly and may require a rubber mallet (not included) to nudge the panel into place.
- Do not fully tighten the bolts until all of them have been inserted and hand tightened.

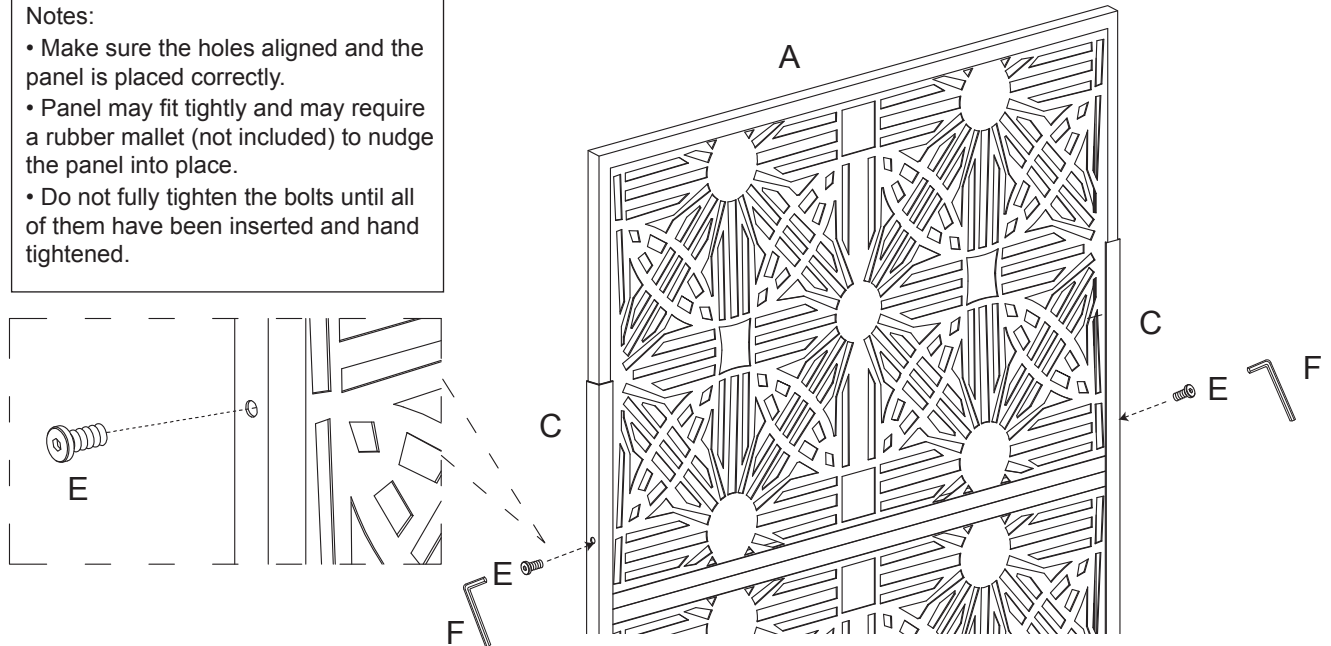
**STEP 4**

Attach the Top Short Support Bars (D) to the last Screen Panel (A). Secure it using 2 Bolts (E) from each side. Make sure the holes aligned and the panel is placed correctly. Hand tighten only. You now have the assembled part 2.

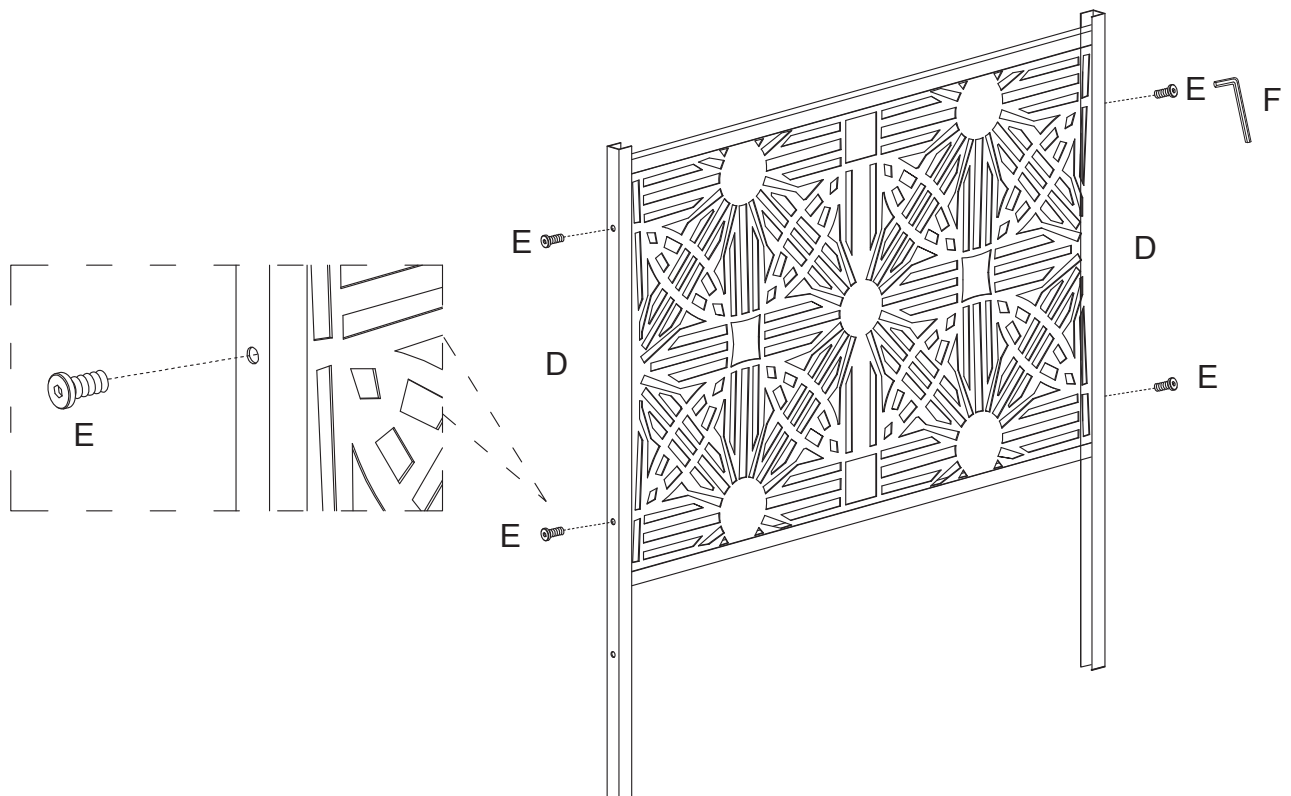


STEP 5

Attach the assembled part 2 onto the assembled part 1. Secure the two assembled parts using the remaining 2 Bolts (E) with the Allen Key (F).

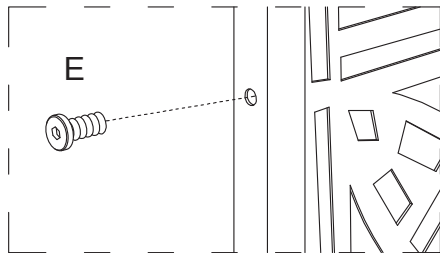

Notes:

- Make sure the holes aligned and the panel is placed correctly.
- Panel may fit tightly and may require a rubber mallet (not included) to nudge the panel into place.
- Do not fully tighten the bolts until all of them have been inserted and hand tightened.


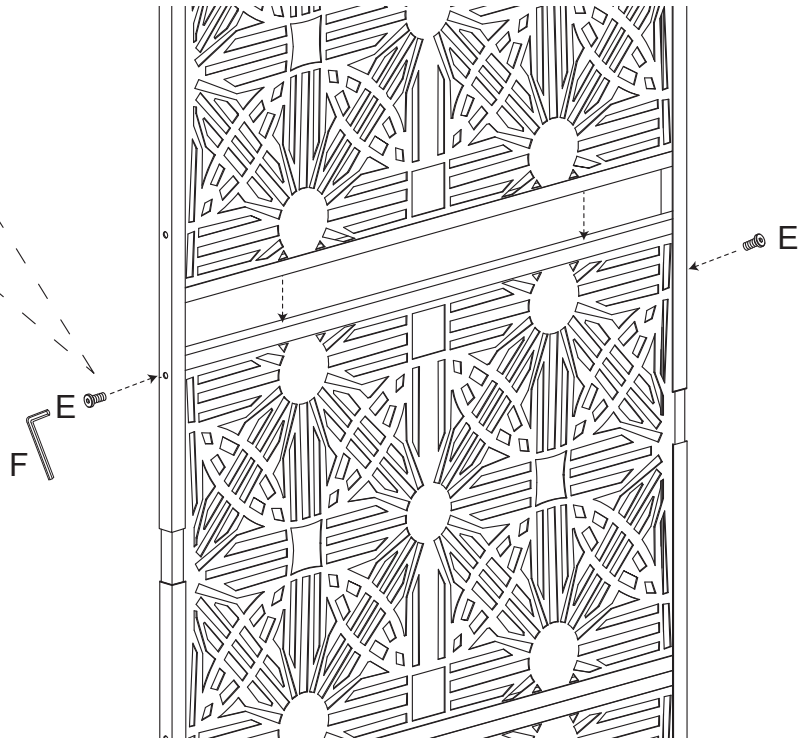


STEP 6

Your Privacy Screen is now fully assembled and ready for use. Enjoy the added privacy and functionality it provides!

Note:

- Use the Ground Stakes (G) (included) to secure the privacy screen to the ground for stability if necessary.

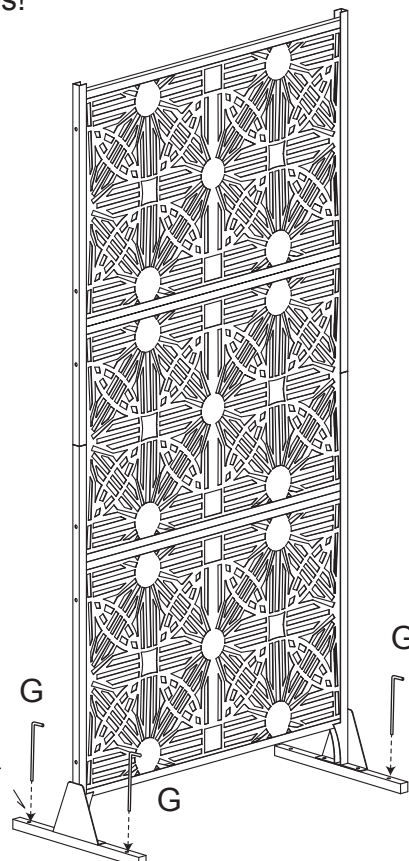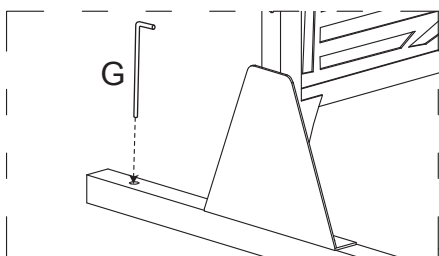

glit⁺zhome[®]

Glitzhome ,LLC.

Toll free 888-357-7263
customerservice@glitzhome.com