ASSEMBLY INSTRUCTIONS



Fine Furniture for every stage of life

TV CONSOLE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

60 MINUTES


MAX TV SIZE: 65"

PARTS IDENTIFICATION

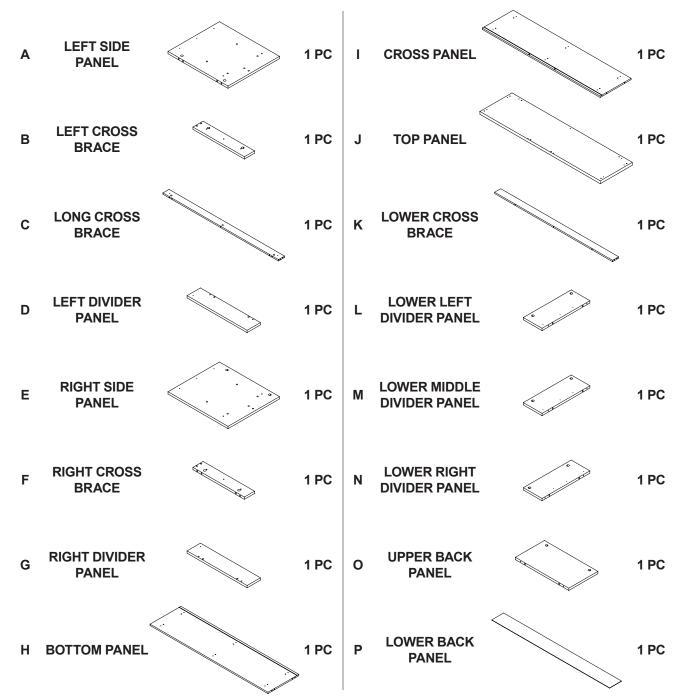

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

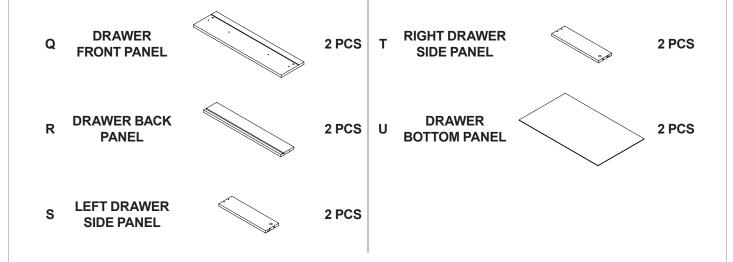


Z	z HARDWARE IDENTIFICATION							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY	
1	GLUE 40g		1 PC	8	SHORT SCREW Ø3x10mm SR		24 PCS	
2	WOODEN DOWEL Ø8x30mm		49 PCS	9	PLASTIC FEET Ø15mm		5 PCS	
3	CAM BOLT Ø7x35.5mm SR		27 PCS	10	HANDLE BLK		2 PCS	
4	CAM LOCK Ø15x12mm SR		27 PCS	11	HANDLE BOLT M5x25mm BLK		4 PCS	
5	LONG SCREW Ø4.5x42mm SR	aututu	8 PCS	12	ALLEN WRENCH Ø4x28mm RBW	ACTUALITY A	8 PCS	
6	SCREW Ø4.3x35mm SR	attitutut. ®	8 PCS	13	STICKER Ø20mm		5 PCS	
7	RAIL L = 350mm BLK	CL C	2 SET	14	NUT M5		4 PCS	


Z7,Z10,Z11,Z14 not included in blister packaging.


NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

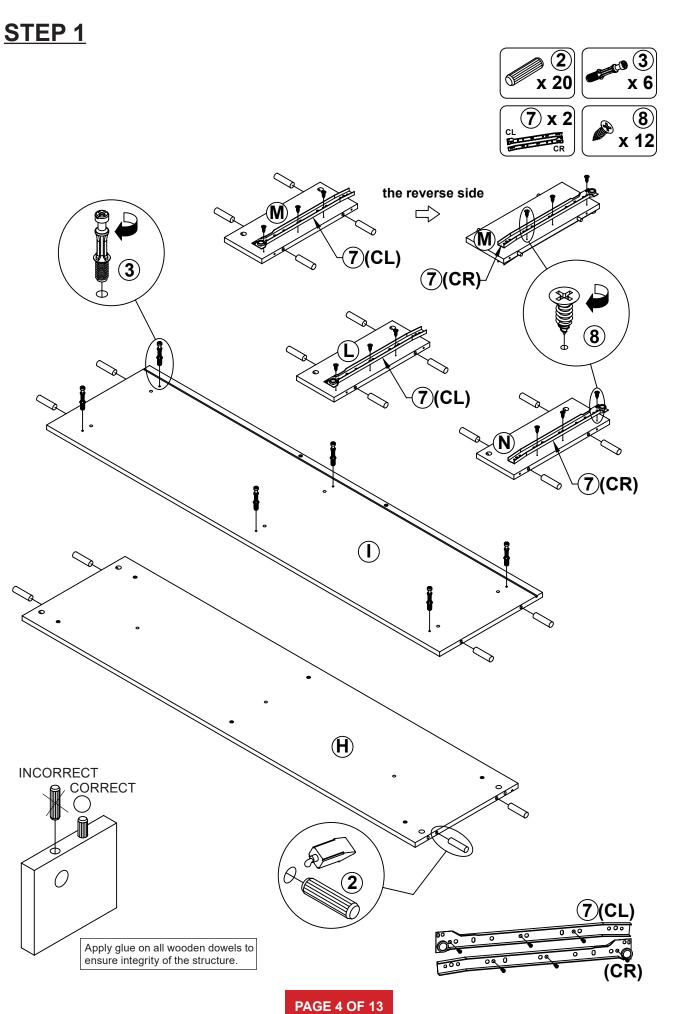








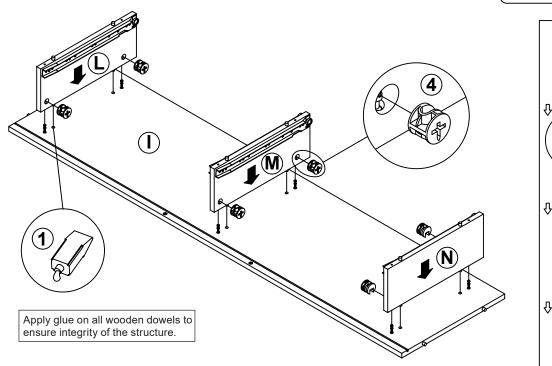


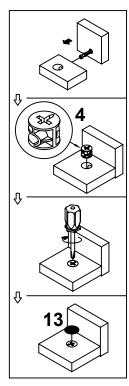


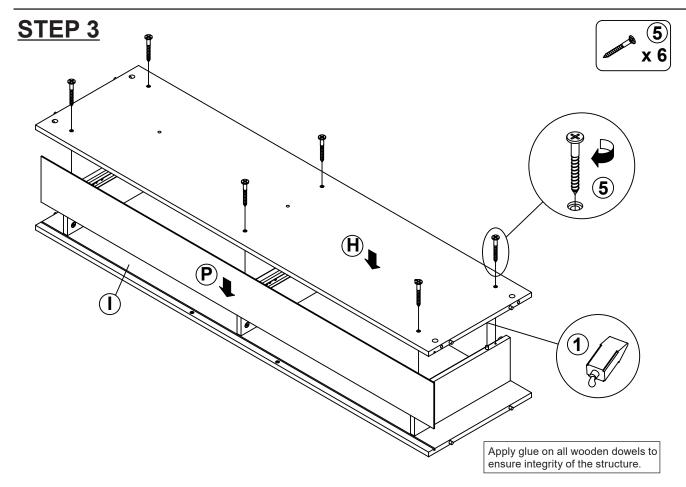


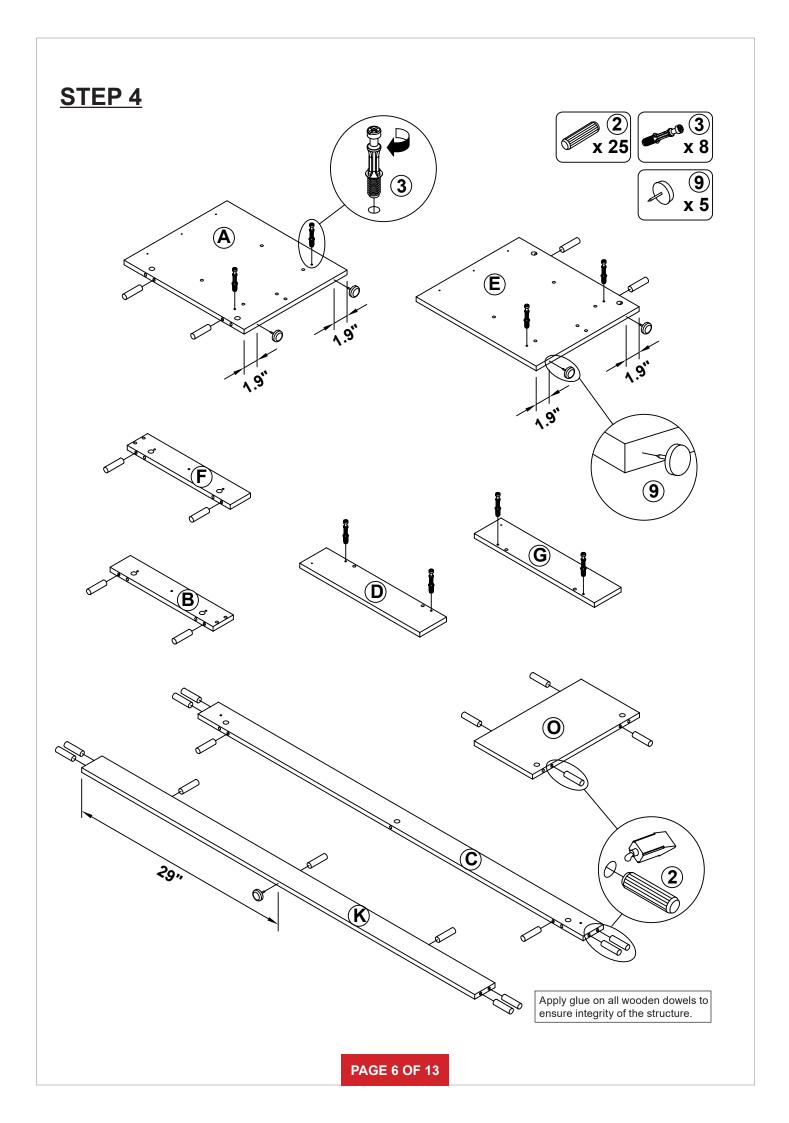


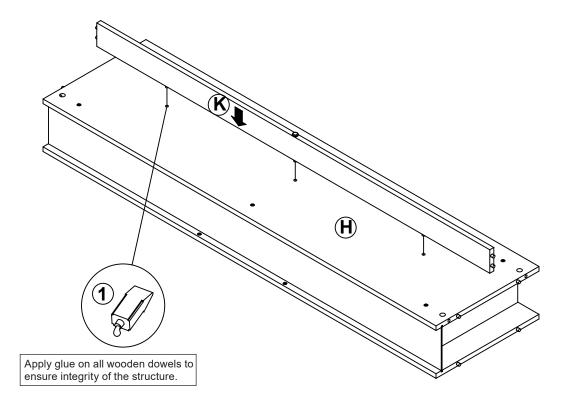


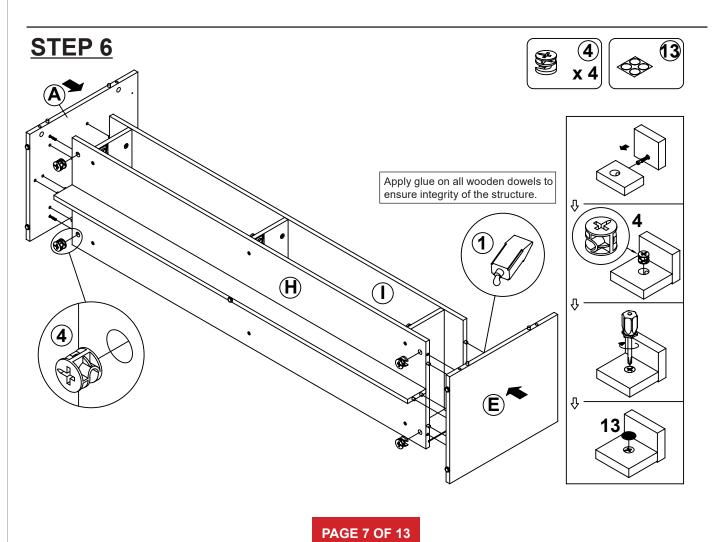


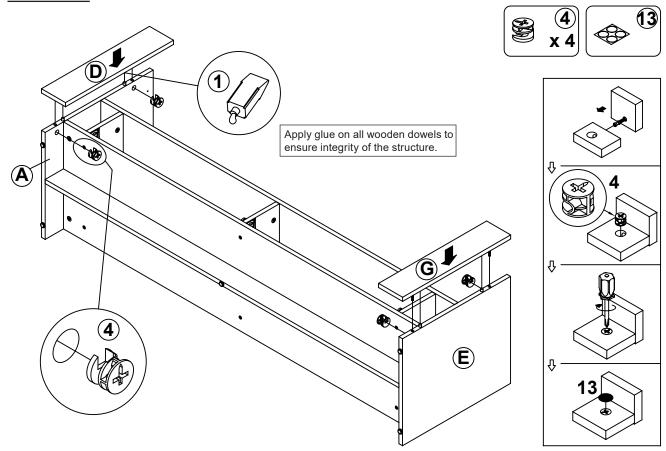

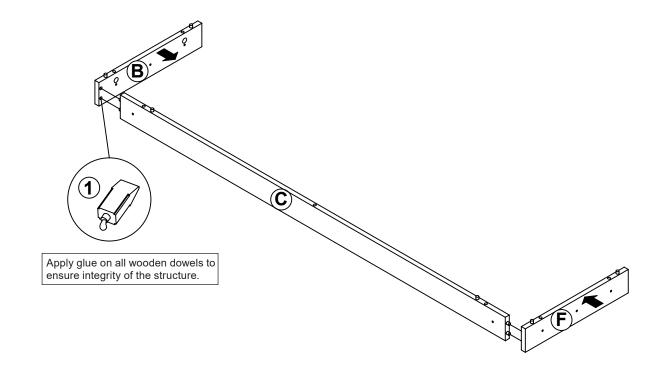


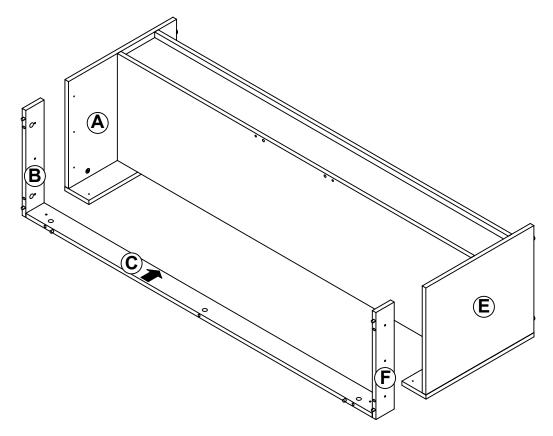

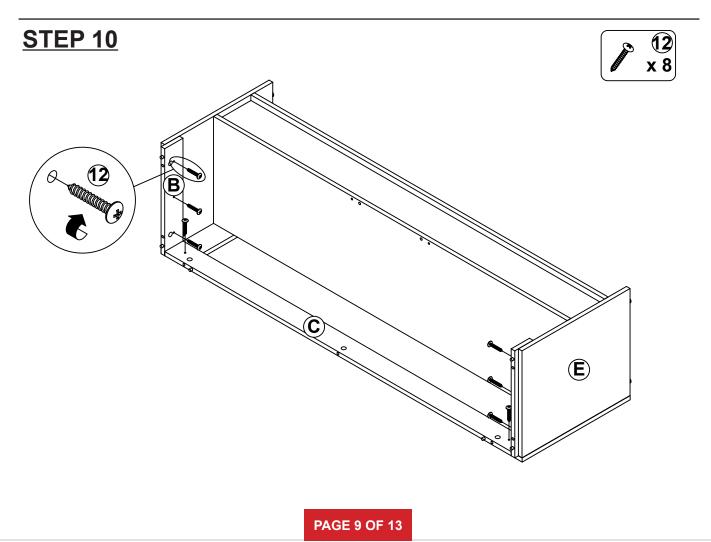


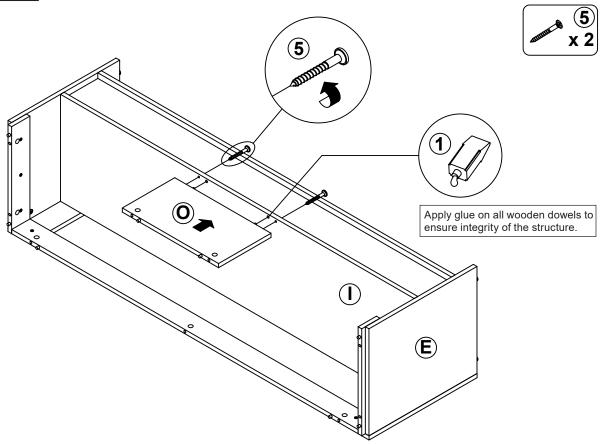





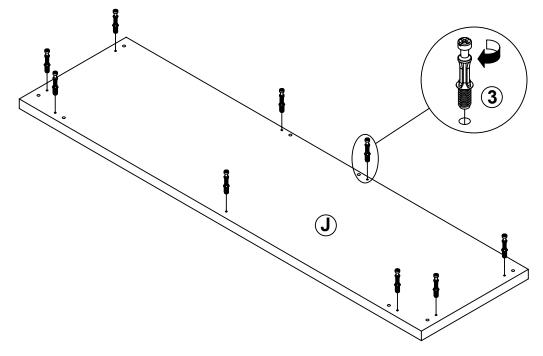




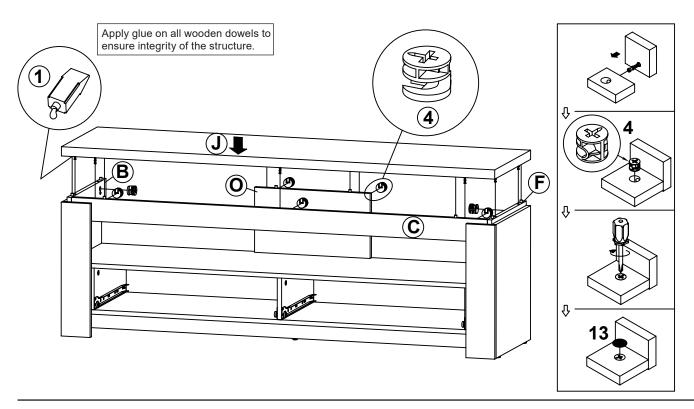

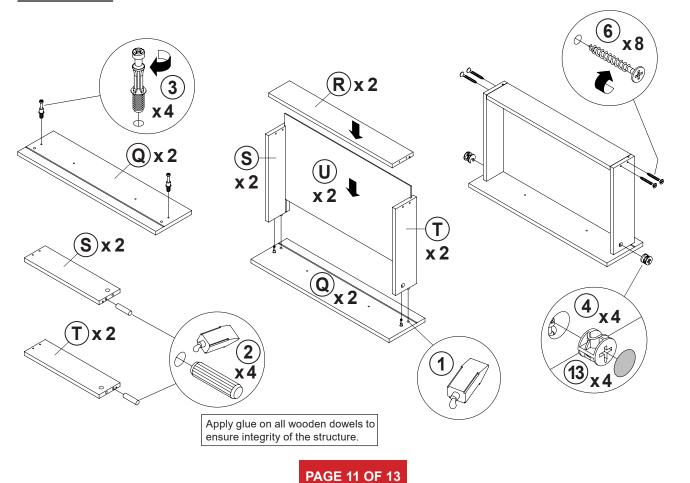


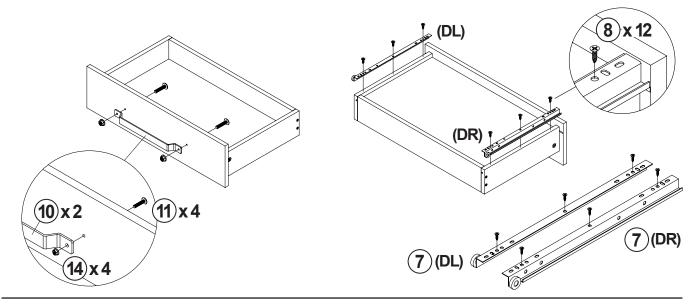

STEP 16

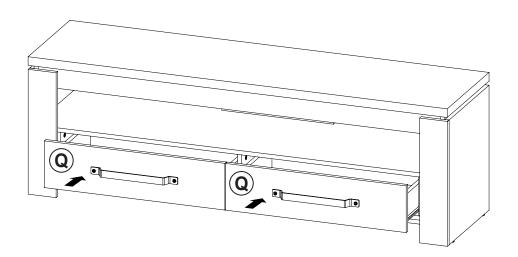



STEP 17 COMPLETE

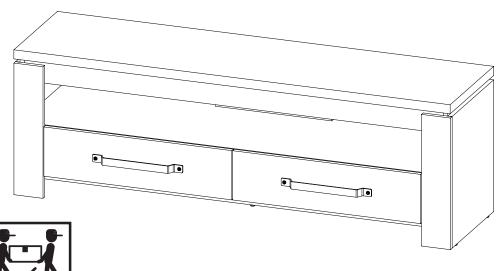





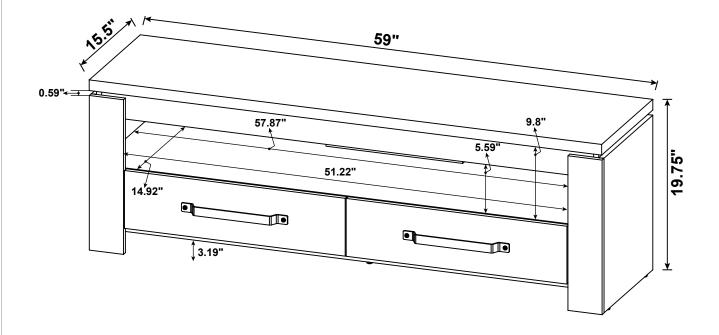

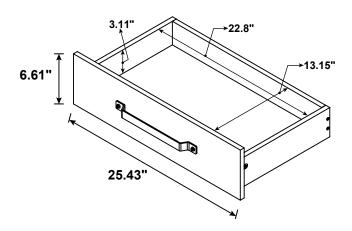

Note: Dimension tolerance ±5%