
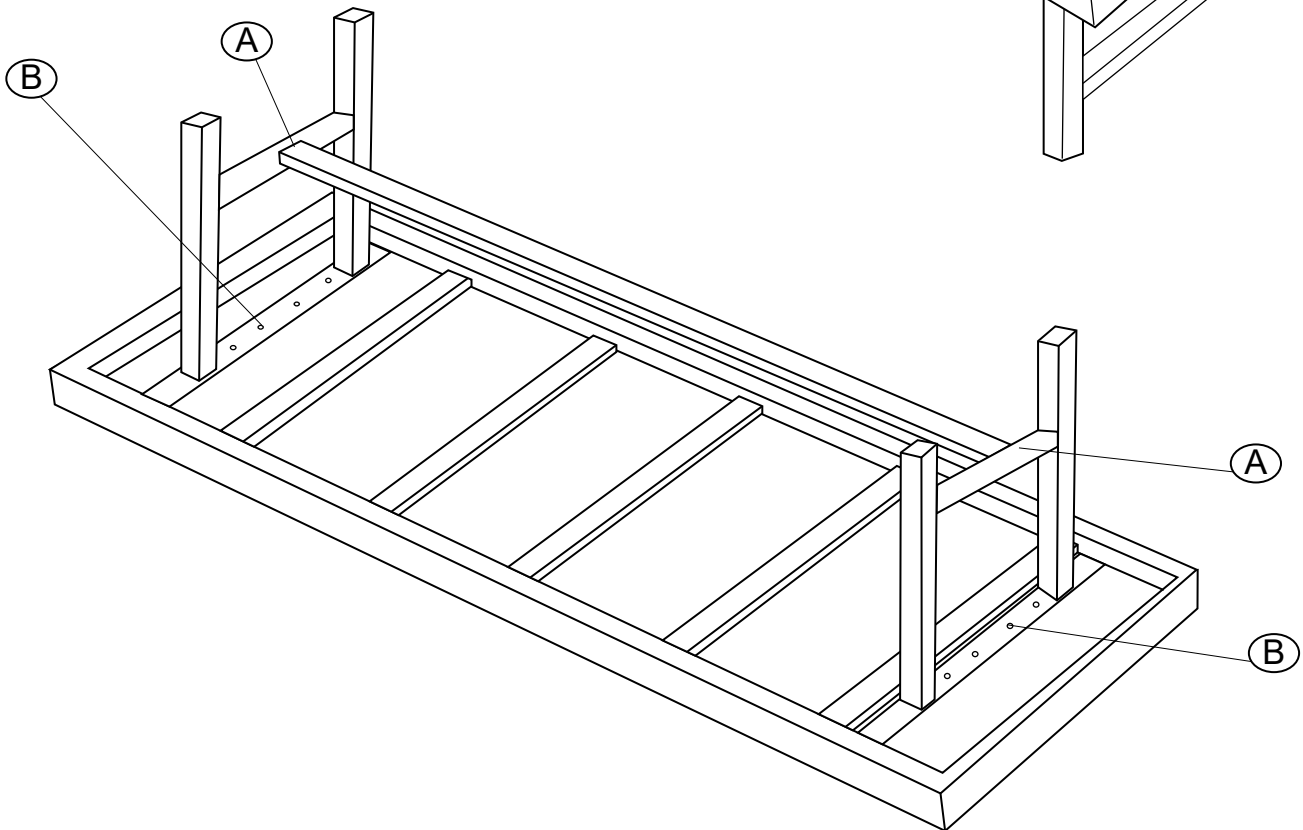


USER'S MANUAL

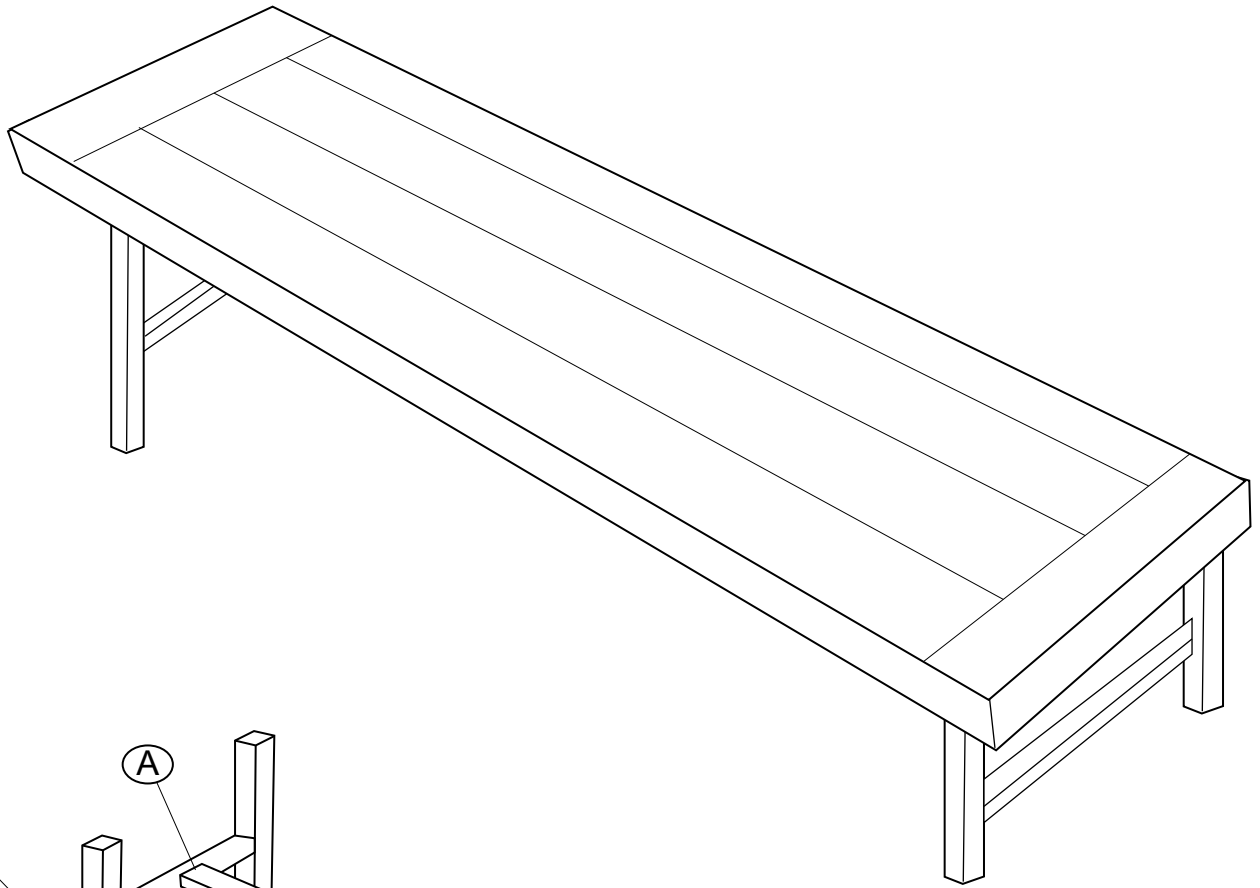

PART LIST

A

M8X50



X4


B

M5X30




X16

C

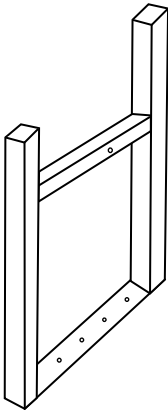


X2

D

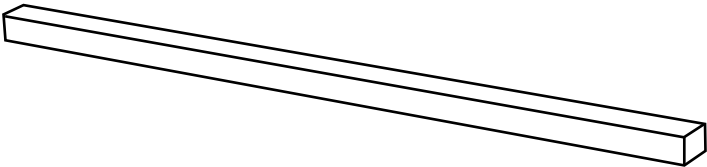

X1

E

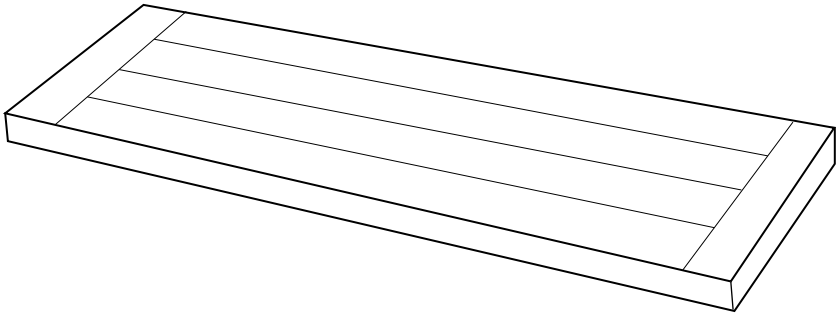

X1