


 

 
 
 

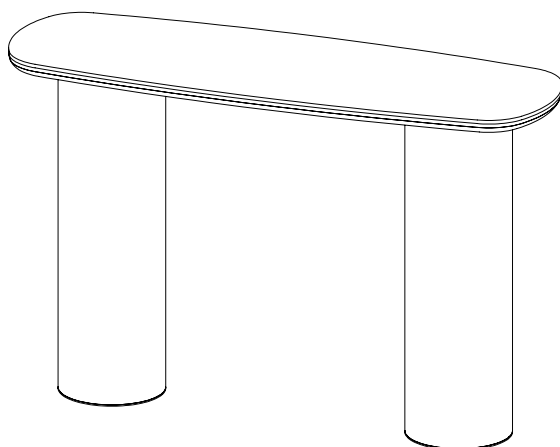


ASSEMBLY INSTRUCTIONS

SOFA TABLE

A Top Panel	B Column Base	C Bolt Ø1/4" x 1-1/4" x Ø13mm	D Bolt Ø1/4" x 5/8" x Ø13mm
			
1PC	2PCS	8PCS	2PCS
E Allen Key M4	F Metal Bracket 22 x 22 x 17mm (Anti-Tip Kit)	G Wood Screw Ø4 x 25 x Ø8mm (Anti-Tip Kit)	H Plastic Anchor (Anti-Tip Kit)
			
1PC	4PCS	2PCS	2PCS
I Plastic Mounting Strap (Anti-Tip Kit)			
			
2PCS			

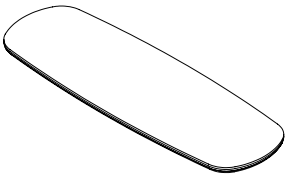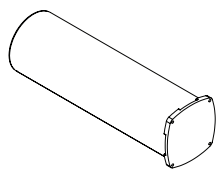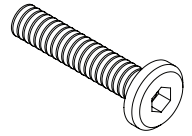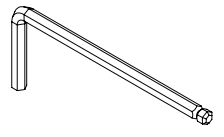


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***Do not tighten screws & bolts until the entire unit is completely assembled.


1

Attach the Column Base (B) to the Top Panel (A) using Bolt (C) with the Allen Key (E).

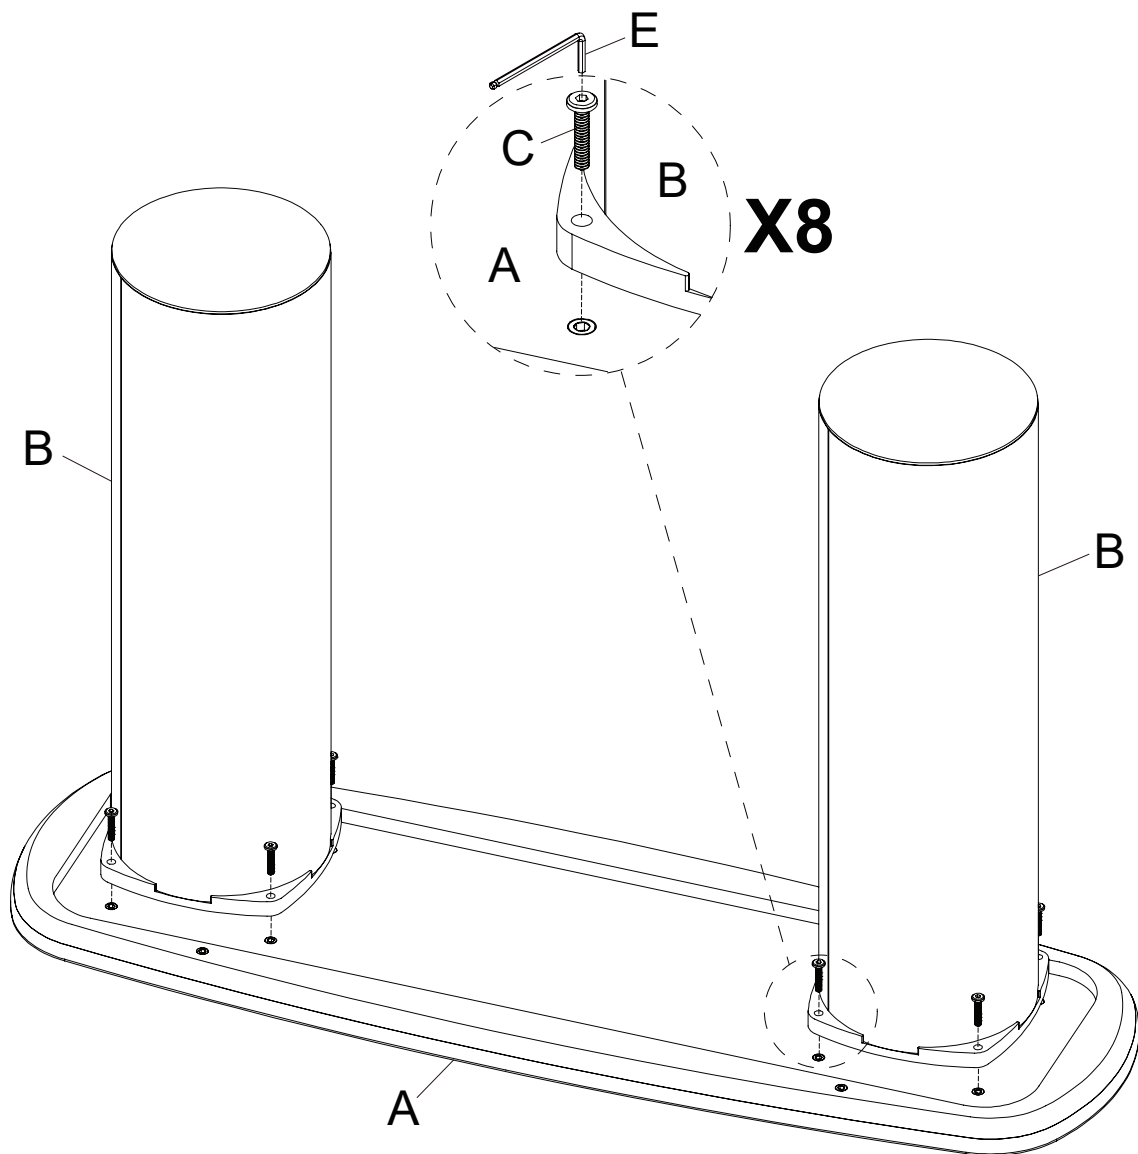

*Note: For your safety, we recommend attaching the product to the wall using the provided Anti-Tip Kit as per the instructions below.

1. Attach 2pcs of Metal Bracket (F) to the holes on the bottom of the Top Panel (A) using Bolt (D) with the Allen Key (E). Ensure the Metal Bracket (F) extend DOWNWARD.
2. Determine where you want to place the furniture and mark location on the wall for Metal Bracket (F). Drill 2 holes in the wall approximately 2" below the corresponding positions of Metal Bracket (F) and insert Plastic Anchor (H). Then, attach the other 2pcs of Metal Bracket (F) to the wall over the Plastic Anchor (H) using the Wood Screw (G) with a screwdriver (not provided).
3. Position the furniture so that the Metal Bracket (F) on the Top Panel (A) align with the Metal Bracket (F) on the wall.
4. Connect the corresponding Metal Bracket (F) with the Plastic Mounting Strap (I) and tighten them as desired before locking them in place.

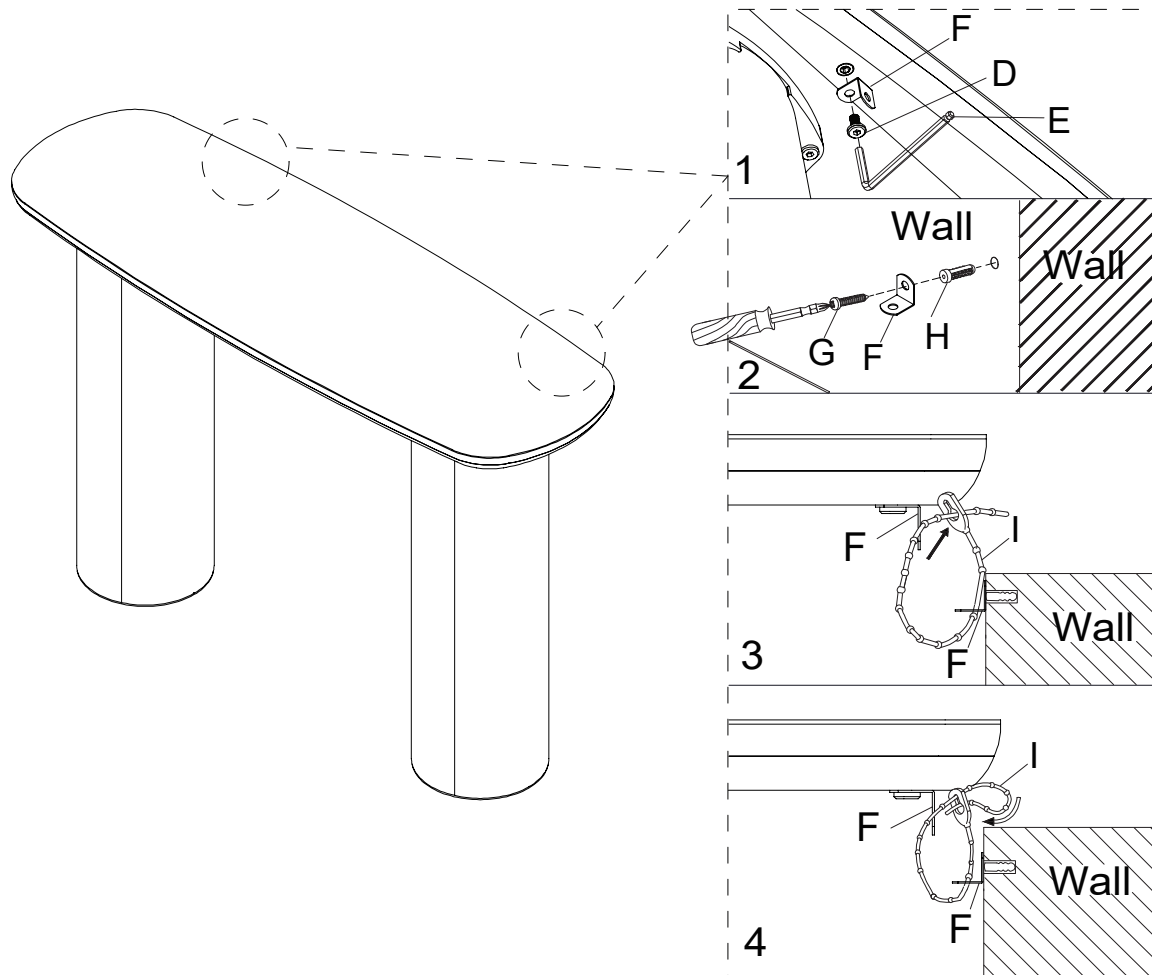

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.