

 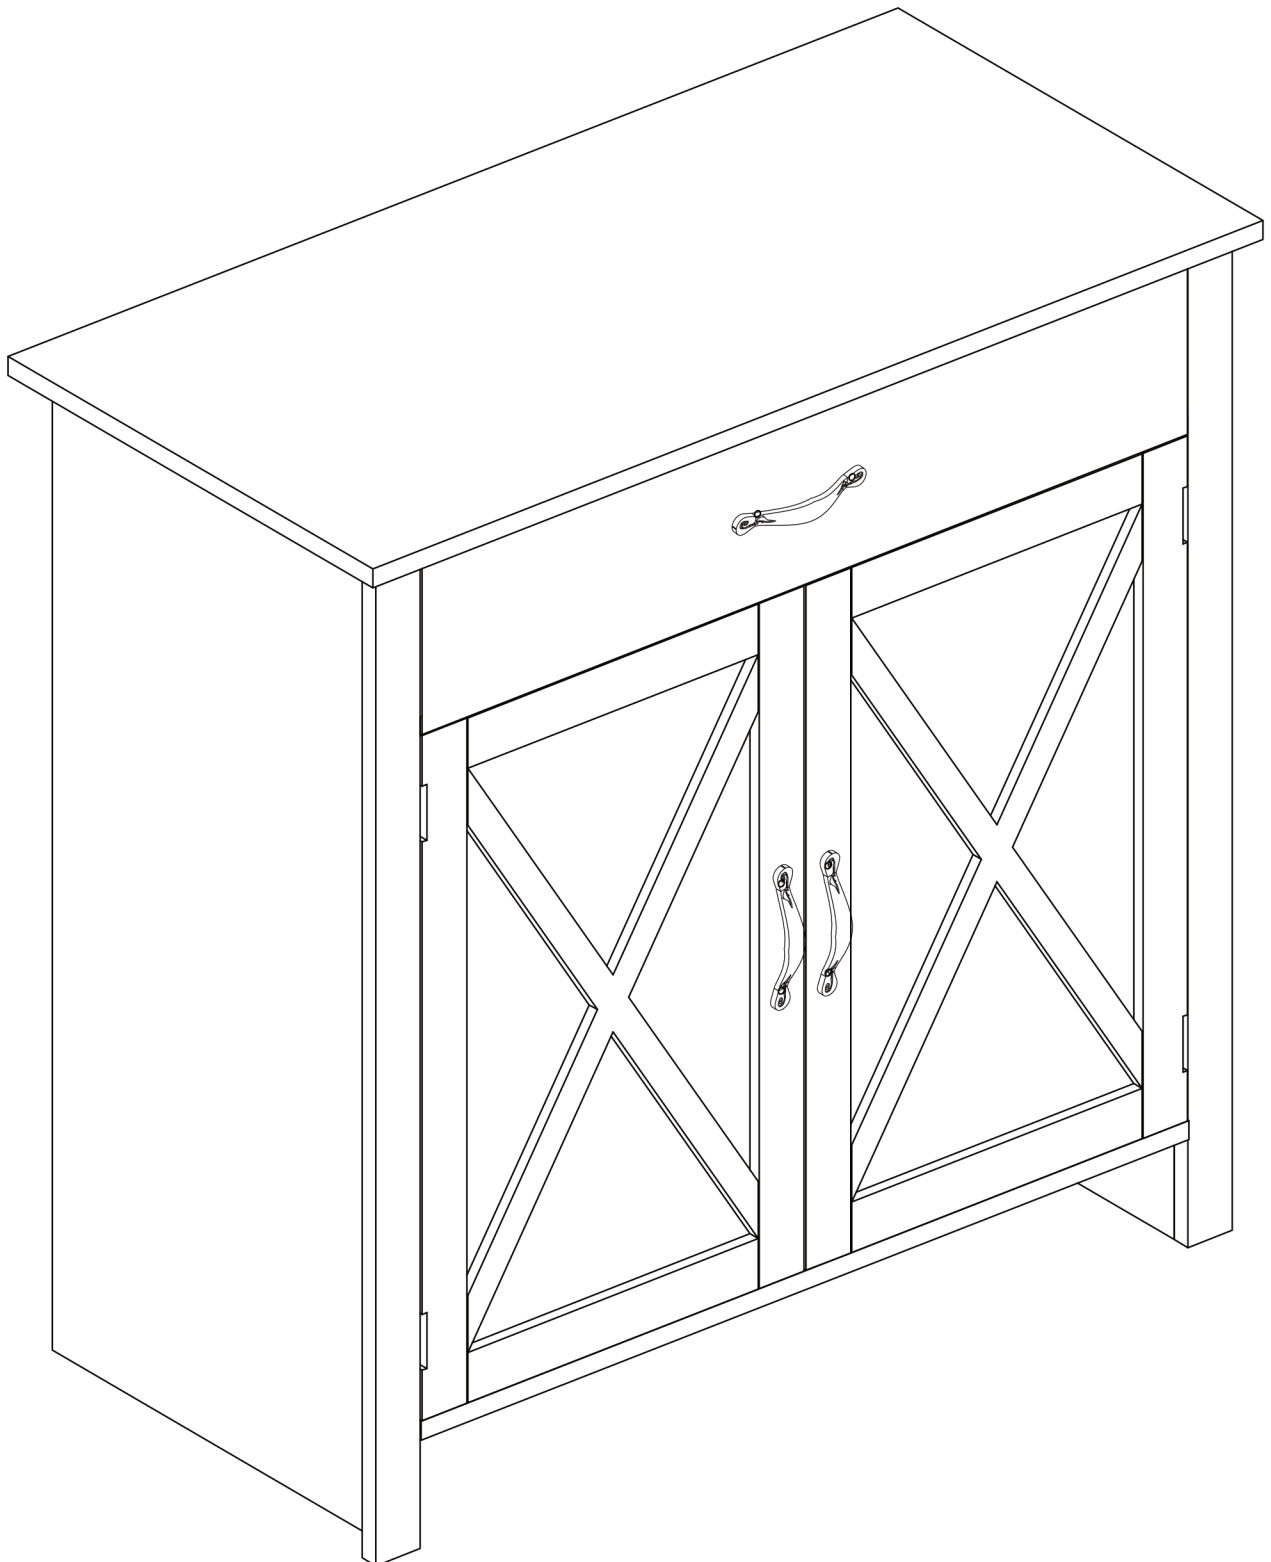
 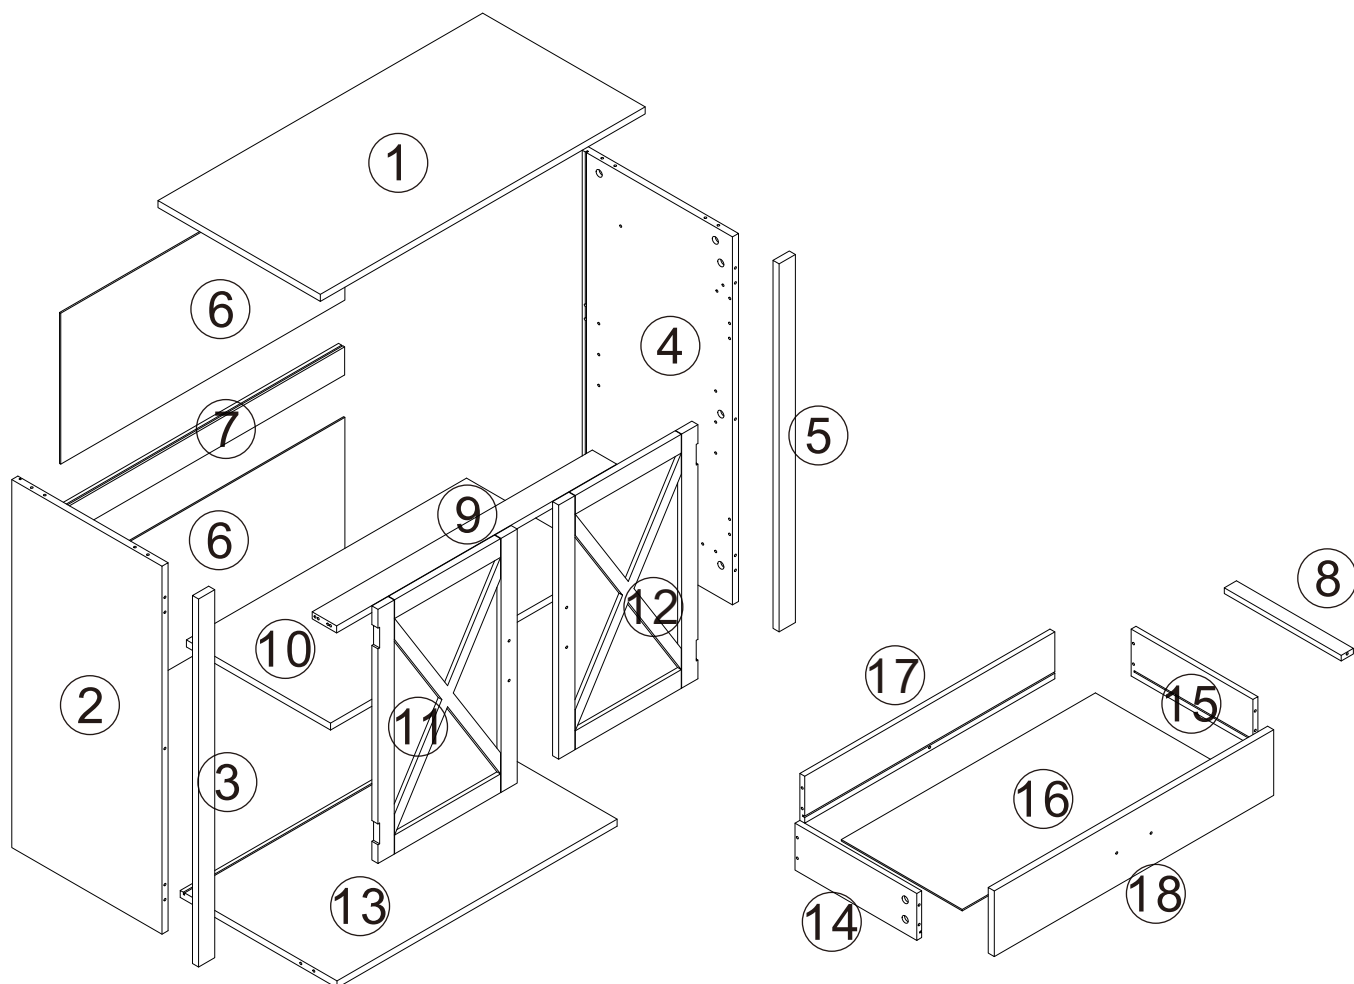
 


USER'S MANUAL





Ax27 	Bx27 	Cx12 	Dx26 	Ex1 
Fx1 	Gx1 	Hx1 	Ix2 	Jx1 
Kx4 	Lx3 	Mx4 	Nx2 	Ox4 
Px5 	QX2 			

Dx4



Ex1

Fx1

01



This Hole

This Hole

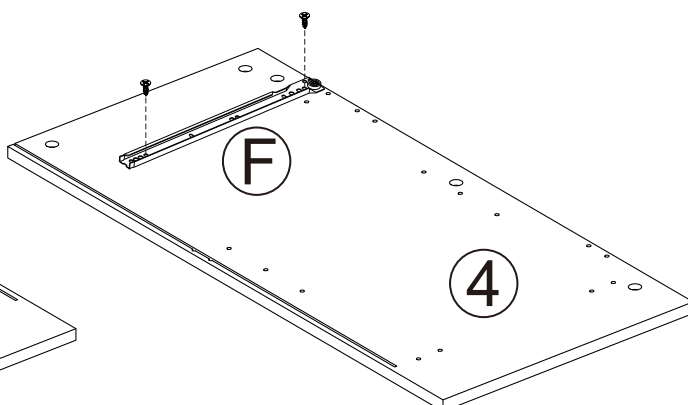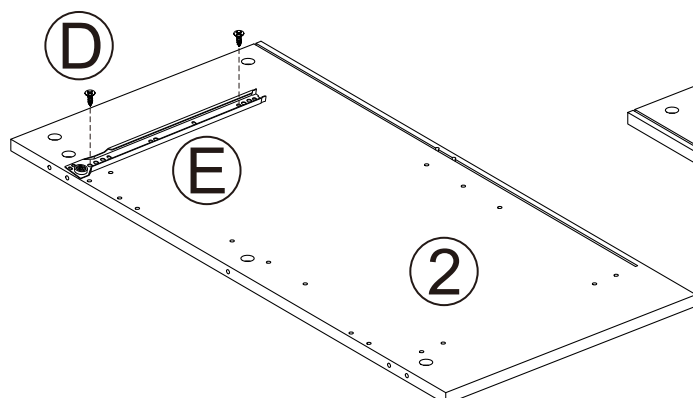

Bx12

02

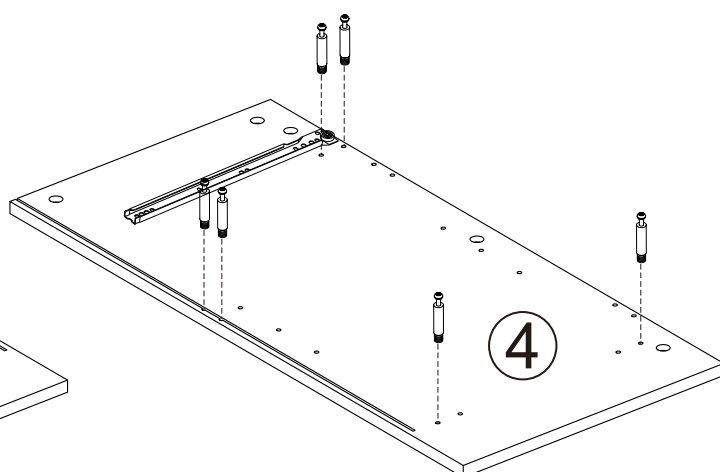
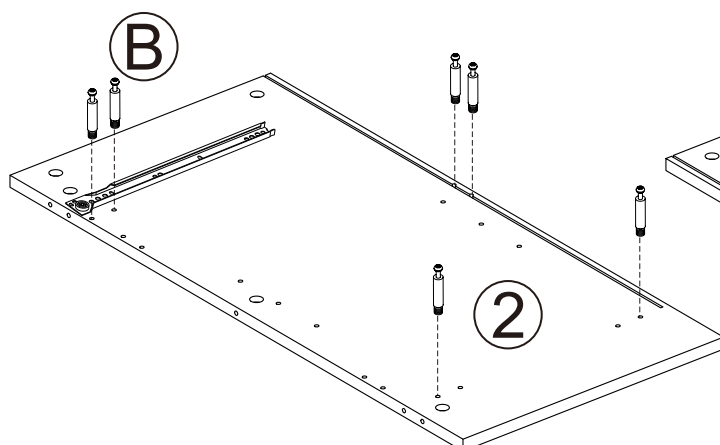



Ax6




Bx6

Cx4



03

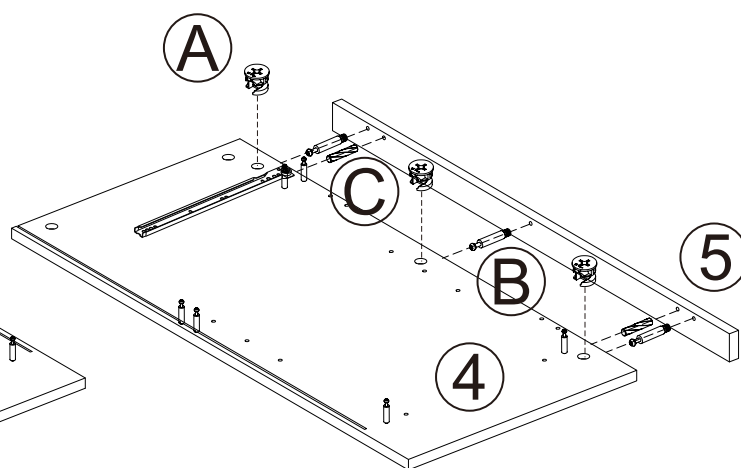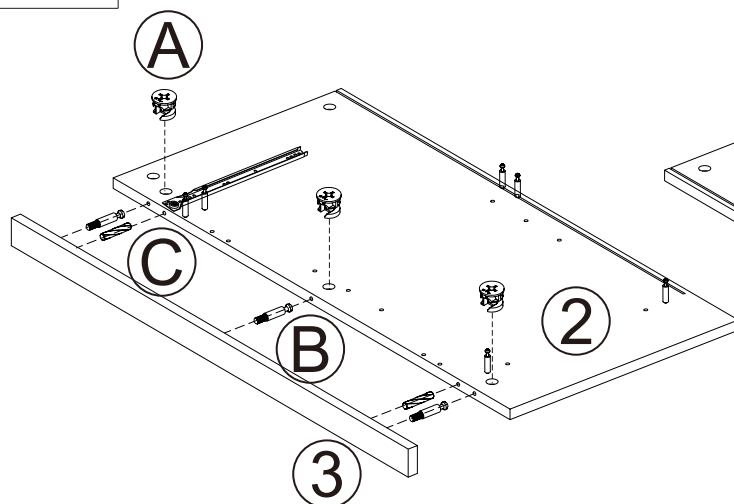



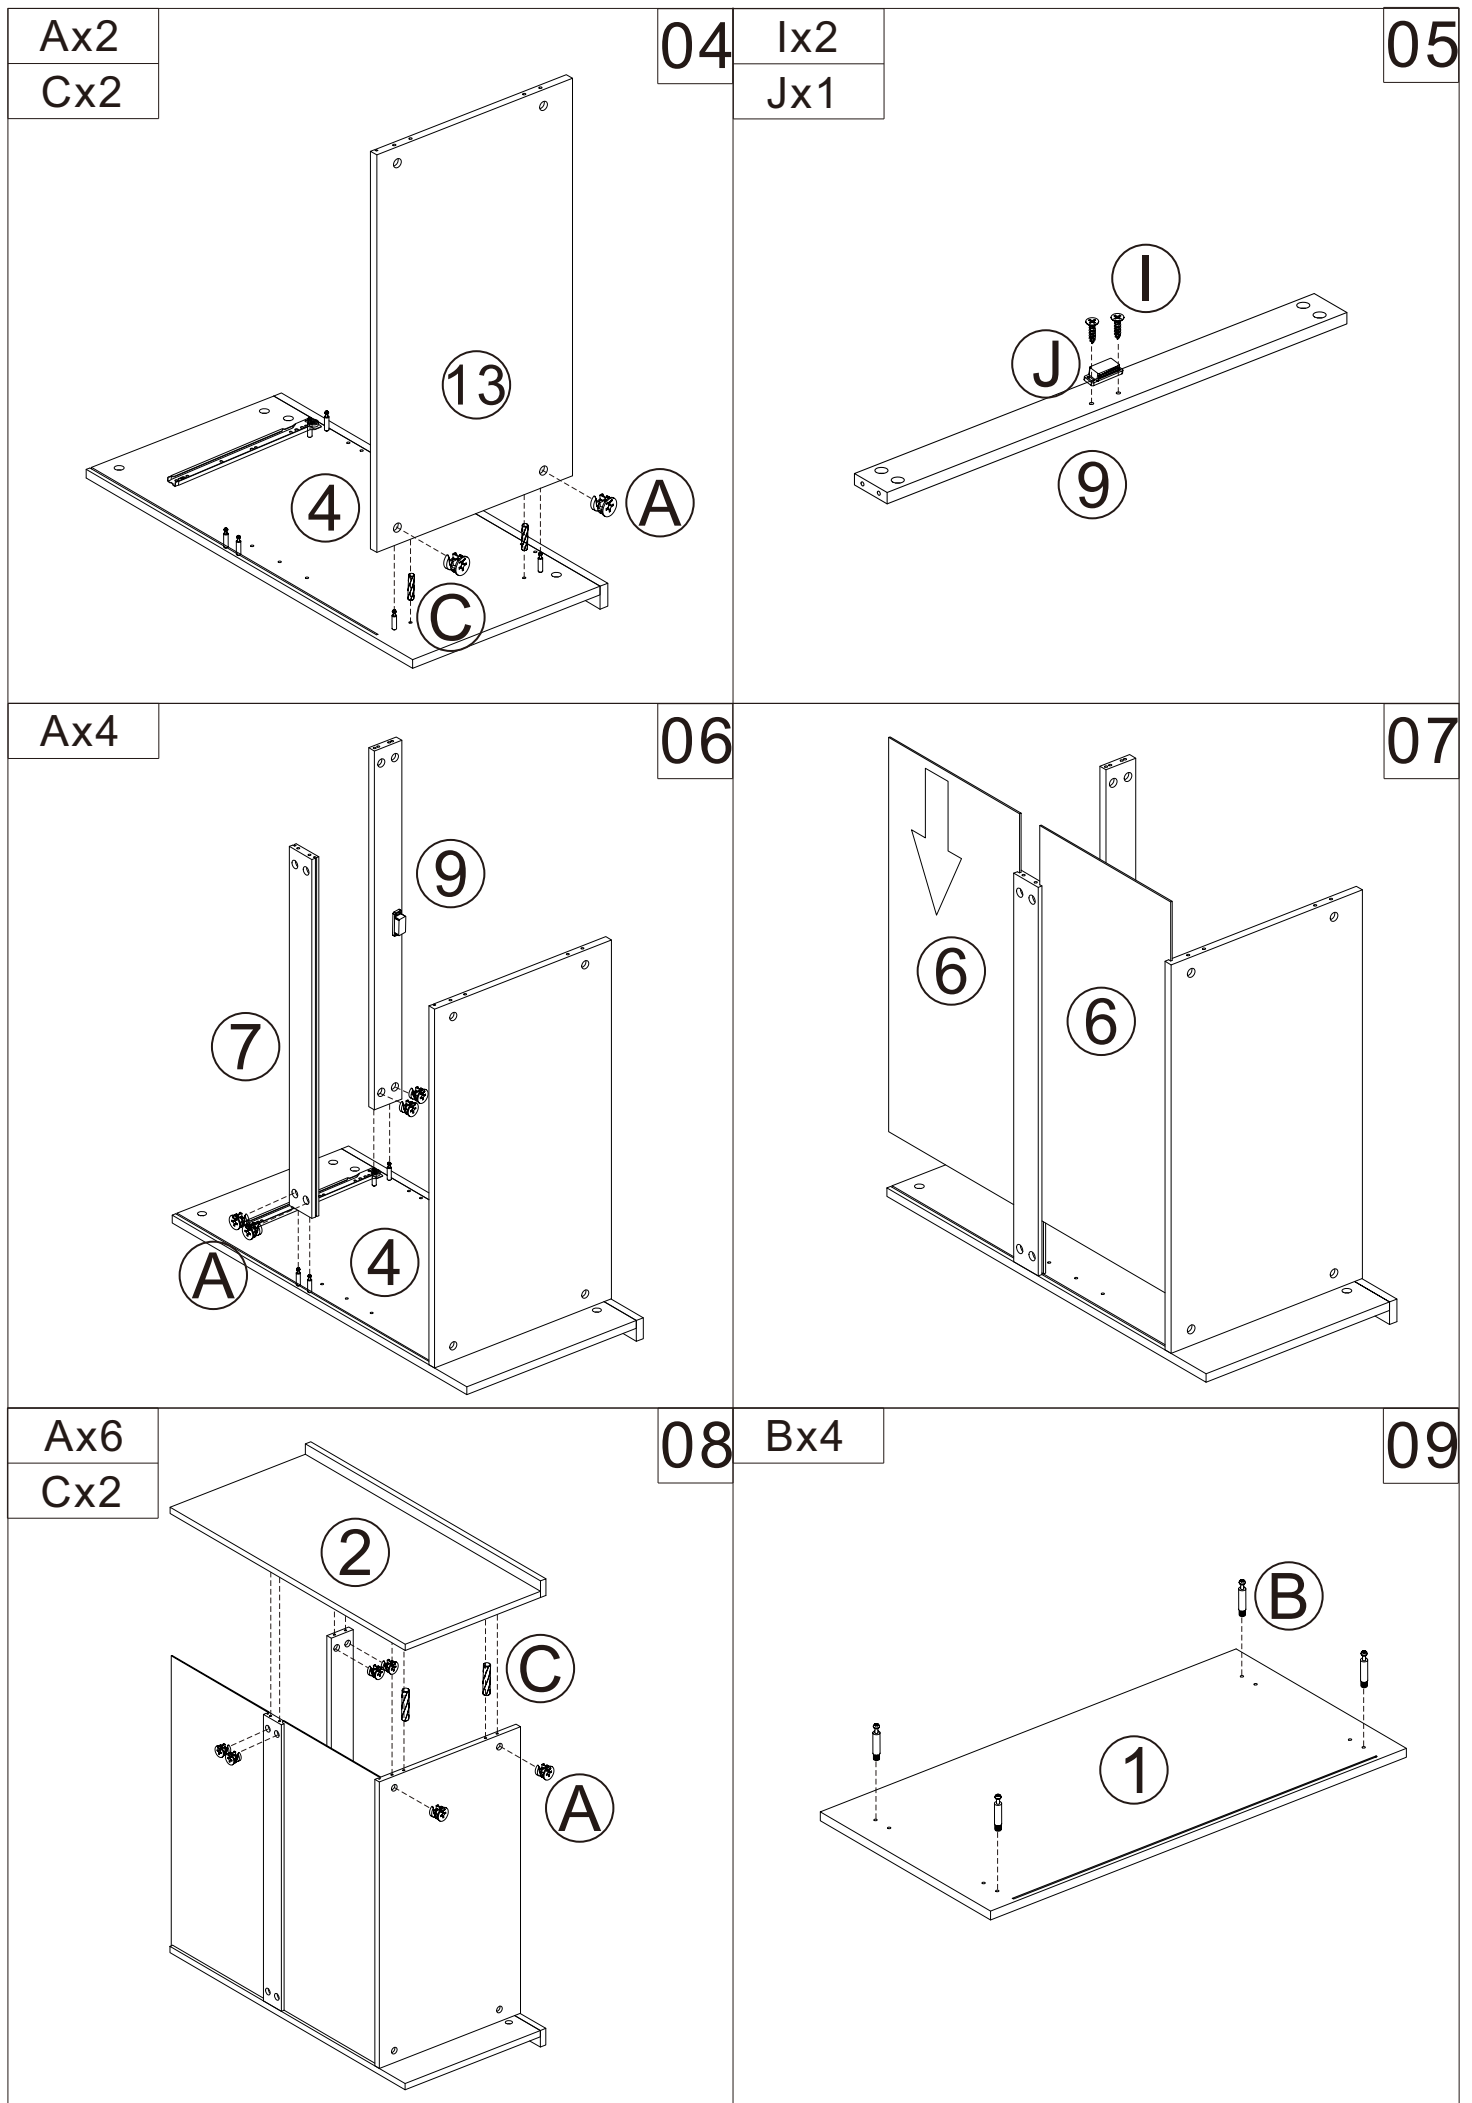


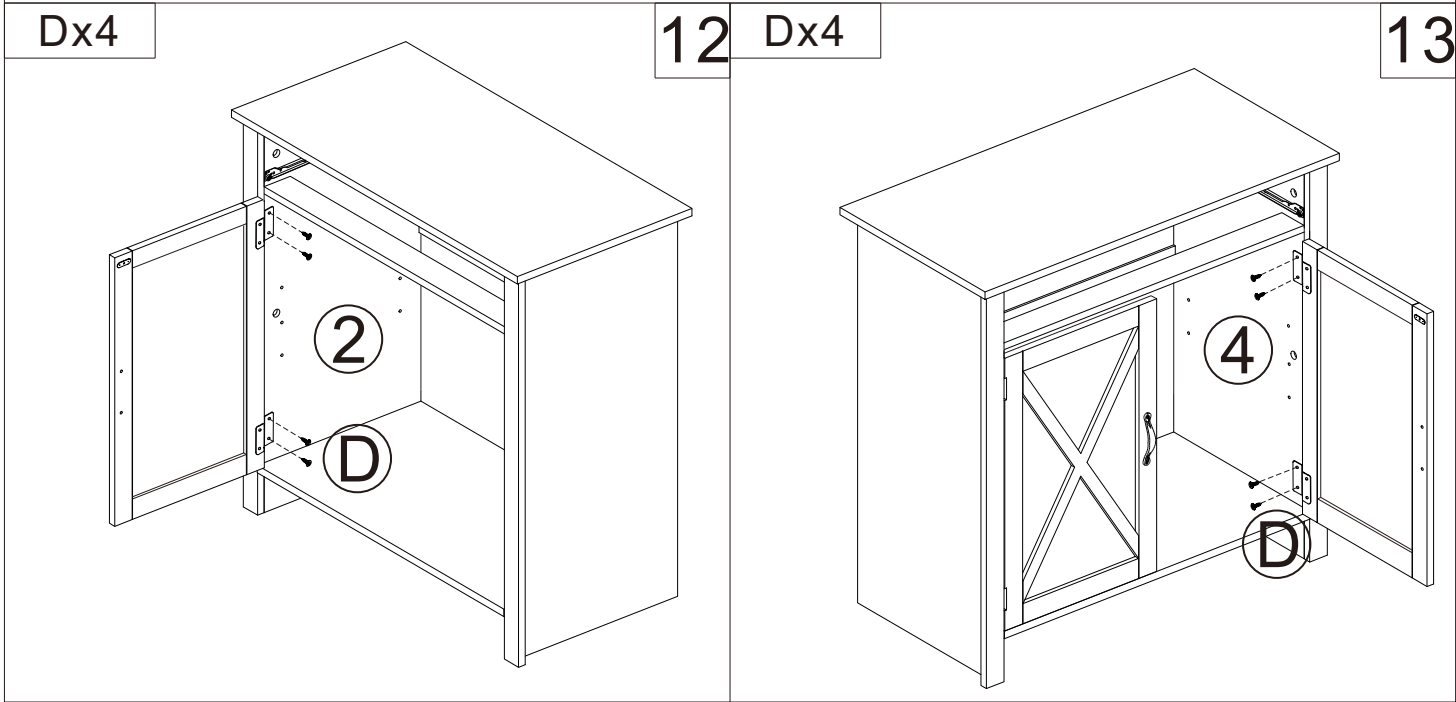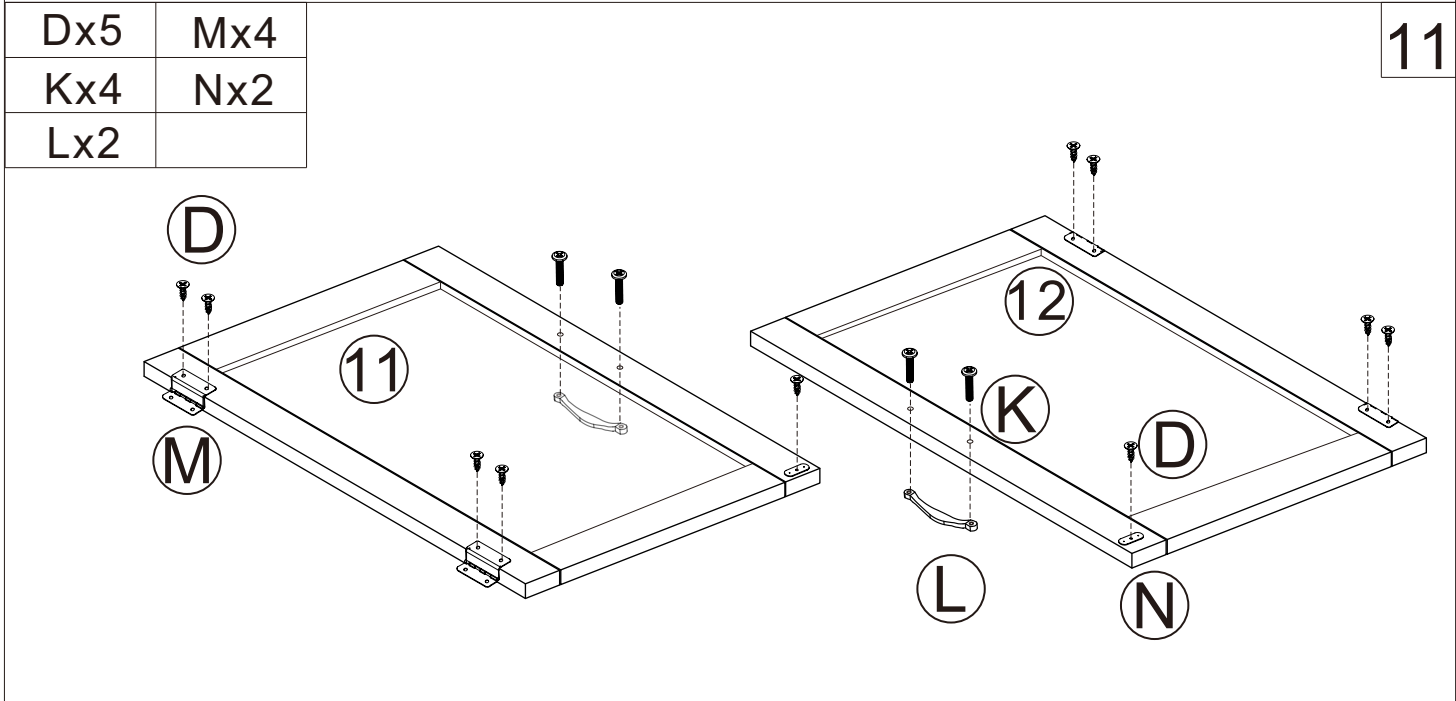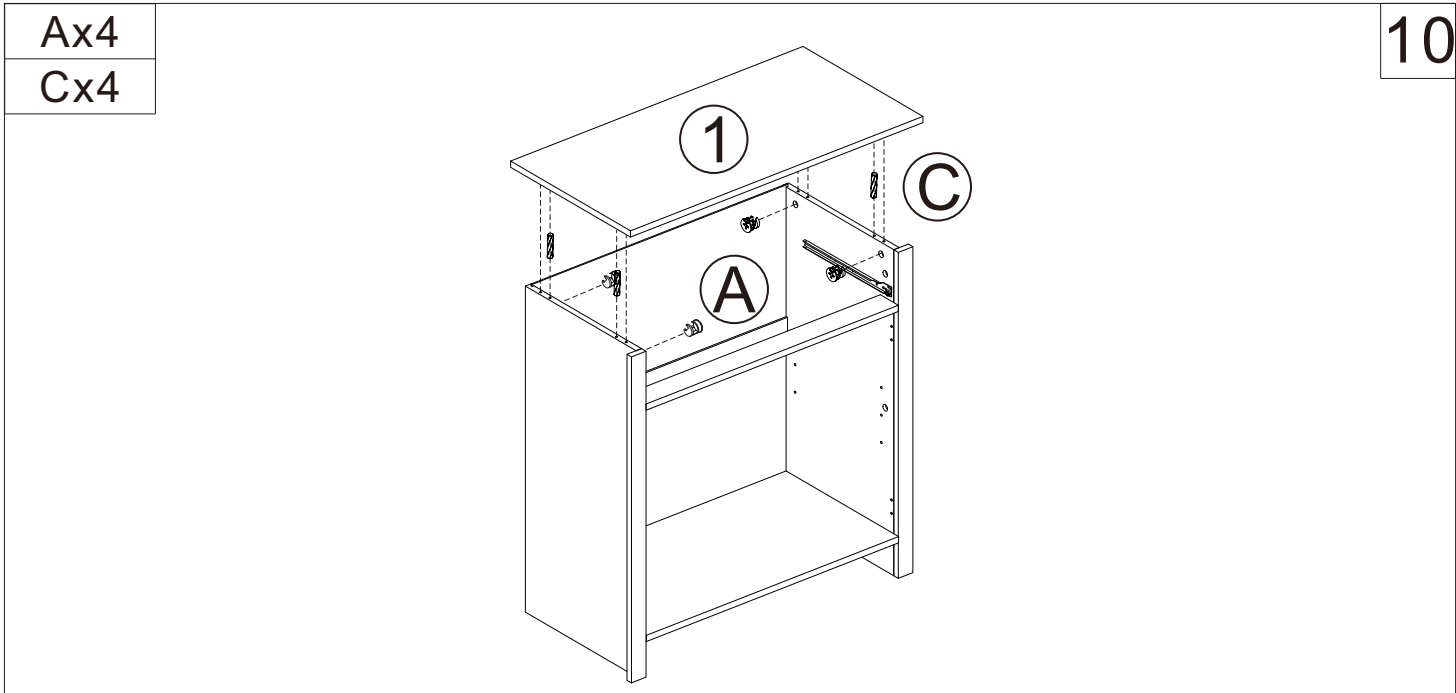

15

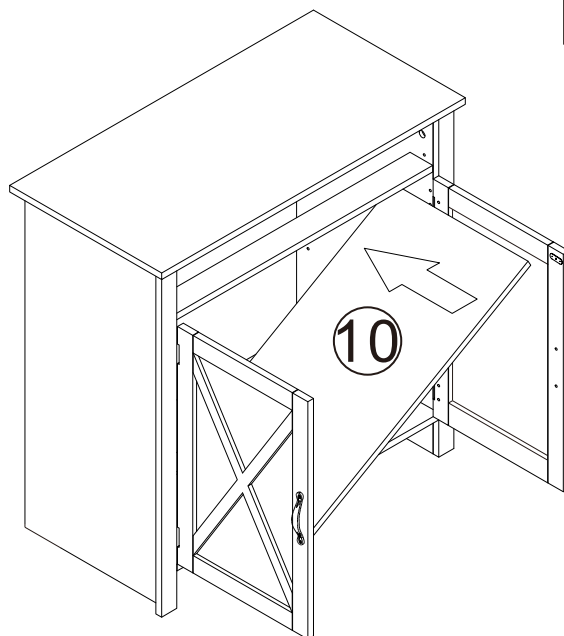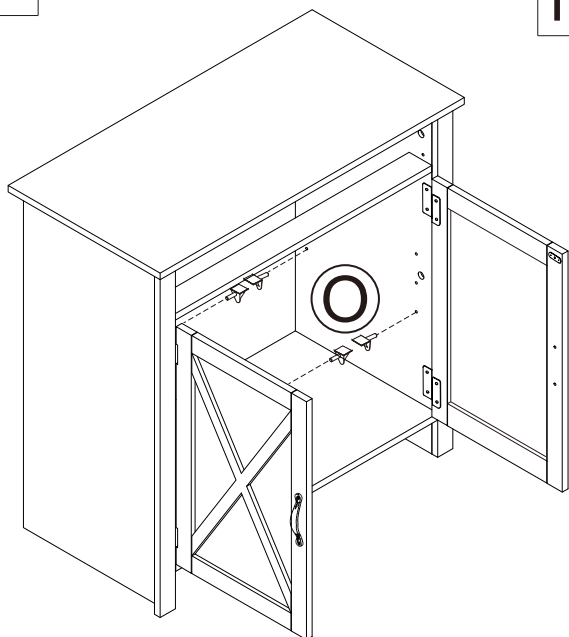

16

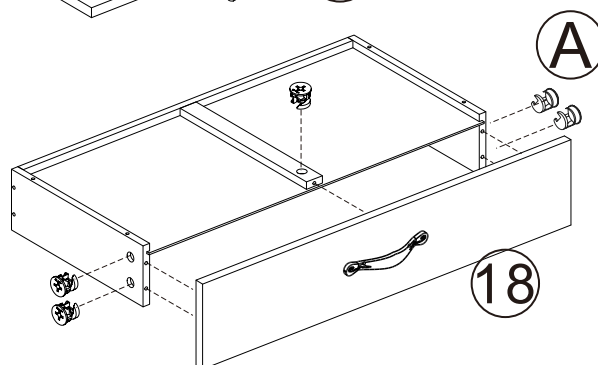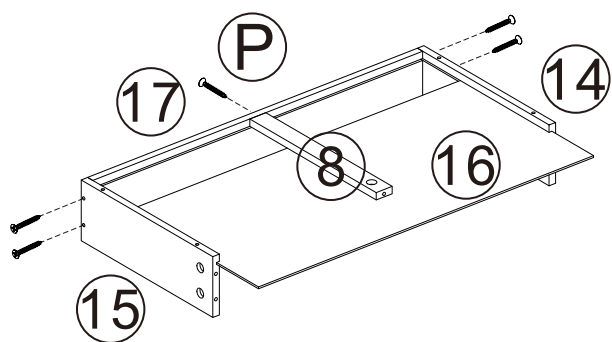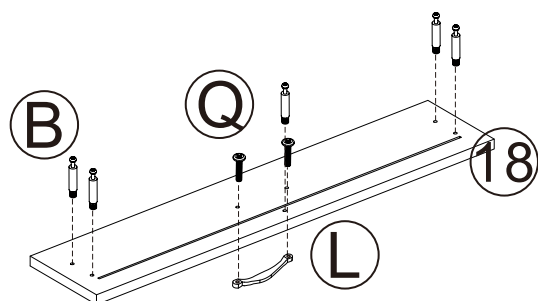

17

