 


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

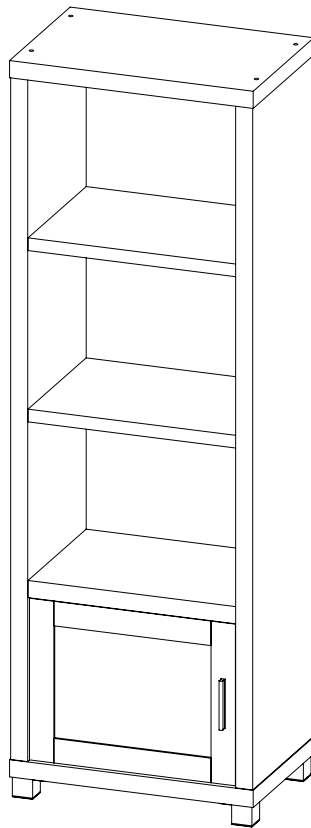

*Fine Furniture for every stage of life*

**707756**  
**MEDIA TOWER**

ITEM:707756

## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

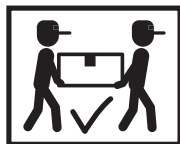

ASSEMBLY TIME

40 MINUTES

## PARTS IDENTIFICATION

  
 
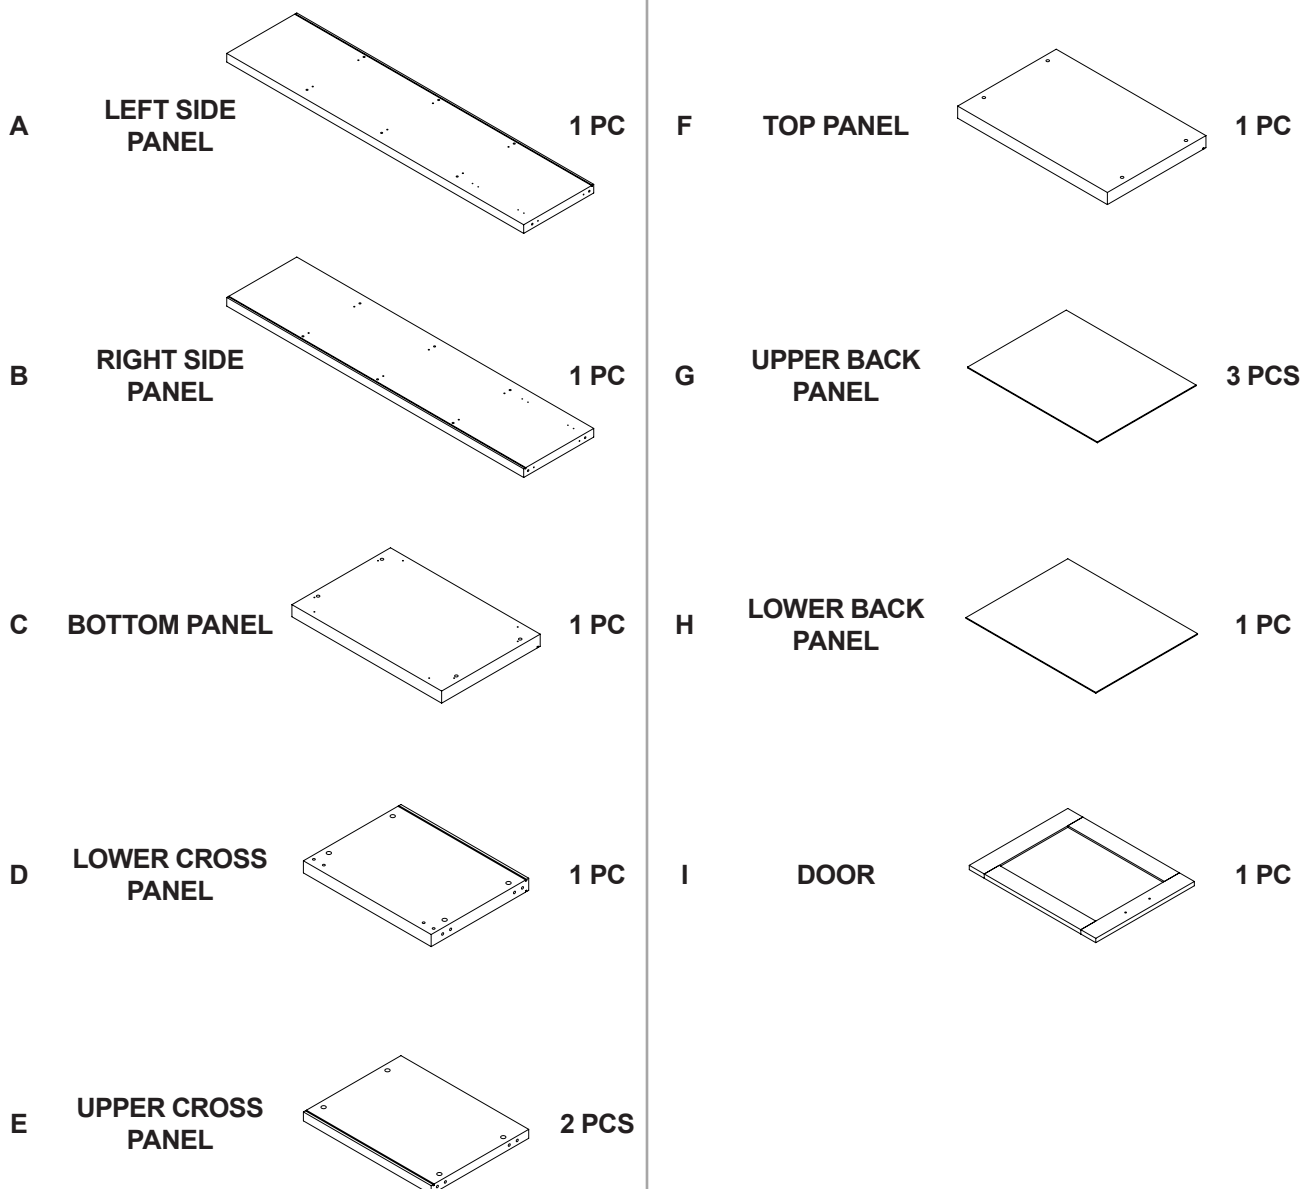 

 
 

 
 
 
 
 
 





### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:707756

 **HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	11	LEG 47mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		12 PCS	12	SCREW Ø4x19mm BLK		8 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	13	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
6	DOOR CATCH		1 PC	14	FIXER		6 PCS
7	HANDLE L= 120mm BLK		1 PC	15	FIXER SCREW Ø3x19mm SR		6 PCS
8	HANDLE BOLT Ø4x28mm BLK		2 PCS	16	STICKER Ø20mm		2 PCS

Z7,Z8,Z9,Z11 not included in blister packaging.




**NOTE:**

   Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 707756

**STEP 1**

**COASTER**  
FINE FURNITURE


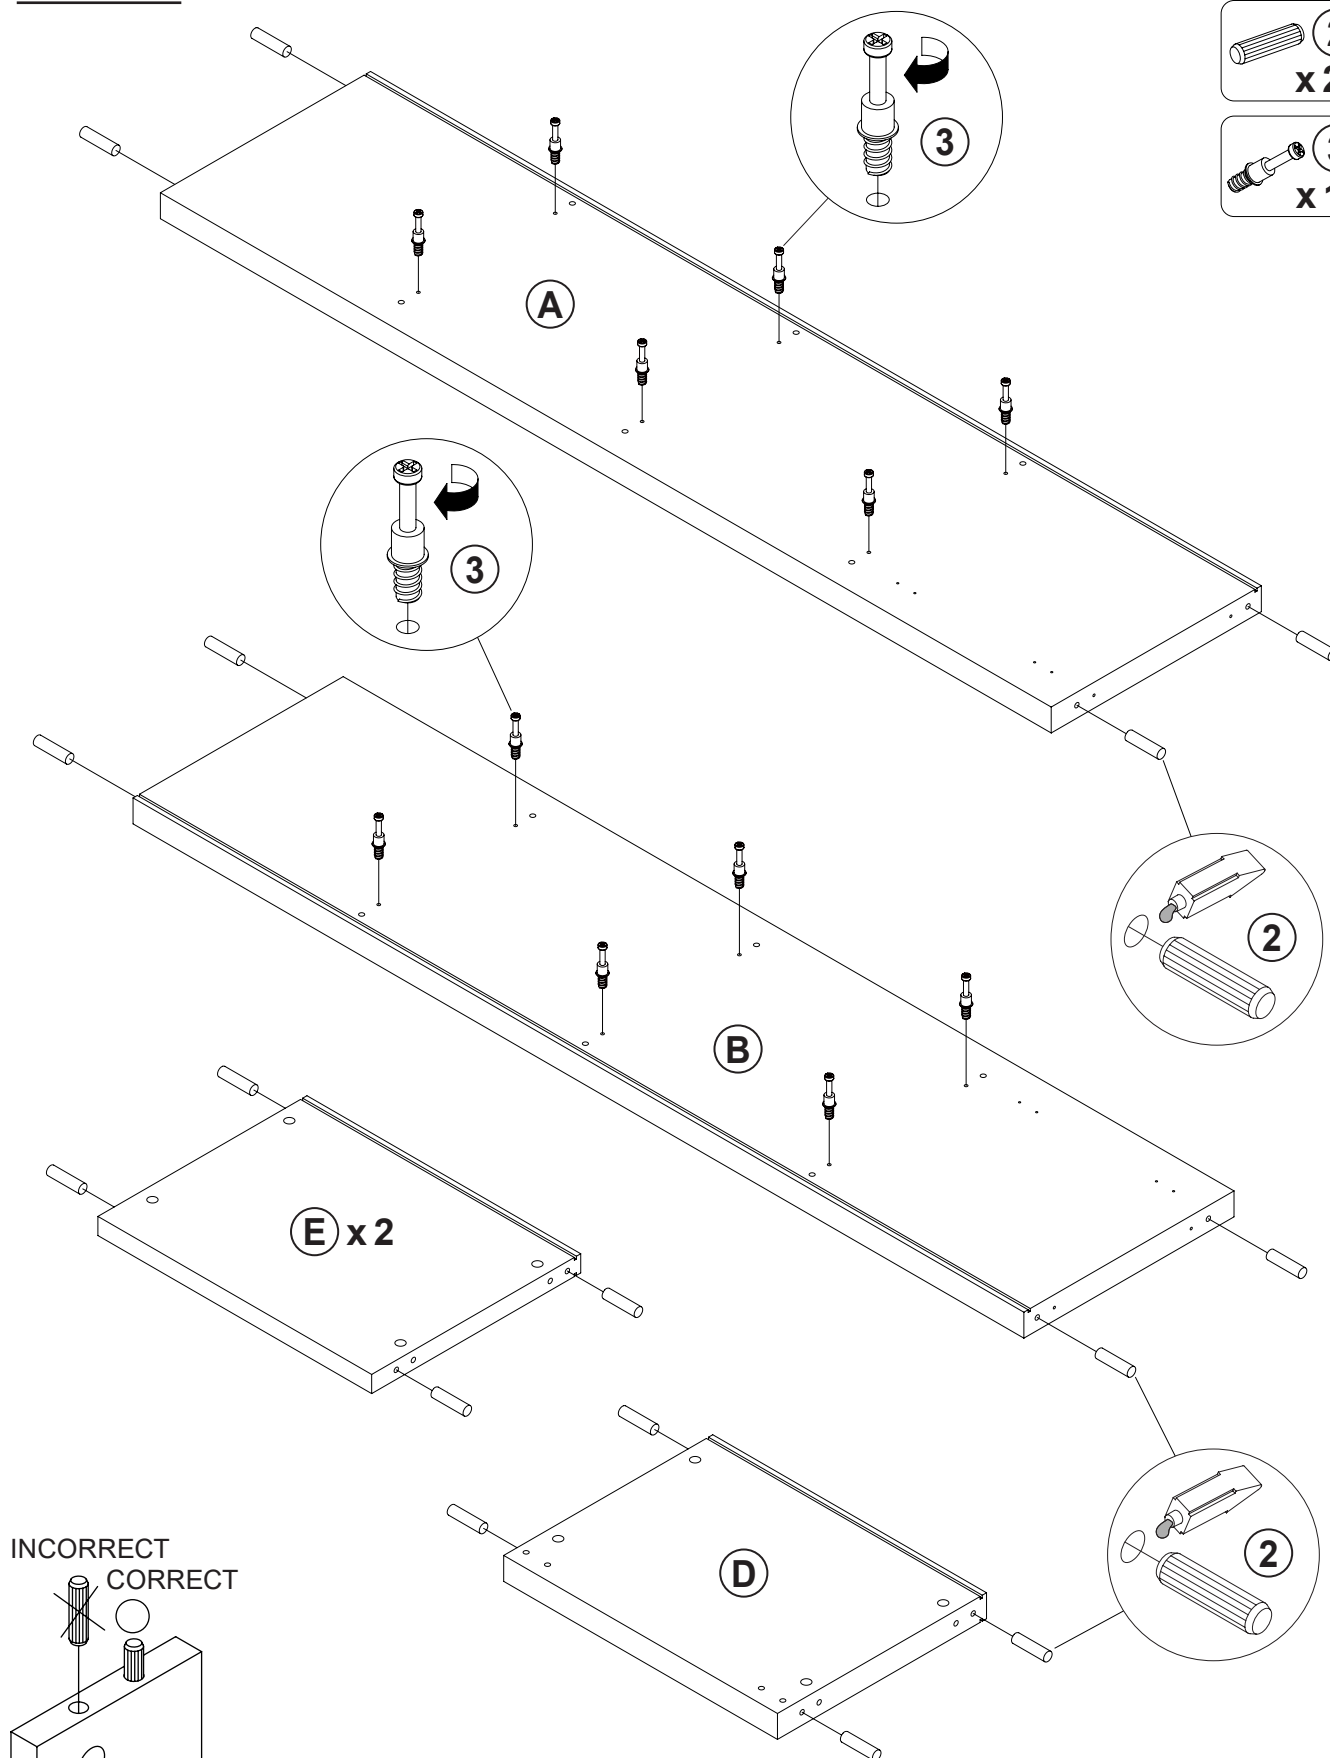




Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **707756**

## **STEP 2**

    **COASTER**  
FINE FURNITURE

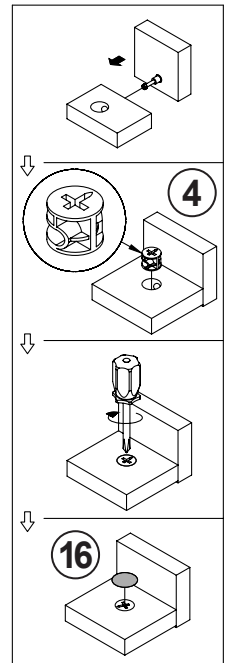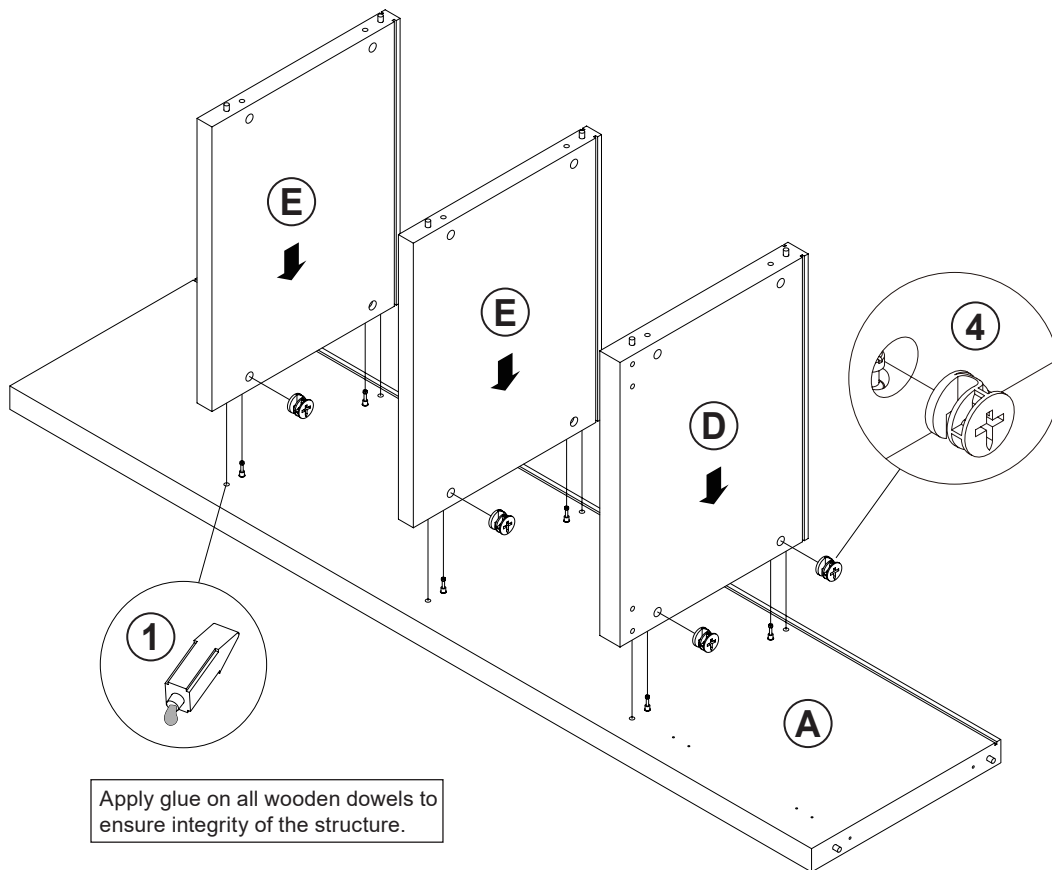



## **STEP 3**

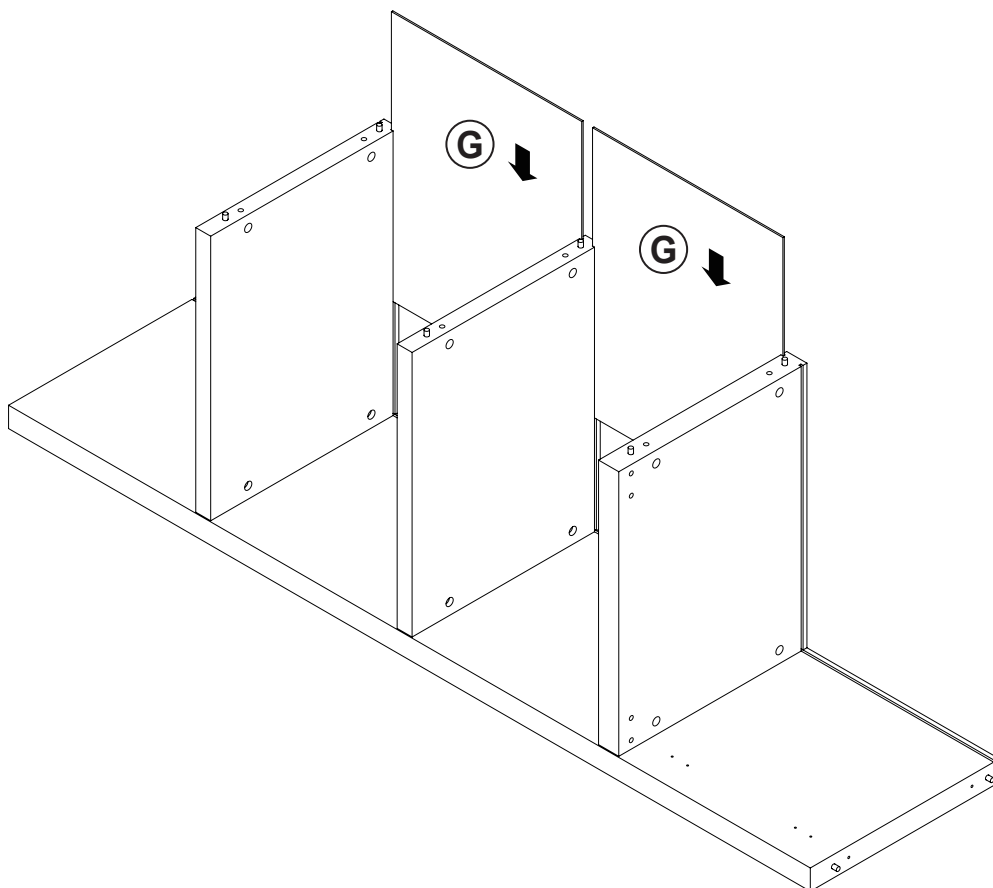 


ITEM: **707756**

**COASTER**  
FINE FURNITURE

**STEP 4**

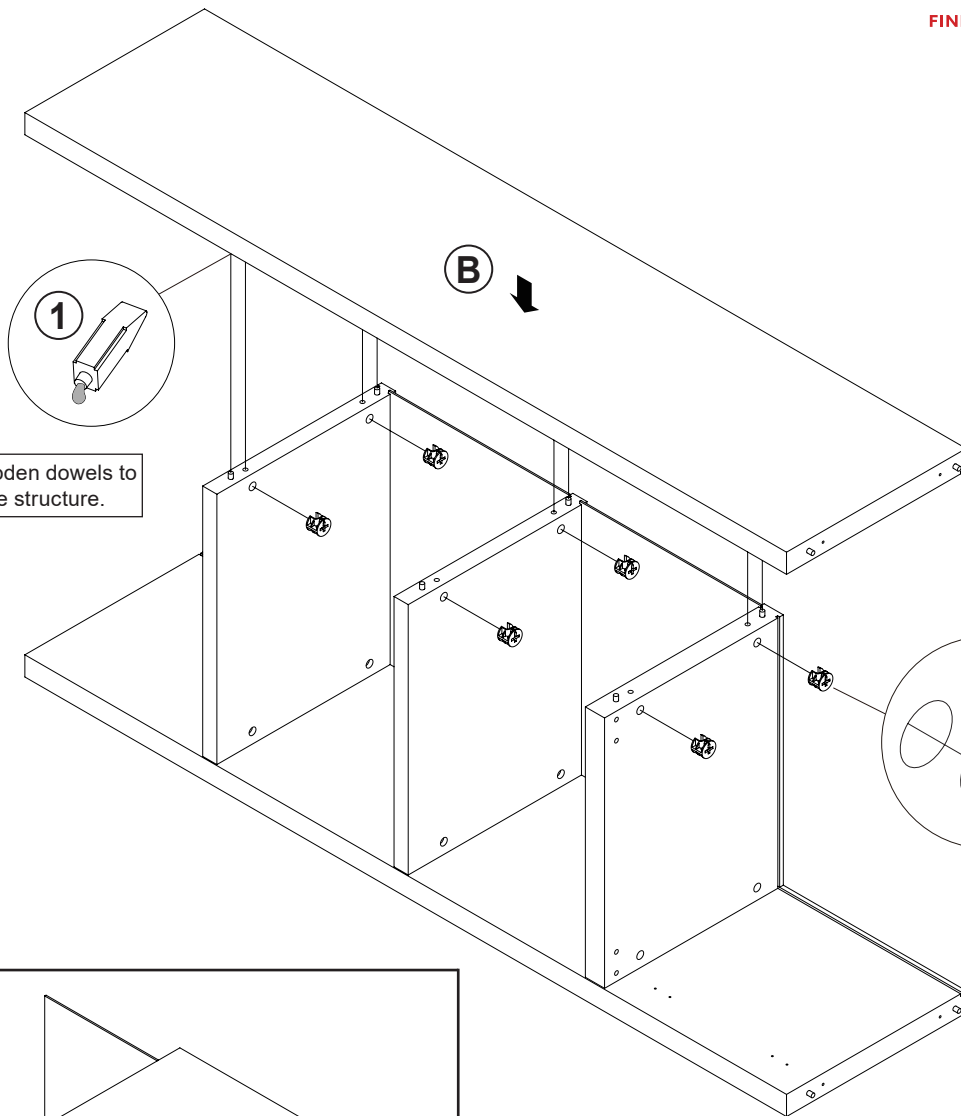  


**STEP 5**

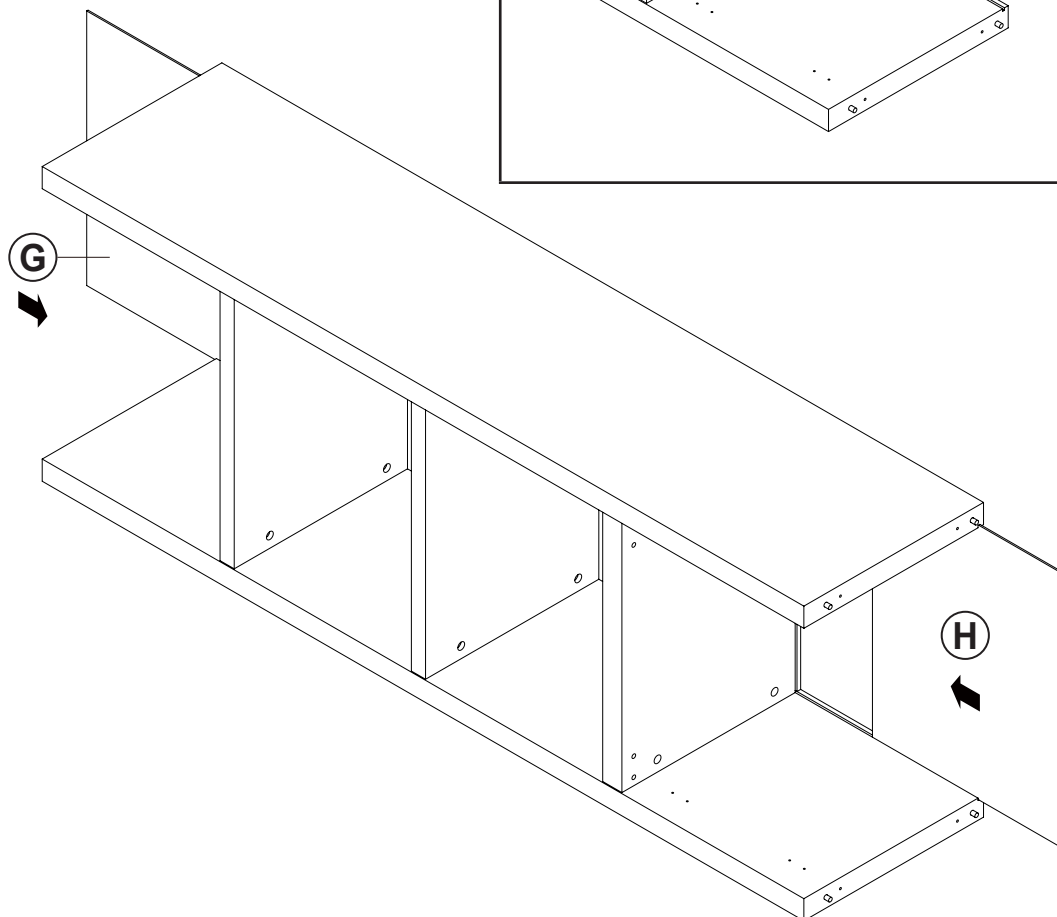 


ITEM: **707756**


## STEP 6



 **5**  **x 8**

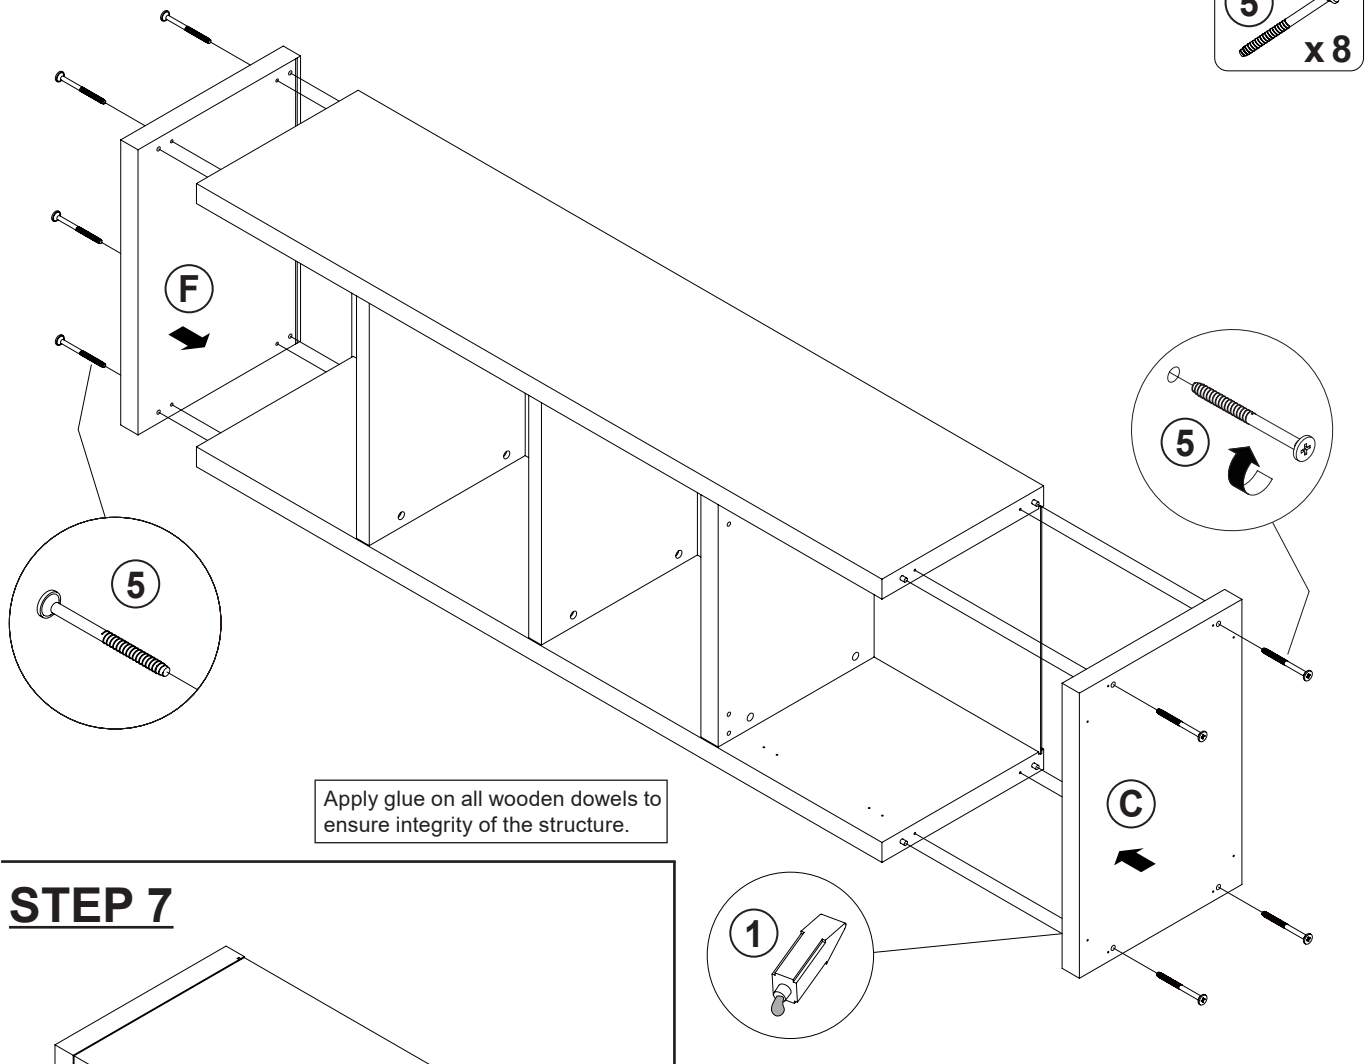



## STEP 7

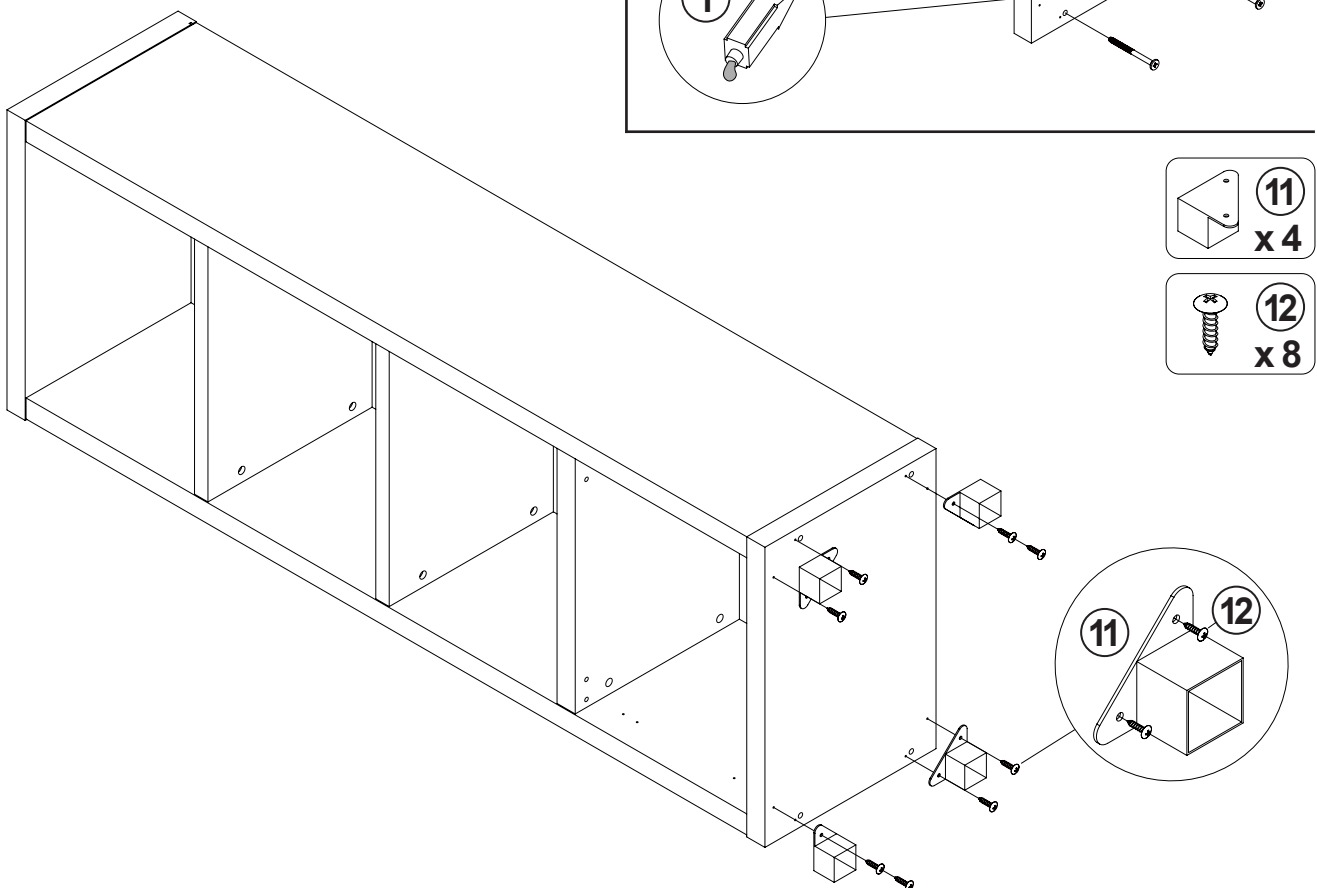 




ITEM: **707756**

**COASTER**  
FINE FURNITURE

**STEP 8**

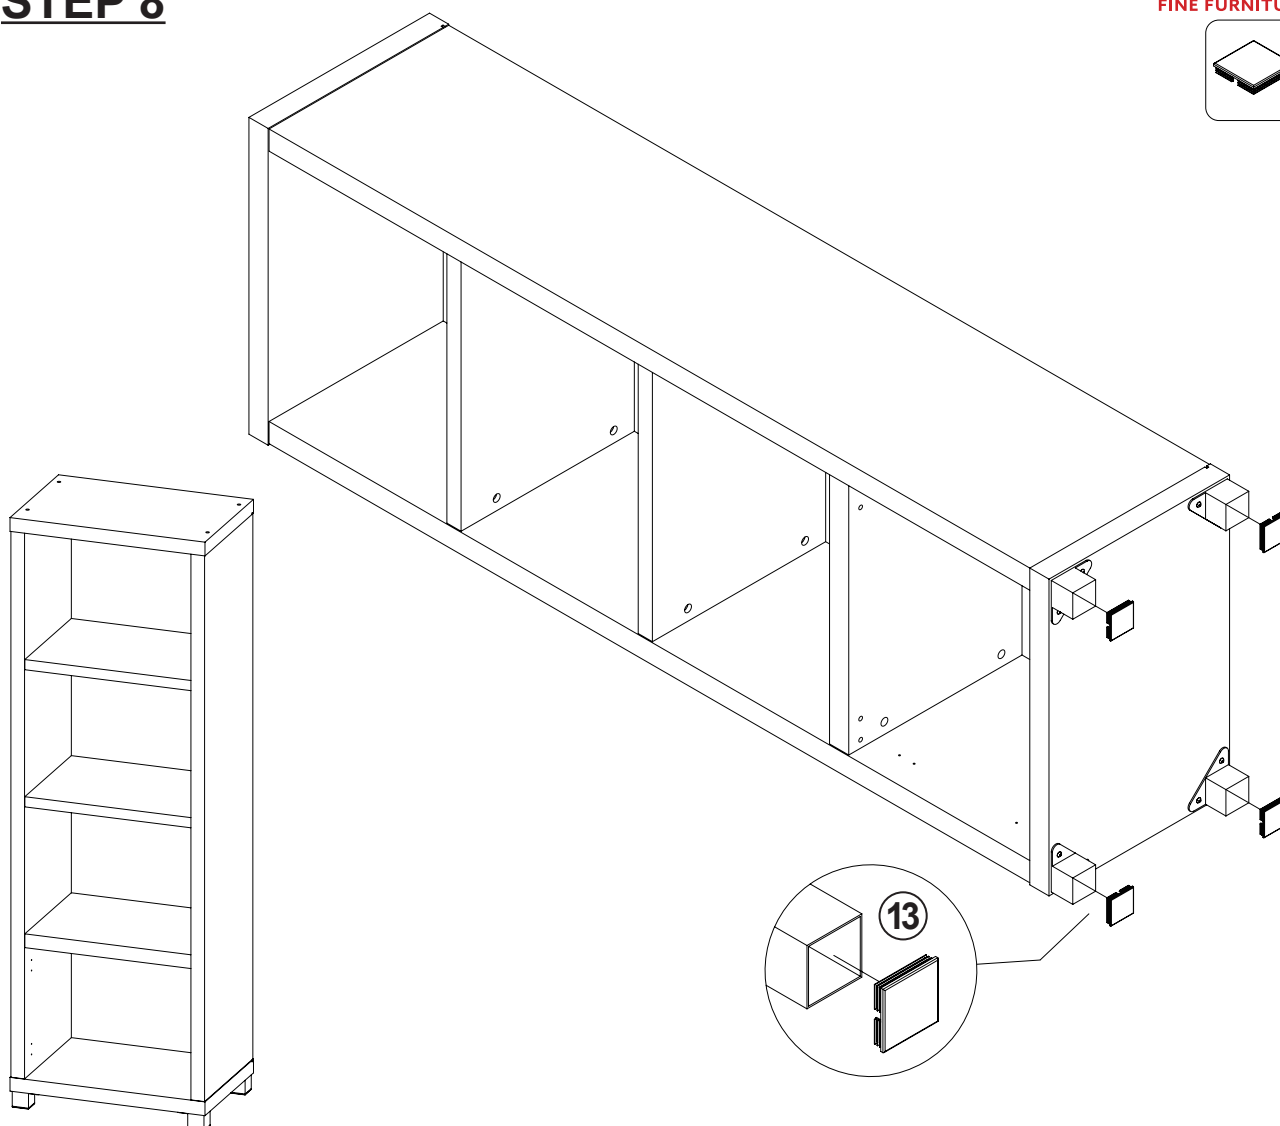  

**STEP 9**

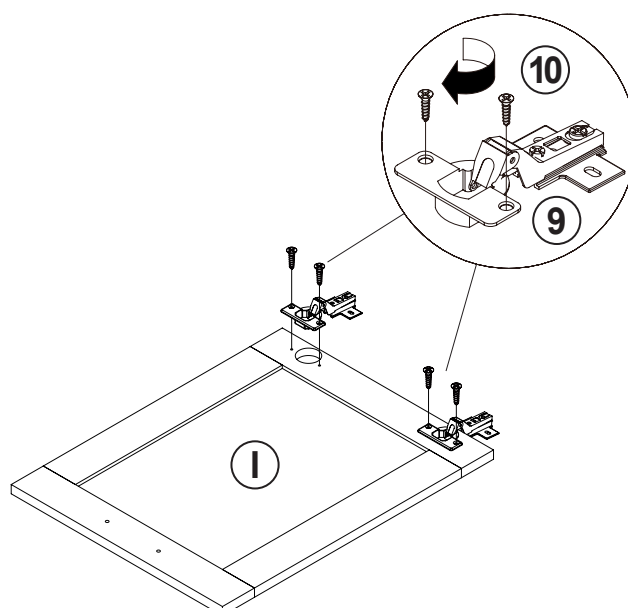   






ITEM: **707756**



**COASTER**  
FINE FURNITURE

**STEP 10**

   LEFT

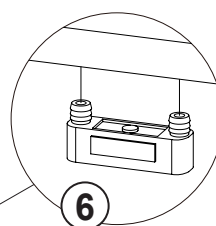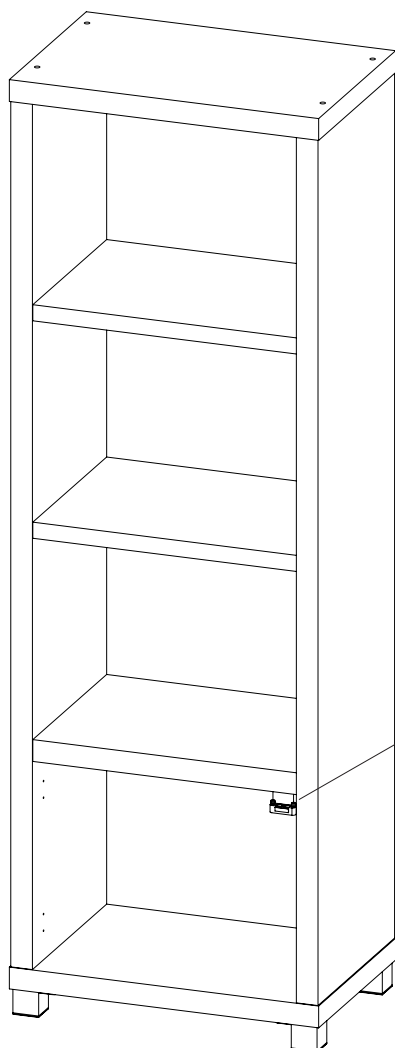




RIGHT

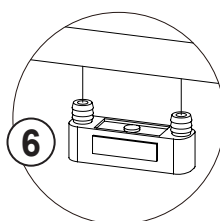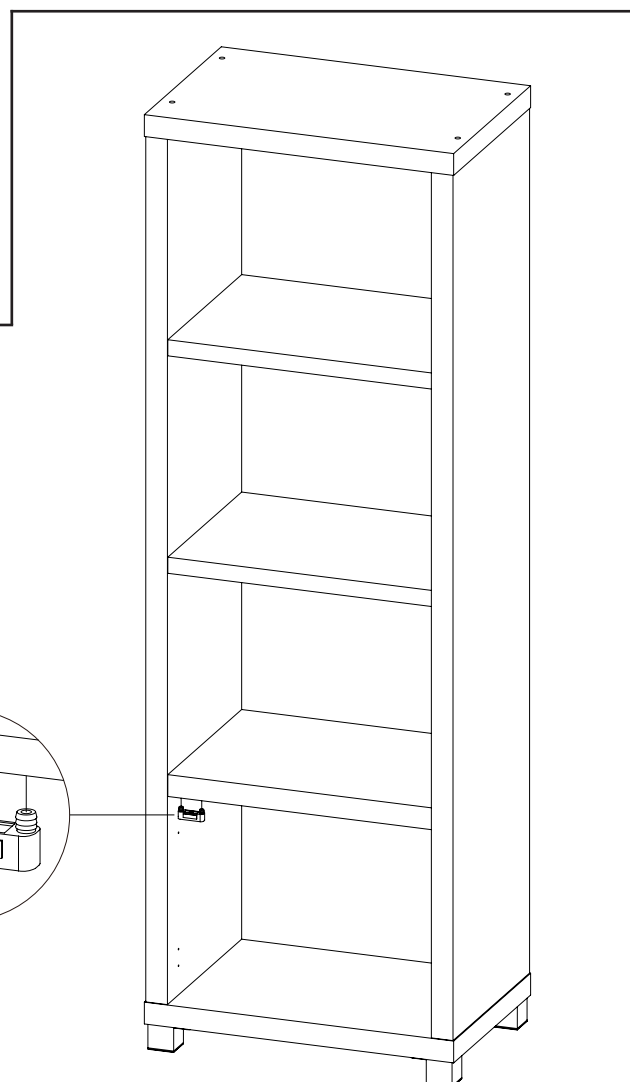  


ITEM: **707756**

**STEP 11**

   
**COASTER**  
FINE FURNITURE

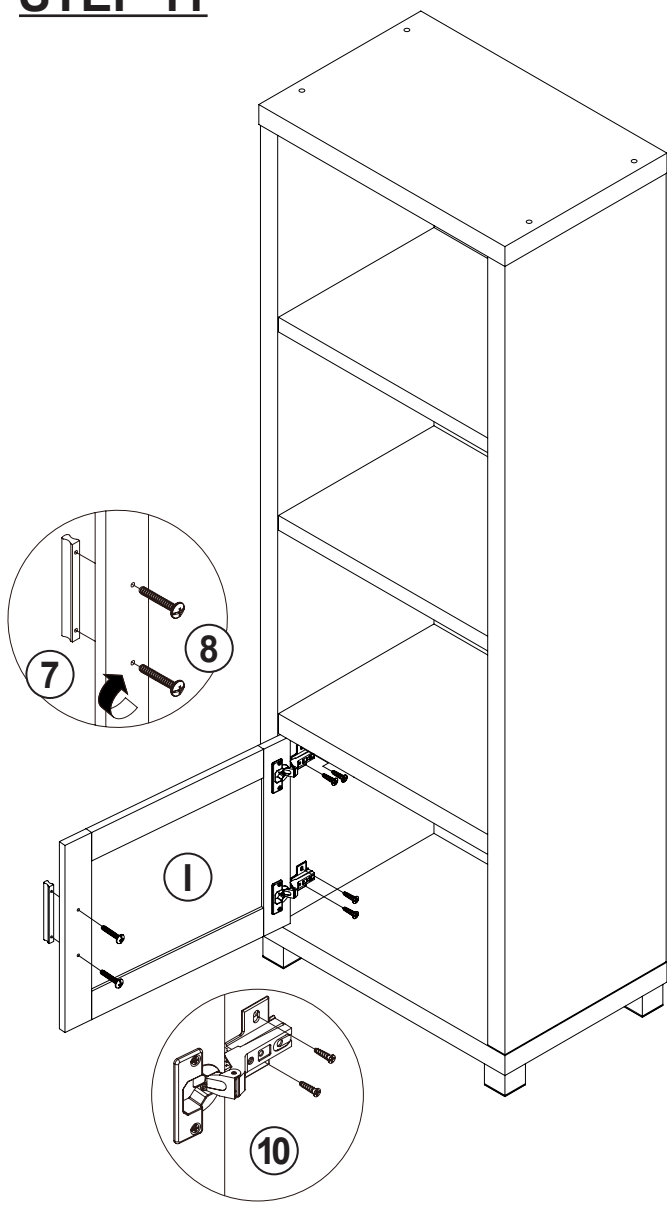


RIGHT

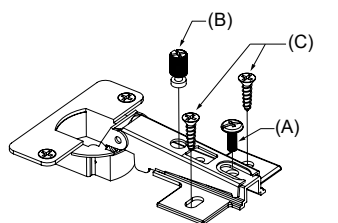 



LATERAL BY  
SCREW B ADJUSTMENT

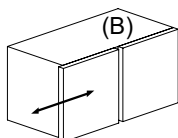 

HORIZONTAL BY  
SCREW A ADJUSTMENT

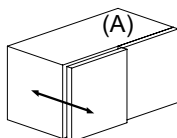 




VERTICAL BY  
SCREW C ADJUSTMENT

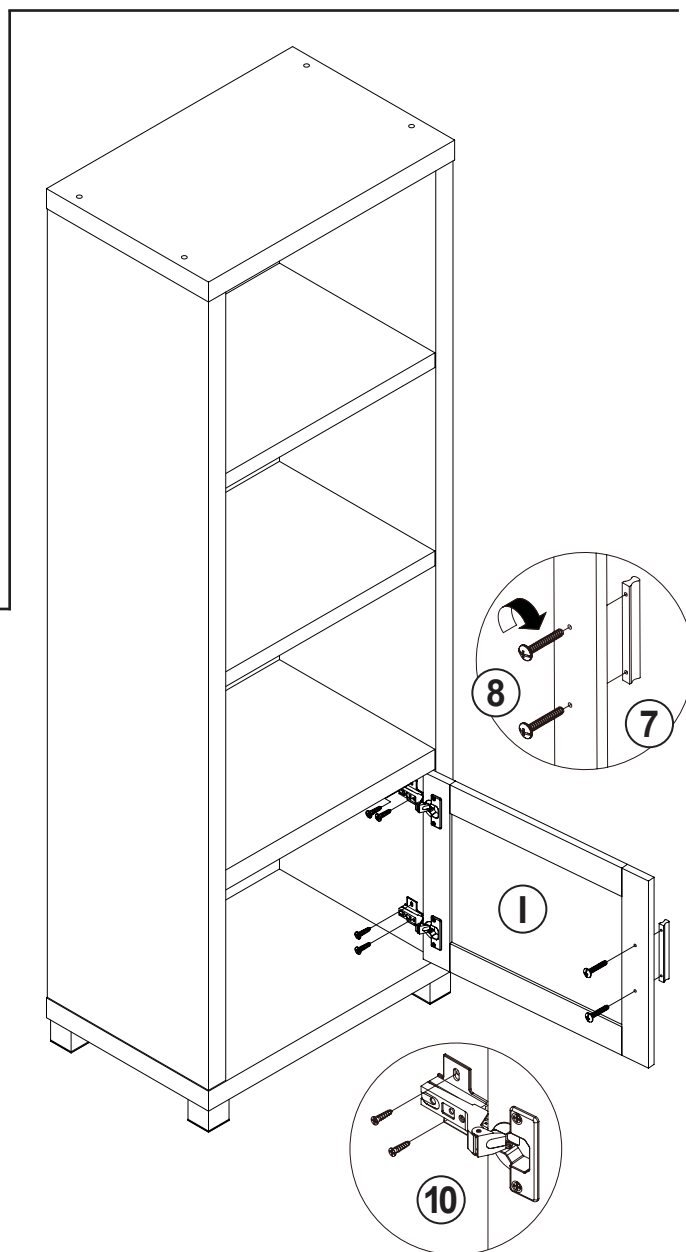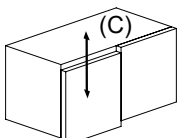  

ITEM: **707756**



**STEP 12**

   **COASTER**  
FINE FURNITURE

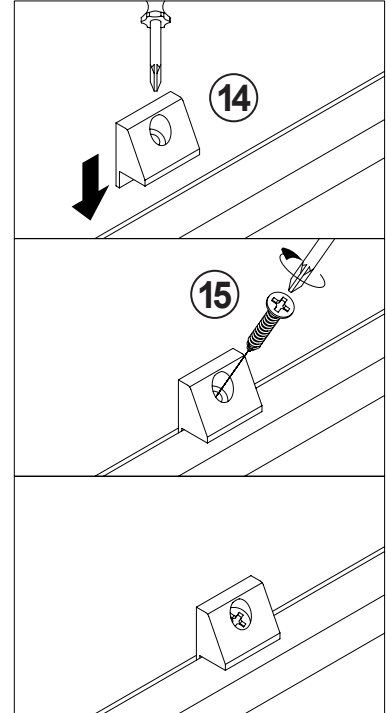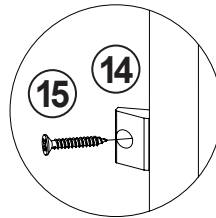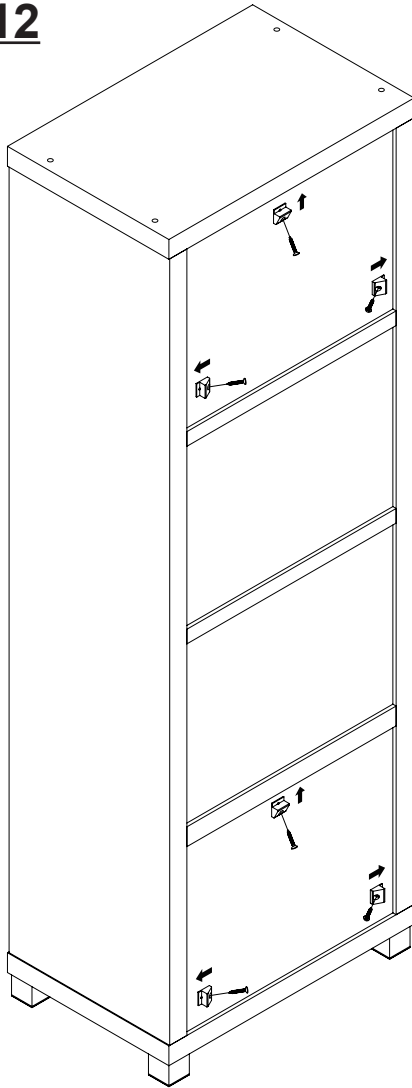


**STEP 13**

  **COMPLETE**

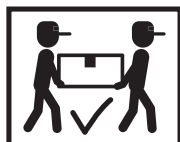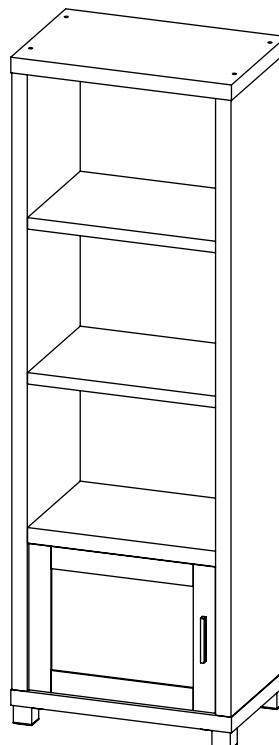

ITEM: 707756

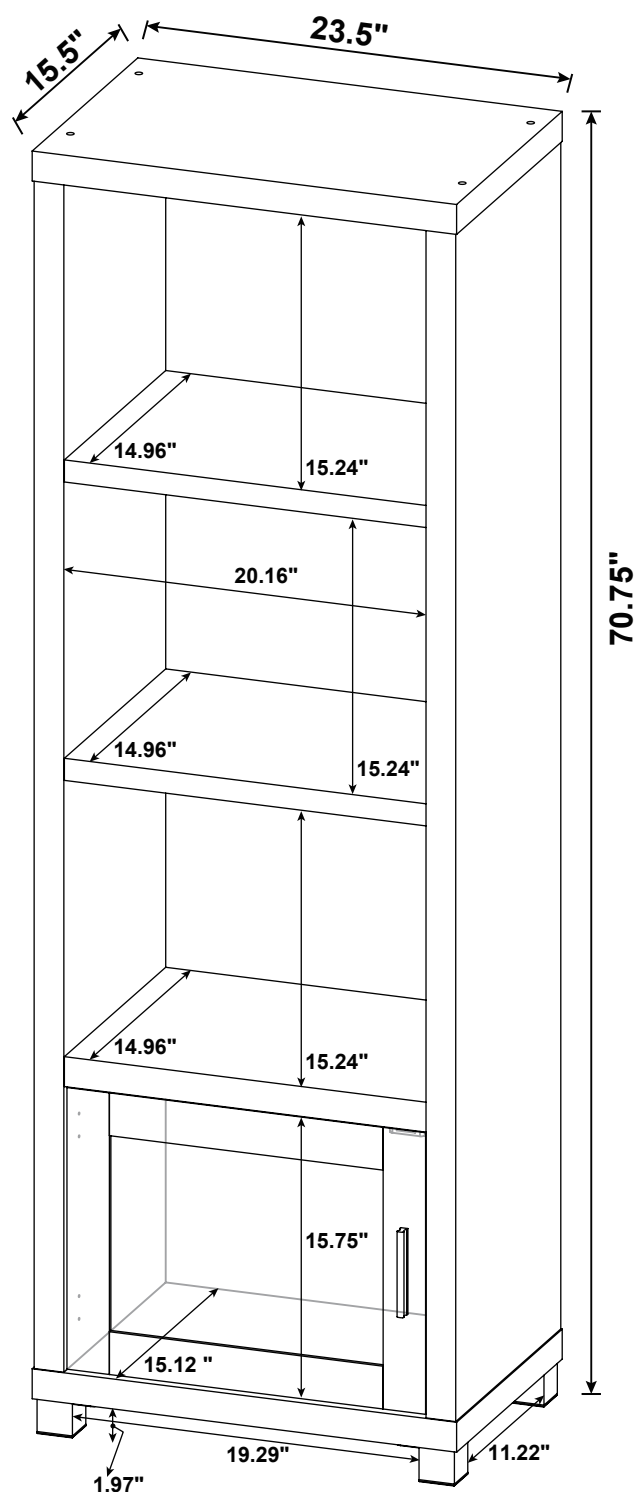 

**Note :** Dimension tolerance  $\pm 5\%$

# ANTI-TIPPING INSTALLMENT INSTRUCTIONS

## FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture  
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

**(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)**

