

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

709727 *END TABLE*

REVISION 0: 12/04/2023

PAGE 1 OF 9



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



PARTS IDENTIFICATION

1PC TOP В TOP CROSSBAR 4PCS 2PCS C **BOTTOM CROSSBAR 1 BOTTOM CROSSBAR 2** 2PCS D Ε SUPPORT CROSSBAR 1 1PC PAGE 2 OF 9 COASTERFURNITURE.COM

 
ITEM:709727 ASSEMBLY INSTRUCTIONS PARTS IDENTIFICATION



F SUPPORT CROSSBAR 2



G LEG



4PCS

1PC

z HARDWARE IDENTIFICATION

SHORT BOLT (1/4" x 9mm SR)

97

21PCS

4 SUCTION CUP

4PCS

2 LONG BOLT (1/4" x 35mm SR)



8PCS

5 COVER

8PCS

3 CAP (ø18mm BLK)



4PCS

6 ALLEN WRENCH (4mm)




1PC




STEP 1

Do not tighten until each step is completed or instructed.

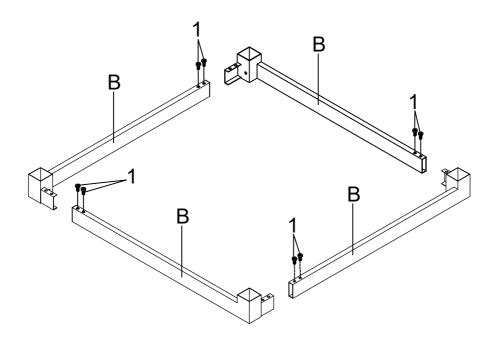



STEP 2

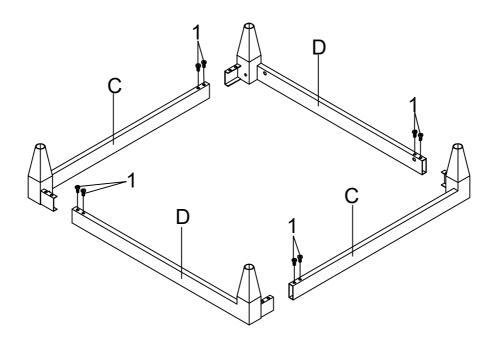


PAGE 4 OF 9




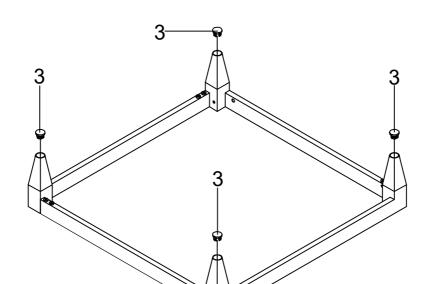

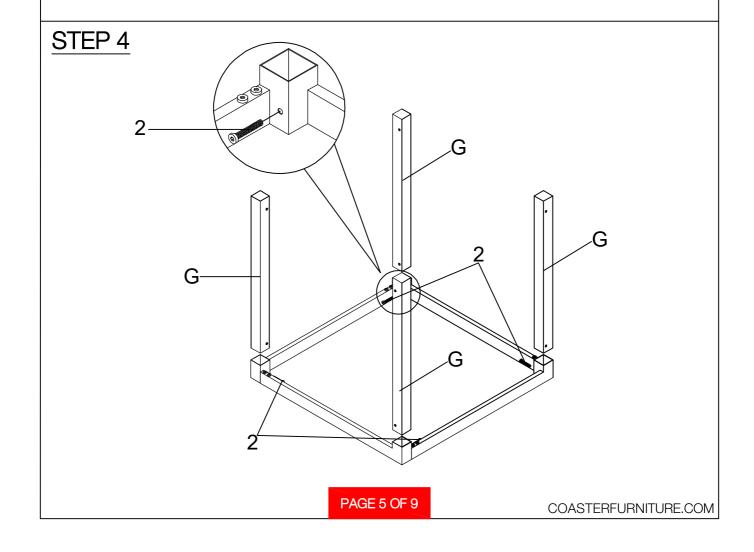

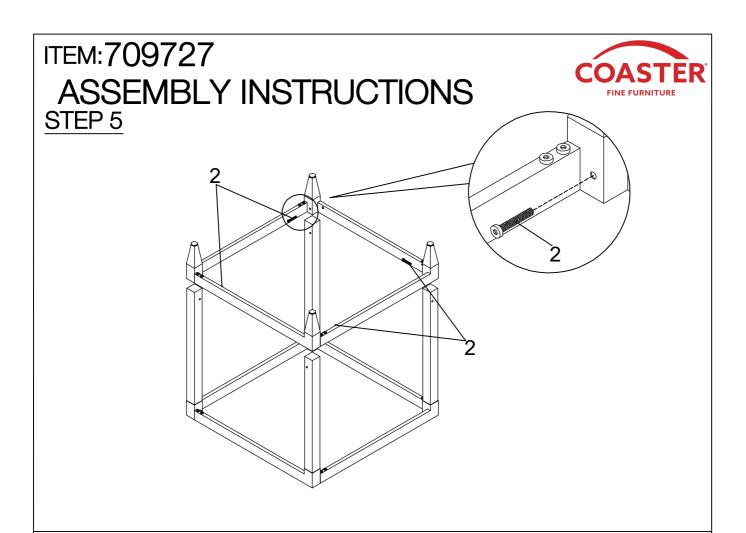


STEP 6

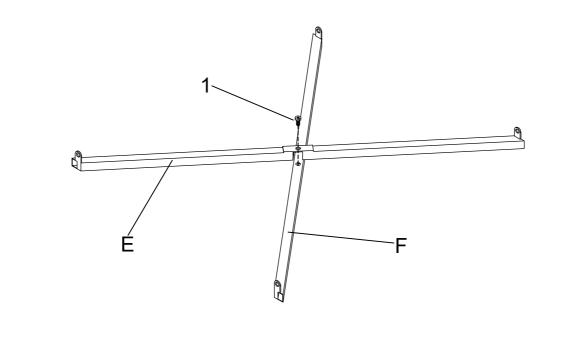


PAGE 6 OF 9



STEP 7

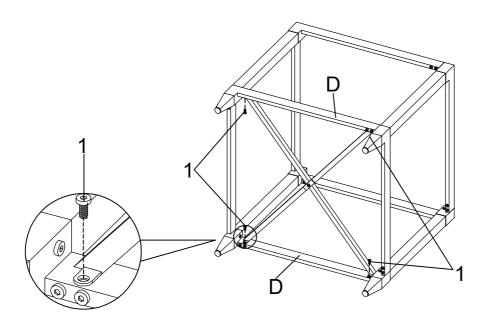


STEP 8

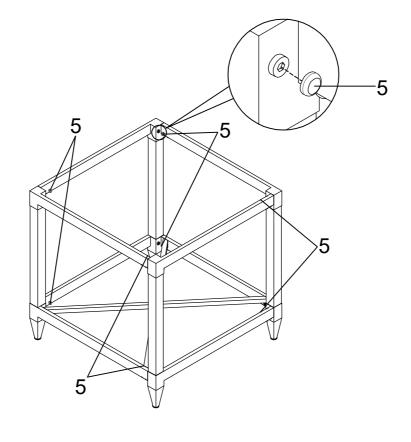

PAGE 7 OF 9



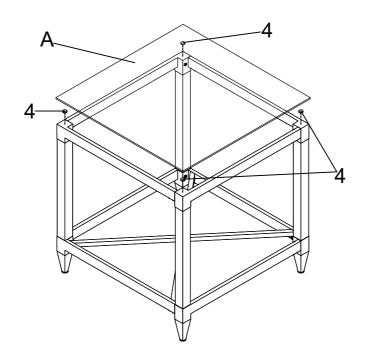

STEP 10 COMPLETE




How to clean Acrylic product:
Using a dry soft microfiber cloth, lightly brush off any dust.
For additional care, dampen the cloth with warm water.

For deepest cleaning, use an Acrylic cleaner.

PAGE 8 OF 9

Product Size: 597 X 597 X 559 H (MM)

Product Size: 23.5" X 23.5" X 22"

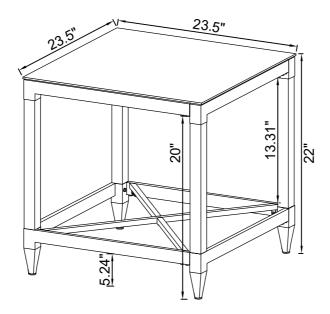

Note: Dimension tolerance ±5%